



Electrical Circuit Diagrams



FREELANDER

2002MY

Electrical Circuit Diagrams

Publication Part No. LRL 0487ENX

Published by Land Rover

© 2001 Land Rover

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic, mechanical, recording or other means without prior written permission from Land Rover.

COLOUR CODES**DRAADKLEURCODES****CODICI COLORI DEI CAVI****CODES DES COULEURS DES FILS****CODIGOS DE COLORES DE LOS CABLES****KABELFARBCODES****CÓDIGOS DAS CORES DOS FIOS**

CODE	COLOUR	CODE	KLEUR	CODE	COULEUR	CODE	FARBE	CODICE	COLORE	CODIGO	COLOR	CÓDIGO	COR
B	BLACK	B	ZWART	B	NOIR	B	SCHWARZ	B	NERO	B	NEGRO	G	PRETO
G	GREEN	G	GROEN	G	VERT	G	GRÜN	G	VERDE	G	VERDE	K	VERDE
K	PINK	K	ROZE	K	ROSE	K	ROSA	K	ROSA	K	ROSA	LG	ROSA
LG	LIGHT GREEN	LG	LICHTGROEN	LG	VERT CLAIR	LG	HELLGRÜN	LG	VERDE CHIARO	LG	VERDE CLARO	N	VERDE CLARO
N	BROWN	N	BRUIN	N	BRUN	N	BRAUN	N	MARRONE	N	MARRON	O	CASTANHO
O	ORANGE	O	ORANJE	O	ORANGE	O	ORANGE	O	ARANCIONE	O	NARANJA	P	LARANJA
P	PURPLE	P	PAARS	P	VIOLET	P	LILA	P	PORPORA	P	PURPURA	R	ROXO
R	RED	R	ROOD	R	ROUGE	R	ROT	R	ROSSO	R	ROJO	S	VERMELHO
S	SLATE (grey)	S	LEIGRIJS	S	GRIS	S	GRAU	S	ARDESIA (grigio)	S	PIZARRO (gris)	U	CINZENTO
U	BLUE	U	BLAUW	U	BLEU	U	BLAU	U	BLU	U	AZUL	W	AZUL
W	WHITE	W	WIT	W	BLANC	W	WEISS	W	BIANCO	W	BLANCO	Y	BRANCO
Y	YELLOW	Y	GEEL	Y	JAUNE	Y	GELB	Y	GIALLO	Y	AMARILLO	Y	AMARELO

CONTENTS

1 POWER DISTRIBUTION	6	20 ENGINE MANAGEMENT SYSTEM	76	42 WIPERS AND WASHERS	128
Engine Compartment Fuse Box	6	K1.8	76	Front	128
Engine Compartment Fuse Box - NAS	12	KV6	80	Rear	130
Passenger Compartment Fuse Box	18	KV6 - NAS	84		
Passenger Compartment Fuse Box - NAS	24	Td4	88	43 EXTERIOR LAMPS	132
2 EARTH DISTRIBUTION	30	20 FUEL PUMP	92	Brake and reverse lamps	132
NAS	36	22 COOLING FANS	94	Fog lamps - Rear	134
3 ANTI-THEFT ALARM AND CENTRAL DOOR LOCKING	42	31 CRUISE CONTROL	96	Direction indicator lamps\hazard warning	136
3 ENGINE IMMOBILISATION	46	Td4 and NAS	96	Head, side and tail lamps	138
5 WINDOWS	48	KV6	98	Head, side and tail lamps - NAS	140
Front	48	32 ELECTRONIC AUTOMATIC TRANSMISSION	100	Head, side and tail lamps- Canada	142
Rear	50	35 ANTI-LOCK BRAKING SYSTEM (ABS)	104	44 INTERIOR LAMPS	146
Tail Door	52	36 SUPPLEMENTARY RESTRAINT SYSTEM (SRS)	106	46 INTERIOR ILLUMINATION	150
6 SUNROOF	54	38 AIR CONDITIONING	108	47 INSTRUMENTS	154
7 DOOR MIRRORS	56	Td4	108	47 ROTARY COUPLER	158
Folding	58	K1.8 and KV6	112	48 HORN (S)	160
8 SEATS	60	NAS	116	49 ACCESSORY SOCKET	162
Heated	60	39 FUEL BURNING HEATER	120	49 CIGAR LIGHTER	164
10 DIAGNOSTIC SOCKET	62	39 HEATER	122	50 AUDIO SYSTEMS	166
11 BODY CONTROL UNIT	64	40 HEATED REAR SCREEN	124	Low-Line	166
15 CHARGING AND STARTING	68	40 HEATED FRONT SCREEN	126	Mid-Line	170
K1.8	68			High Line	174
KV6	70			60 HEADER JOINTS	178
KV6 - NAS	72			65 SPLICES AND CENTRE TAPS	184
Td4	74			70 COMMUNICATION DATA BUSES	196


HOW TO USE THE CIRCUIT DIAGRAMS

All of the information in this folder is intended for use with the Electrical Reference Library booklet.

The circuit diagrams are presented with Power and Earth distribution first, followed by individual circuits for each electrical system on the car.

Power Distribution

The Power Distribution diagram shows the connections from the battery to the engine and passenger compartment fuseboxes. It also shows the internal circuitry of the fuseboxes.

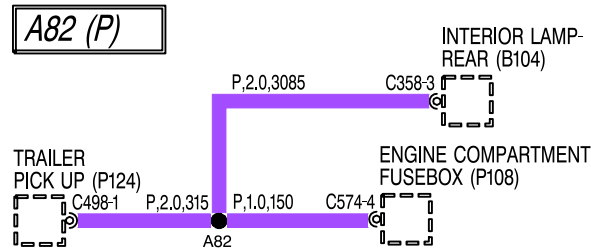

86M4227A

The fuse box details are followed by independent functionally specific circuits and then a Splices and centre taps section outlining the way in which internal harness splices and centre taps distribute power in the harnesses. This information should be used during diagnosis of electrical faults to check for symptoms in associated circuits and narrow down the search area.

Earth Distribution

The ground distribution section comprises a number of Headers and Splices tables. These are used in a similar manner to those in Power Distribution; to narrow the search area by checking for fault symptoms in associated circuits.

Splices and centre taps

Header and splice tables present the joint(s) and wiring up to the first component. Splices are identified by a number with an alphabetical prefix and the wire colour.

The splice information shown on individual system circuits is not complete. Always refer to the splices circuit for complete information on each splice.

Wire attributes

Additional information (separated by a ',') is shown alongside the wire colour:

Wire gauge - the cross-sectional area of the wire in square millimetres. This is included to help you select the correct wire during harness repair.

Some wires do not have a gauge shown, these wires are of unique construction and will have a three or four letter code printed after the colour code, eg MAB. The code identifies the type of wire for manufacturing purposes. Usually, only the first two characters have significance in service, but in some instances the third character also becomes significant, see table.

Wire type

The following table list the wire type codes together with an explanation of their meaning.


Code	Description
D	Single core DIN wire
F	Single core flexible wire
H	Single core high temperature wire
SA*	Single core resistive wire (0.9 ohms/m)
SB*, SC*, SD*	Single core dual extruded wire
SE*, SF*	Single core fusible wire
MAC, MAD, MAE, MAF, MAG, MAH	Coaxial screened wire
MB*, MO*, MAK	Single core screened wire
MC*, MI*, MP*, MQ*, MAB, MAP	Twin core screened wire
MD*, MJ*, MAM	Twin core ABS sensor wire
ME*, TA*, TB*, MM*, MN*, MU*,MAI	Twisted pair of wires
MF*	Heated oxygen sensor (HO2S) screened wire
MG*	Twin core twisted, screened wire
MH	four core twisted, screened wire
MK*	Three core SRS sensor wire
ML*, MAA, MAR	Four core screened wire
MR*	Six core screened, flexible wire
MS*	Four core screened, flexible wire
MT*	Single core screened, flexible wire
MV*	Twin core flat wire
MW*	Three core round wire
MX*, MY*	Seven core round wire
MZ*	Three core screened, flexible wire
MAJ	Twin core round cable
MAQ, MAU	Three core screened wire
MAS	Single core, double sheath wire
MAT	Double core, double sheath wire
MAL	SRS wire
MAN	Twin core braided, screened wire

HOW TO USE THE CIRCUIT DIAGRAMS

Wire length (Power & Earth Distribution only)

The length of the wire in millimetres. This can be used to locate internal harness splices; look for the shortest wire between the joint and connector. For example, it can be seen that C574-4 is 150mm from joint A82.

Connectors

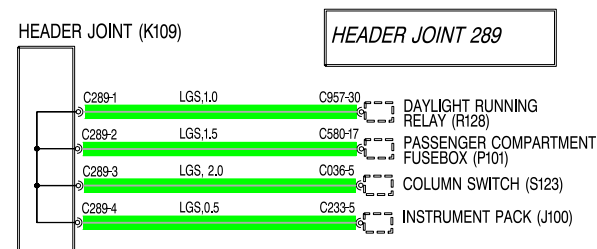

86M4228A


Header joints are identified by their corresponding connector number with a numbered suffix to indicate the pin-out detail of the wire, i.e. C289-1 identifies connector 289, pin number 1. Wire insulation colour is identified in the normal way. Where wires have a predominant colour with a secondary colour stripe, the main colour is identified first, i.e. LGS - Light Green with a Slate stripe.

Line Types



86M4229A

This means the wire connects to another circuit.

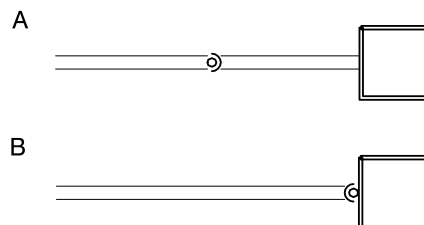


86M4230A

The cup and ball symbol indicates the male and female halves of connector.

A. Plug on lead (Flylead) wired directly to the component.

B. Connector plugs directly into component.


Components

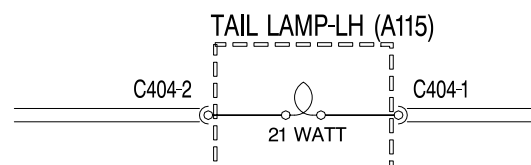

86M4231A

The name or description of the component is shown. A dotted outline indicates that the component is not shown in its entirety.


Earth points

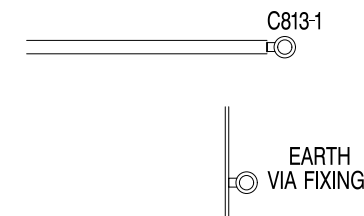

86M4232A

Earth points are identified with an eyelet symbol and a connector number, except where components are grounded through their fixings, when only the eyelet is shown.

Fuses and Diodes

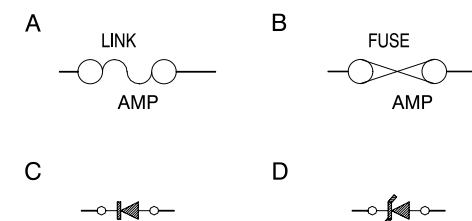


86M4234A

Fusible links (A) and current rated fuses (B) are identified as shown.


The direction of the arrow in a Diode symbol (C) indicates the direction of current flow. The Zener diode (D) - prevents current flow until a precise voltage is reached.

1 POWER DISTRIBUTION

Engine Compartment Fuse Box

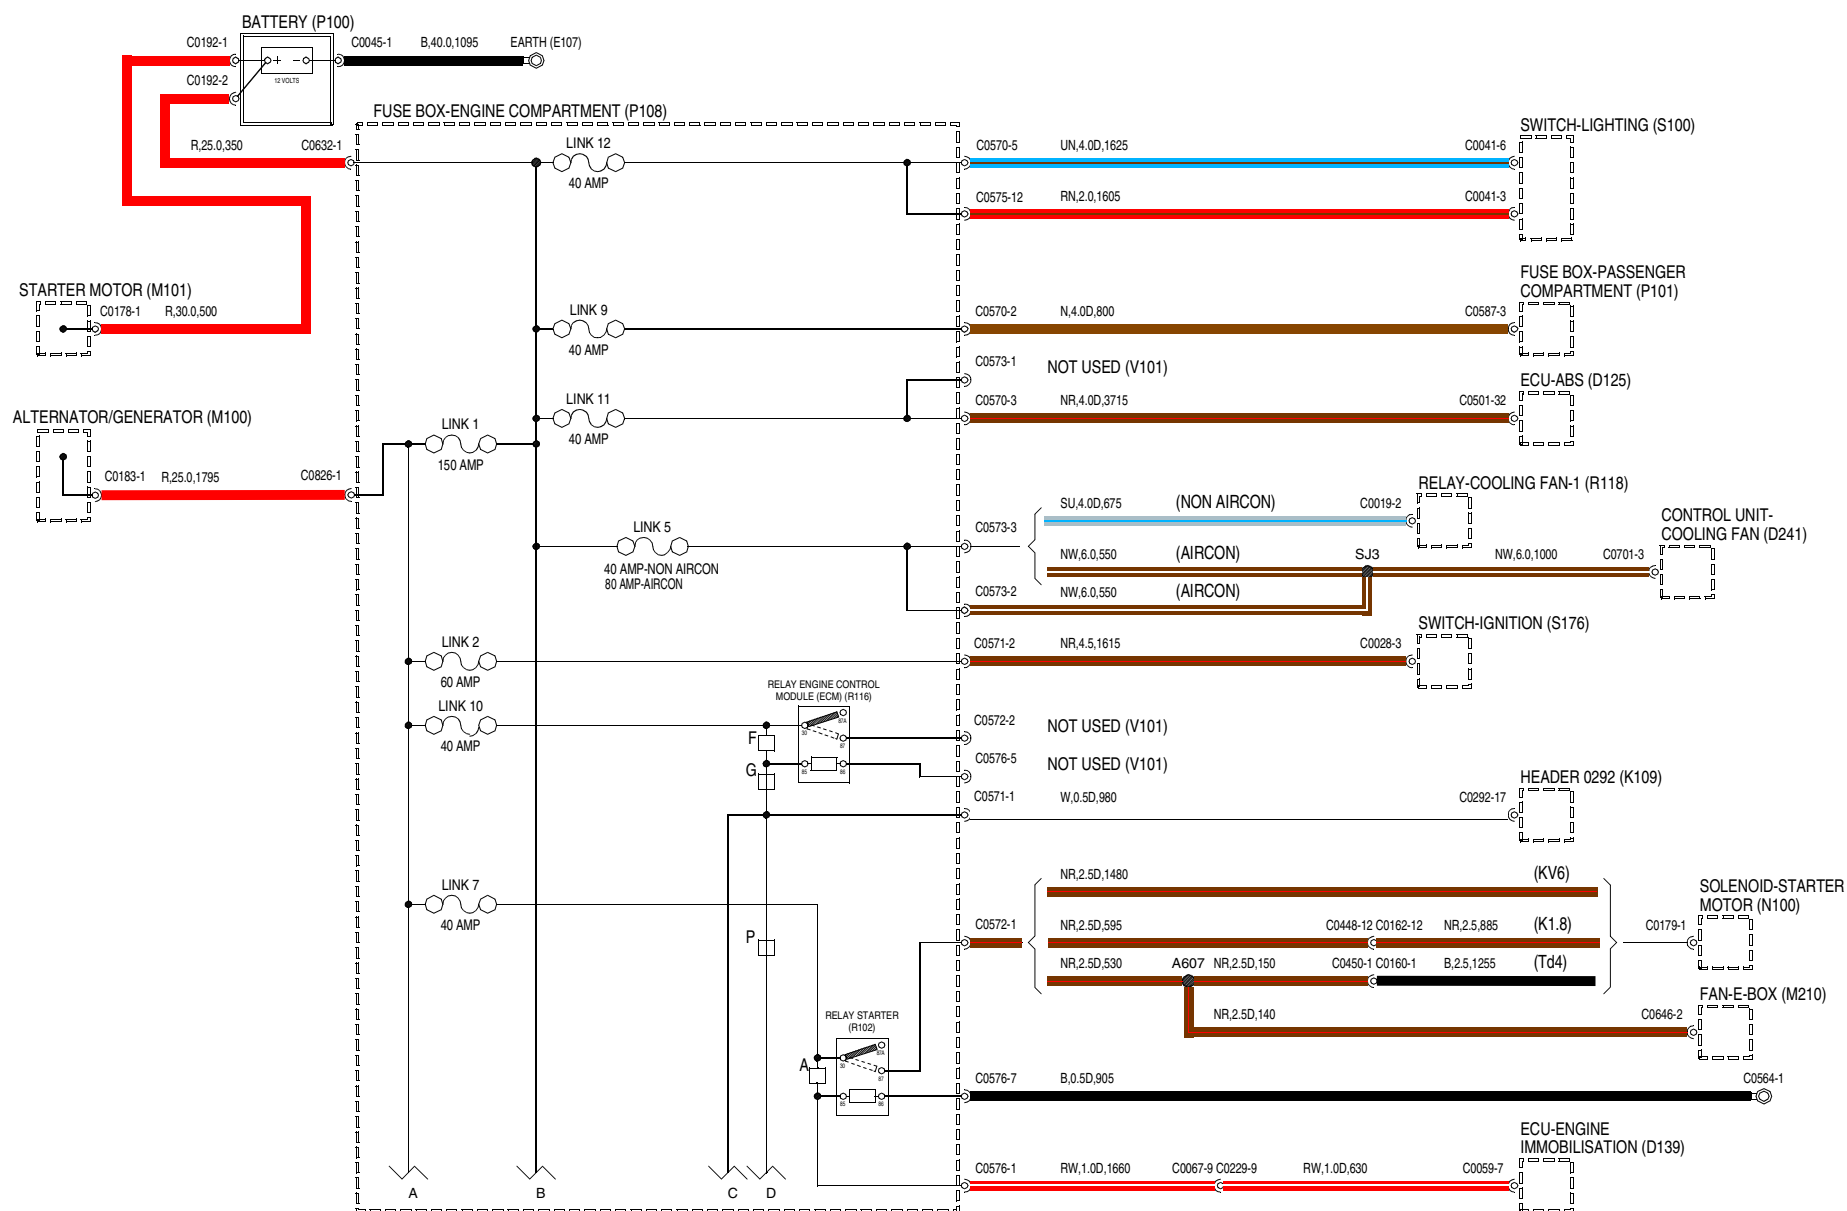


VWR004430-A-01

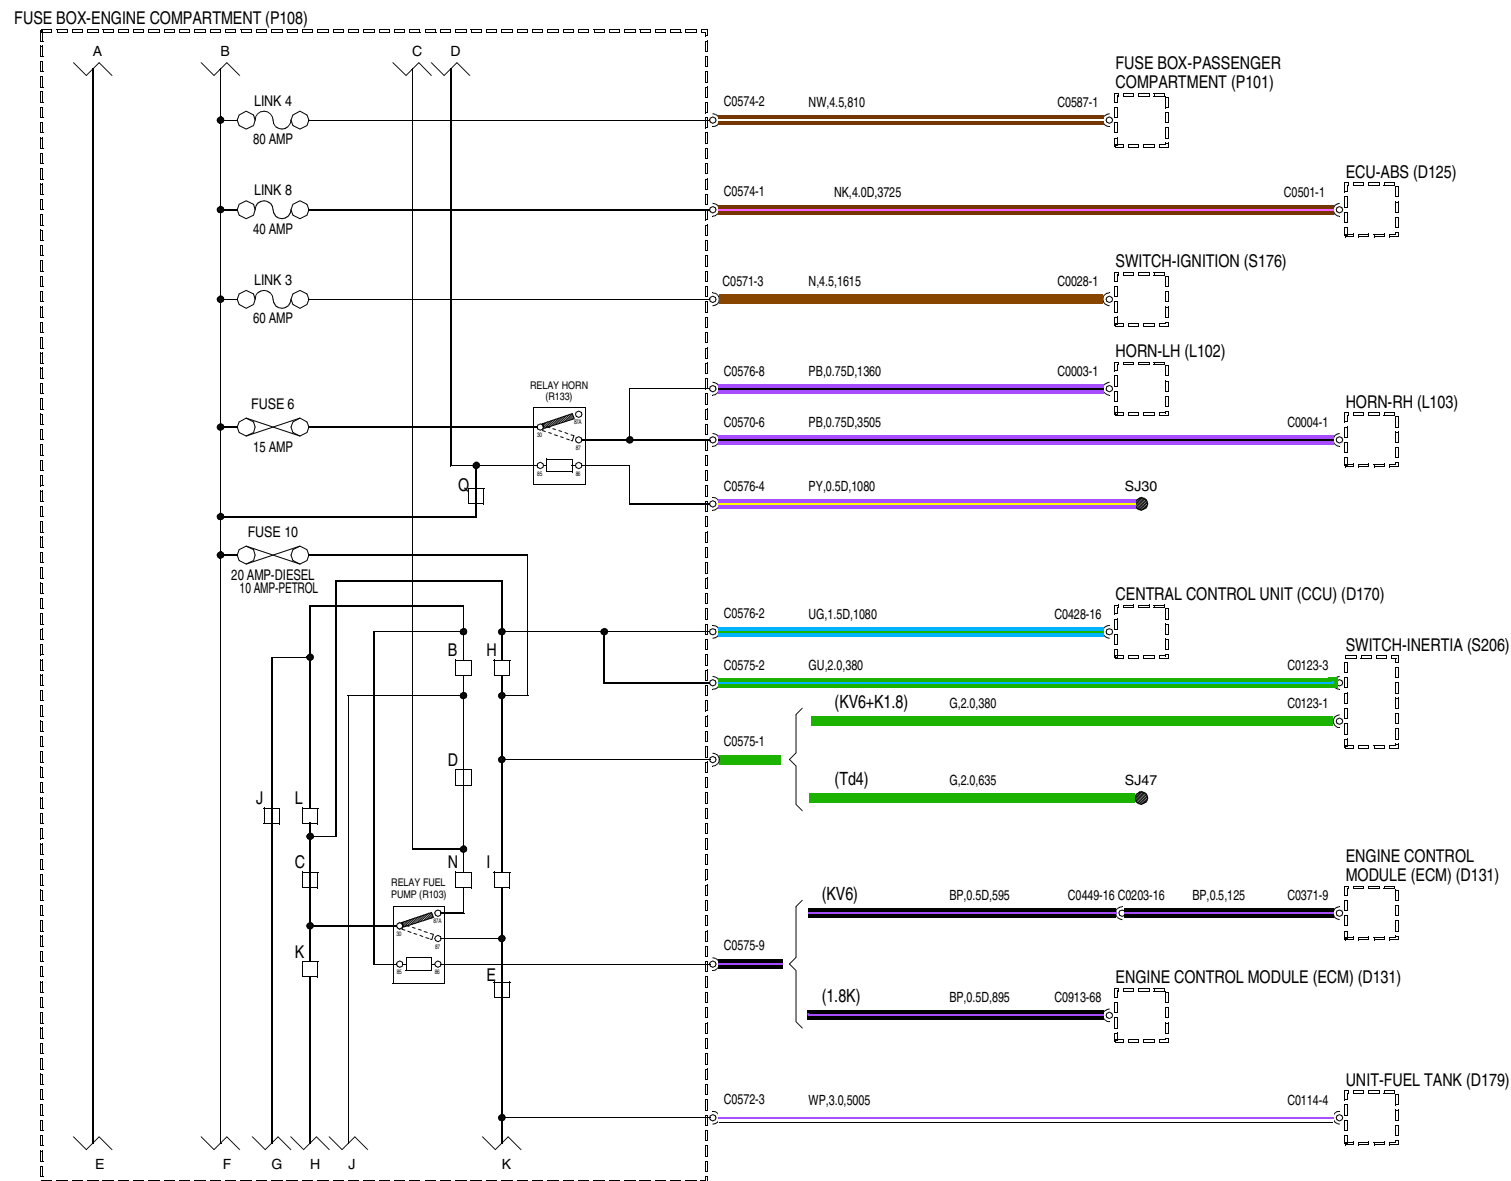


VWR004430-A-02

1 POWER DISTRIBUTION

Engine Compartment Fuse Box

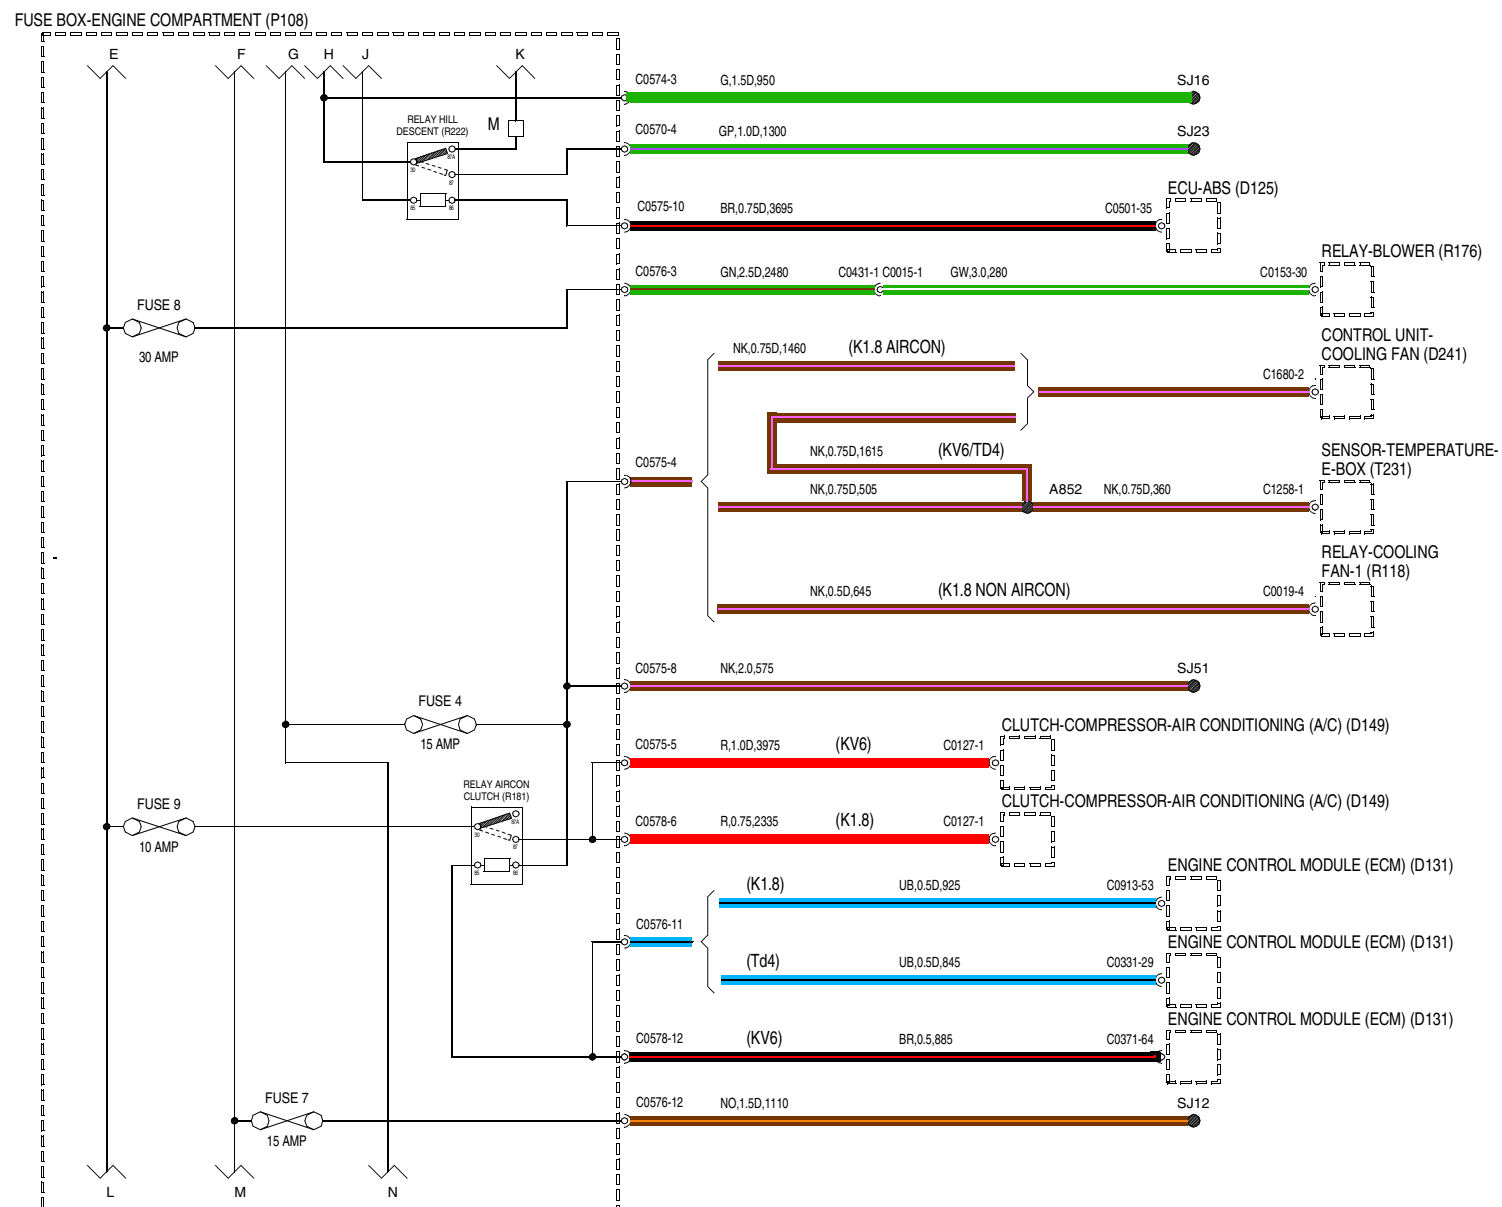

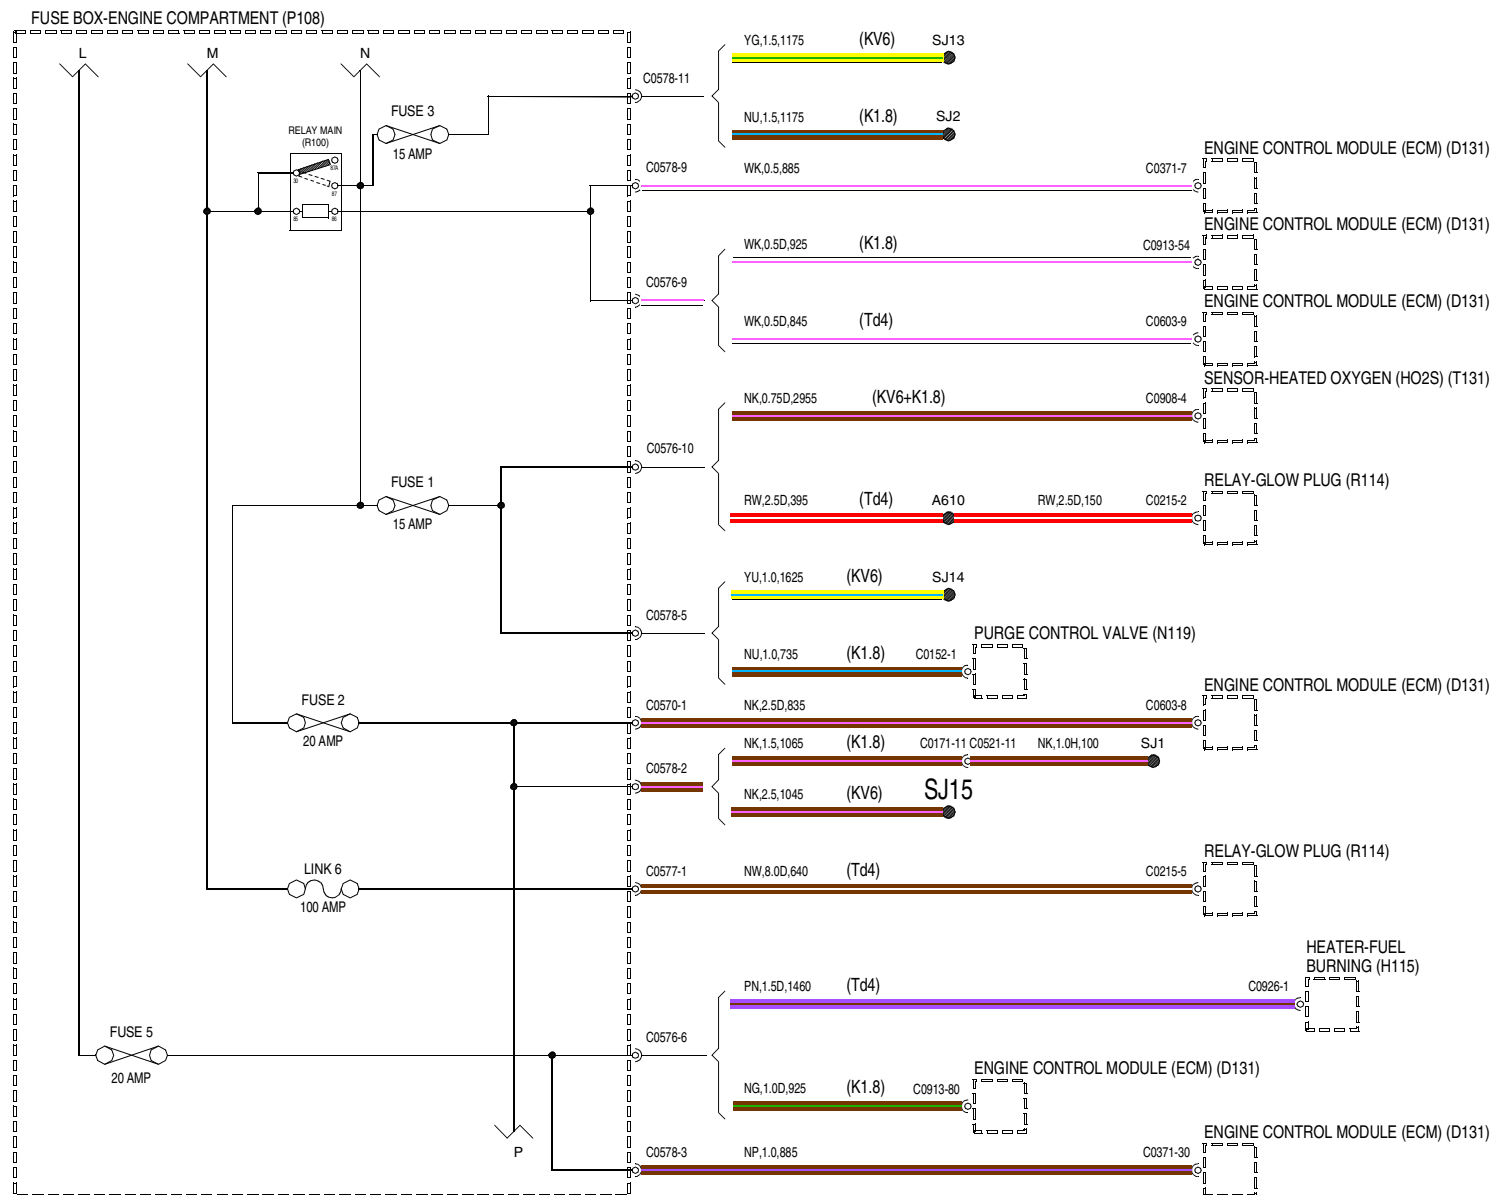


VWR004430-A-04

1 POWER DISTRIBUTION


Engine Compartment Fuse Box

FUSE BOX-ENGINE COMPARTMENT (P108)

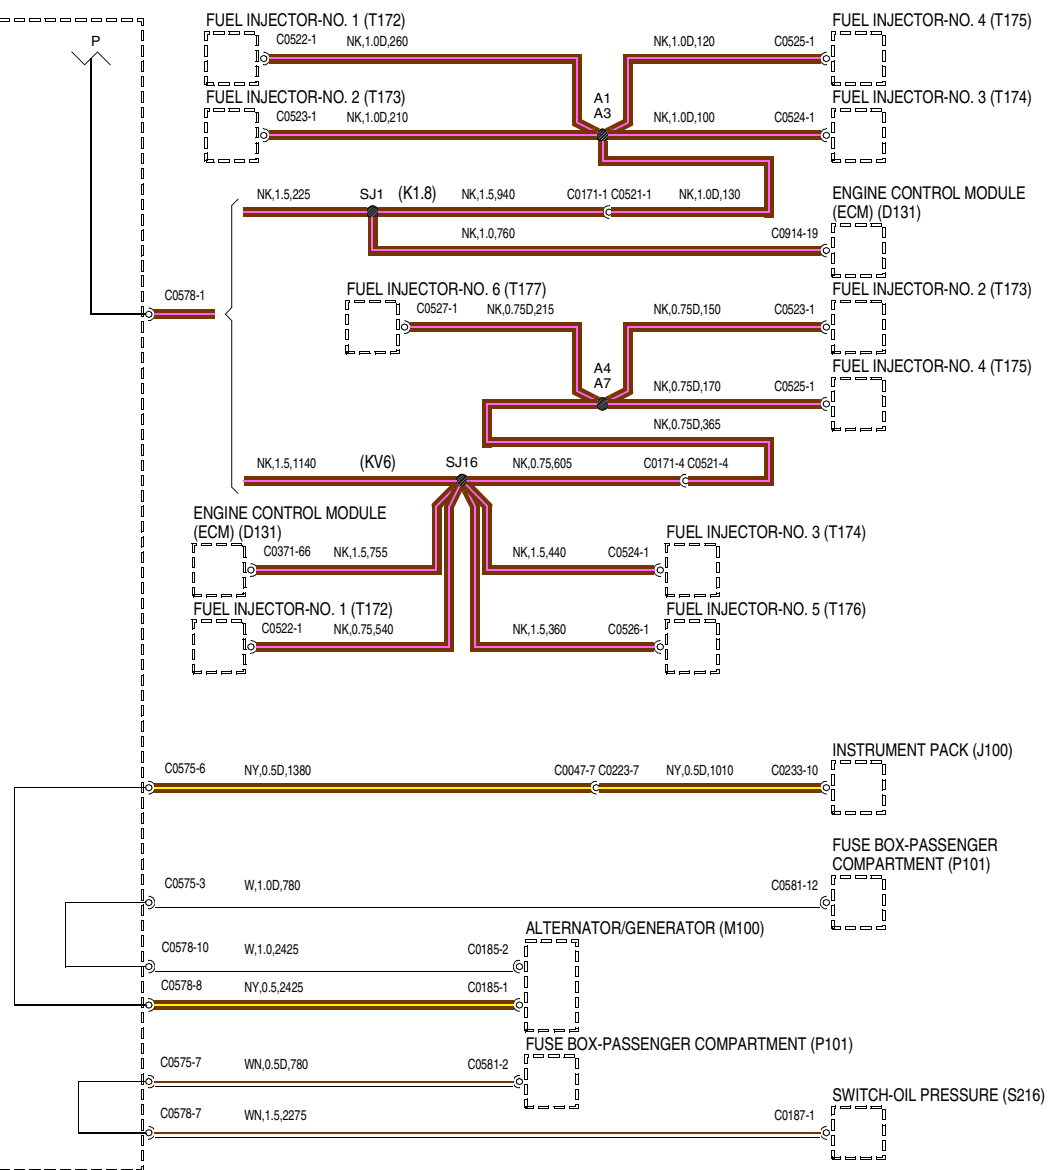


1 POWER DISTRIBUTION

Engine Compartment Fuse Box - NAS

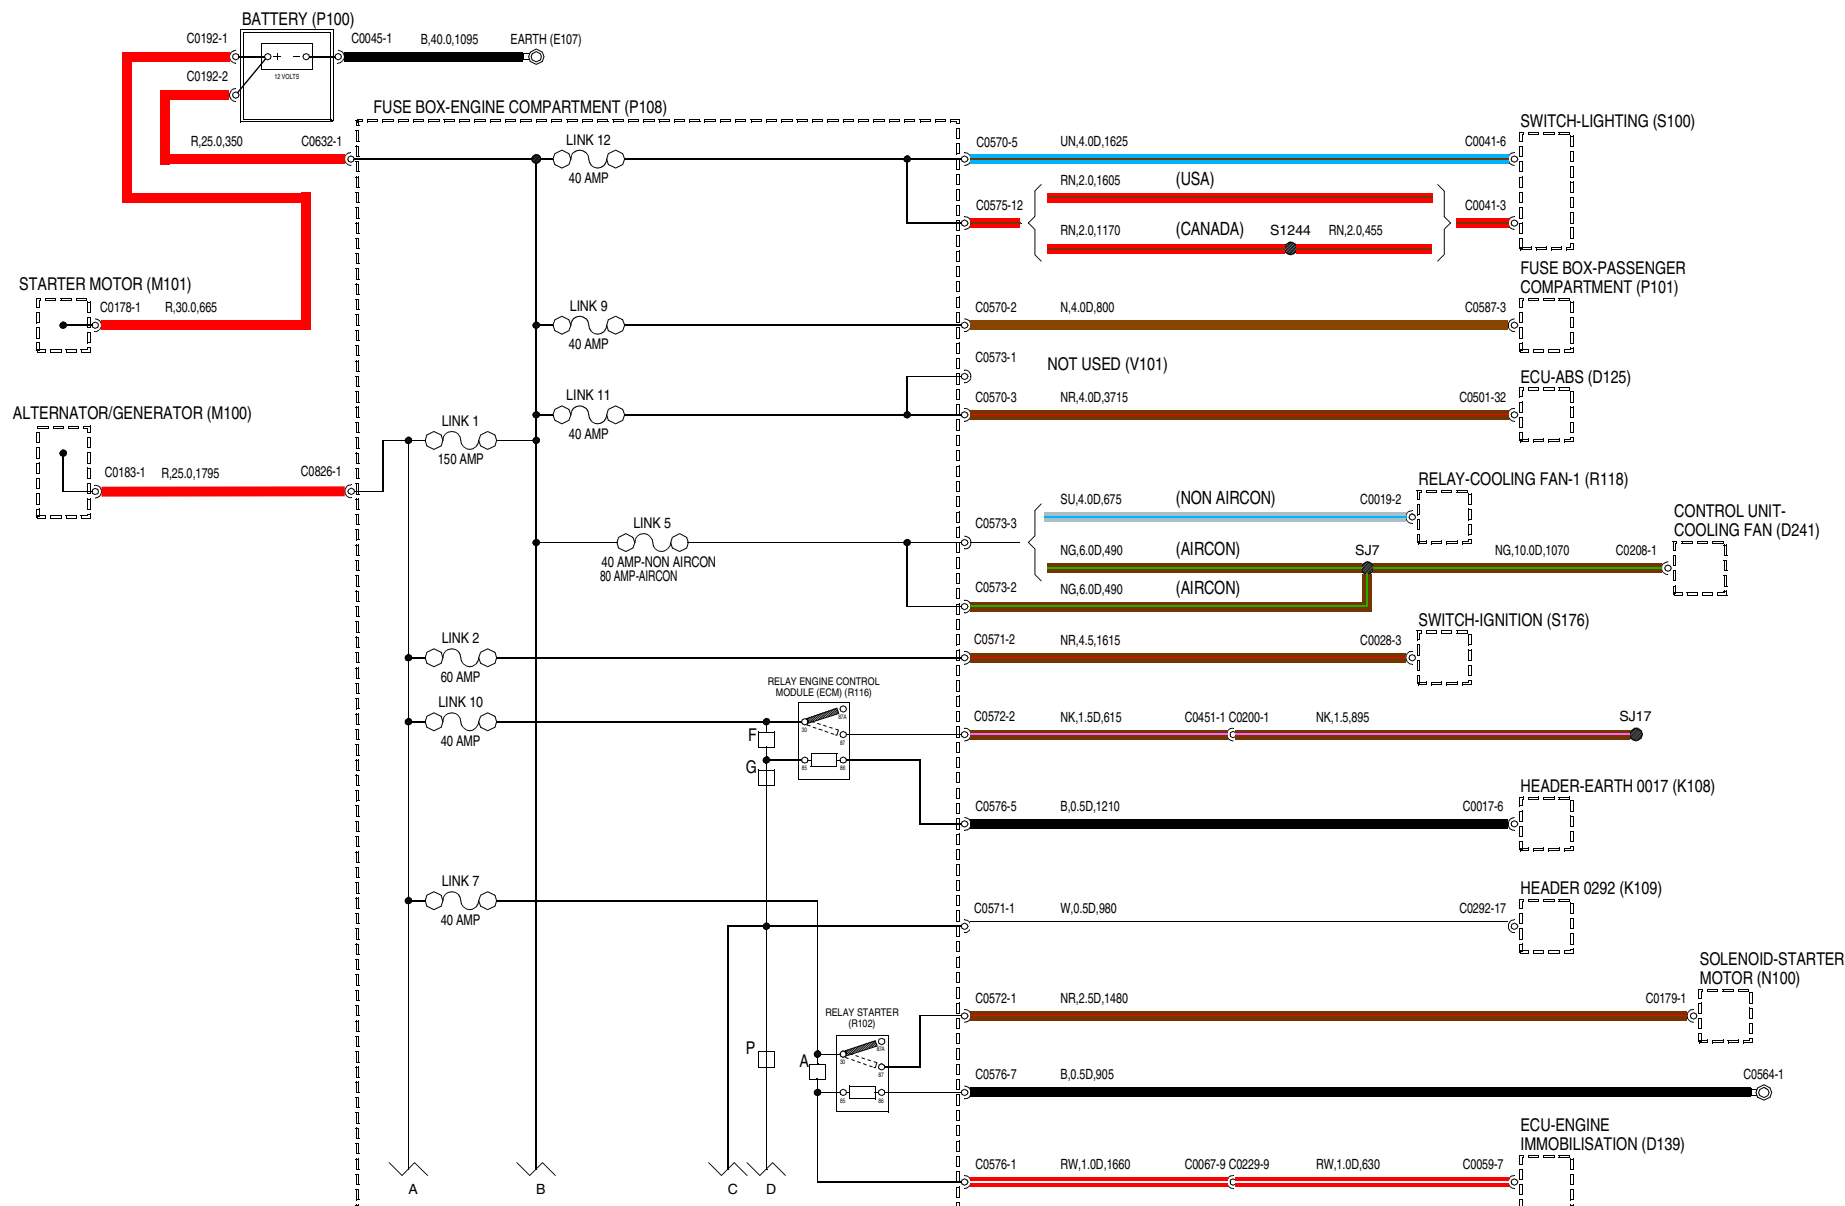


VWR004250-A-01

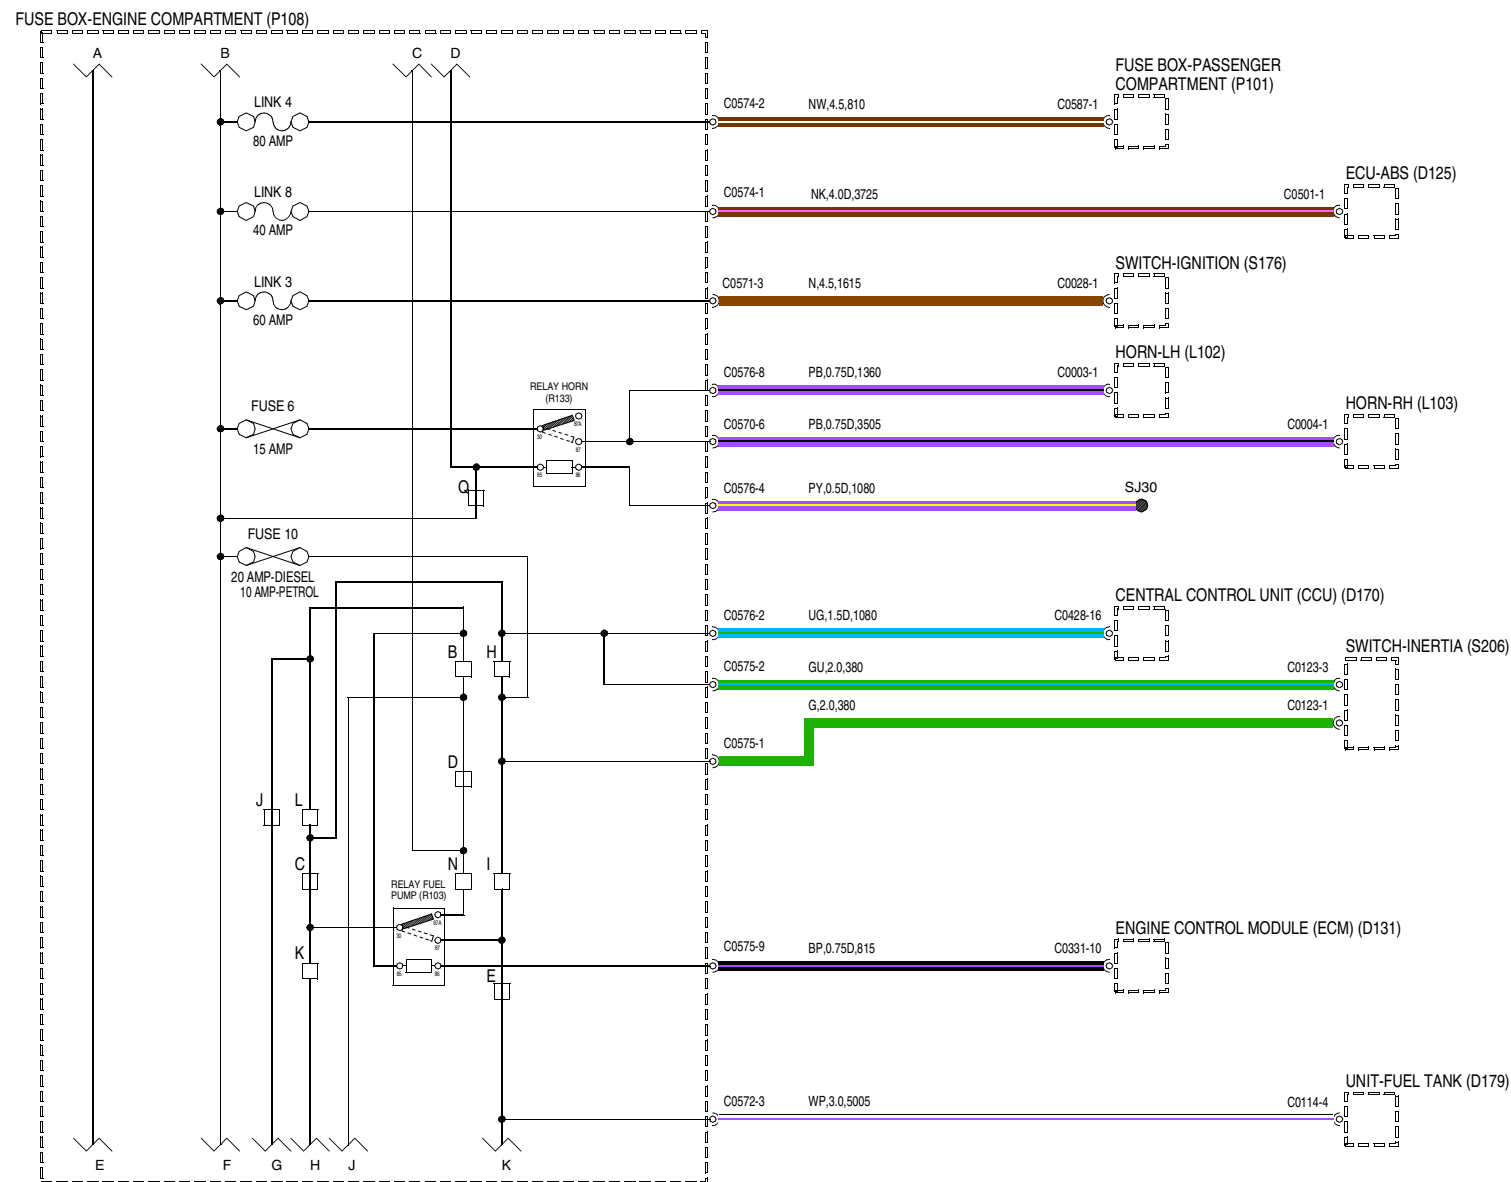


VWR004250-A-02

1 POWER DISTRIBUTION


Engine Compartment Fuse Box - NAS

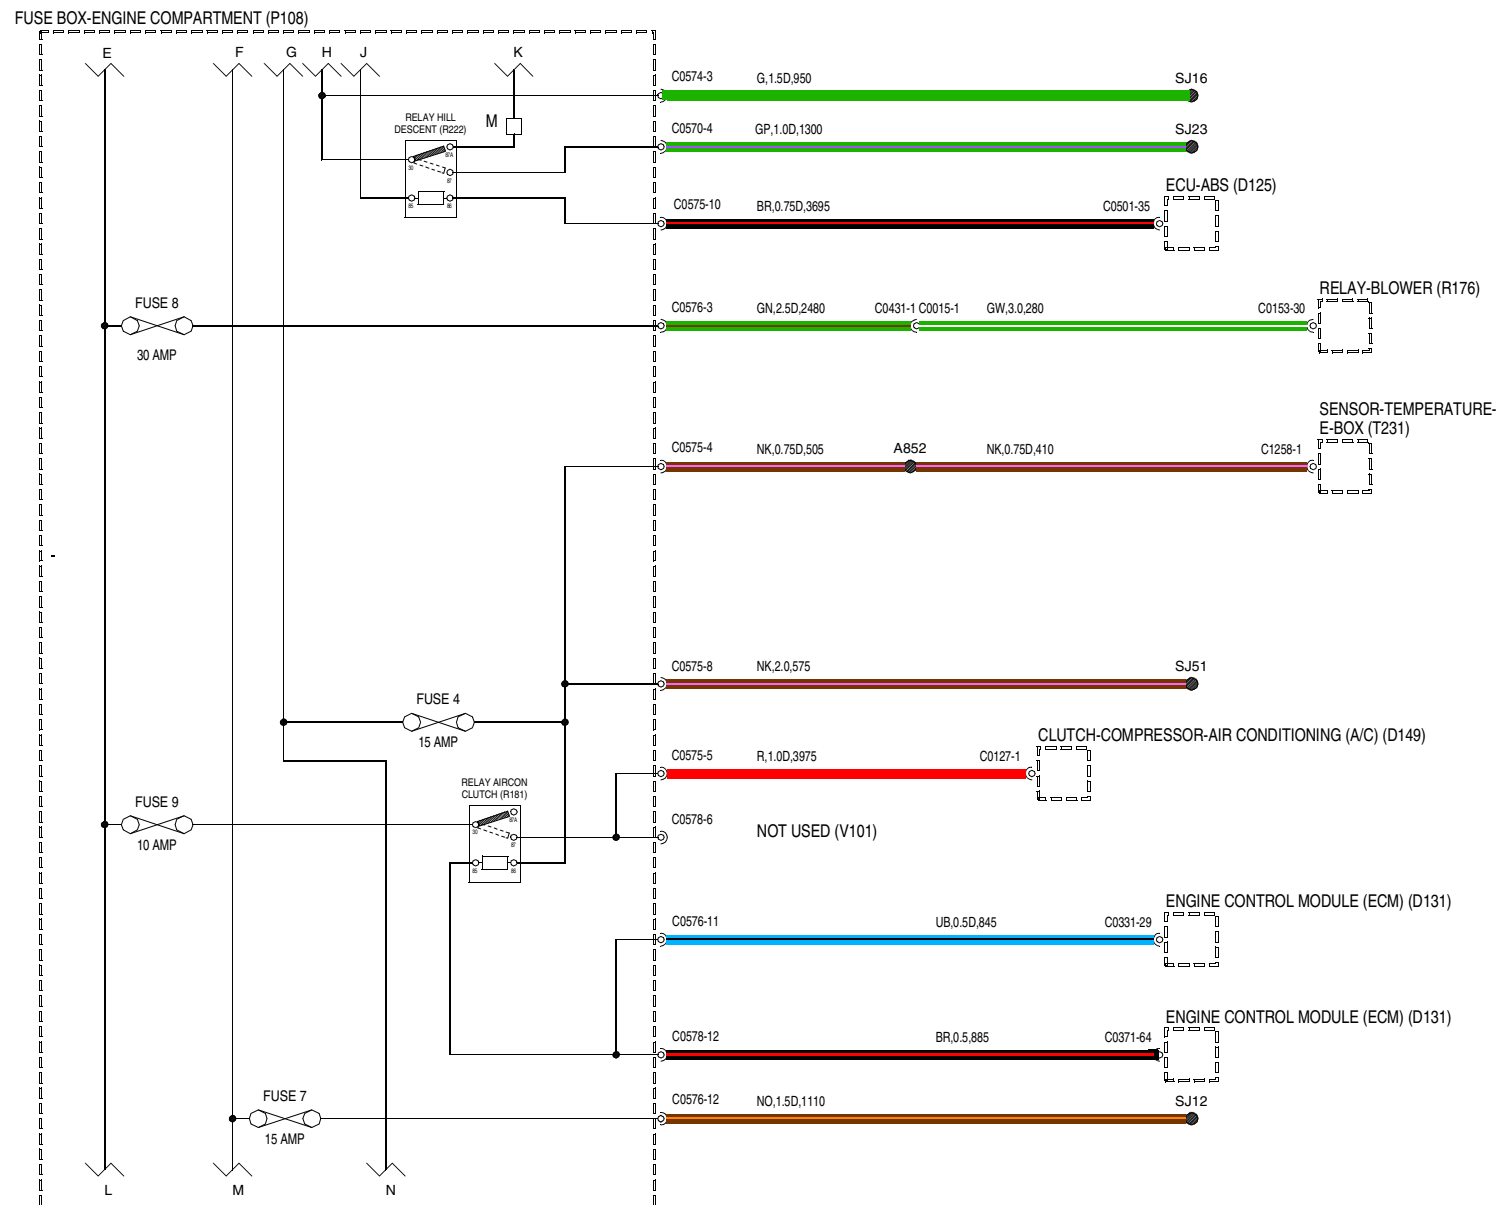

VWR004250-A-03

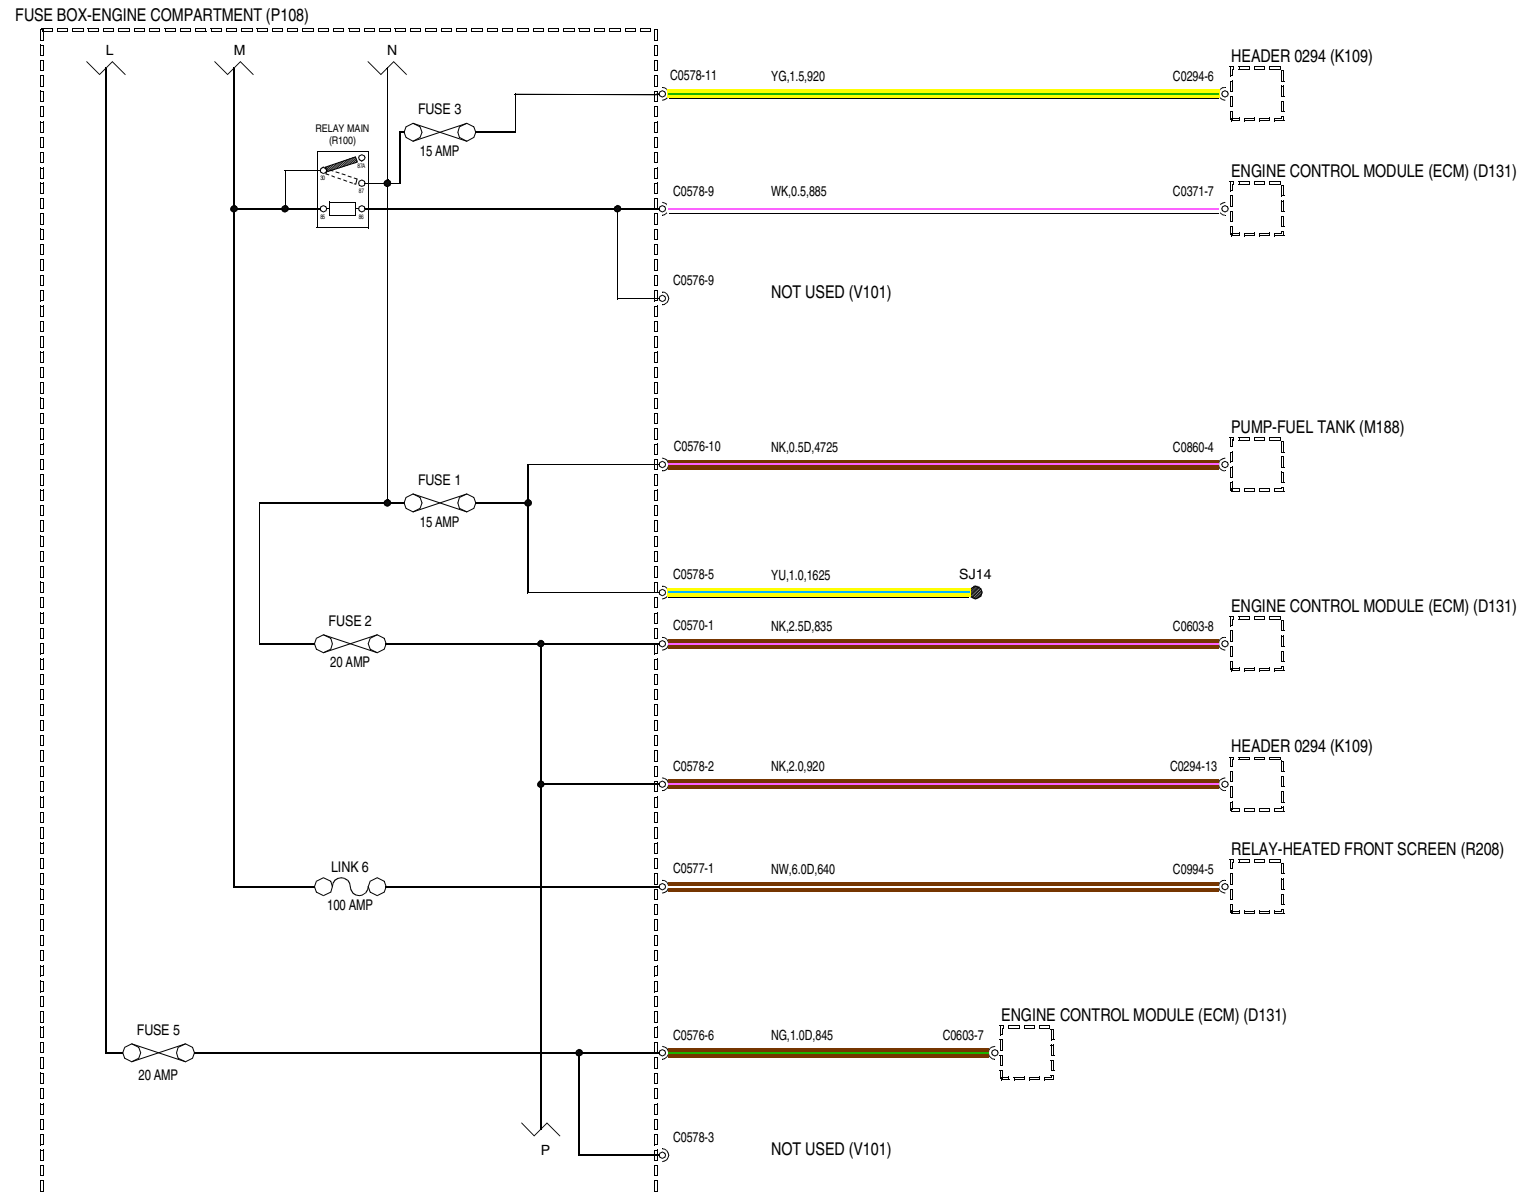


VWR004250-A-04

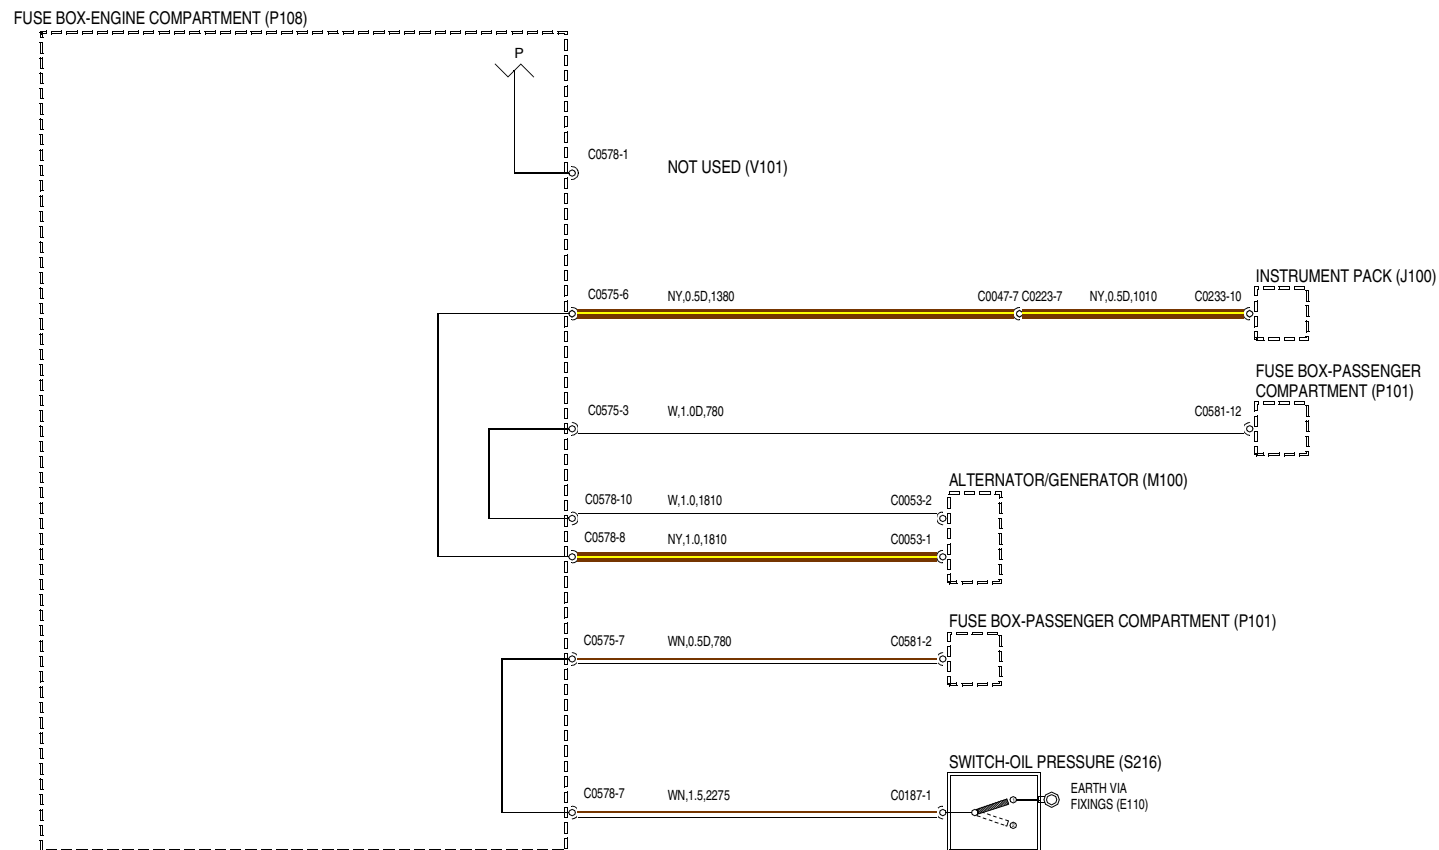


VWR004250-A-05

1 POWER DISTRIBUTION

Passenger Compartment Fuse Box

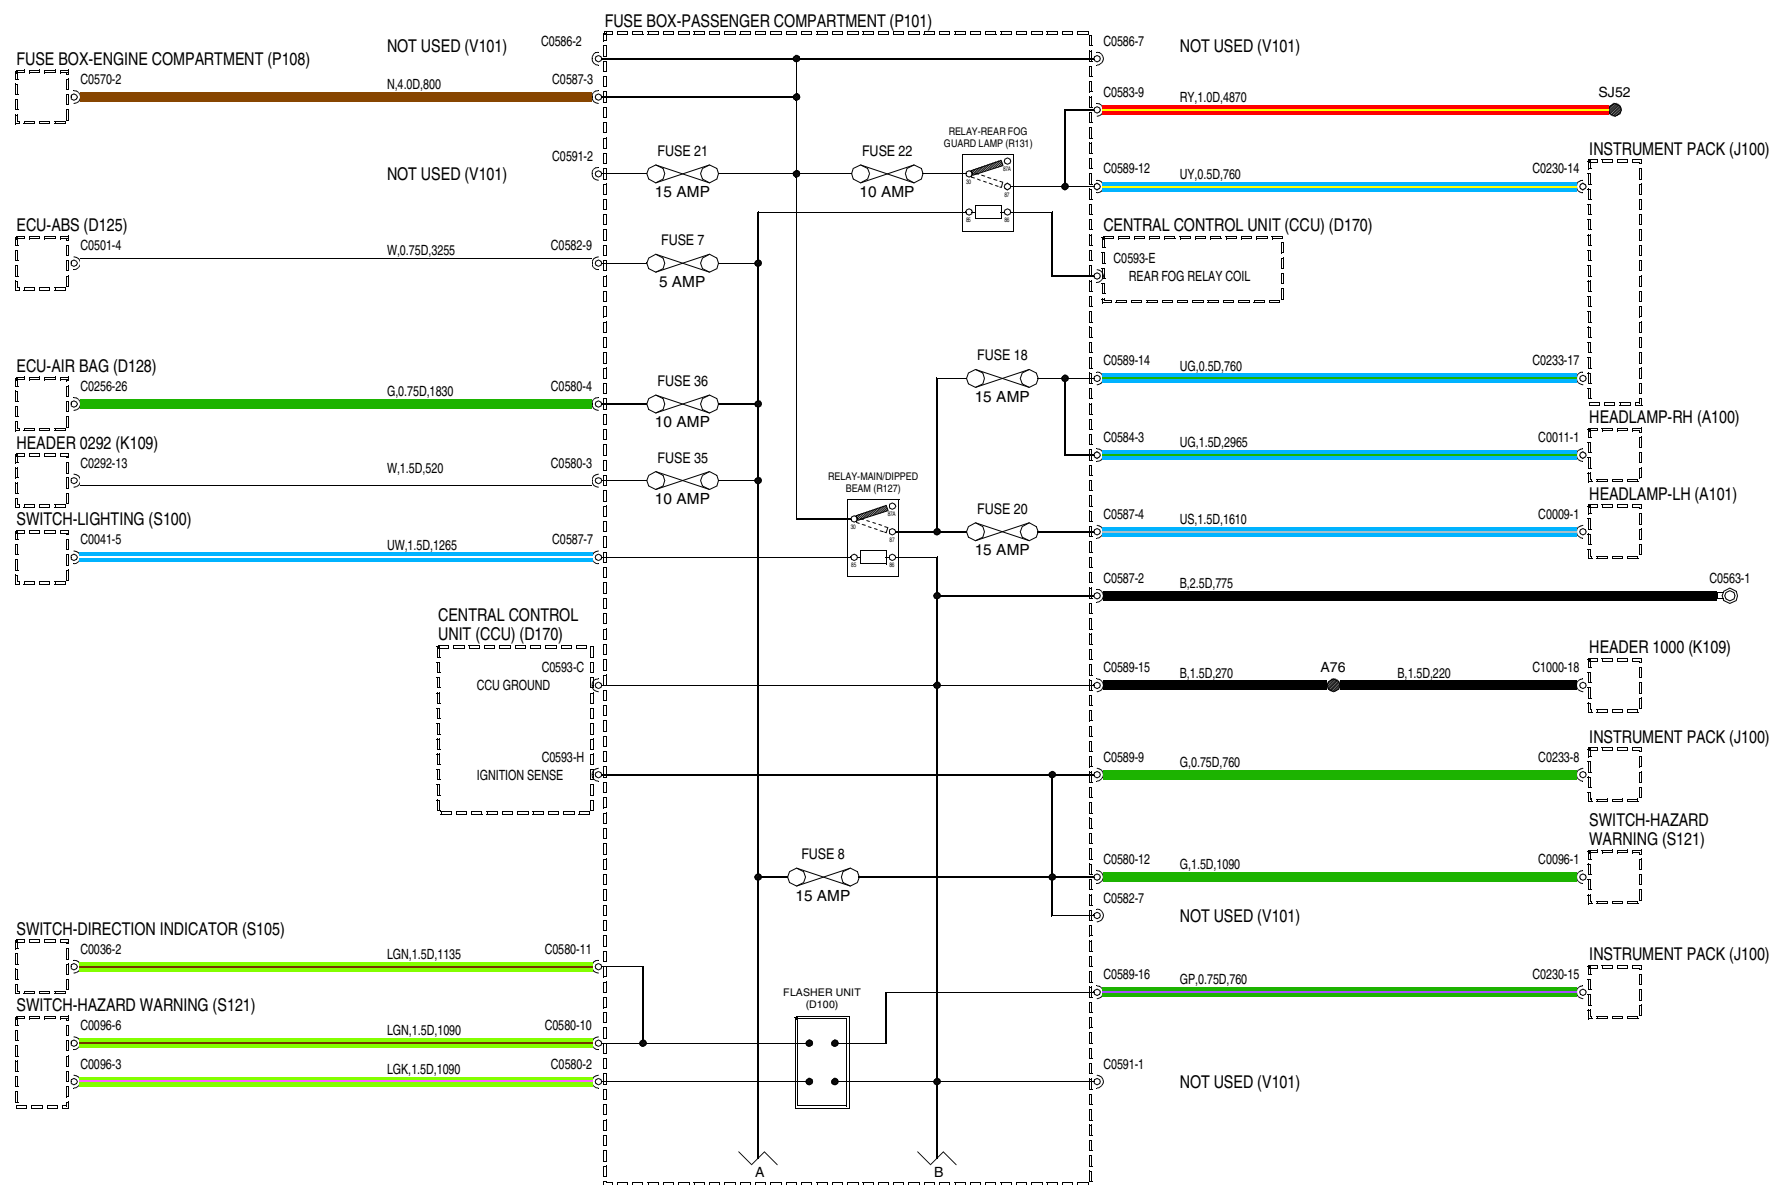


WVR004440-A-01

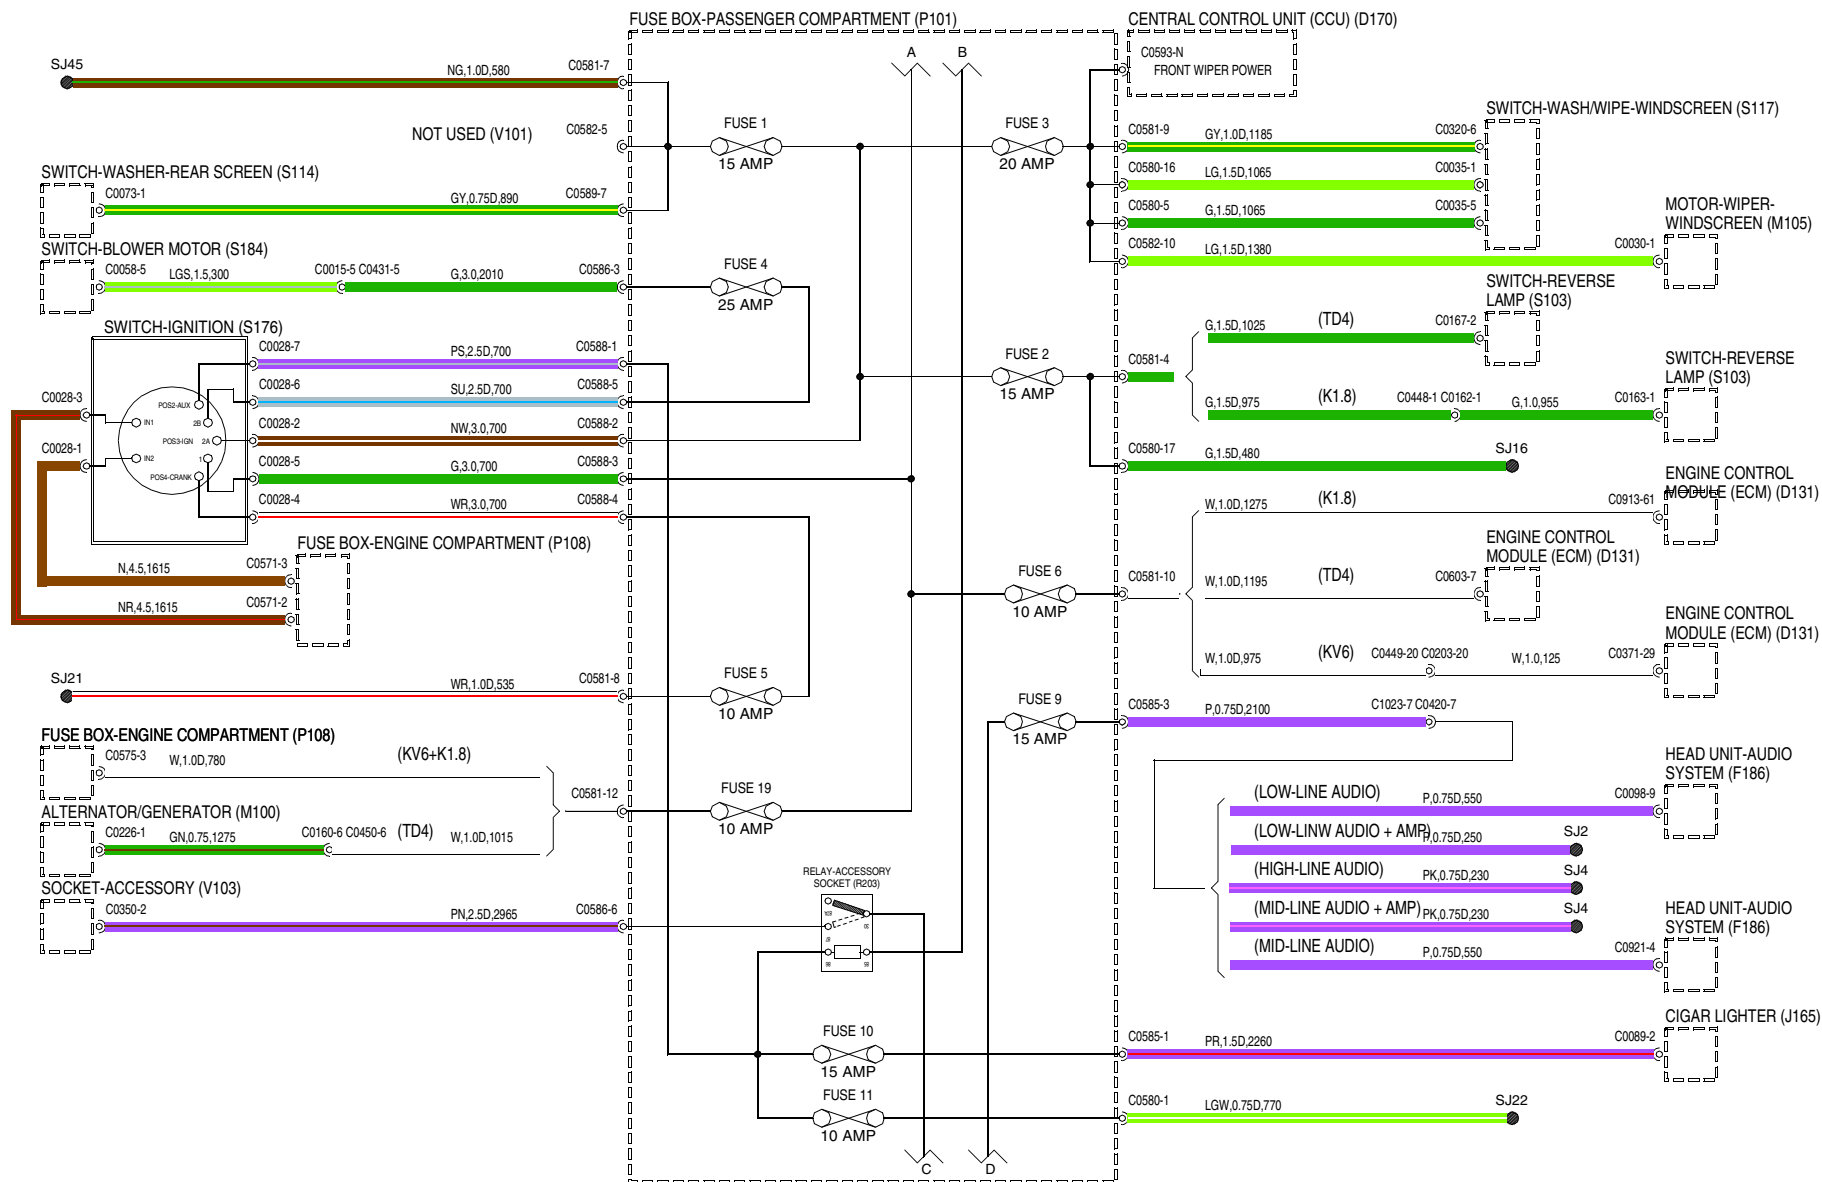


VWR004440-A-02

1 POWER DISTRIBUTION

Passenger Compartment Fuse Box

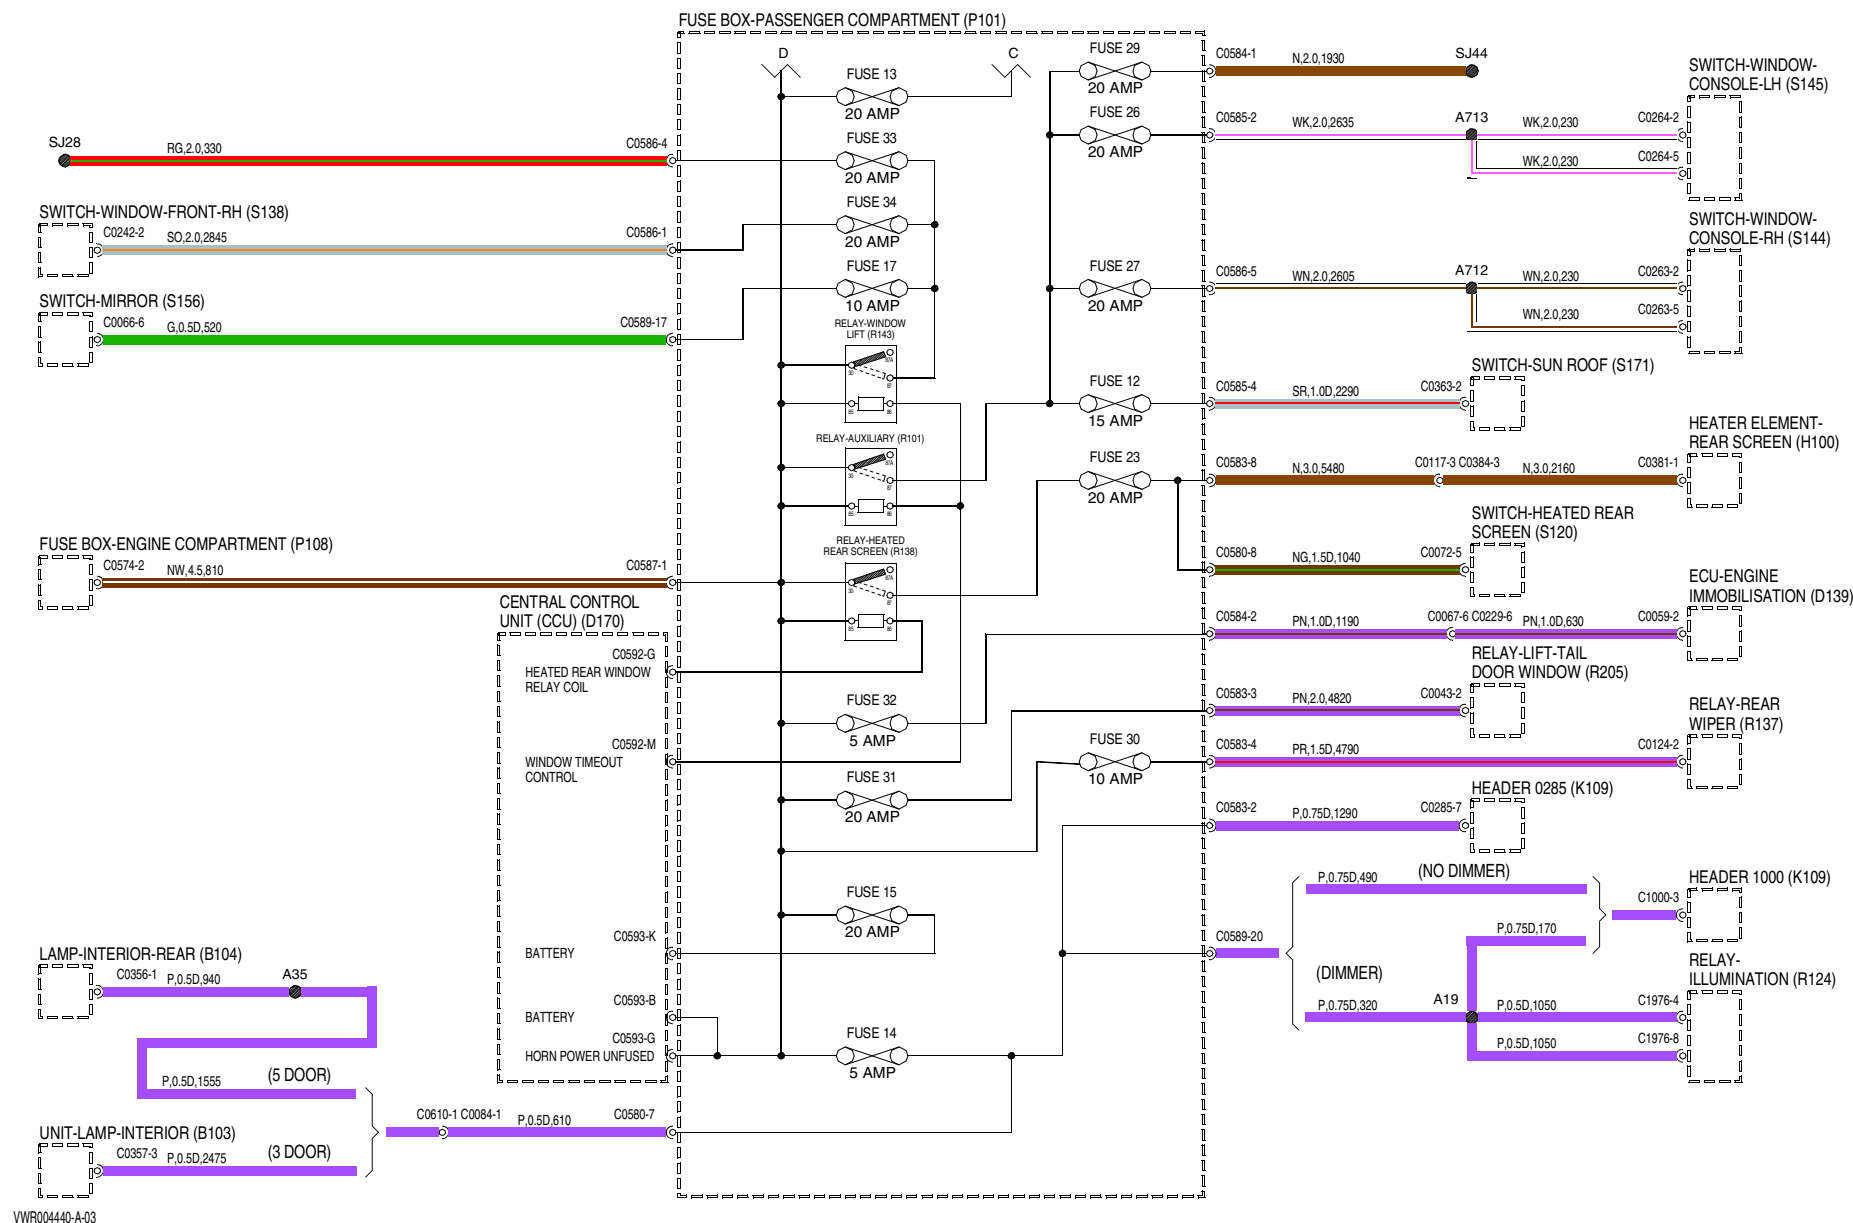


VWR004440-A-03

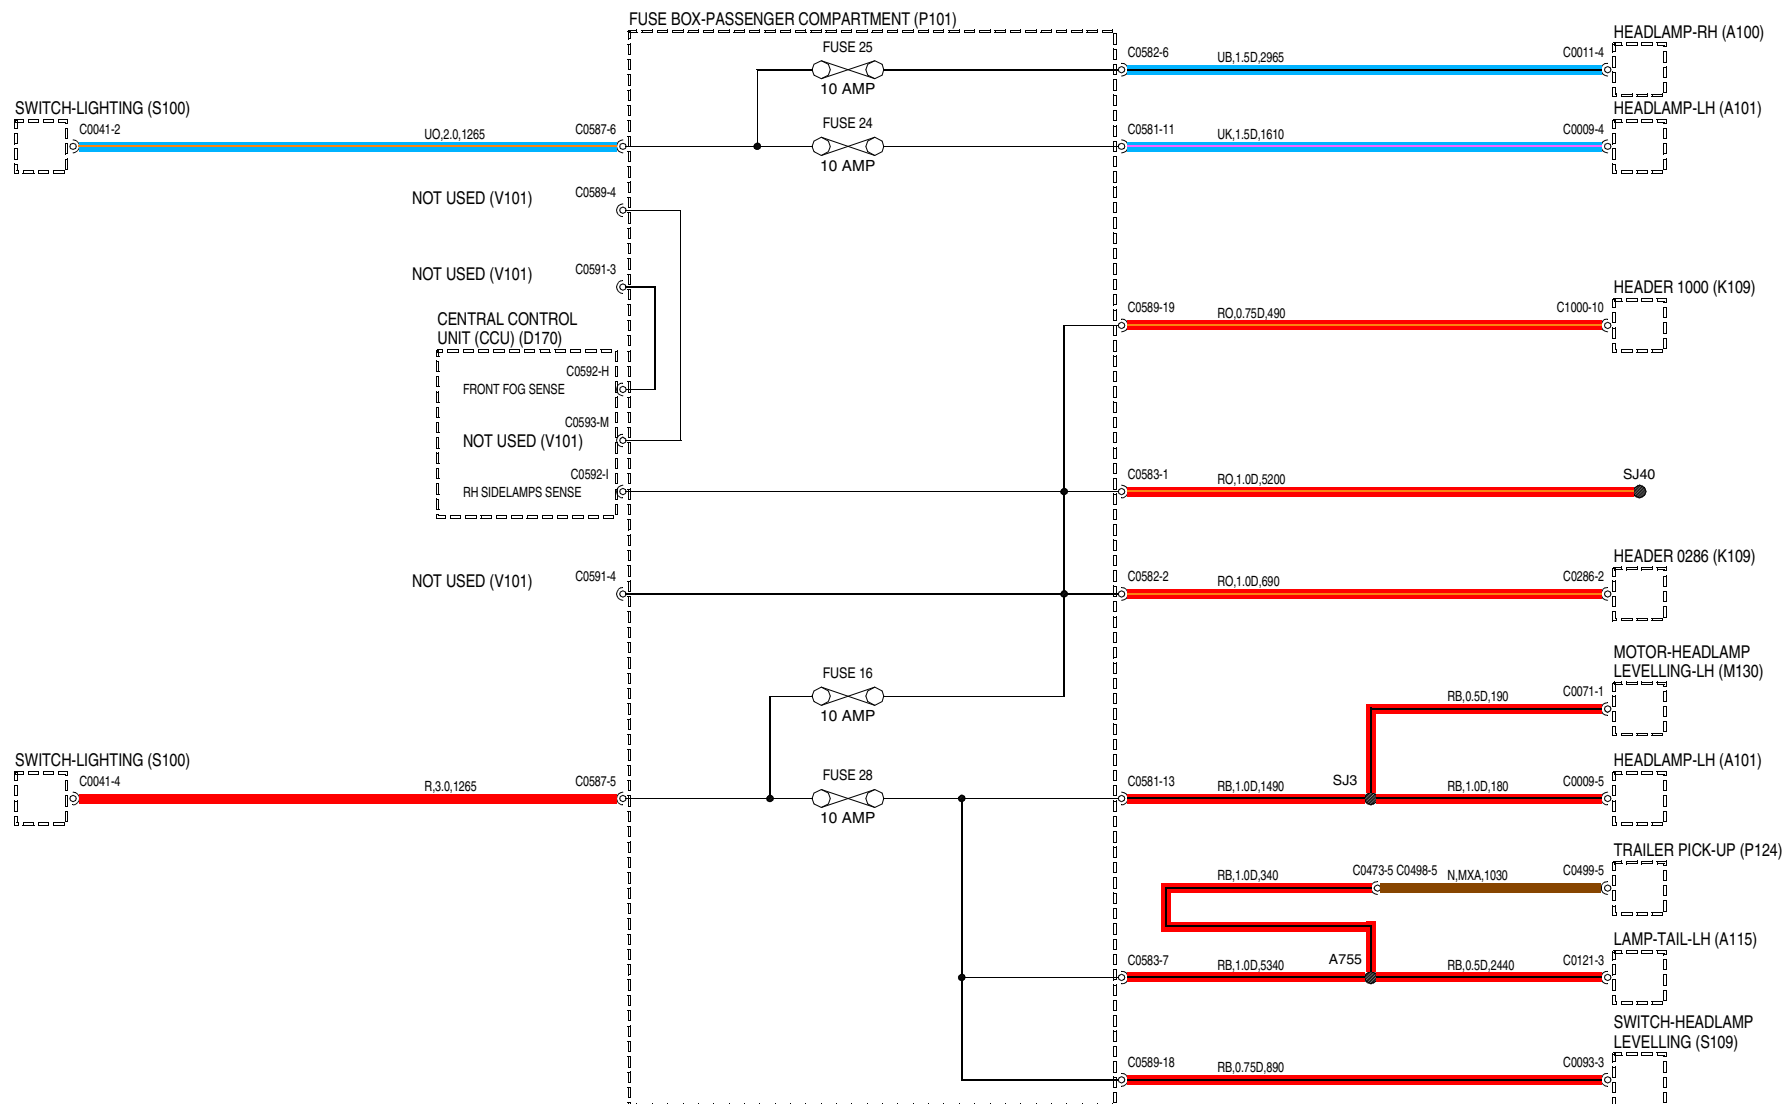

VWR004440-A-04


1 POWER DISTRIBUTION

Passenger Compartment Fuse Box

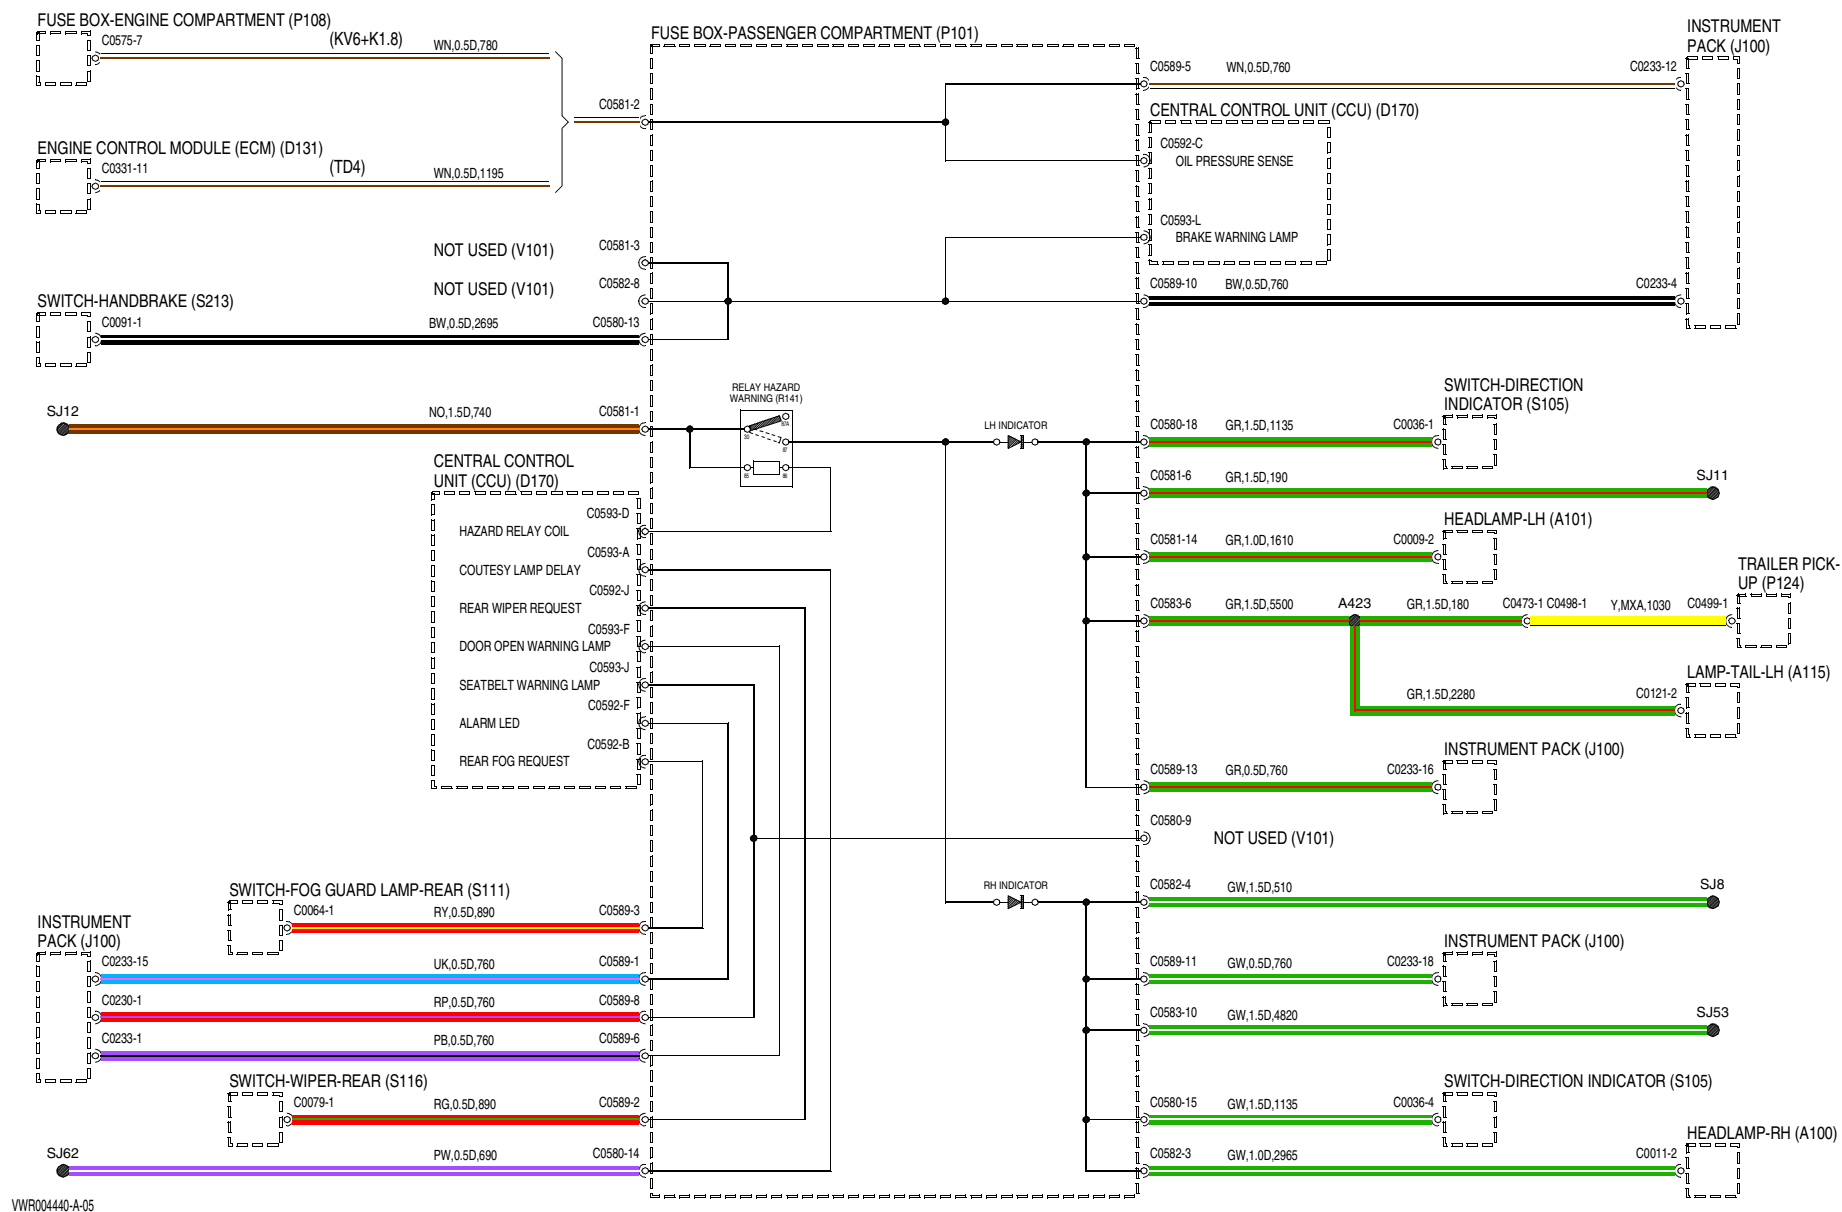

1 POWER DISTRIBUTION

Passenger Compartment Fuse Box - NAS

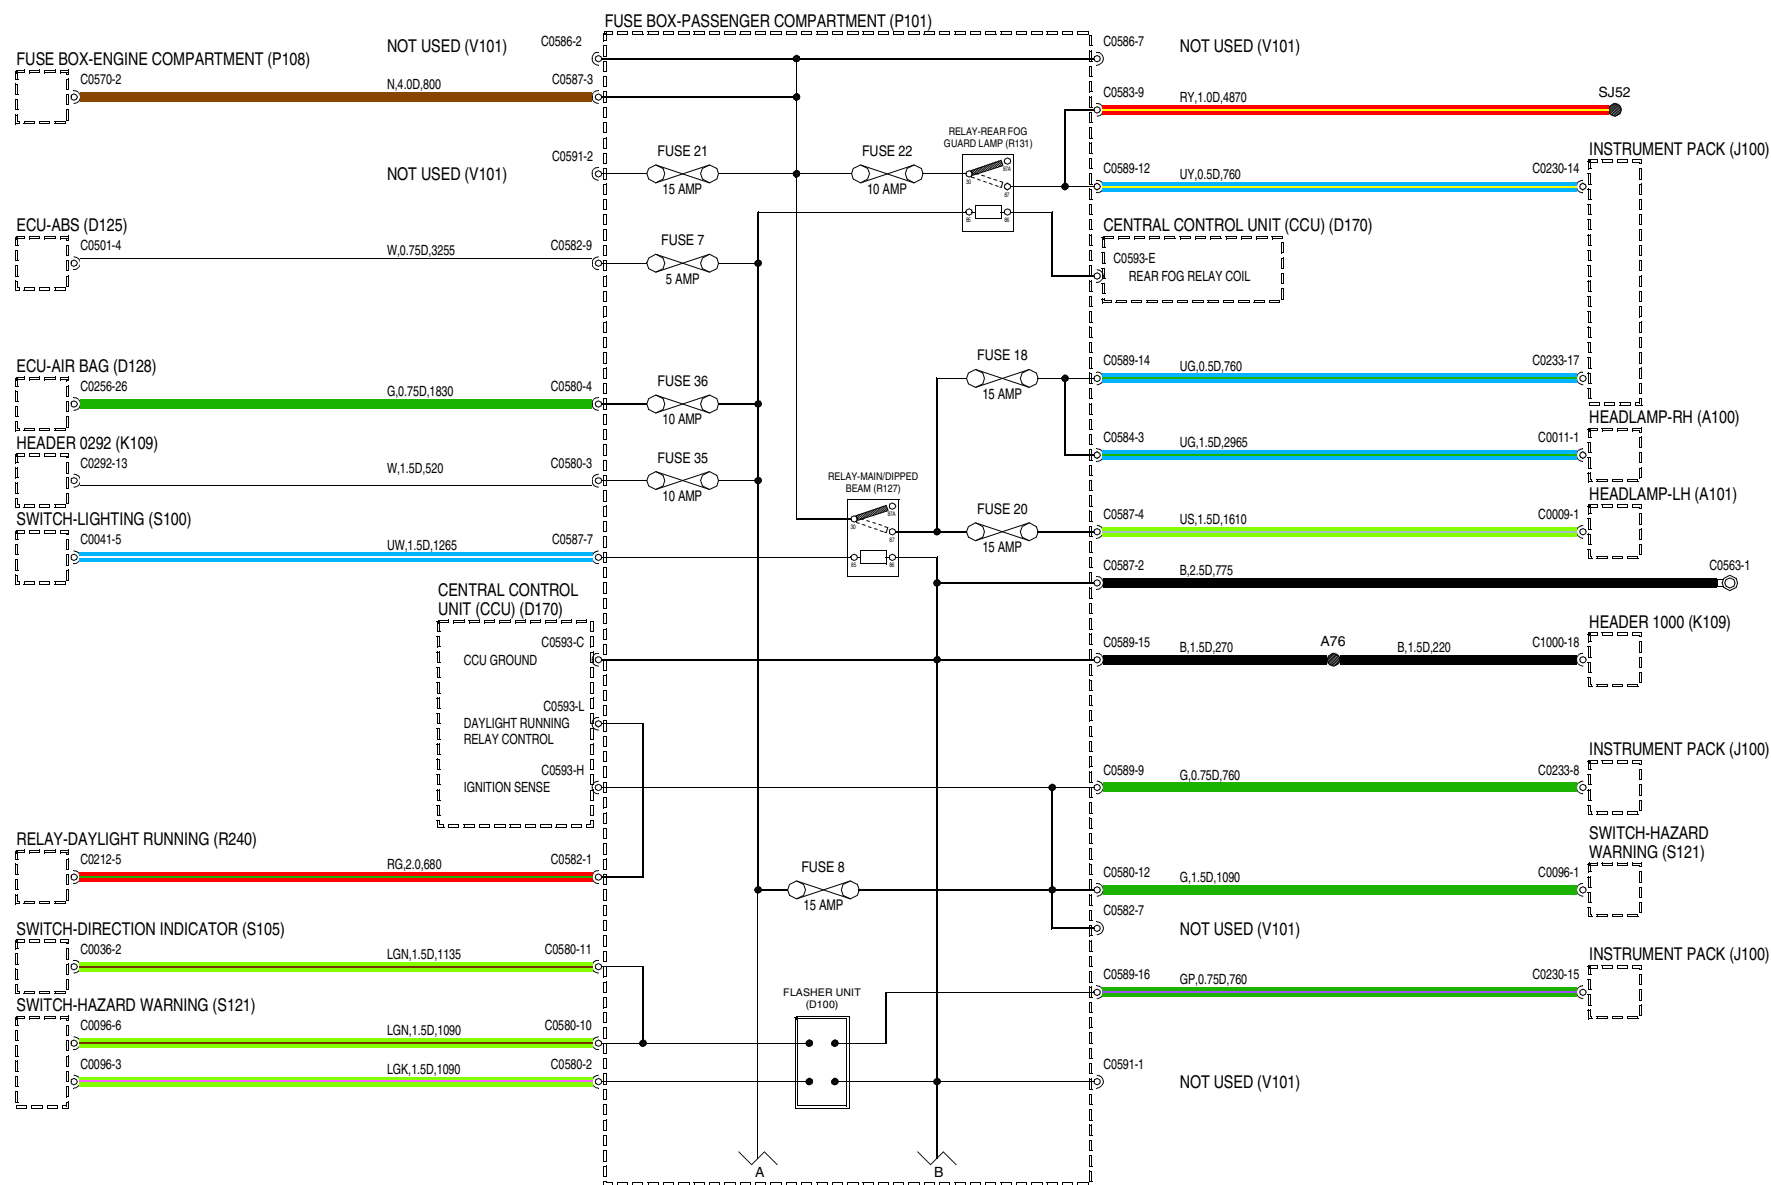

VWR004260-A-01


1 POWER DISTRIBUTION Passenger Compartment Fuse Box - NAS

1 POWER DISTRIBUTION Passenger Compartment Fuse Box - NAS




1 POWER DISTRIBUTION

Passenger Compartment Fuse Box - NAS

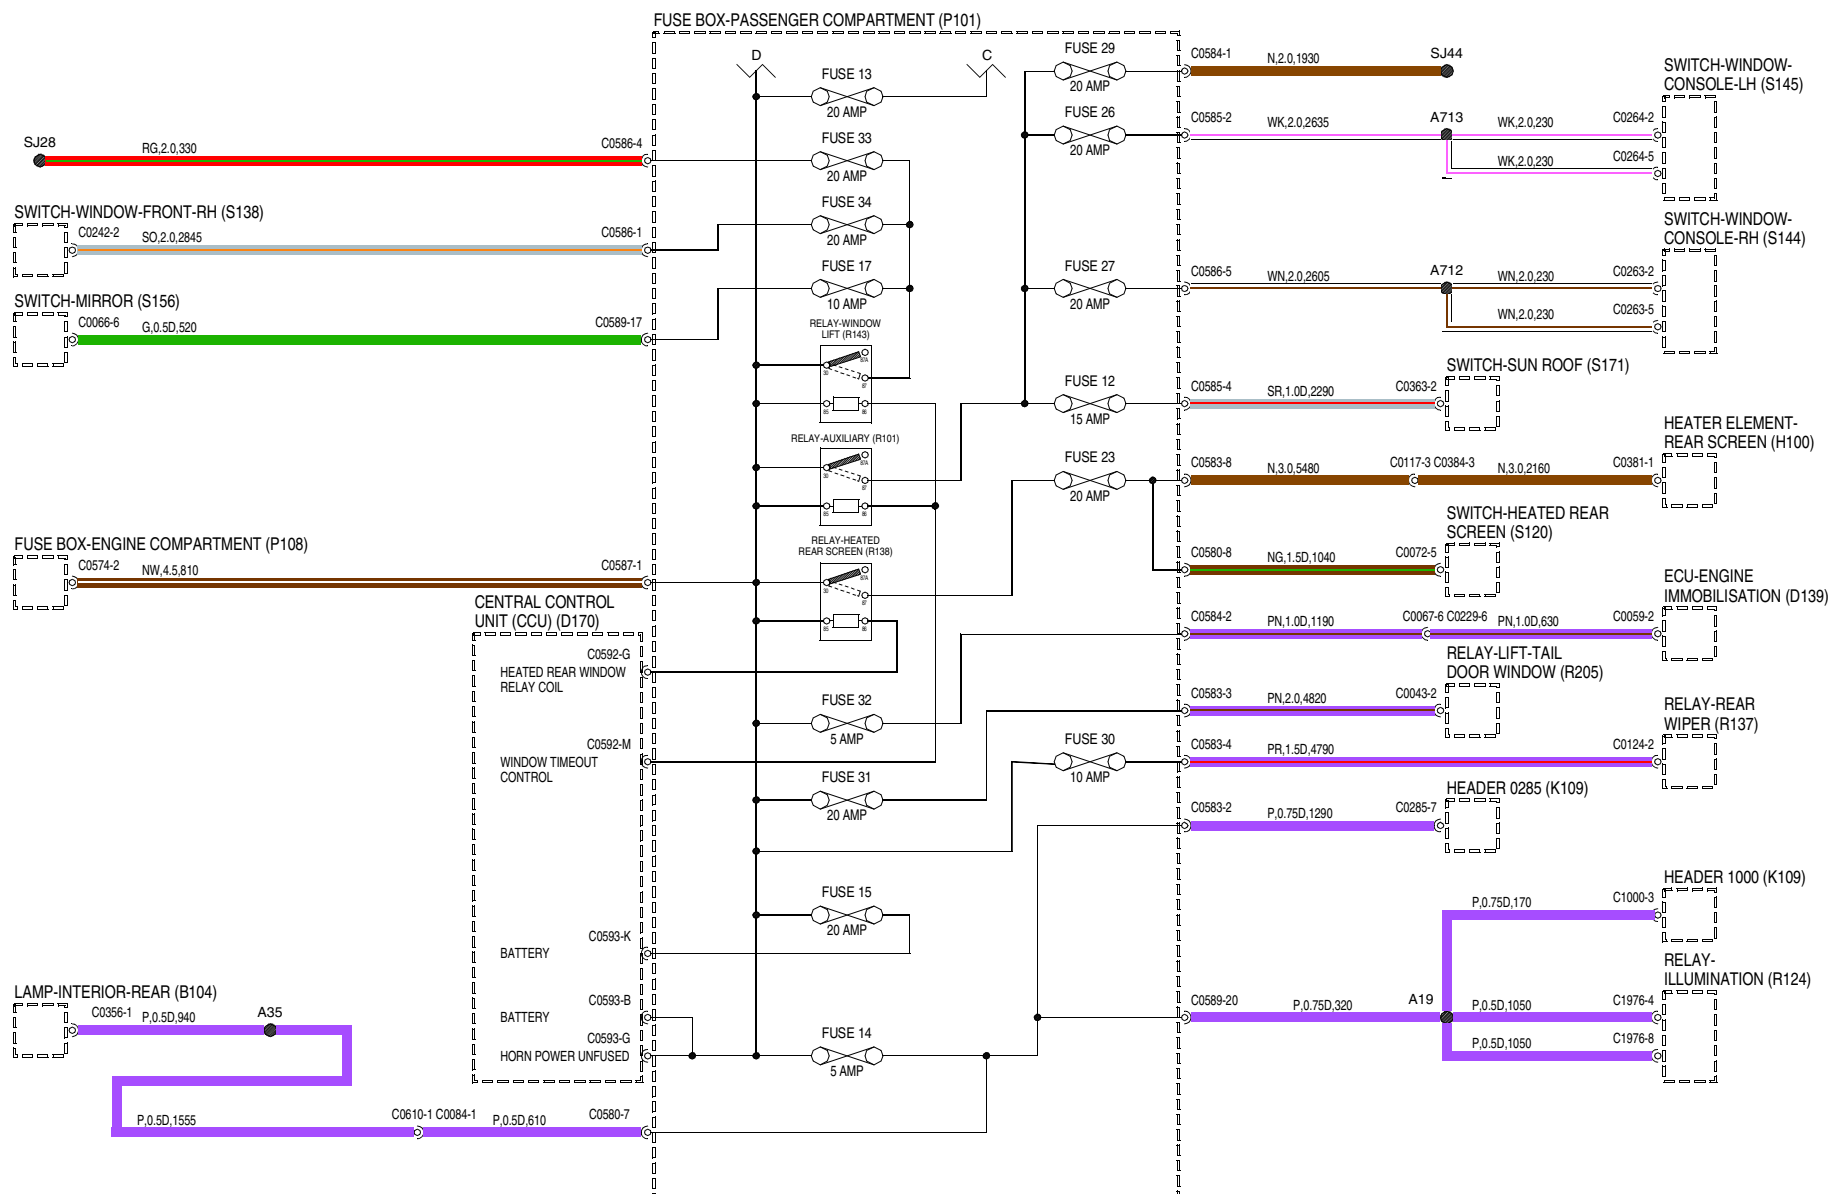


VWR004260-A-03

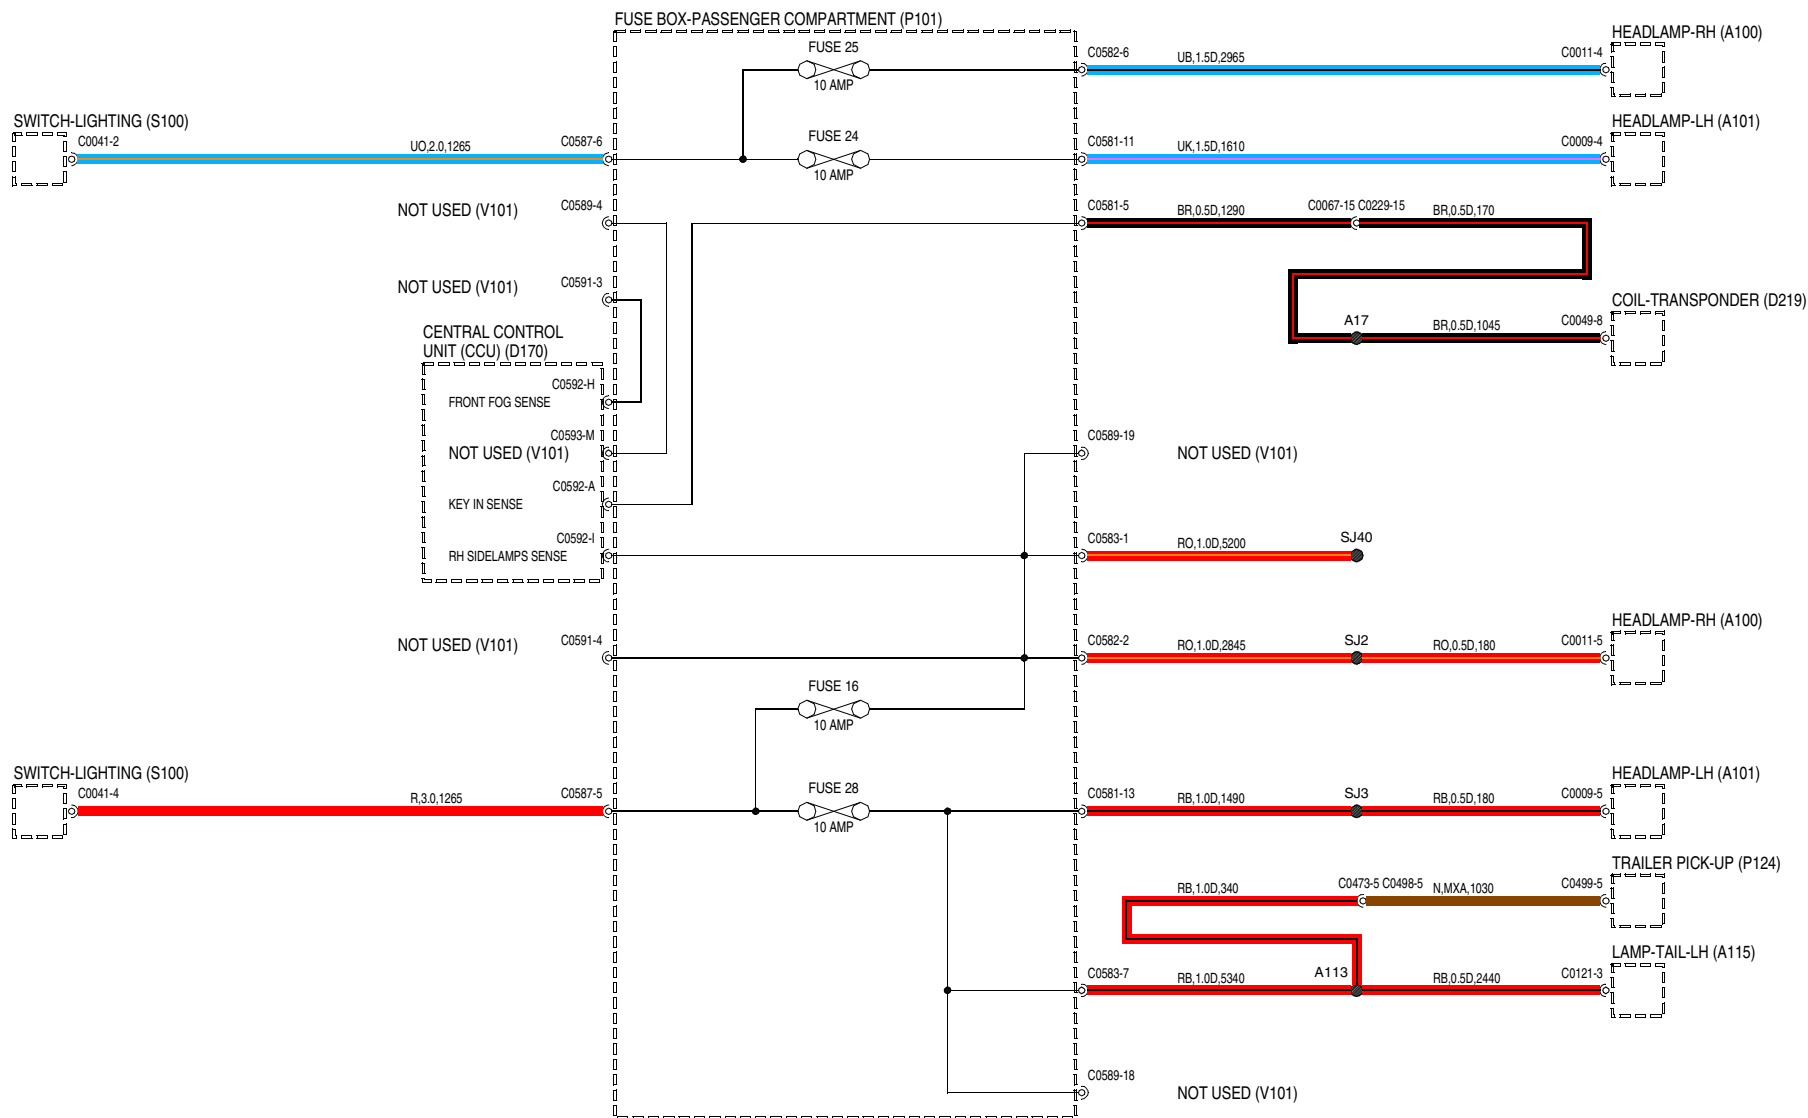





VWR004260-A-04

1 POWER DISTRIBUTION

Passenger Compartment Fuse Box - NAS

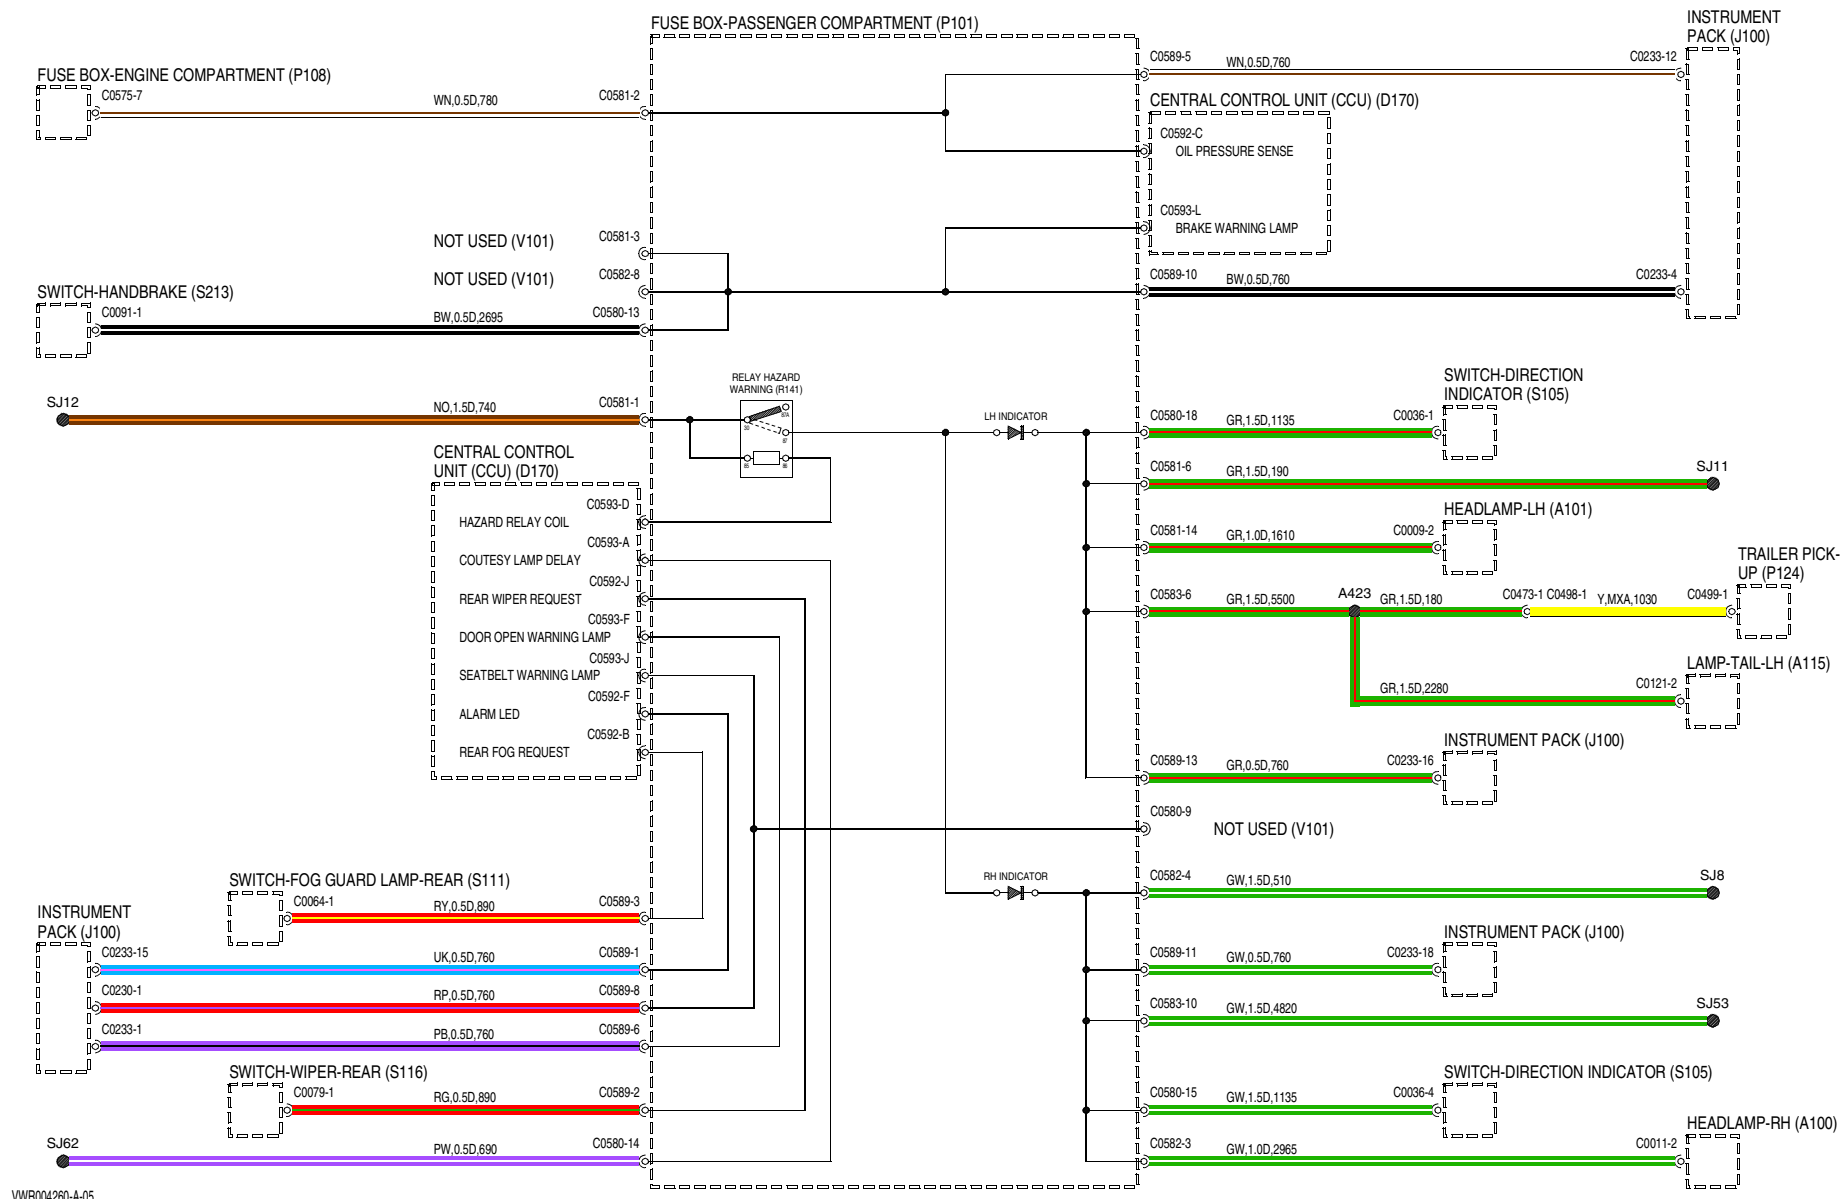


2 EARTH DISTRIBUTION

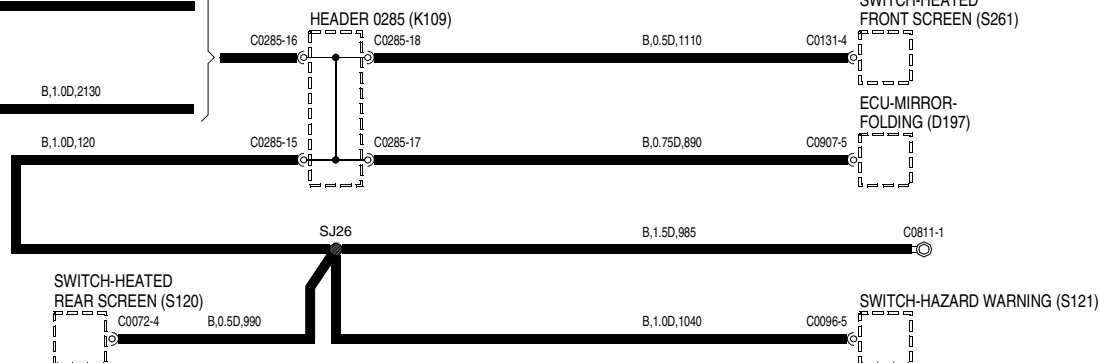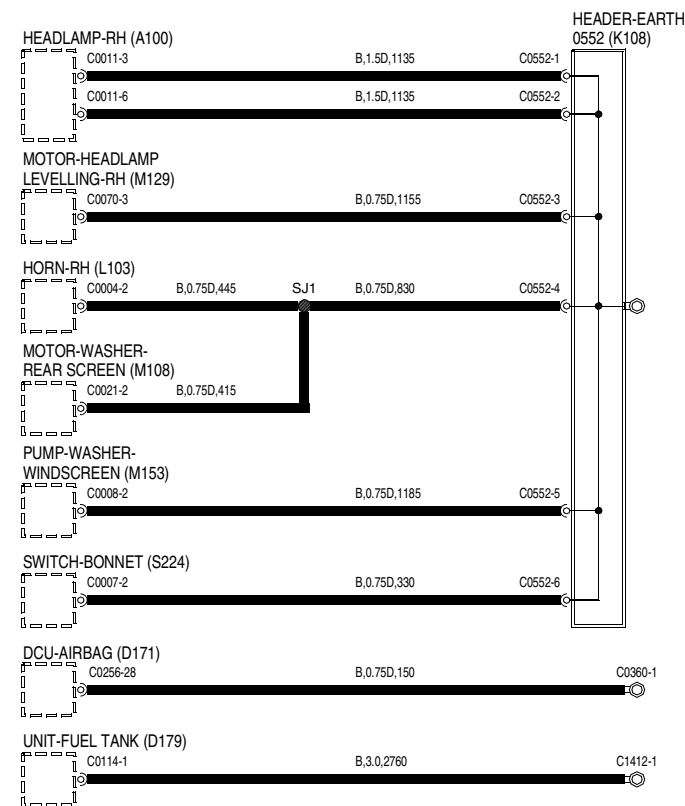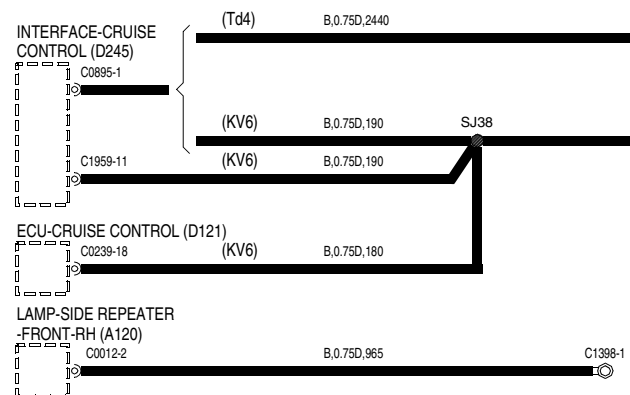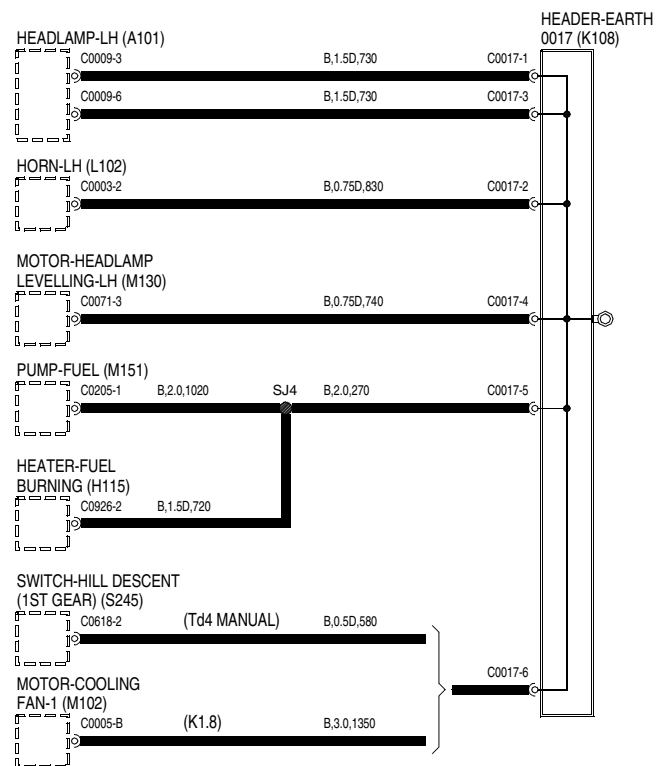


VWR004060-A-01

2 EARTH DISTRIBUTION

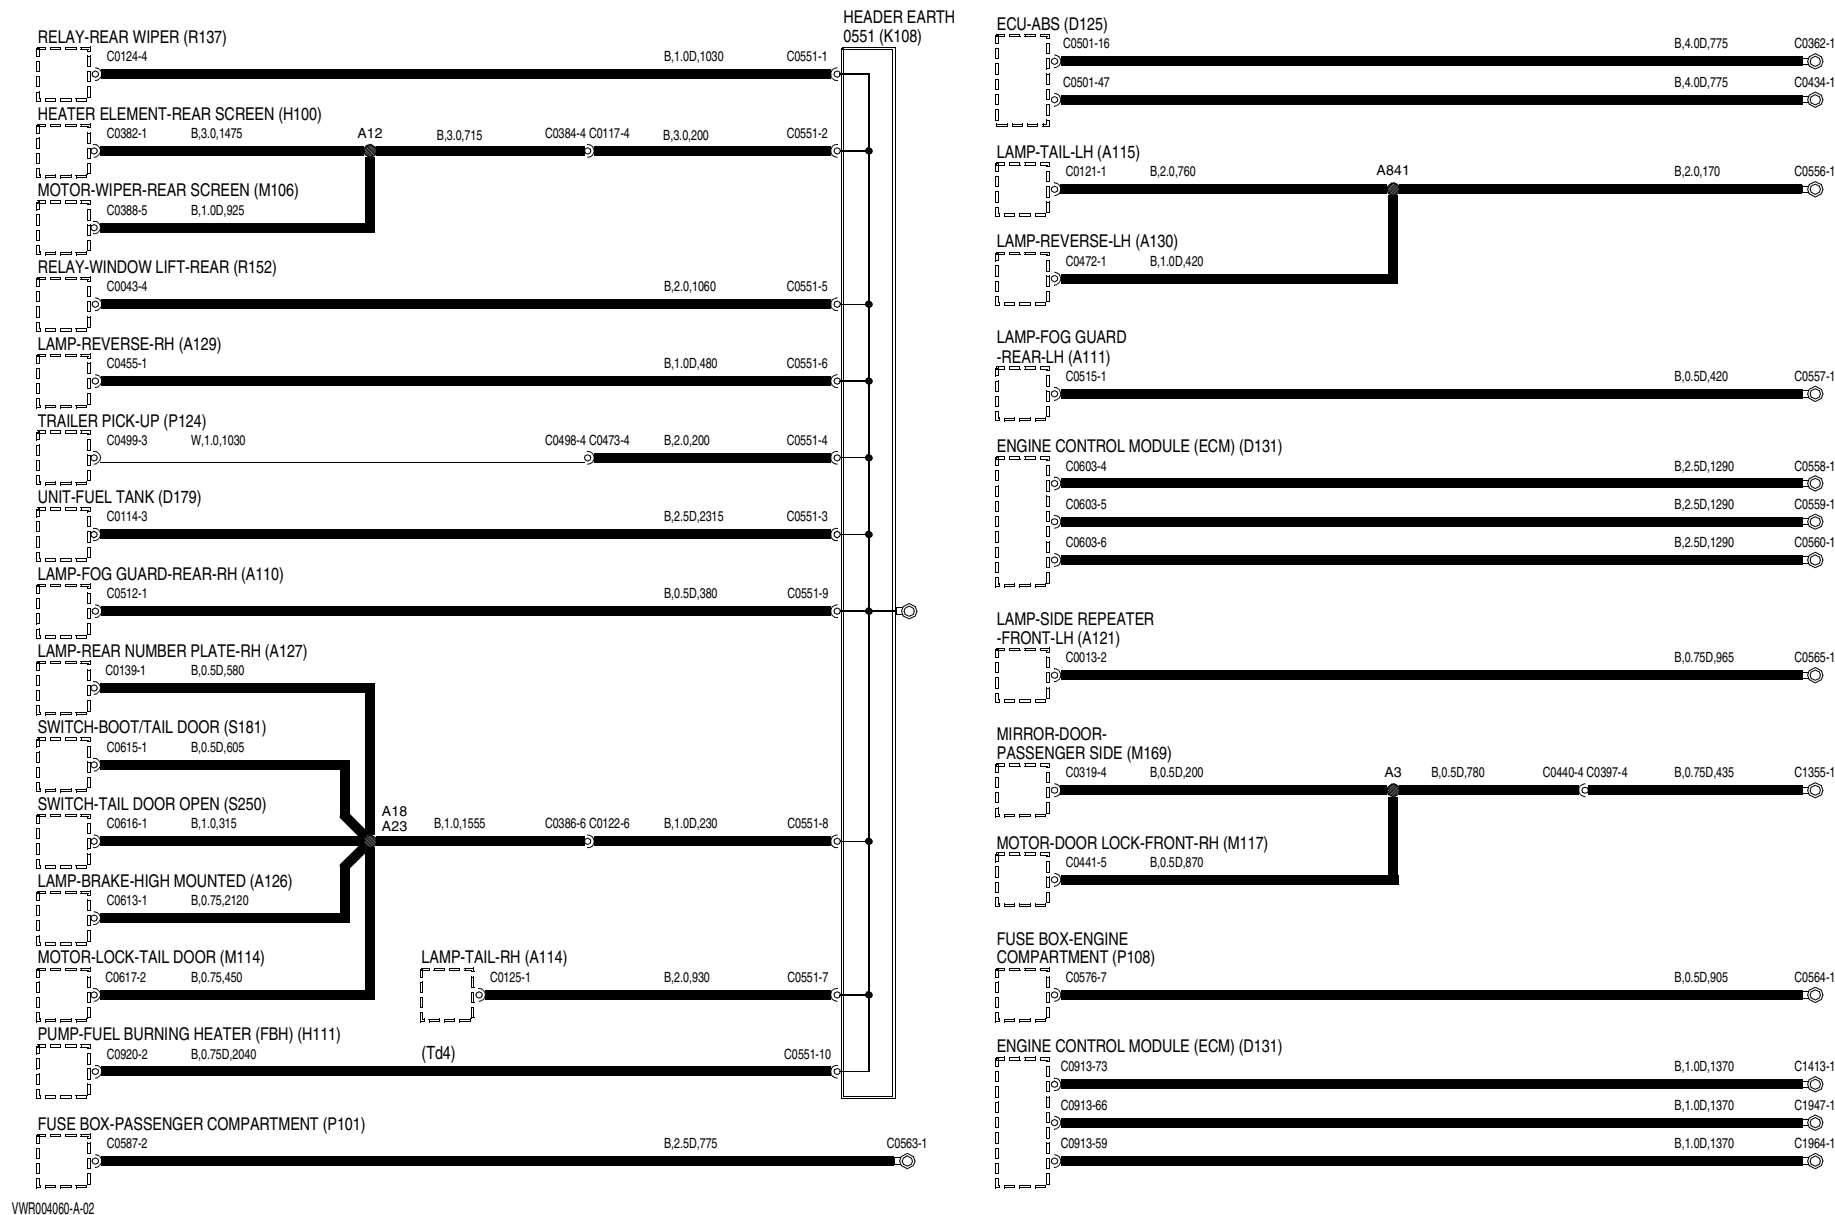


2 EARTH DISTRIBUTION

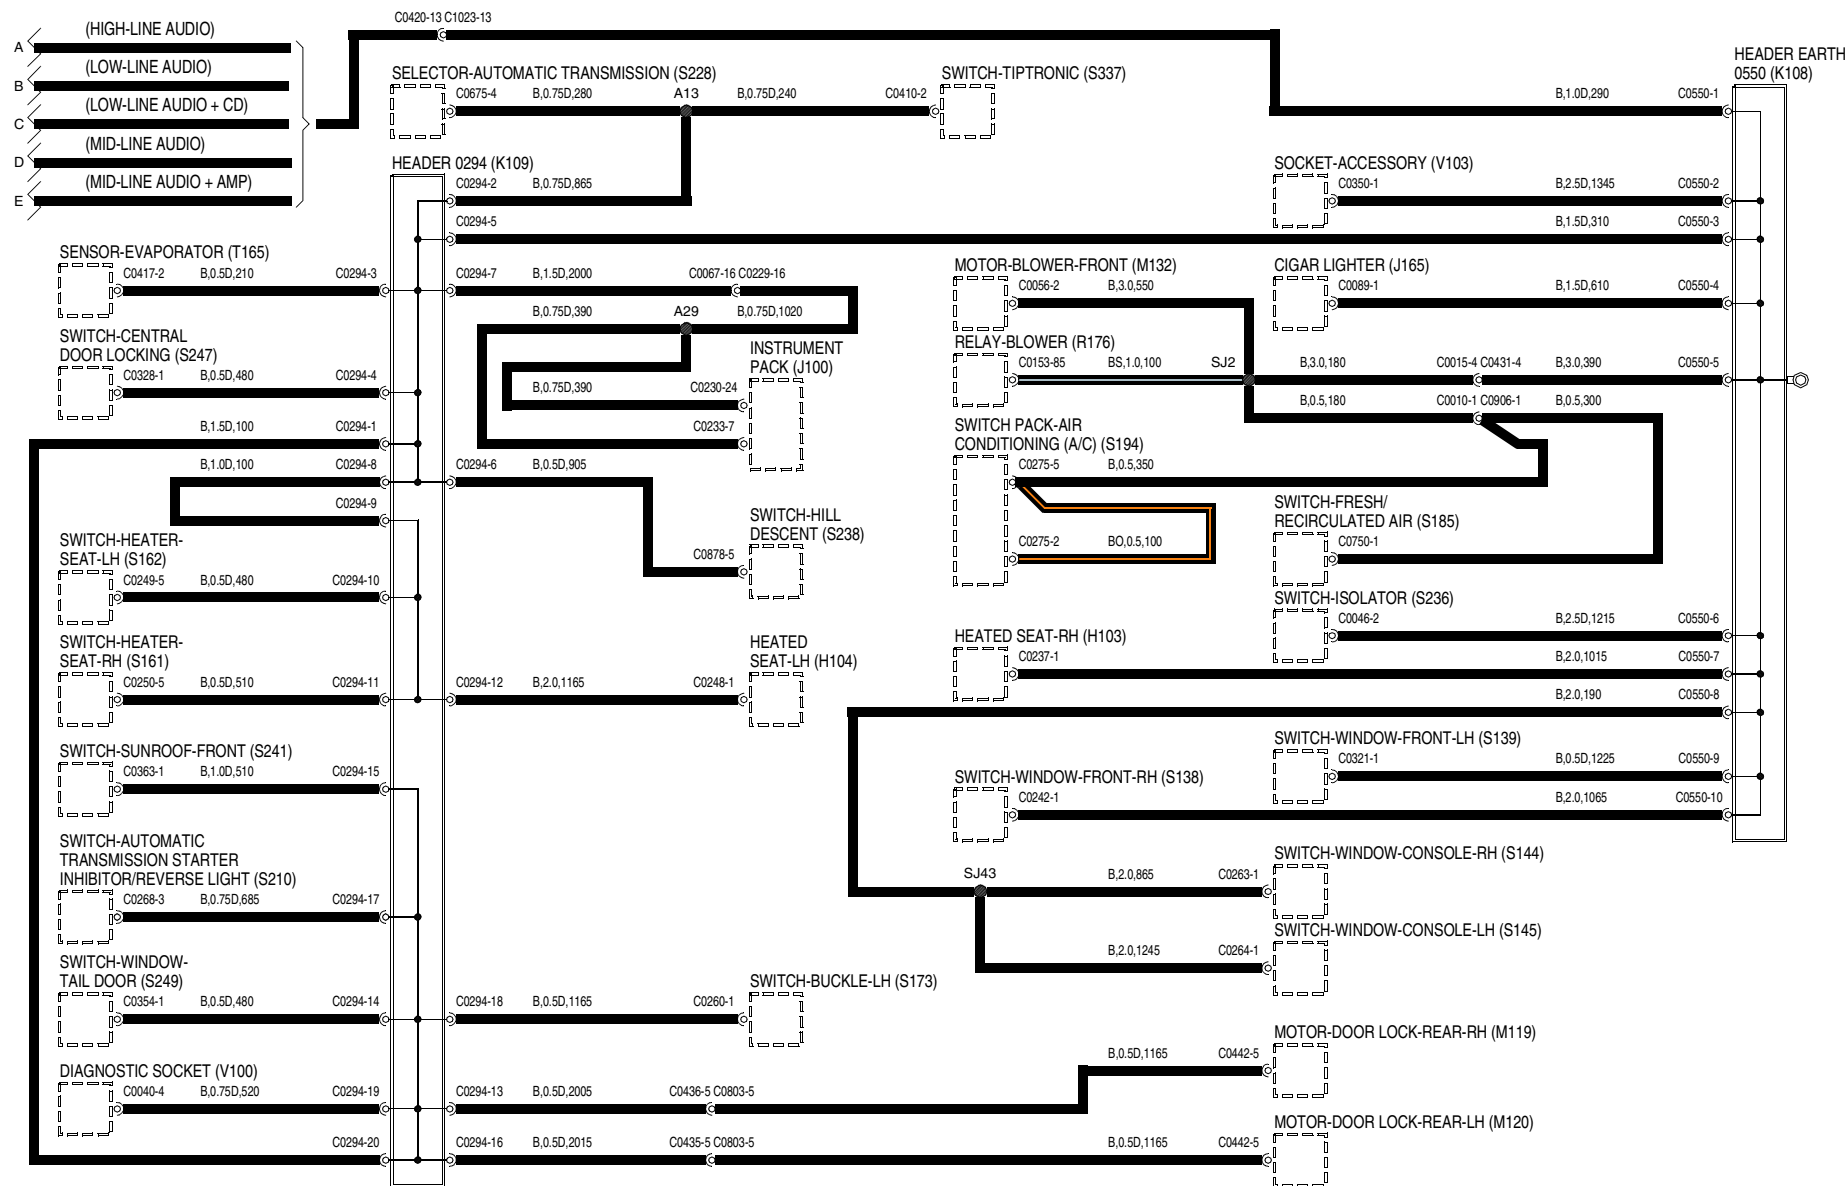


VWR004060-A-04

2 EARTH DISTRIBUTION

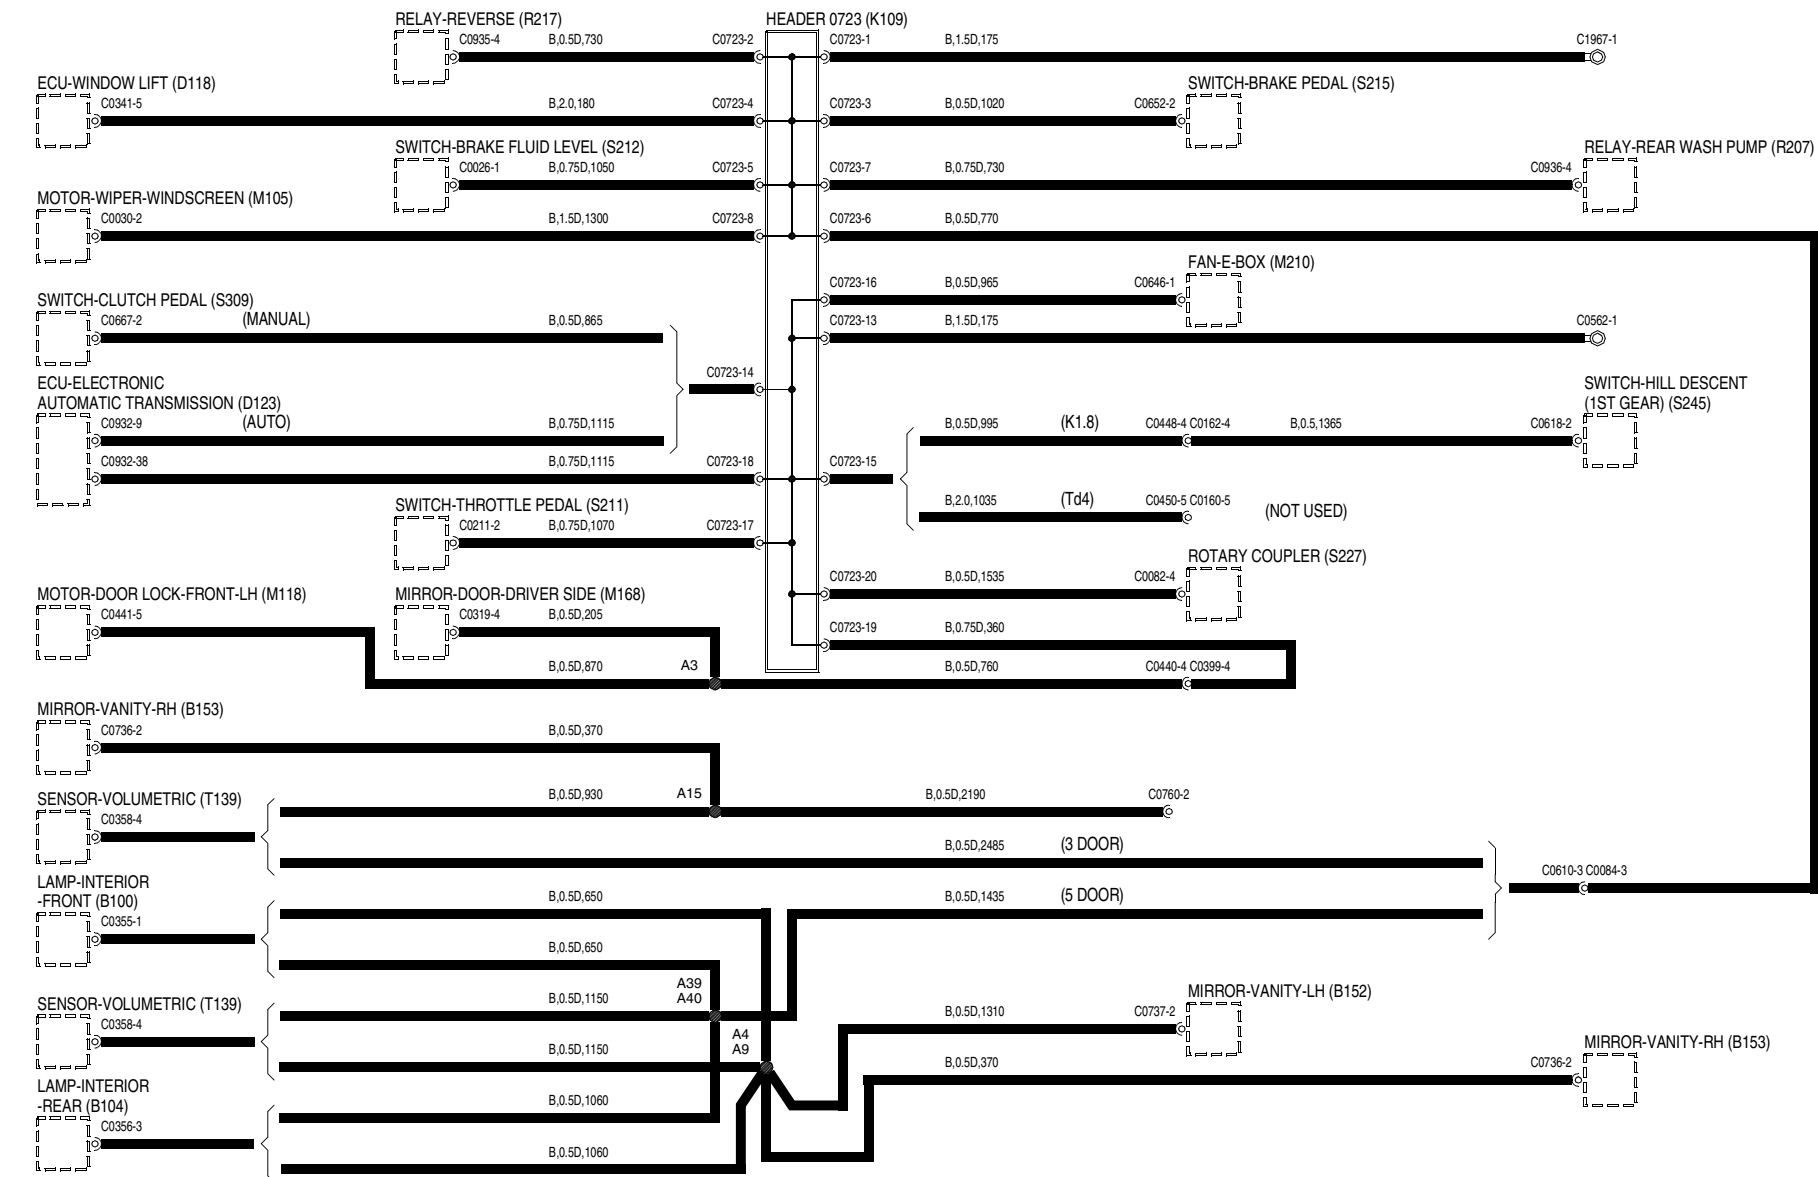


VWR004060-A-05

2 EARTH DISTRIBUTION



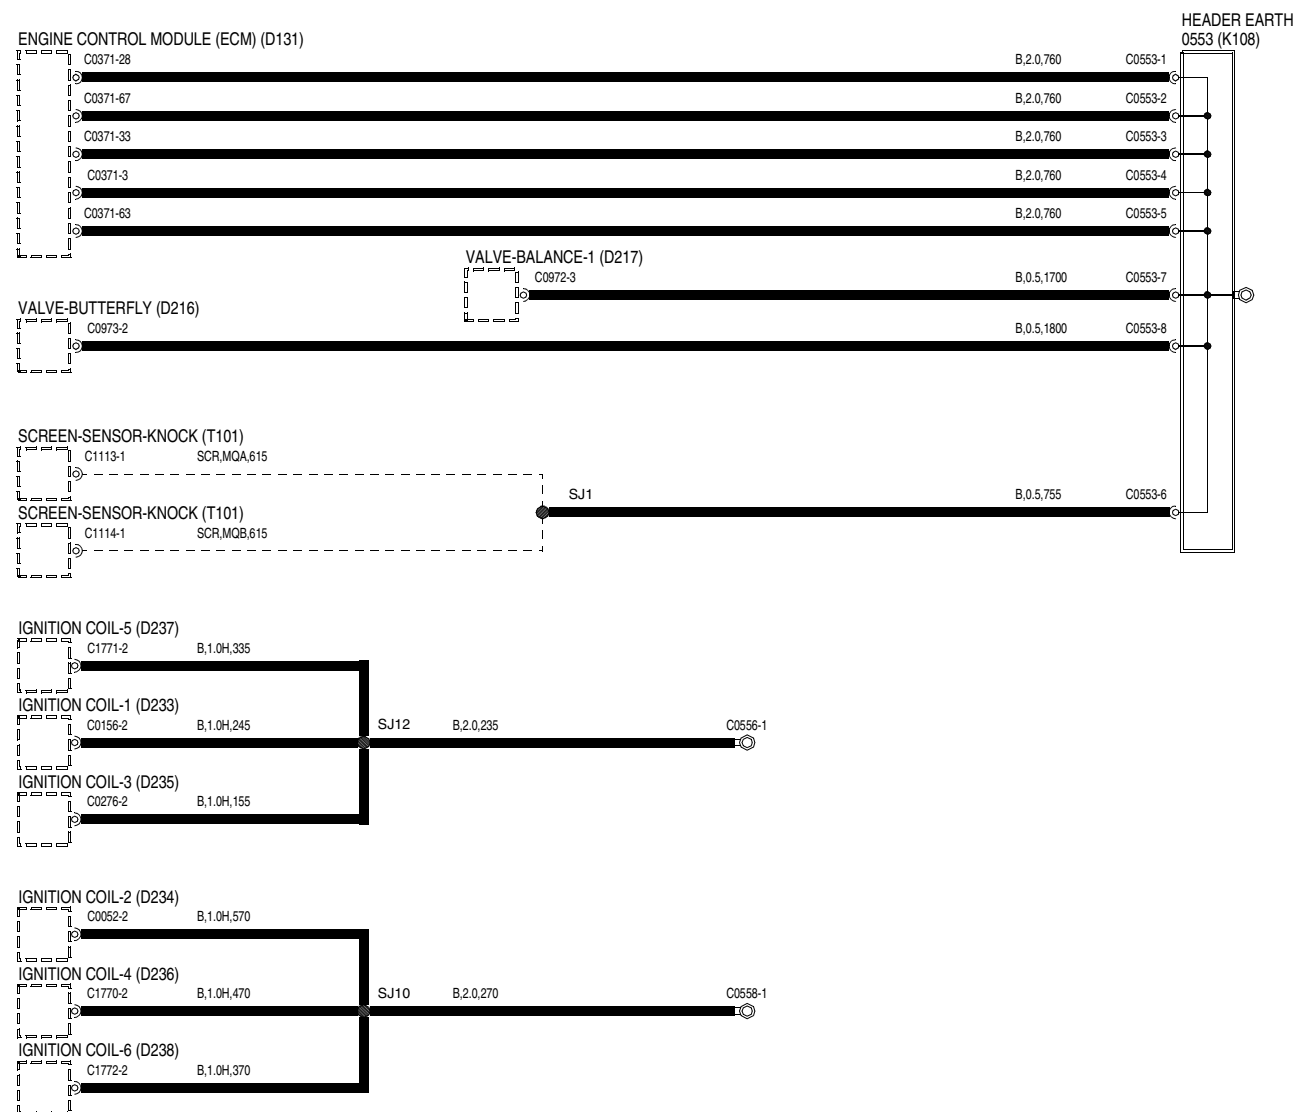


VWR004060-A-06


2 EARTH DISTRIBUTION

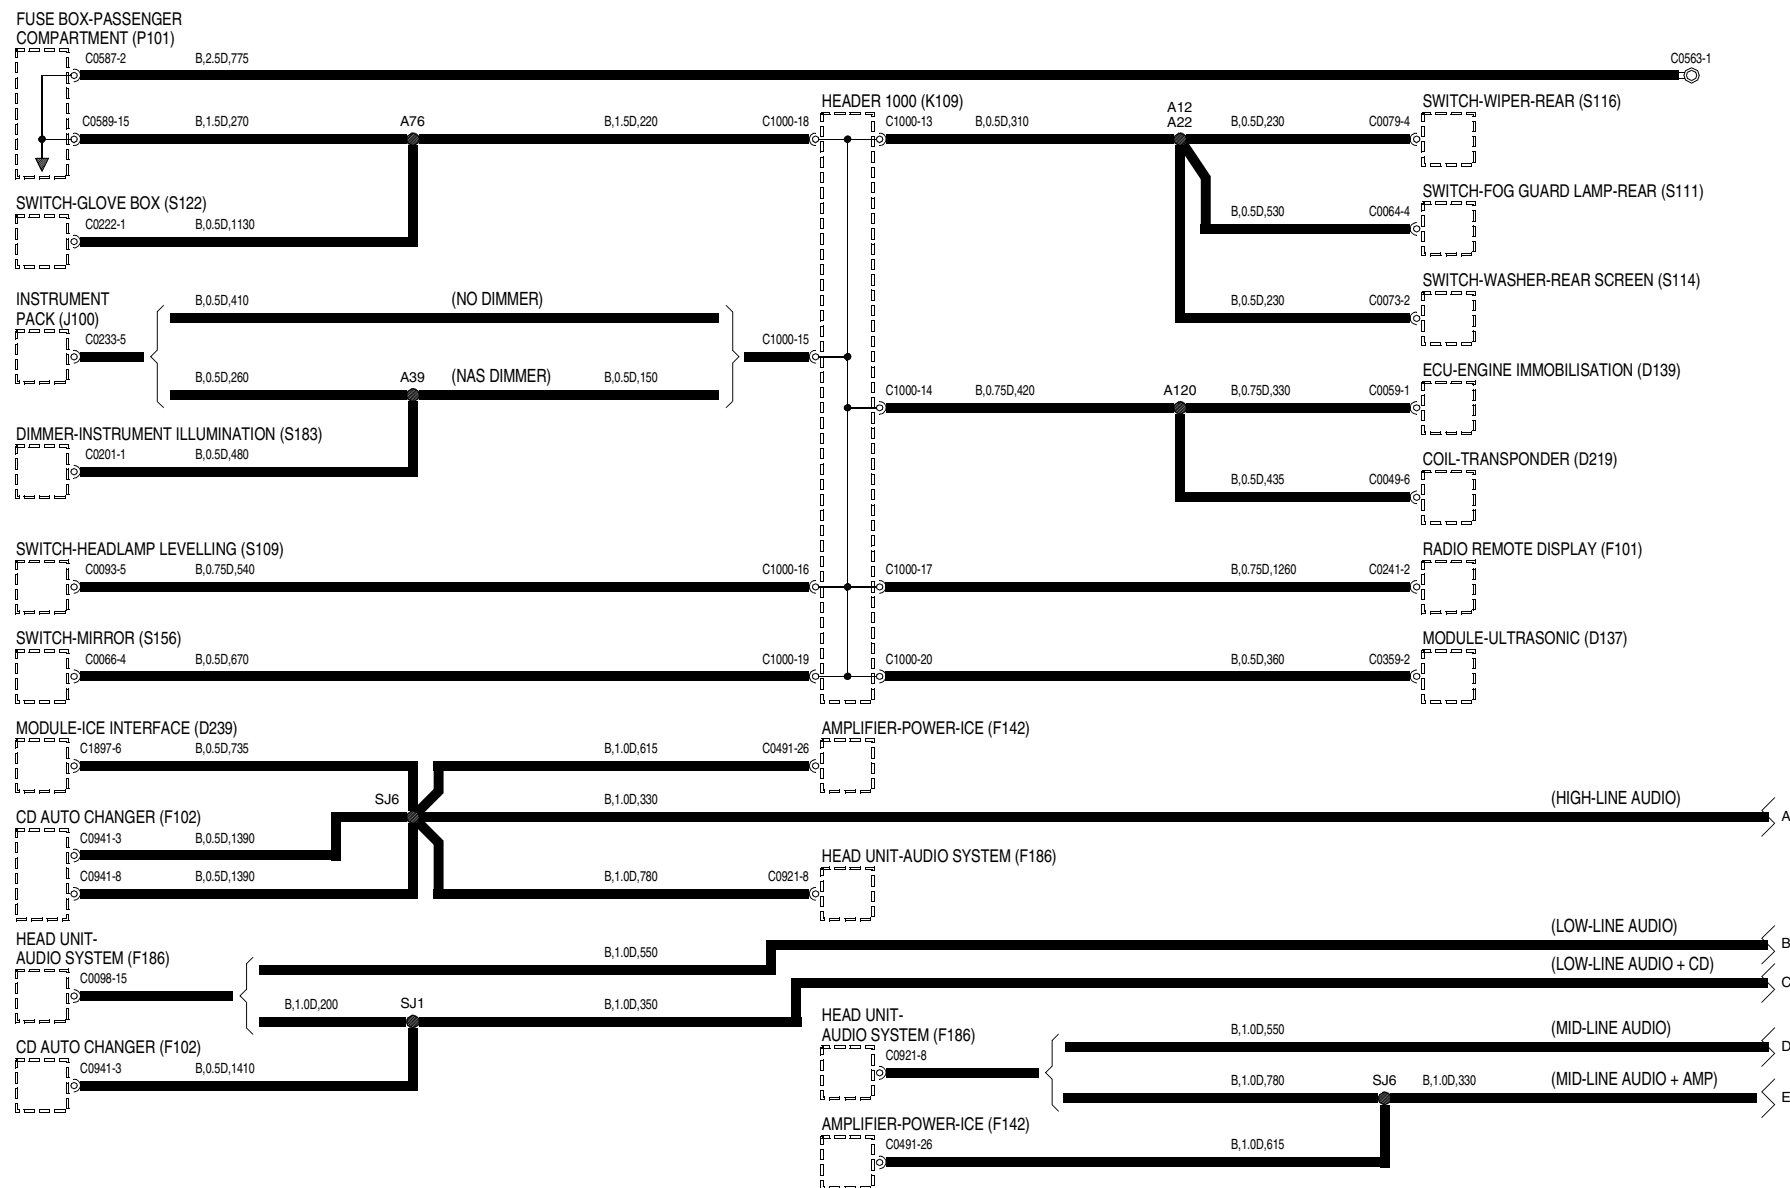


VWR004060-A-07

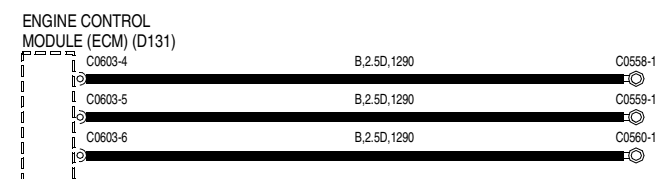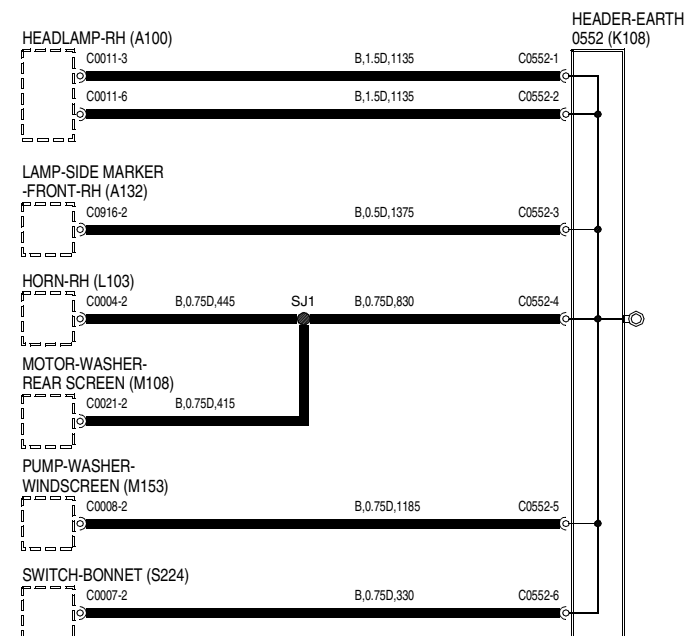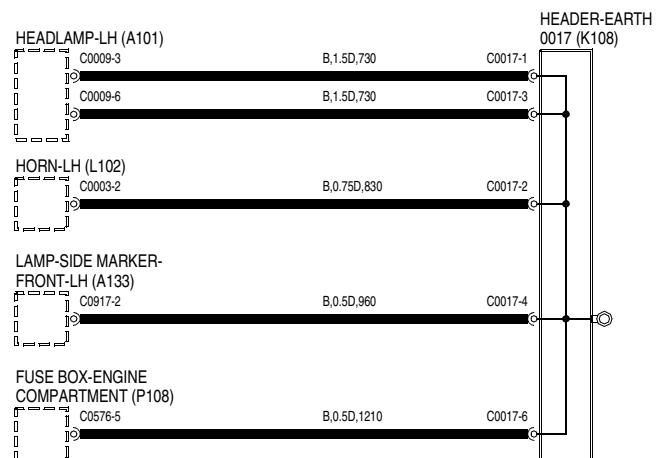


VWR004460-A-01

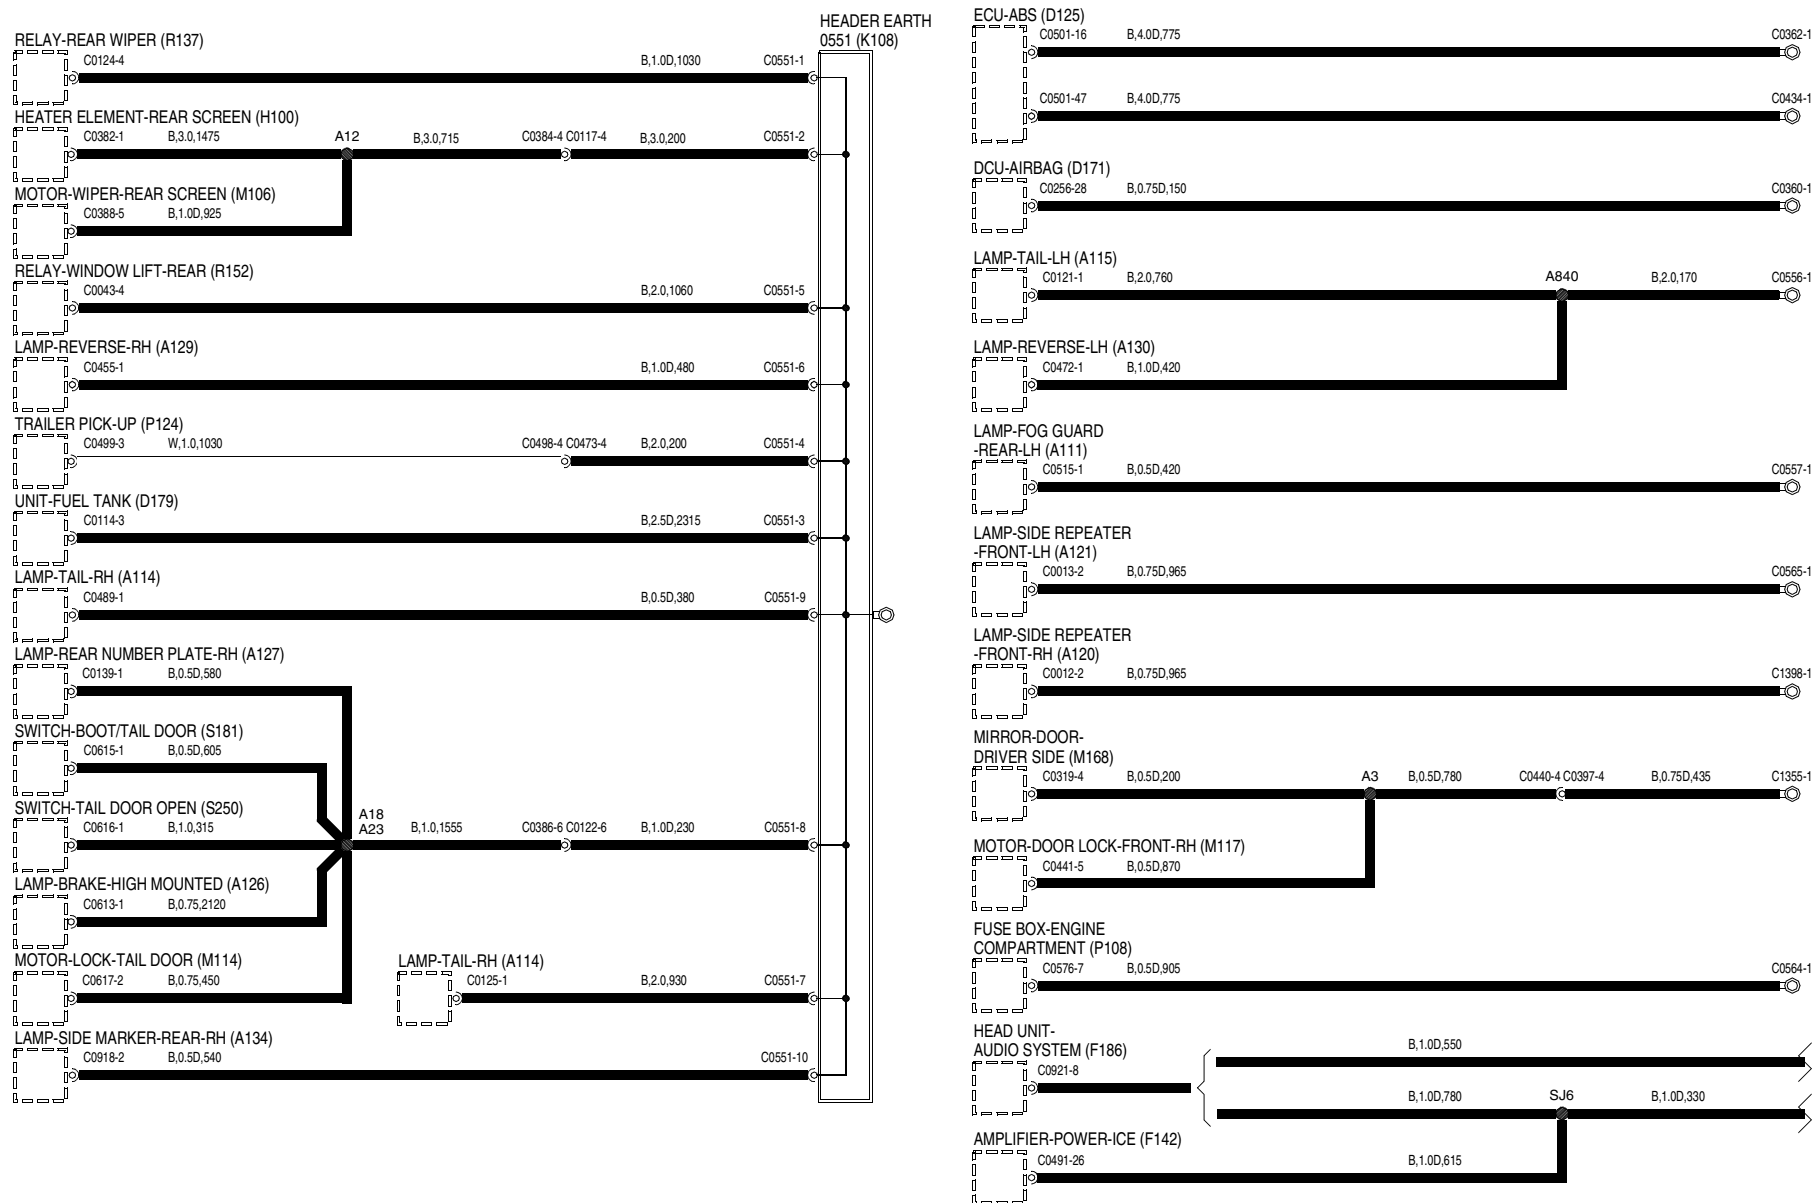


VWR004460-A-02

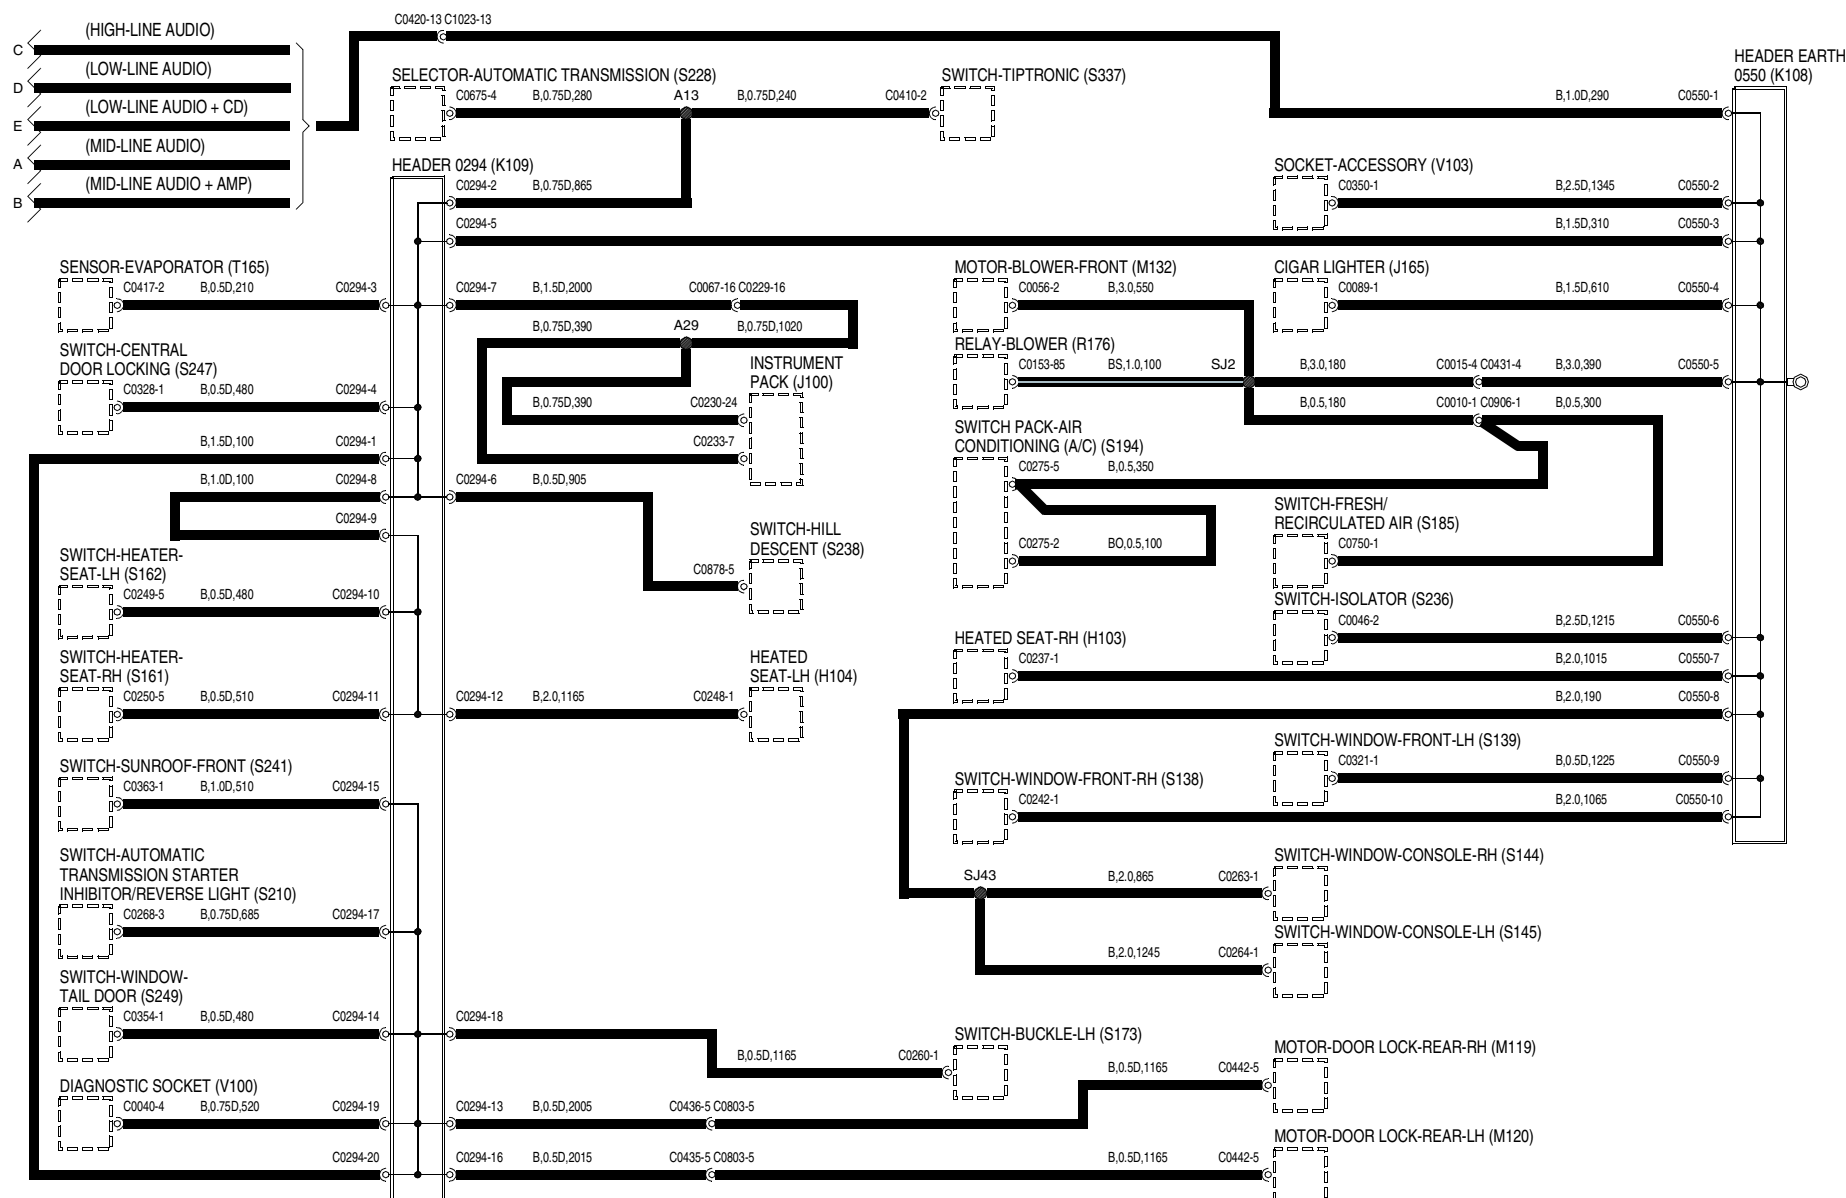


VWR004460-A-04

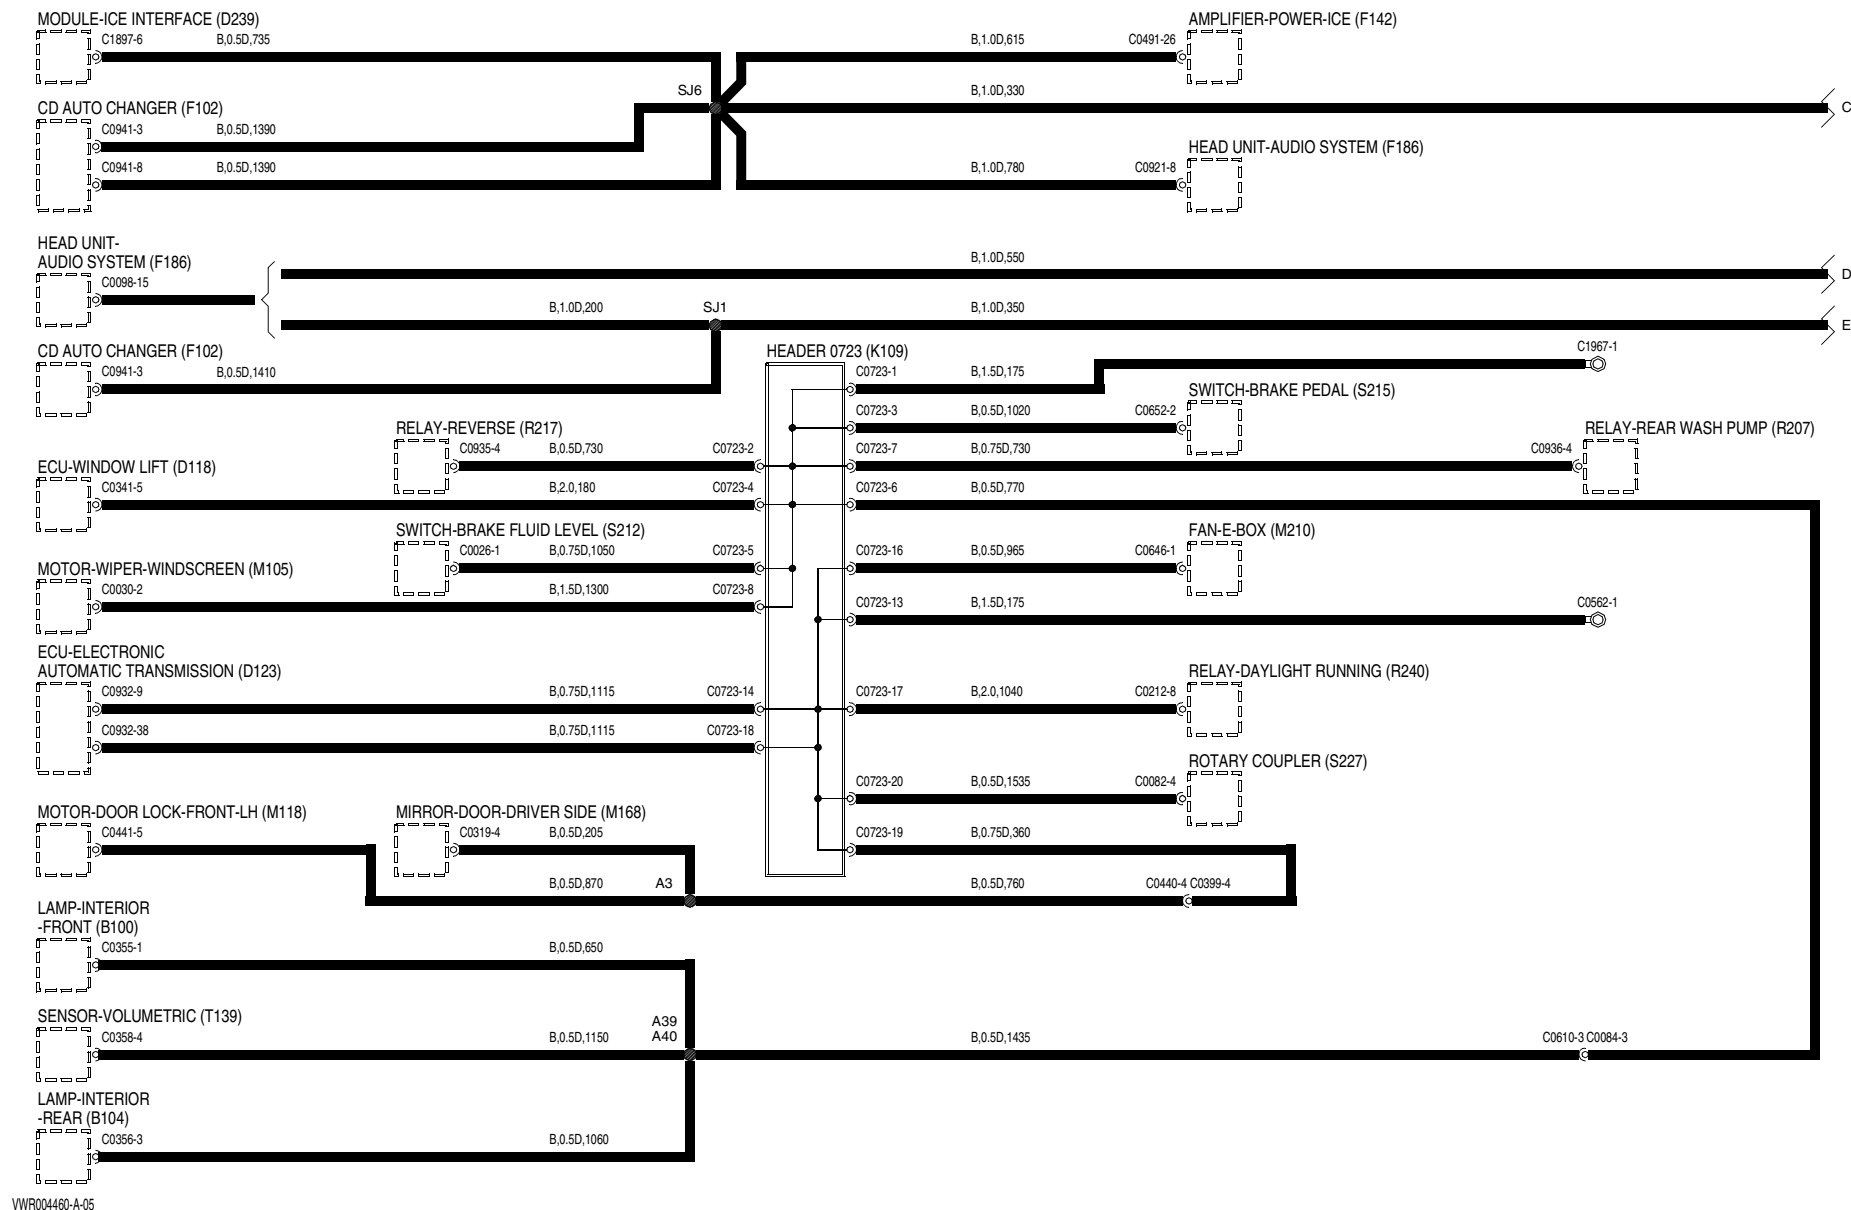

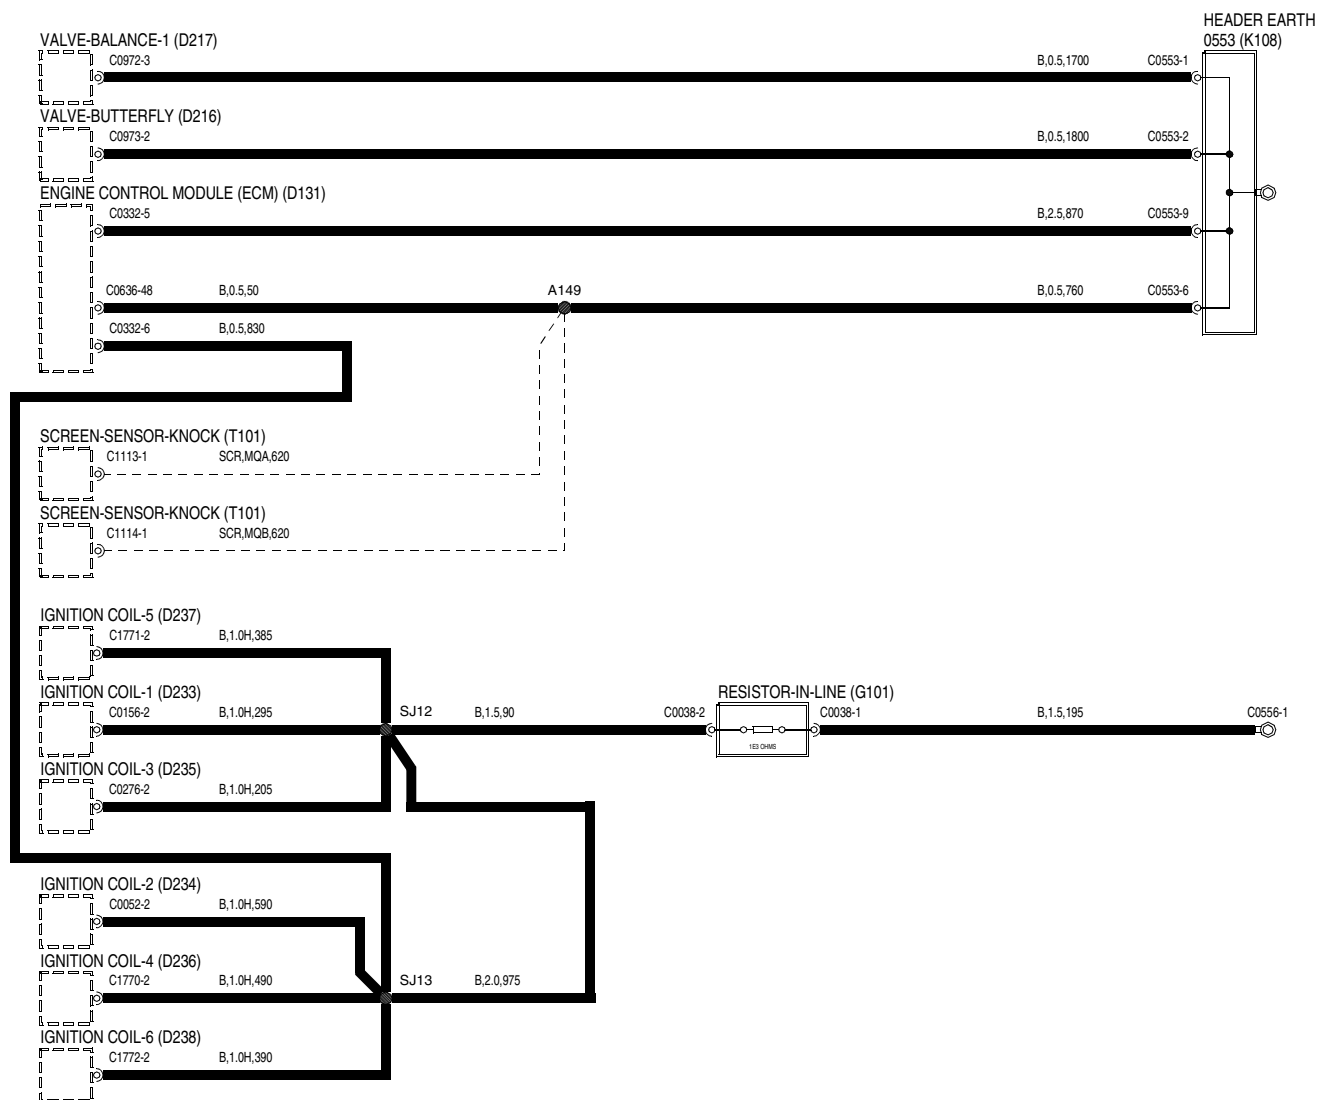


VWR004460-A-06

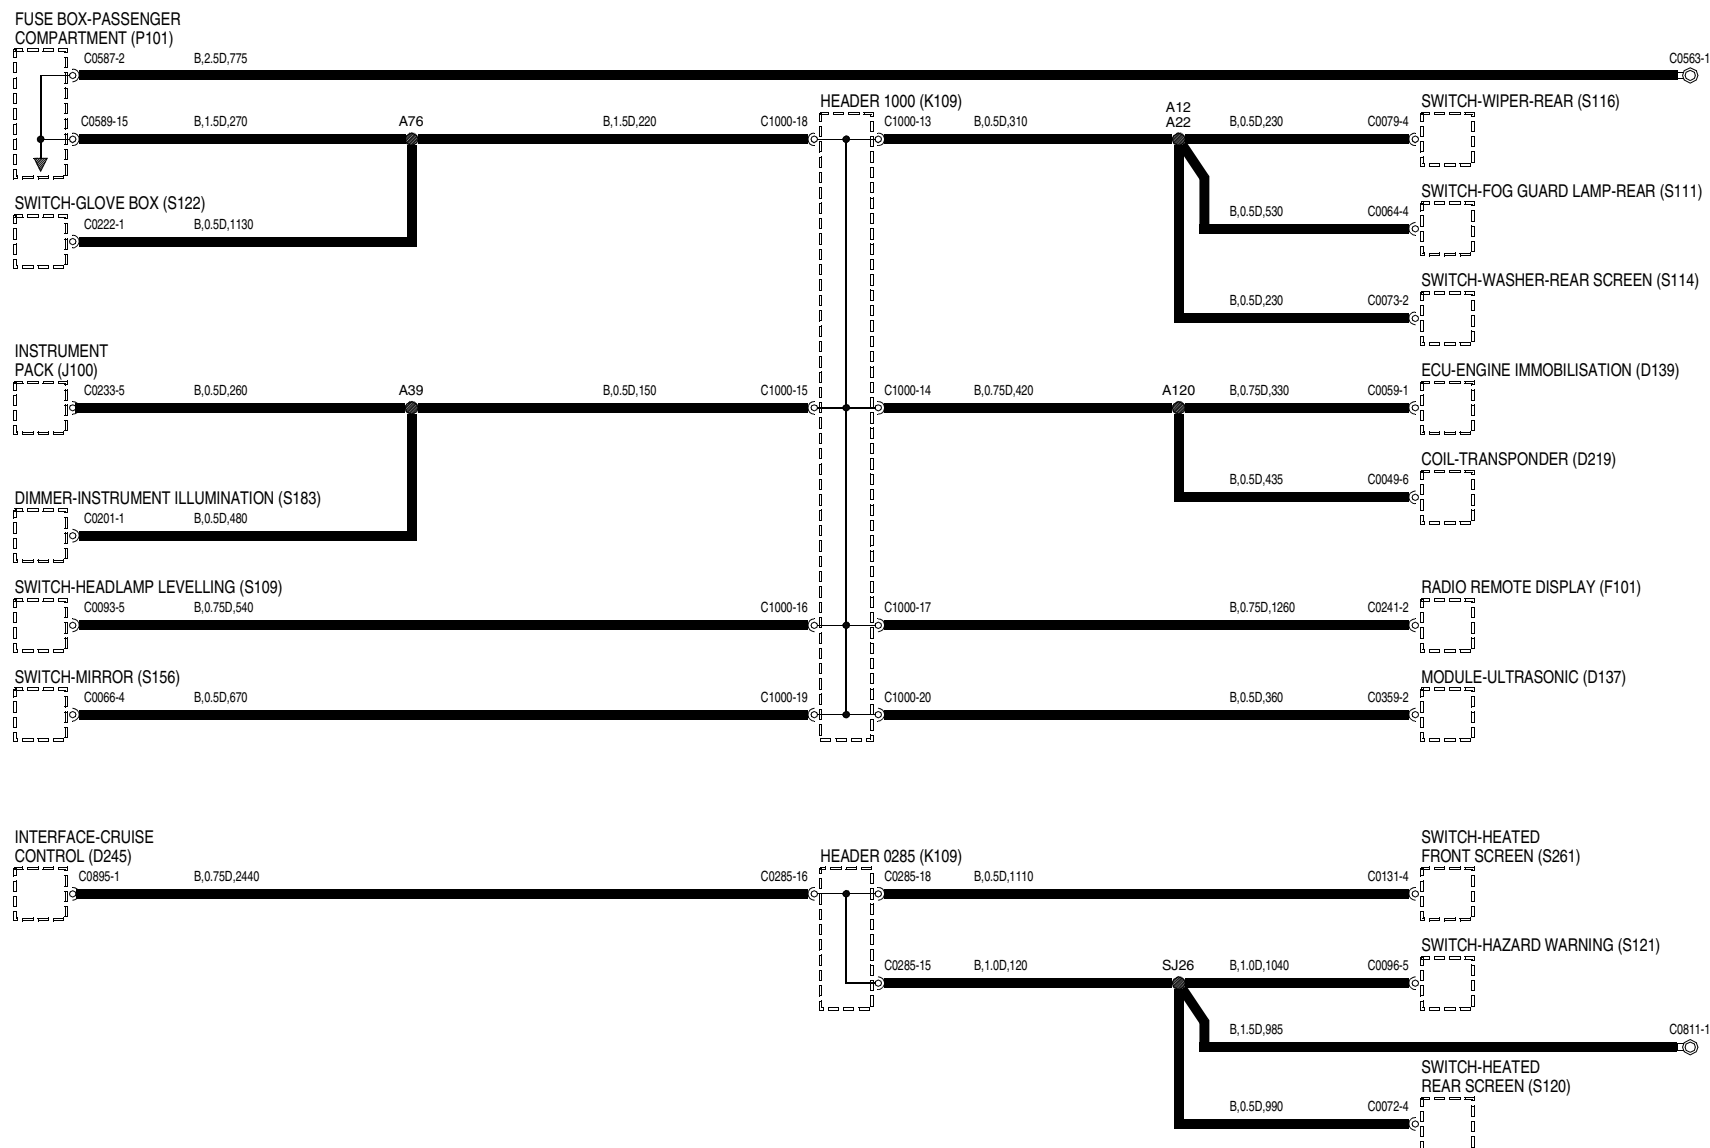


VWR004460-A-07

3 ANTI-THEFT ALARM AND CENTRAL DOOR LOCKING

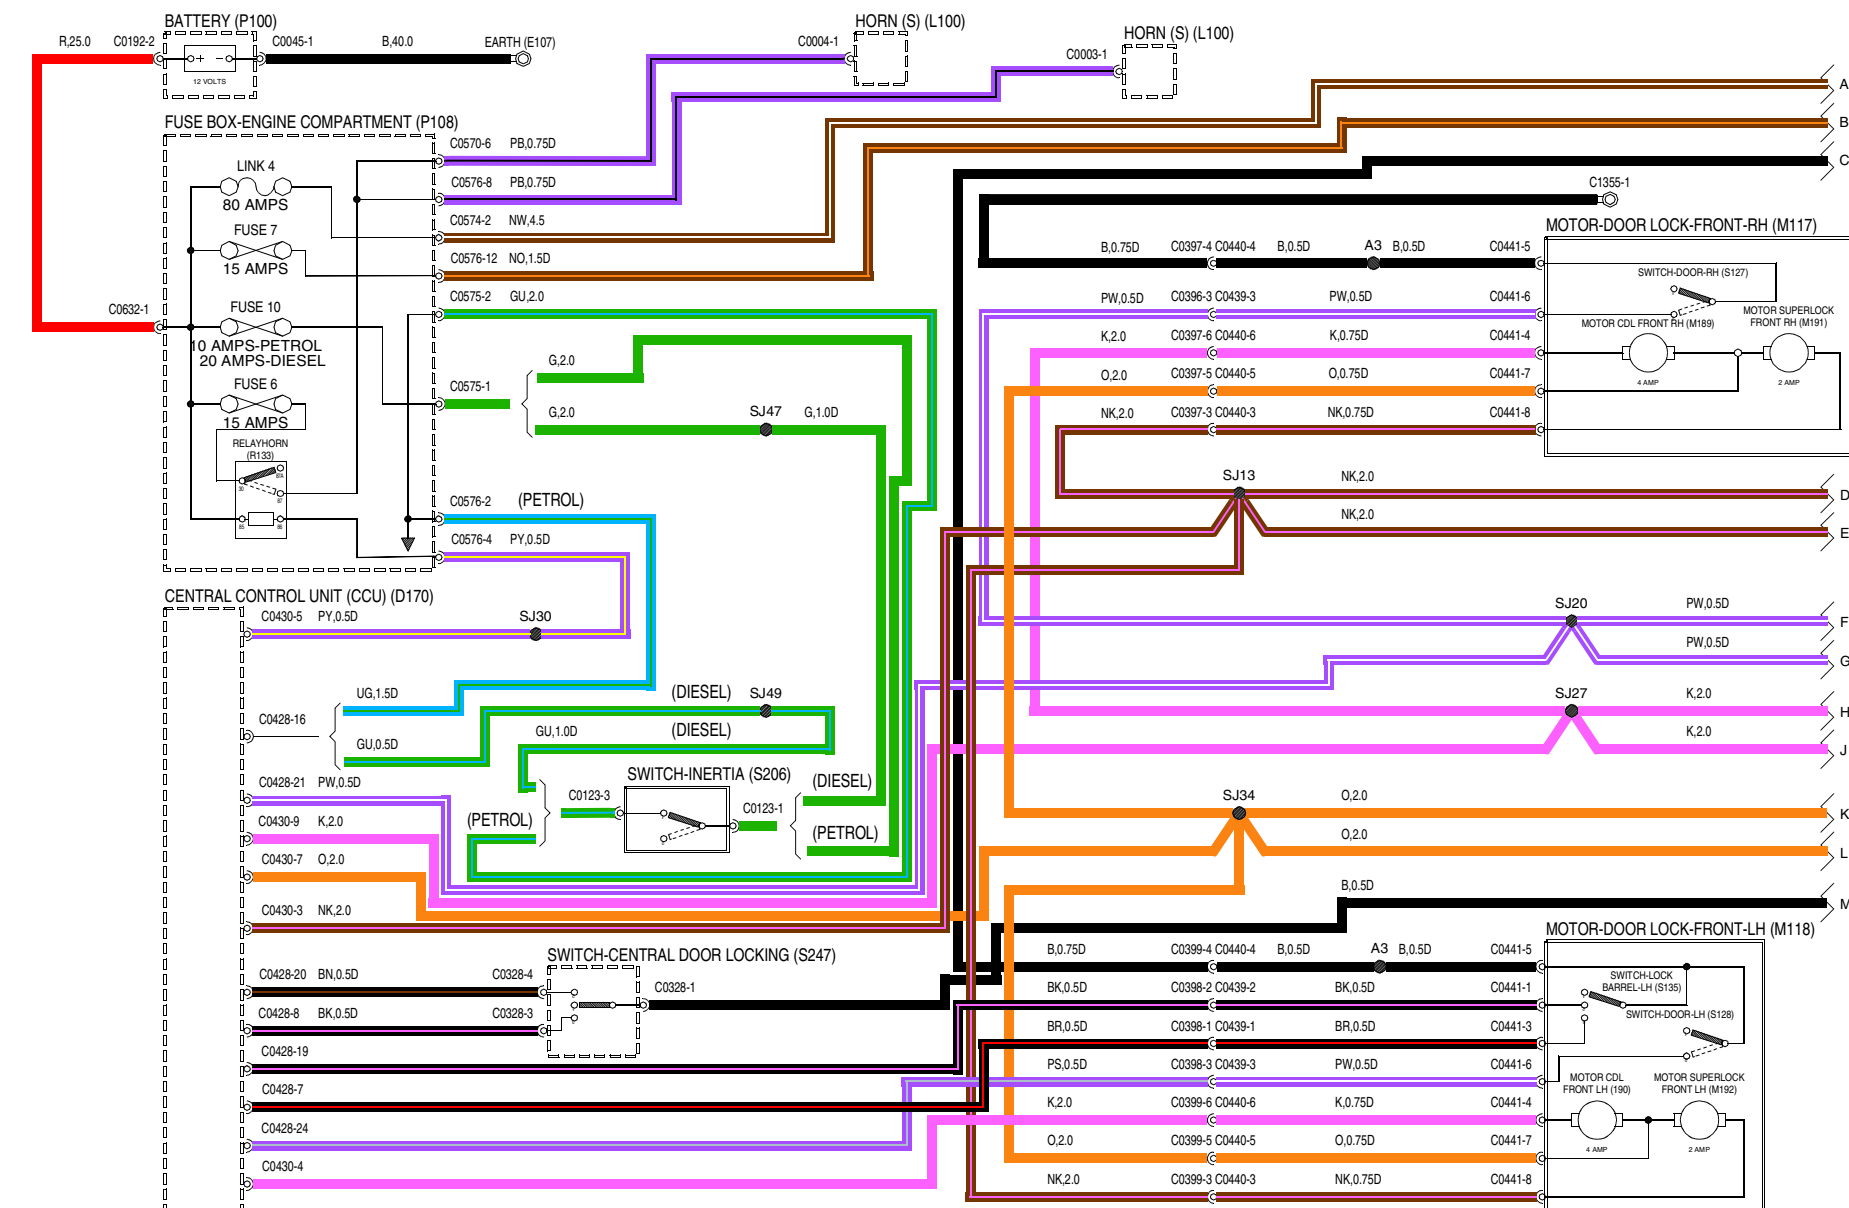


VWR003970-A-01

3 ANTI-THEFT ALARM AND CENTRAL DOOR LOCKING

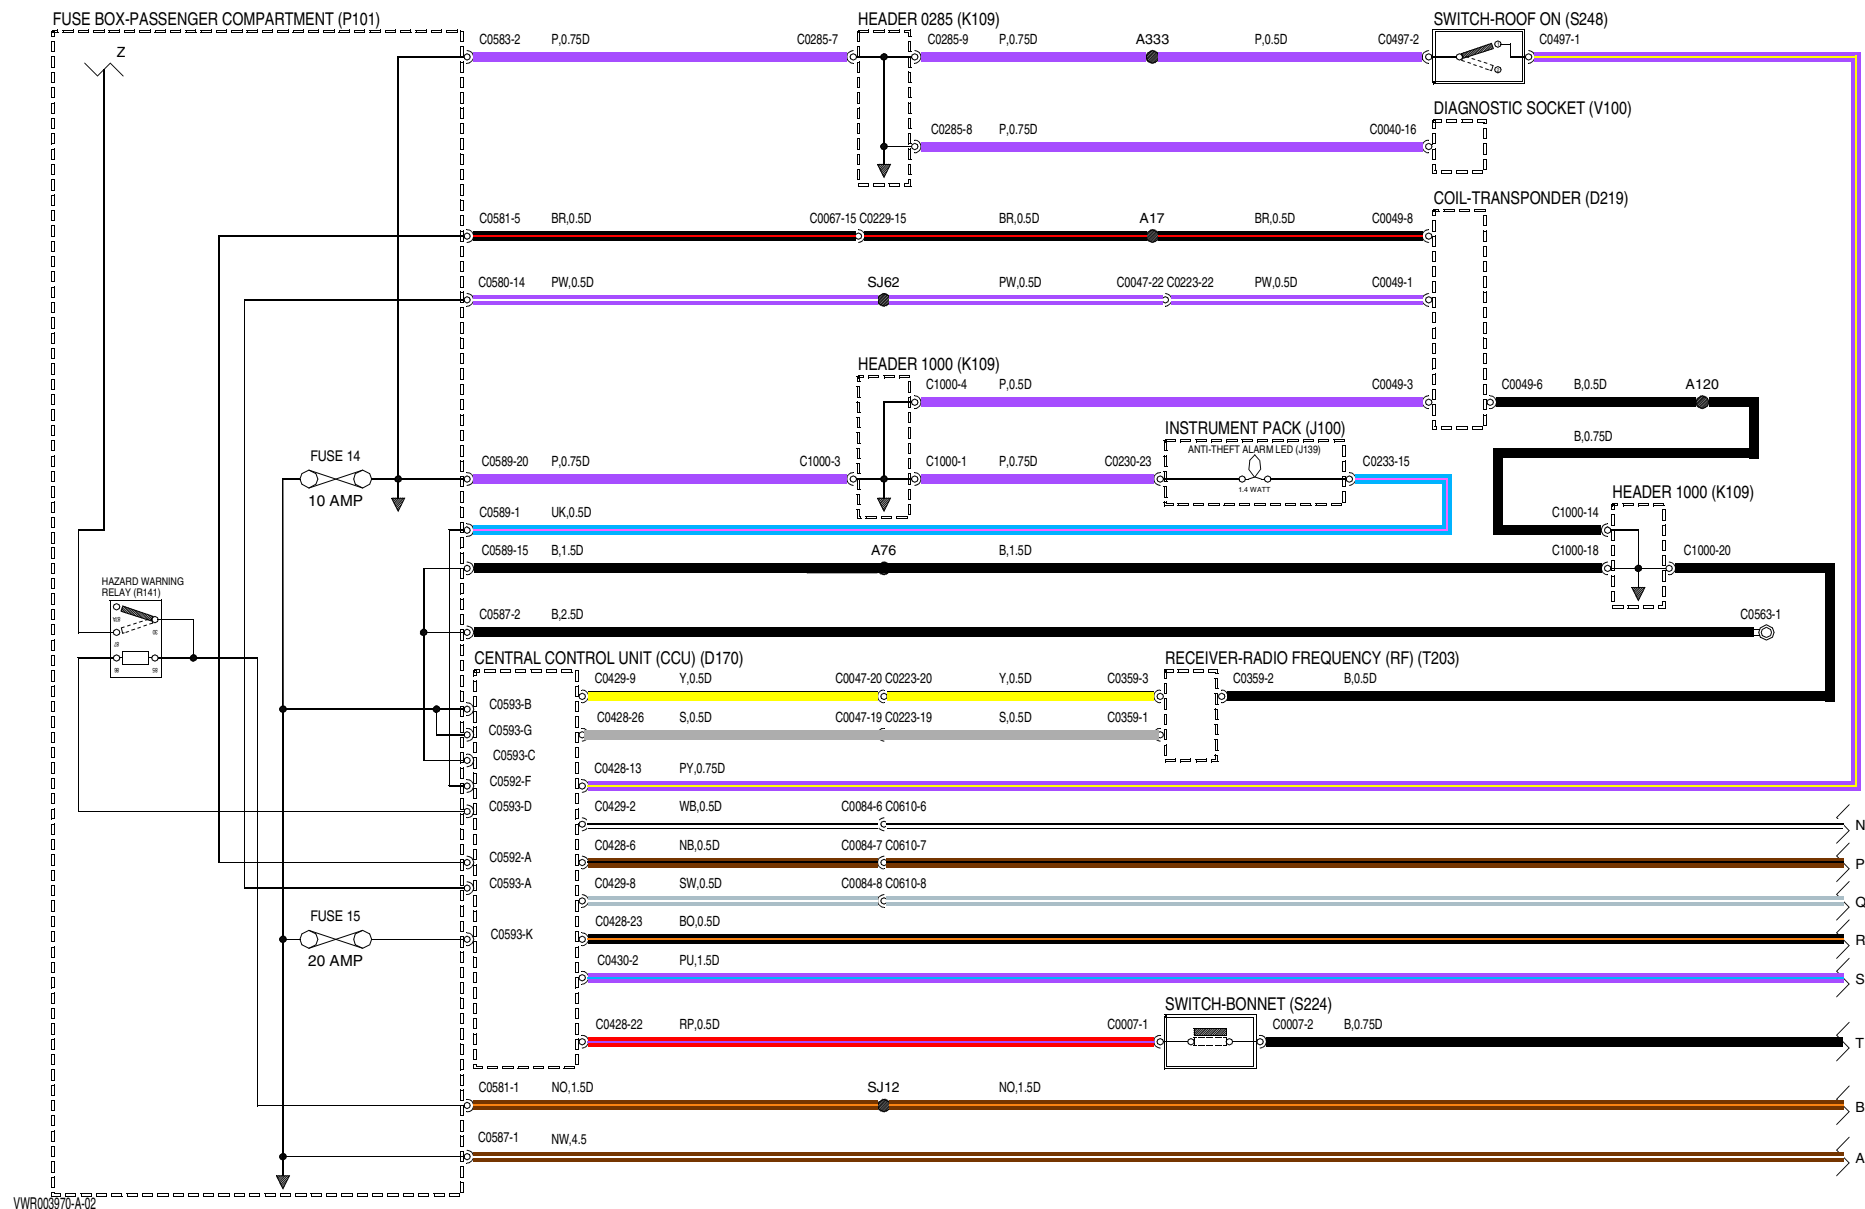


3 ANTI-THEFT ALARM AND CENTRAL DOOR LOCKING

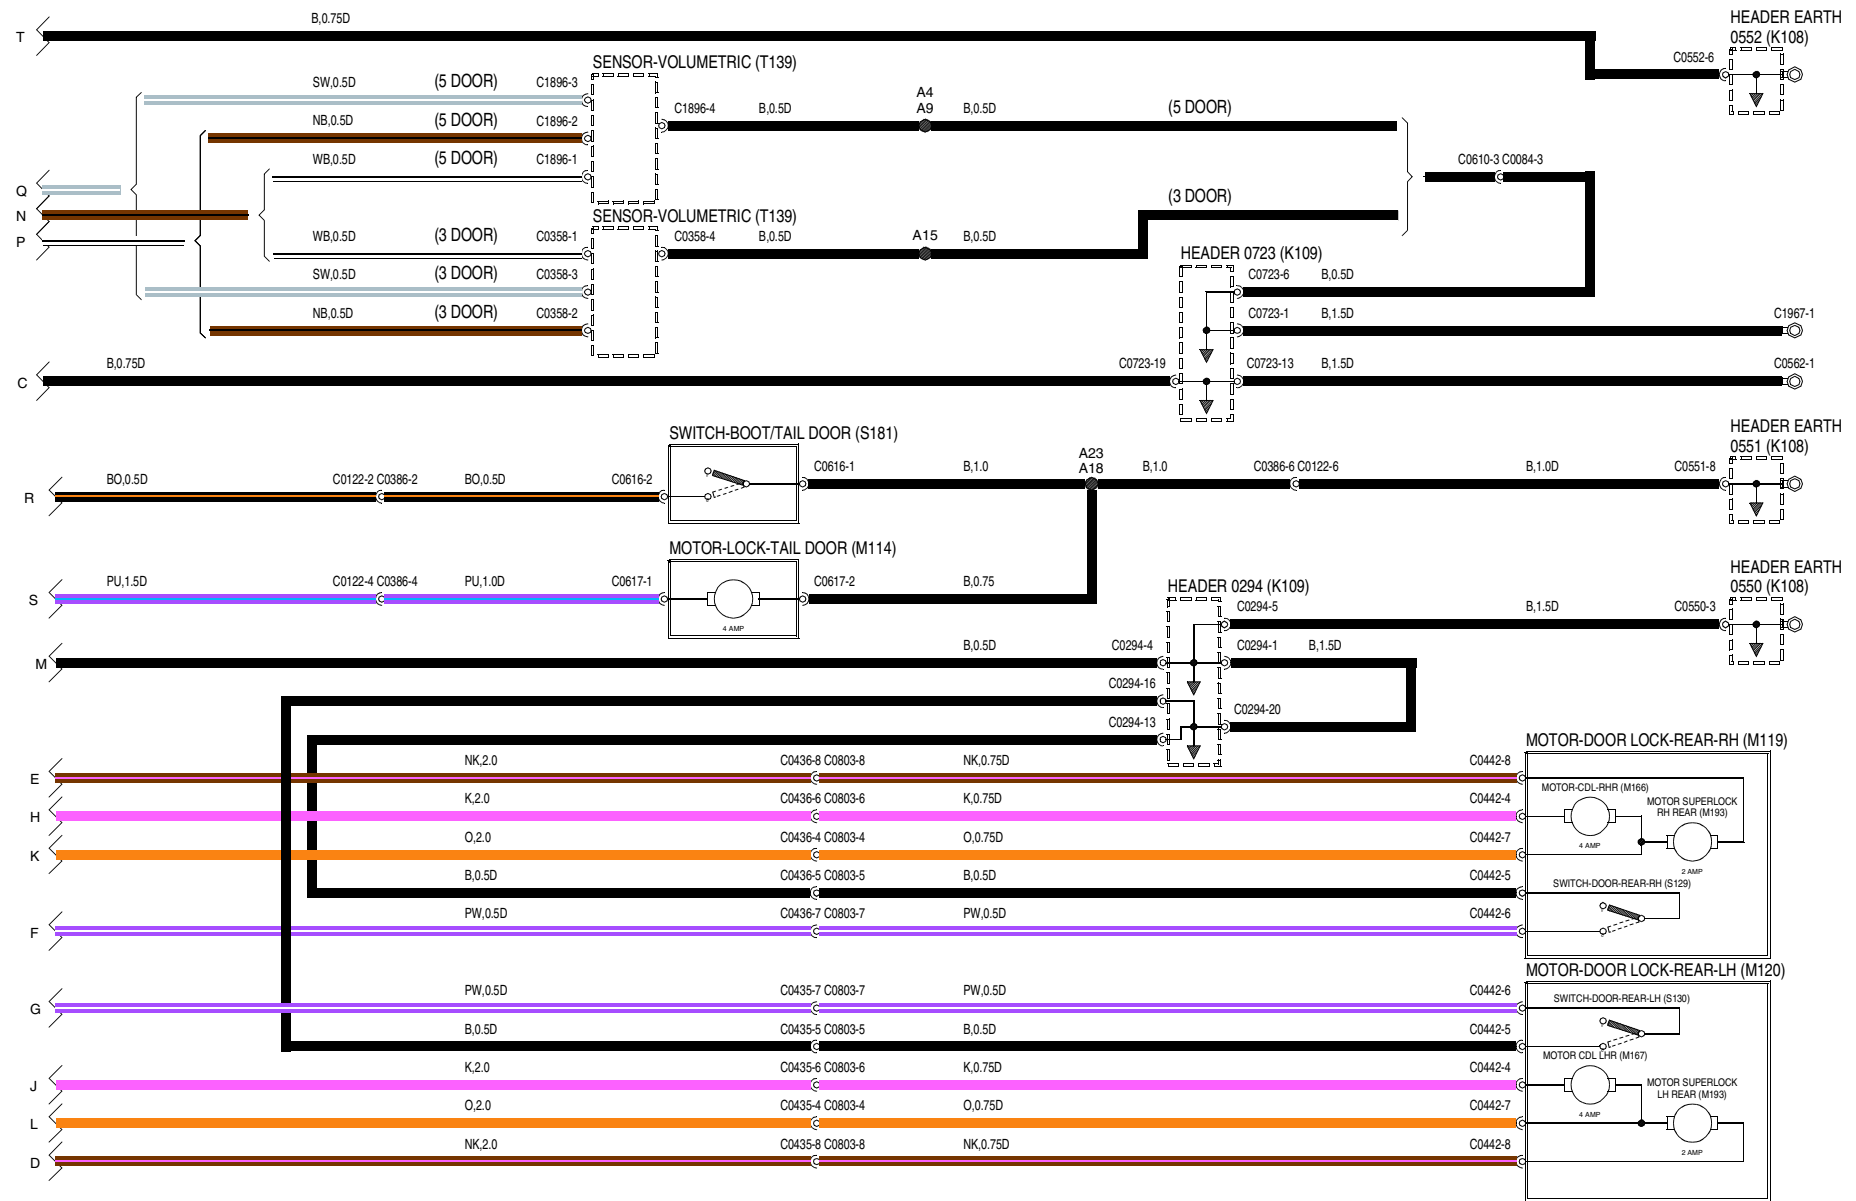


VWR003970-A-03

3 ANTI-THEFT ALARM AND CENTRAL DOOR LOCKING

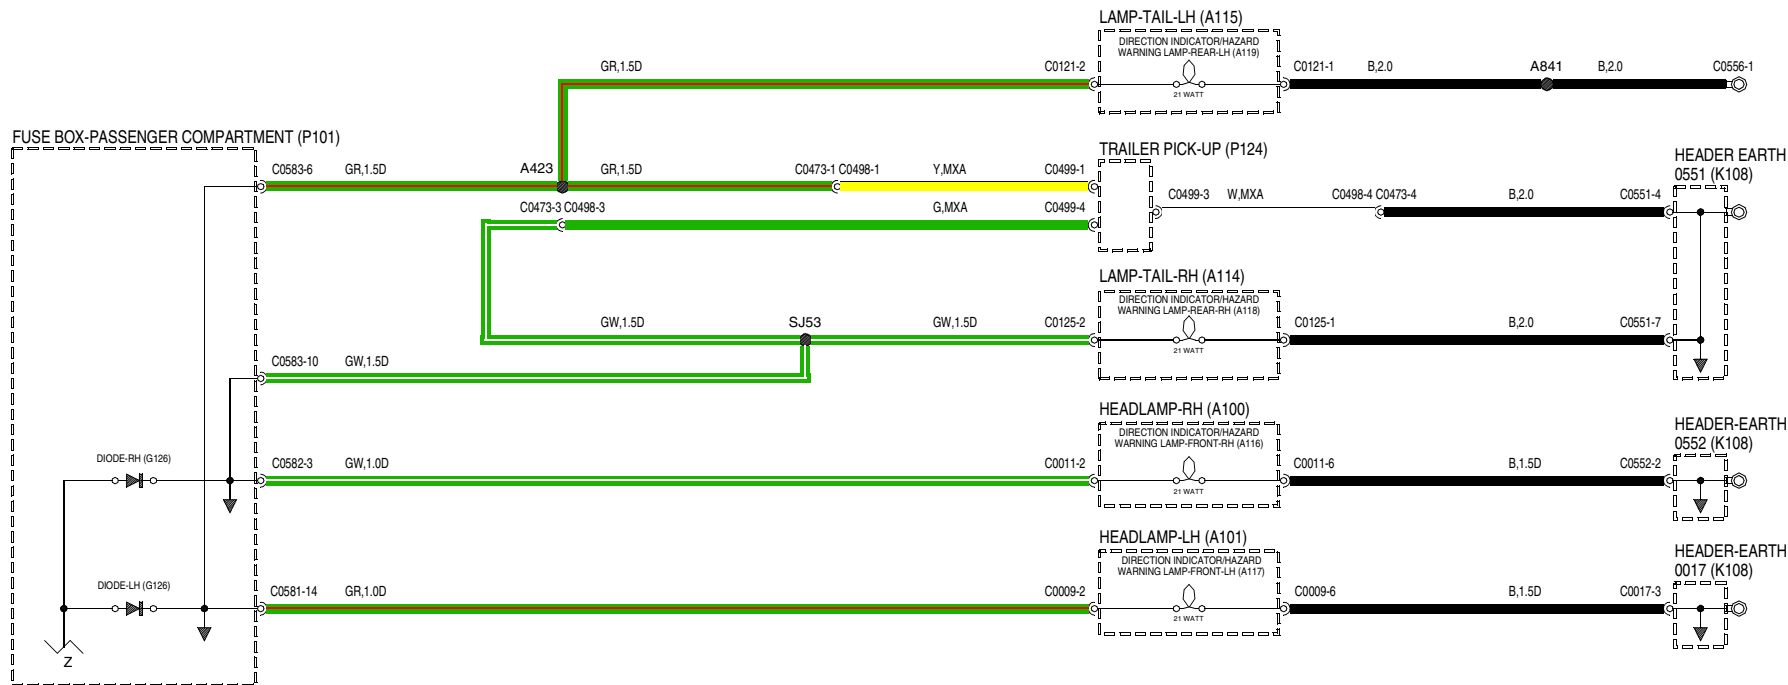

VWR003970-A-04


3 ENGINE IMMOBILISATION

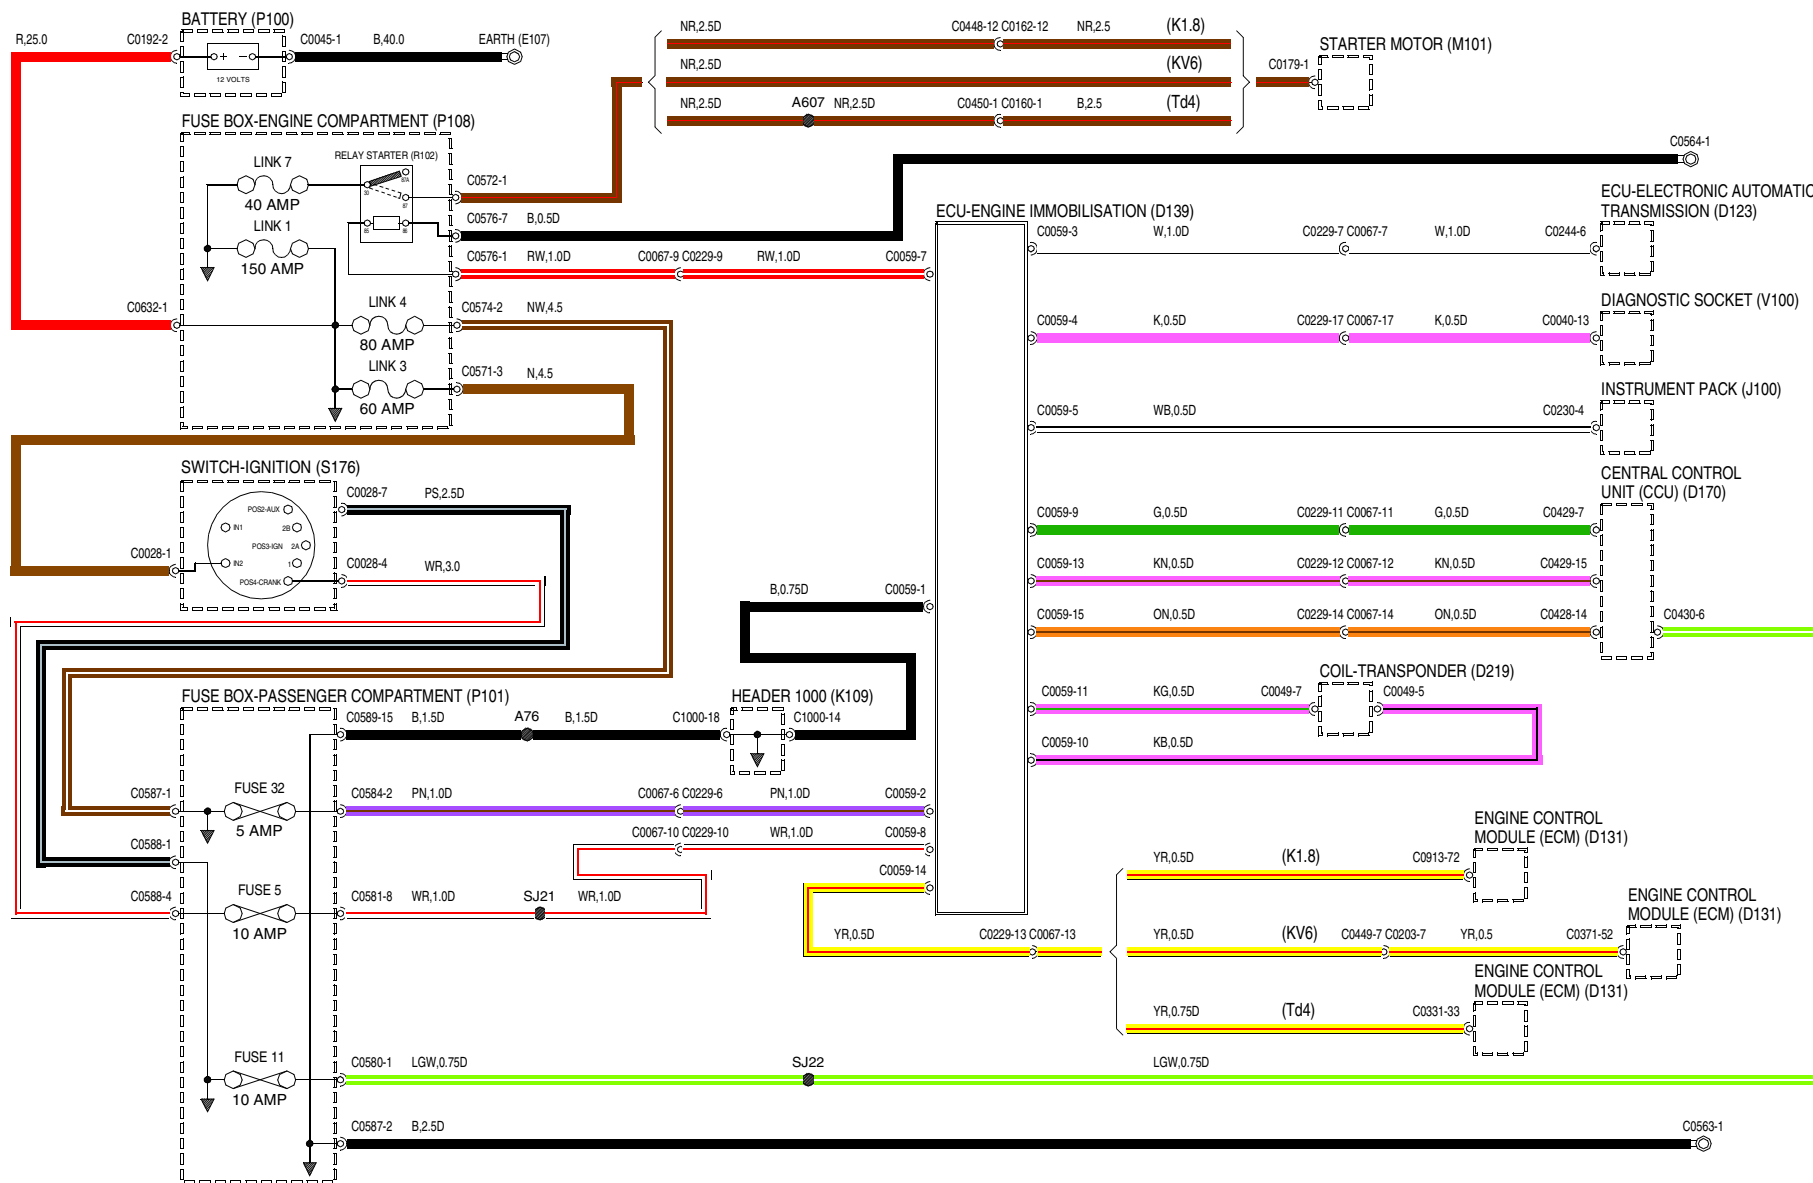


VWR004190-A-01

5 WINDOWS


Front

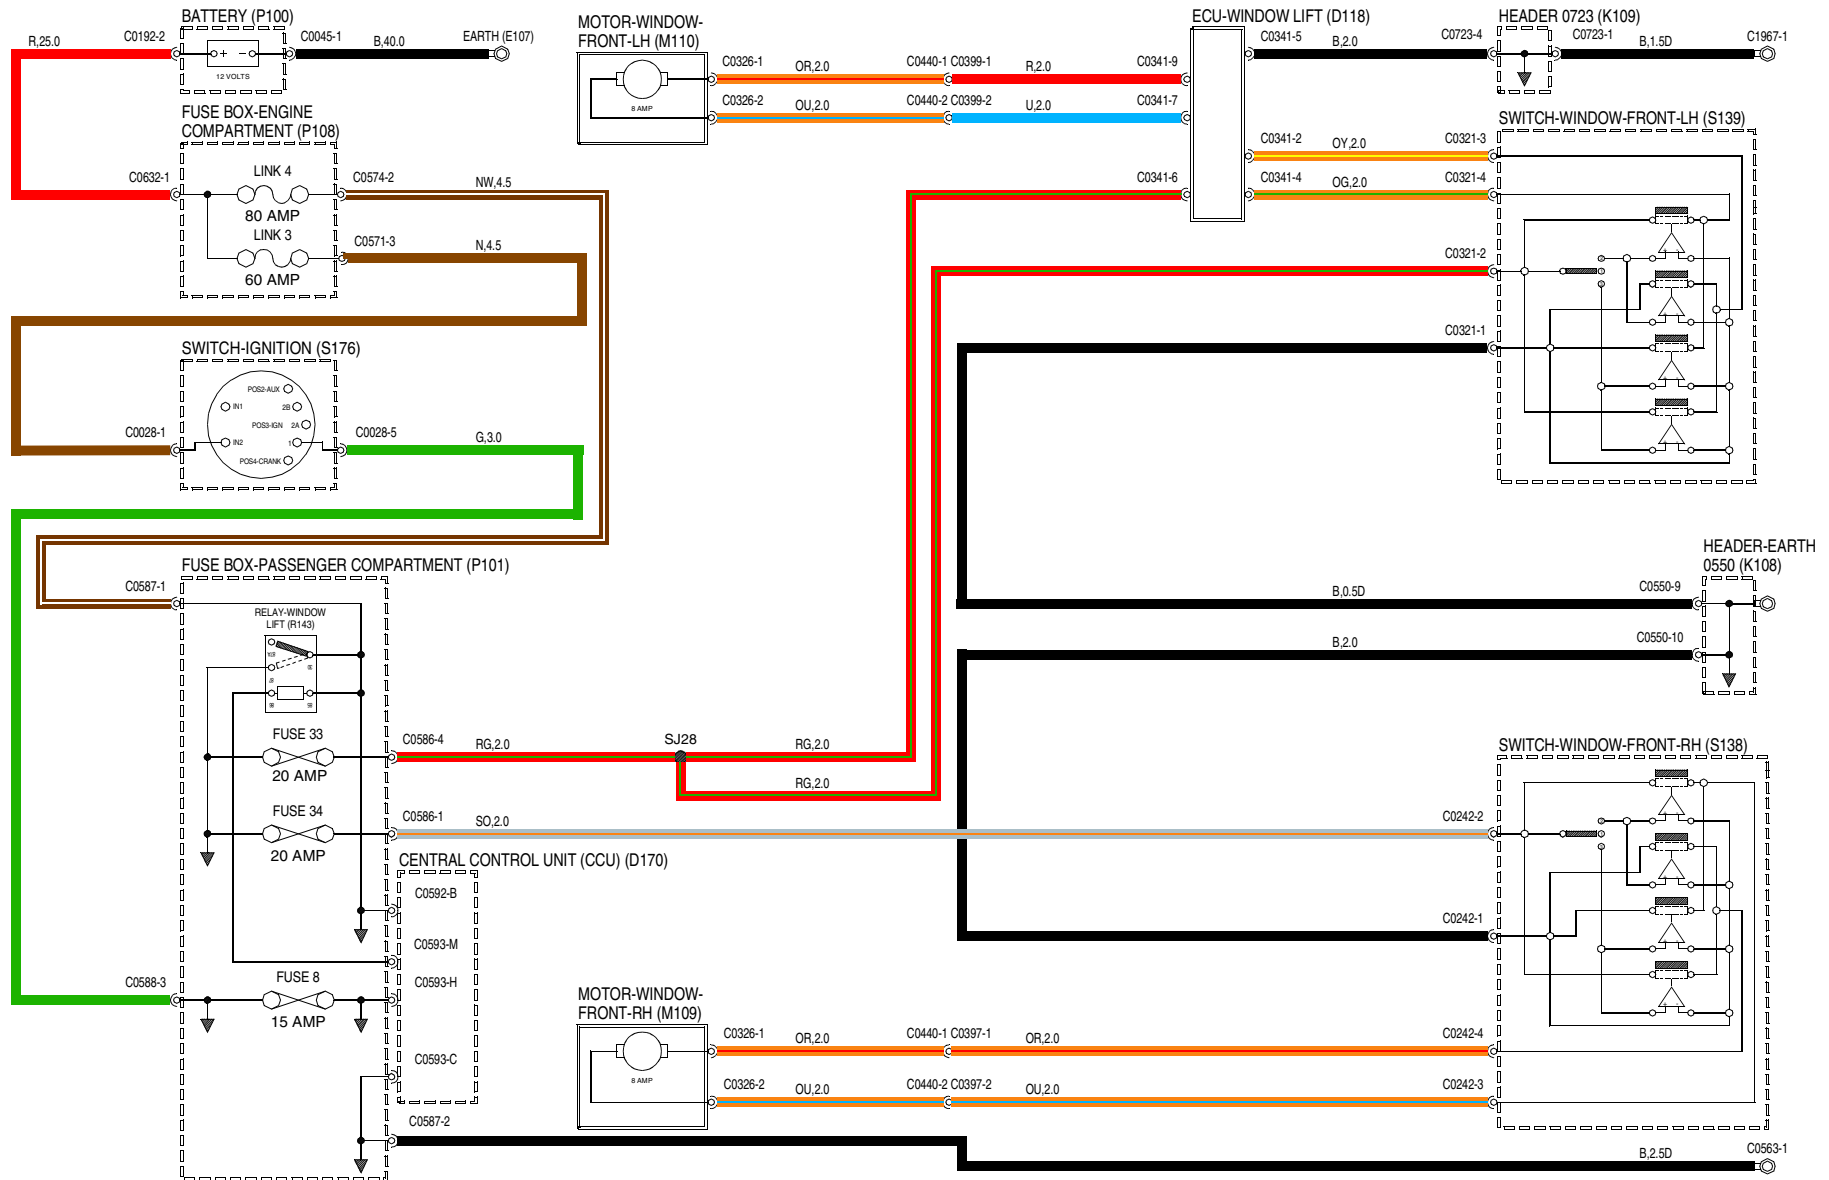


VWR004360-A-01

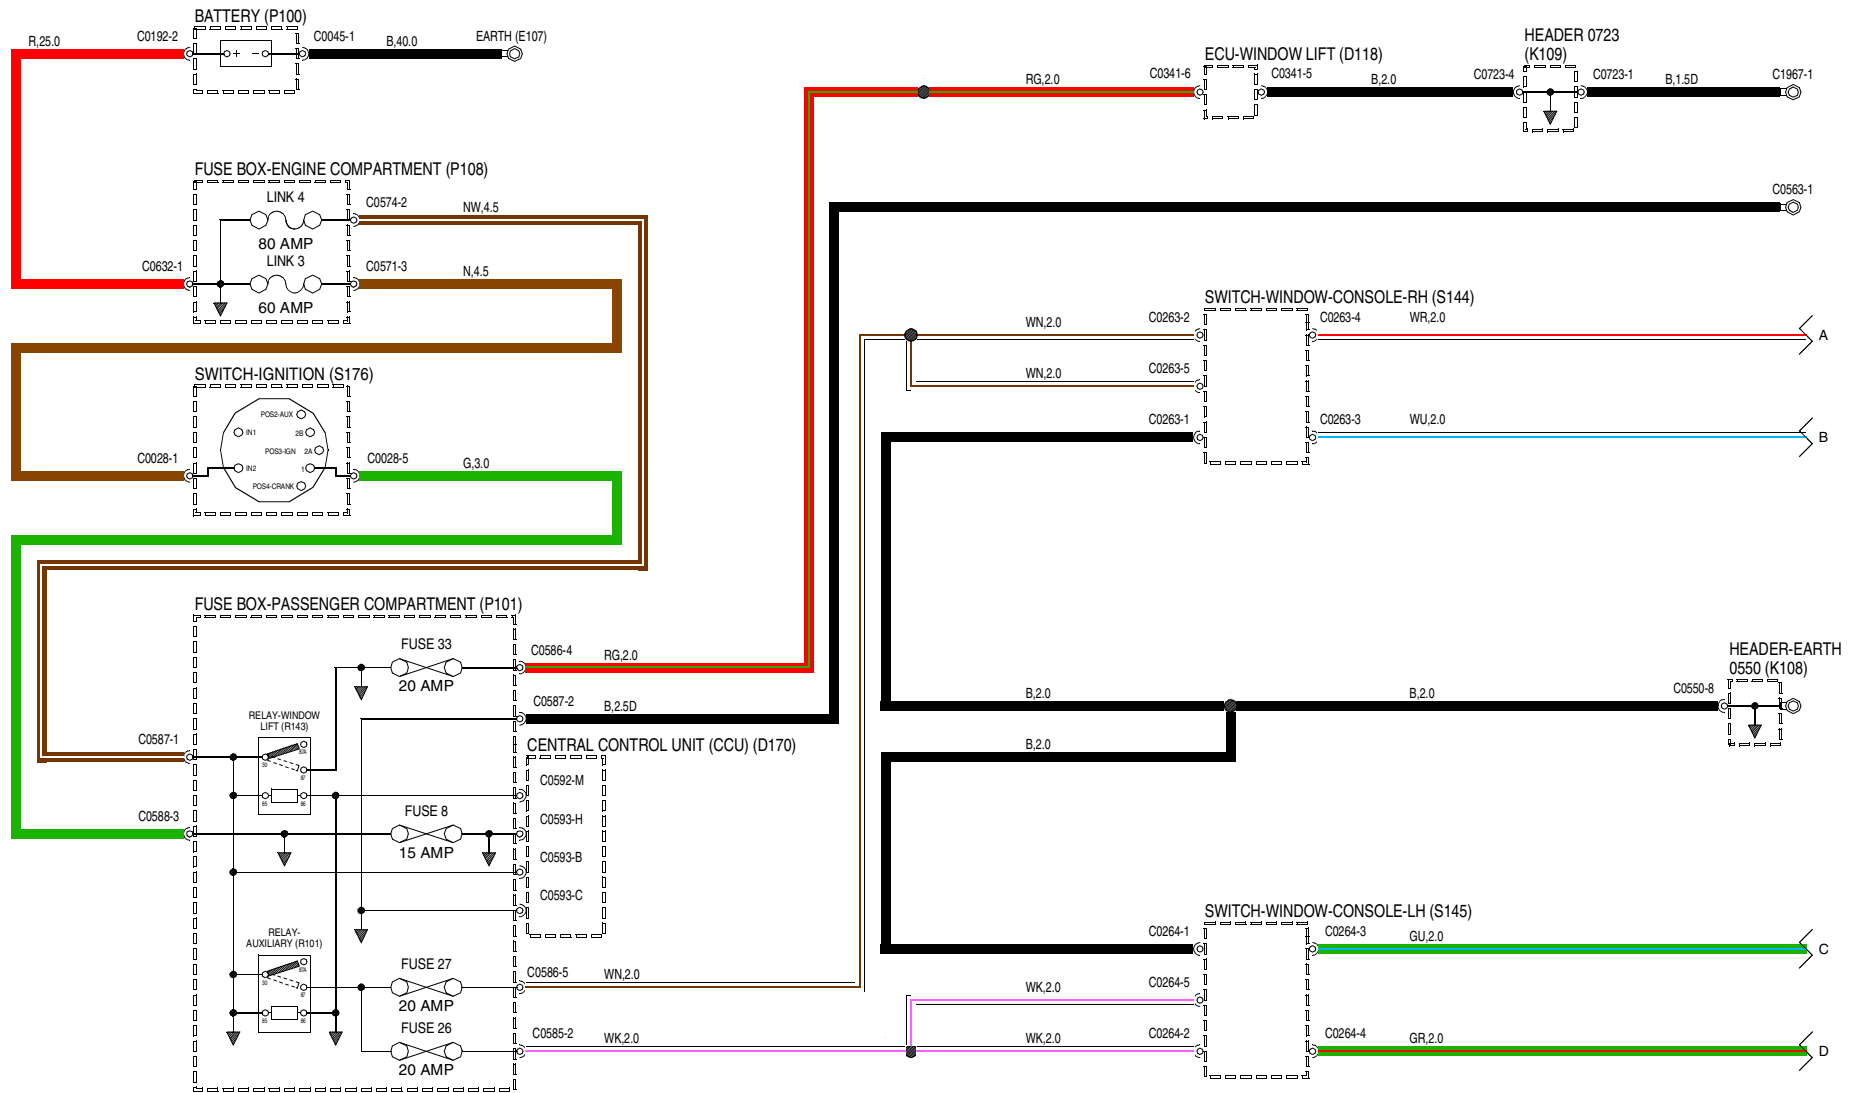


VWR004370-A-01

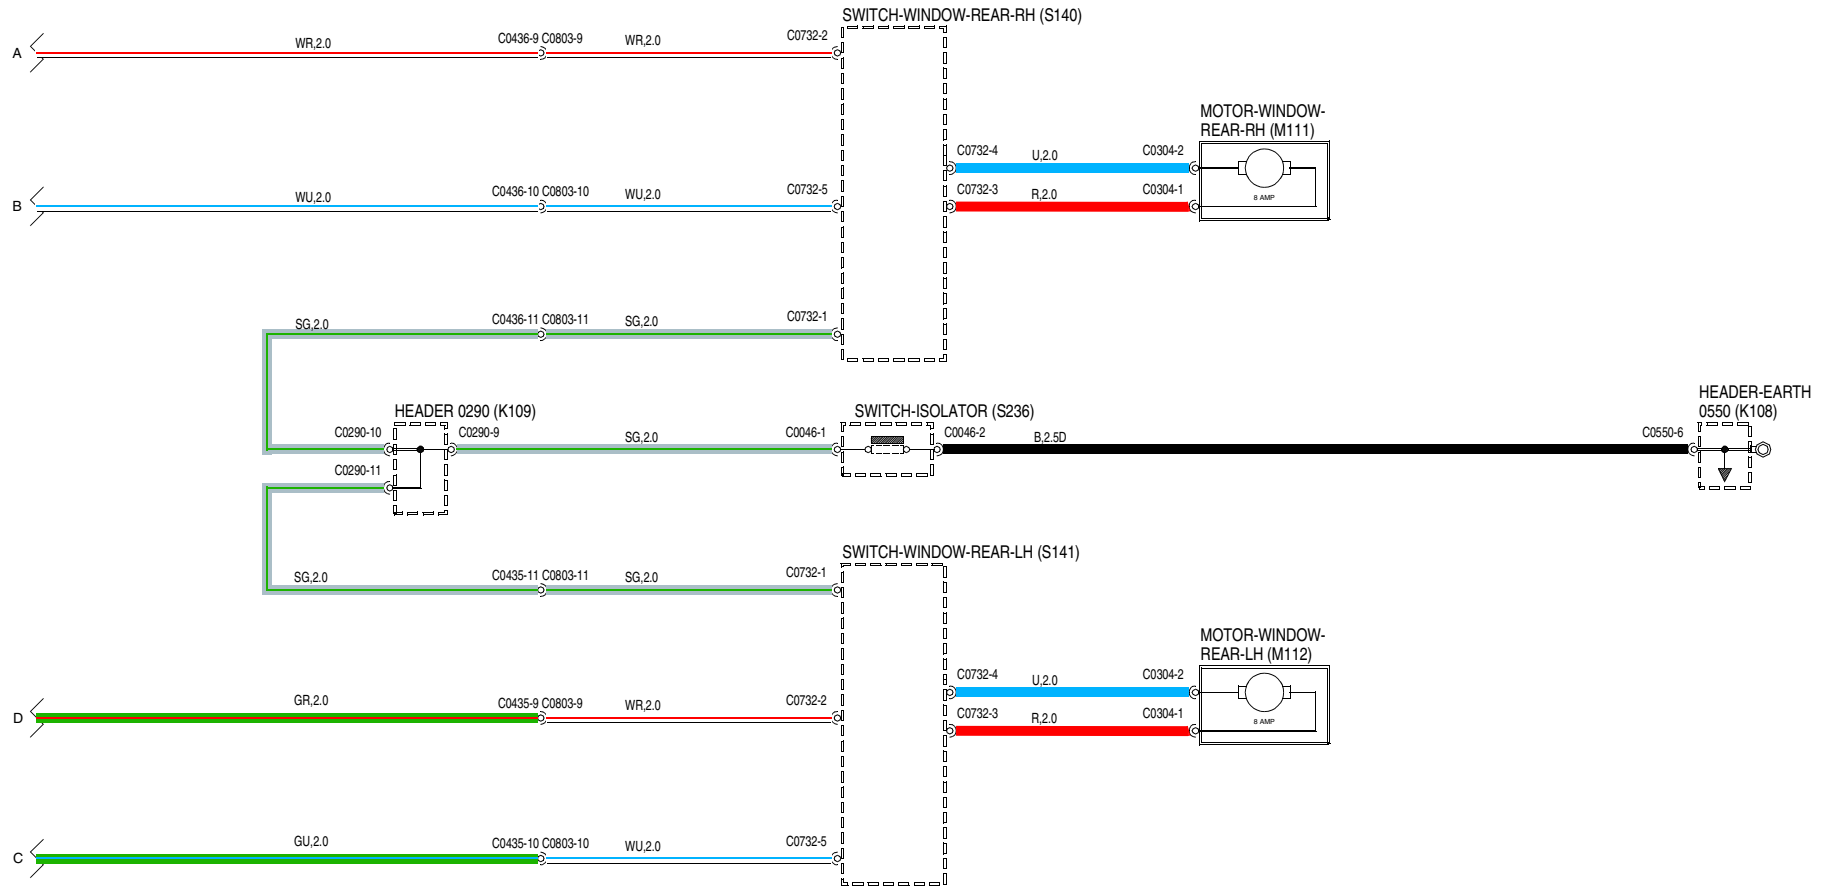


VWR004370-A-02

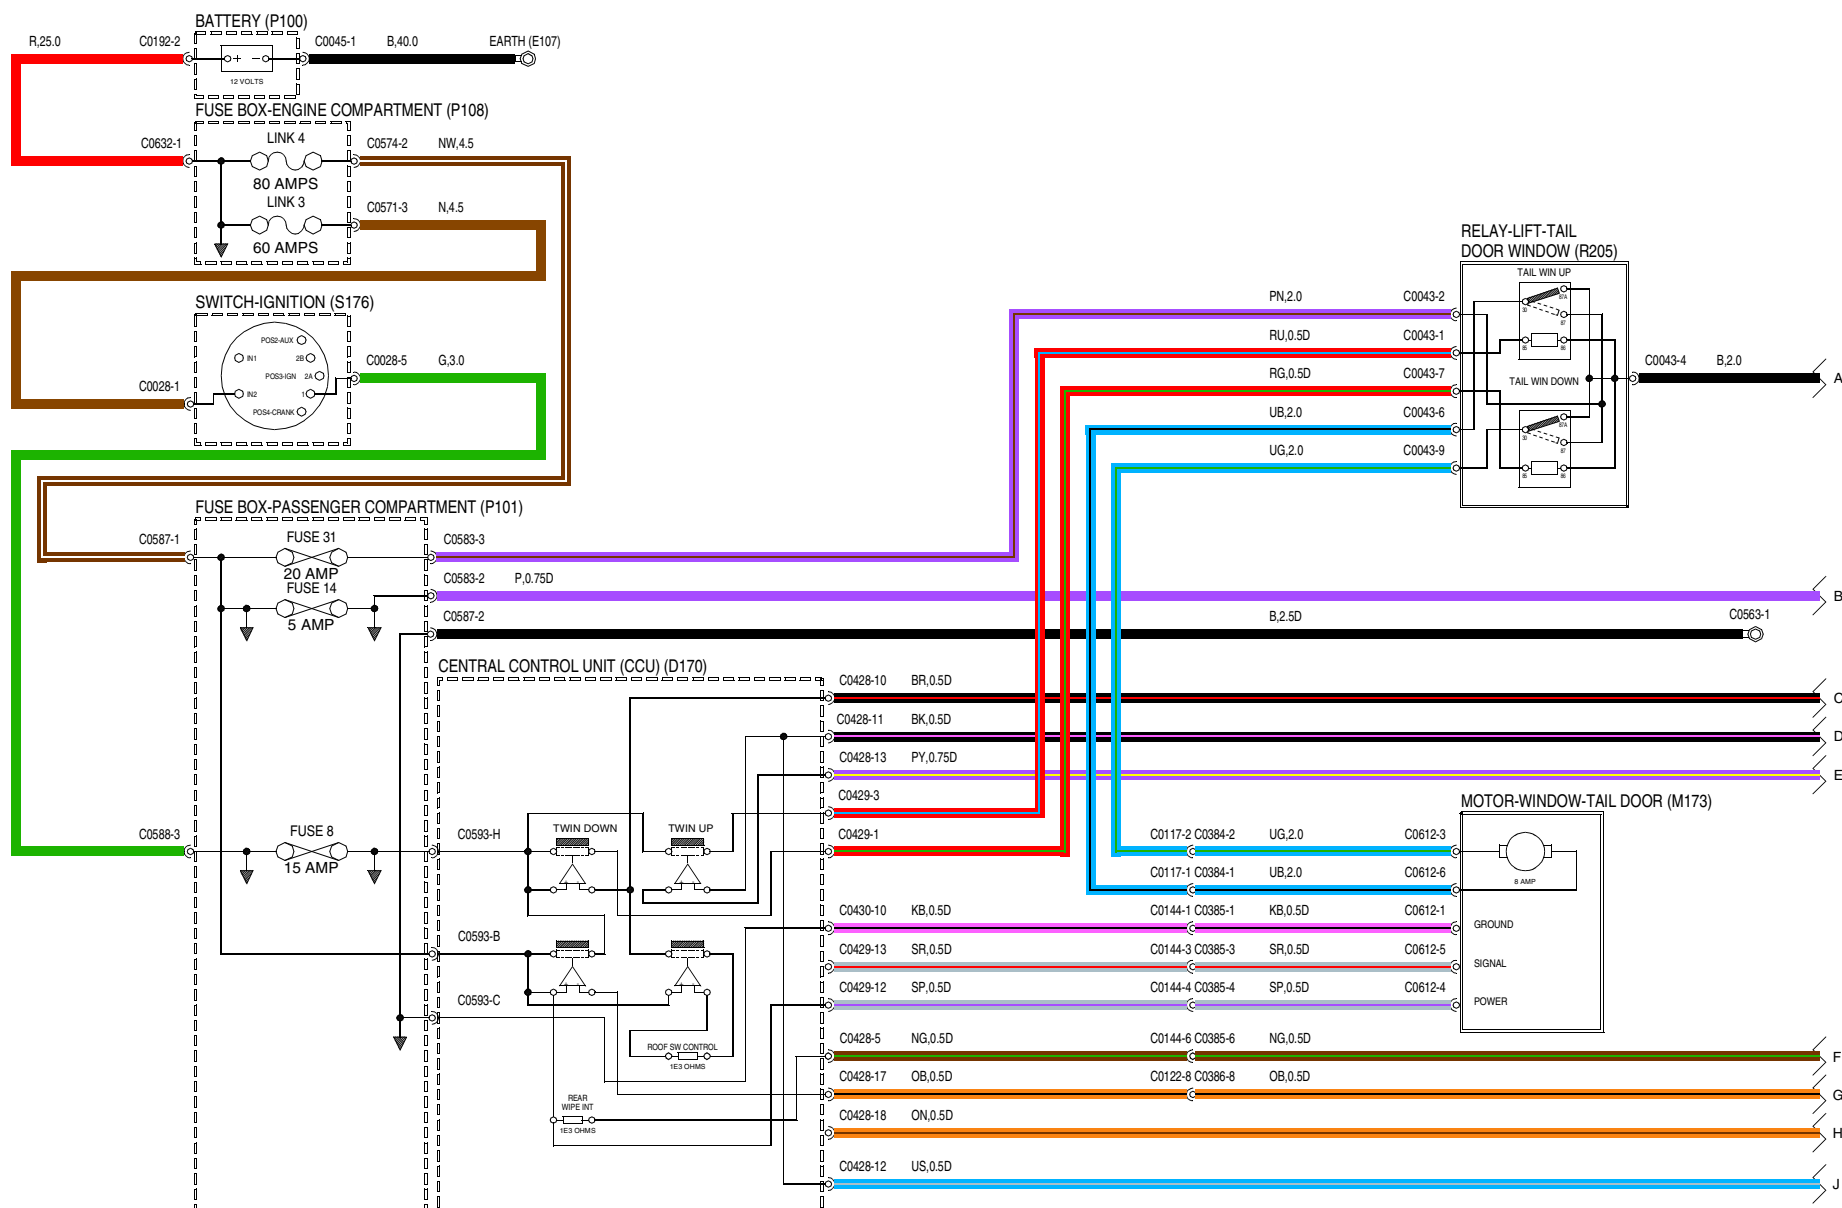

VWR004380-A-01

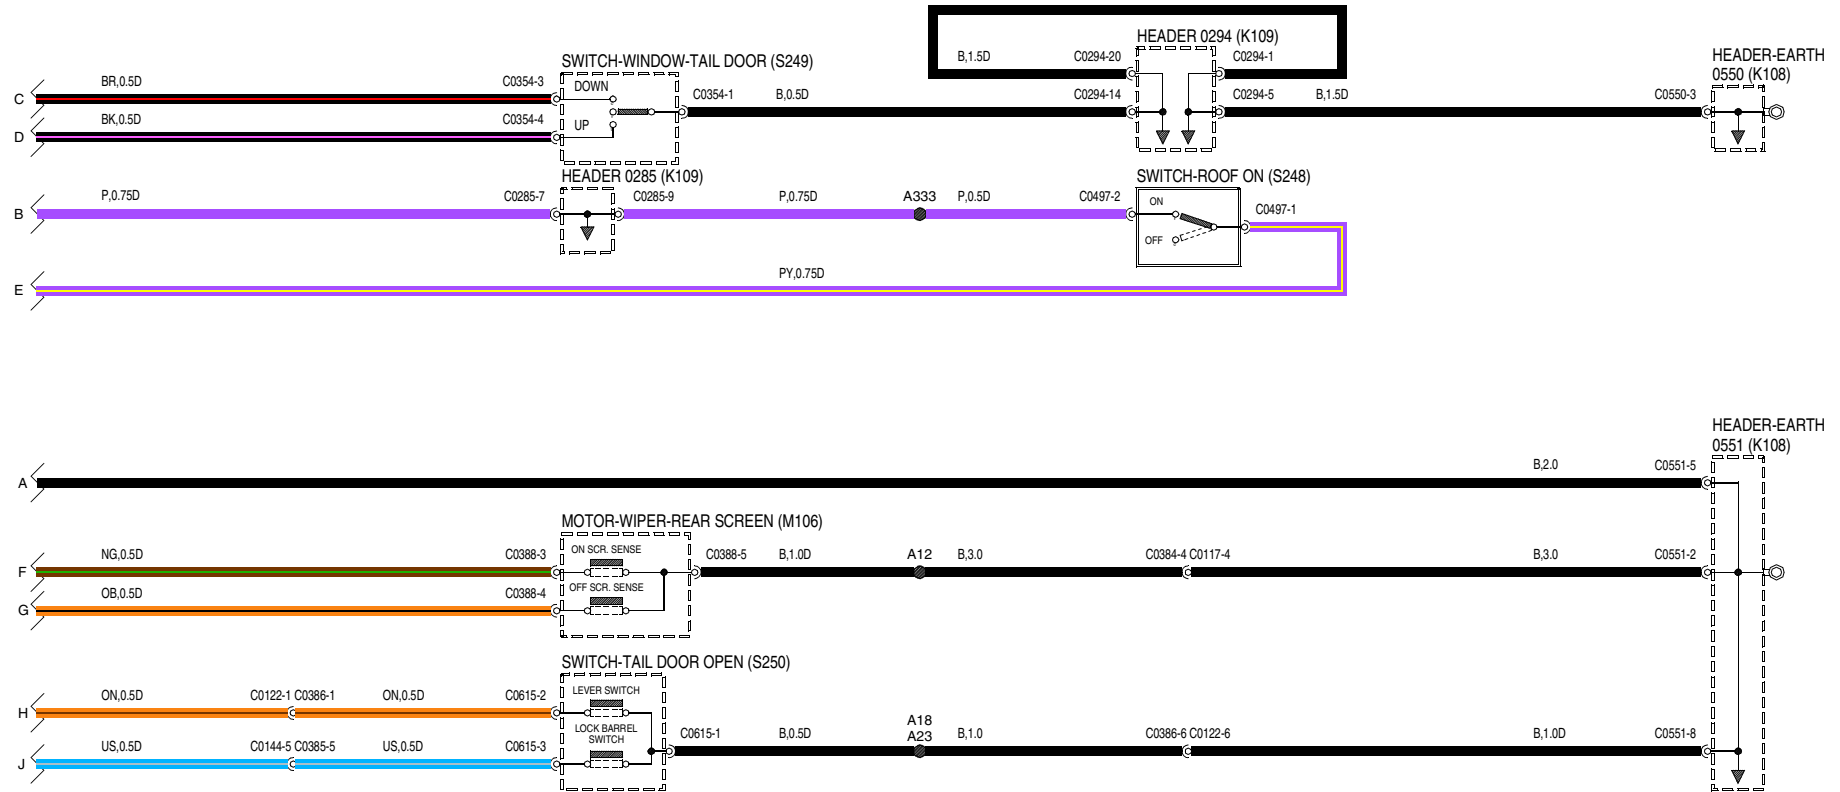


VWR004380-A-02

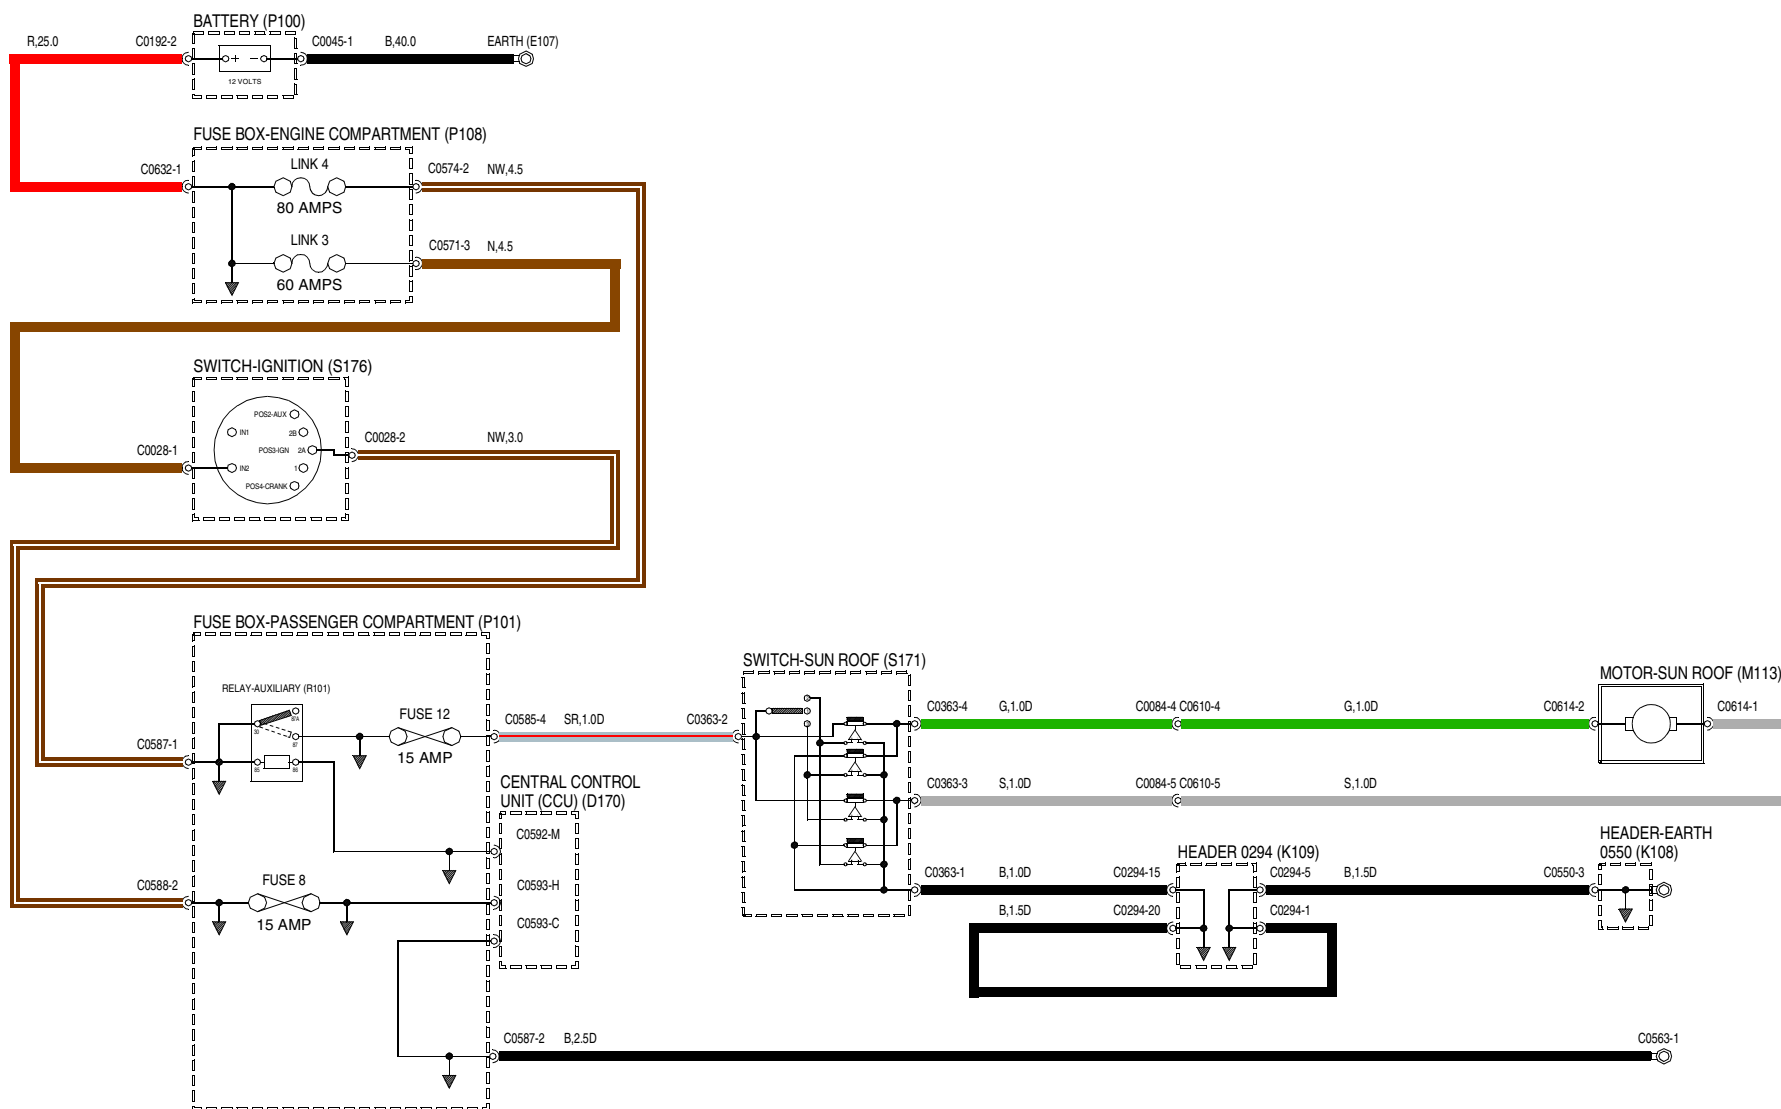


VWR004340-A-01


7 DOOR MIRRORS

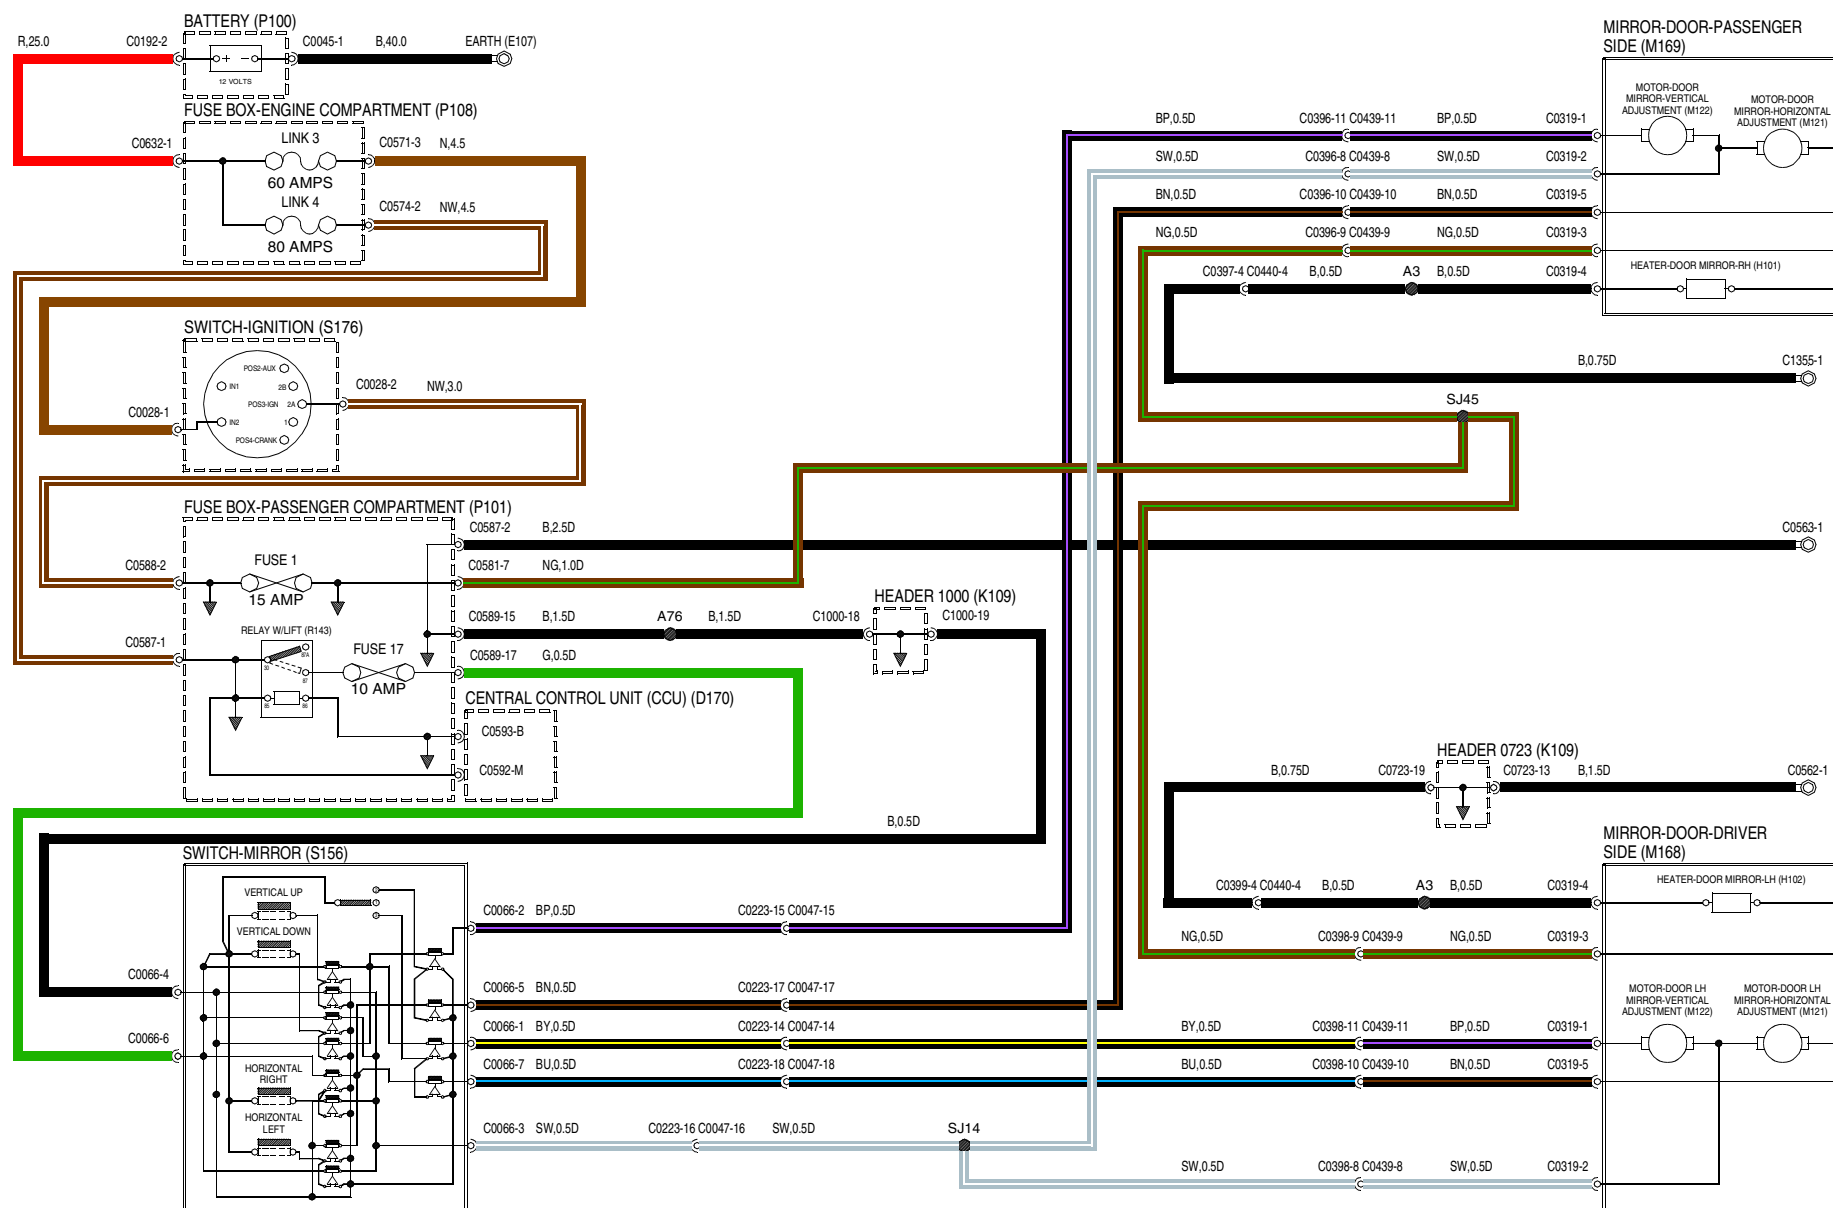


VWR004240-A-01

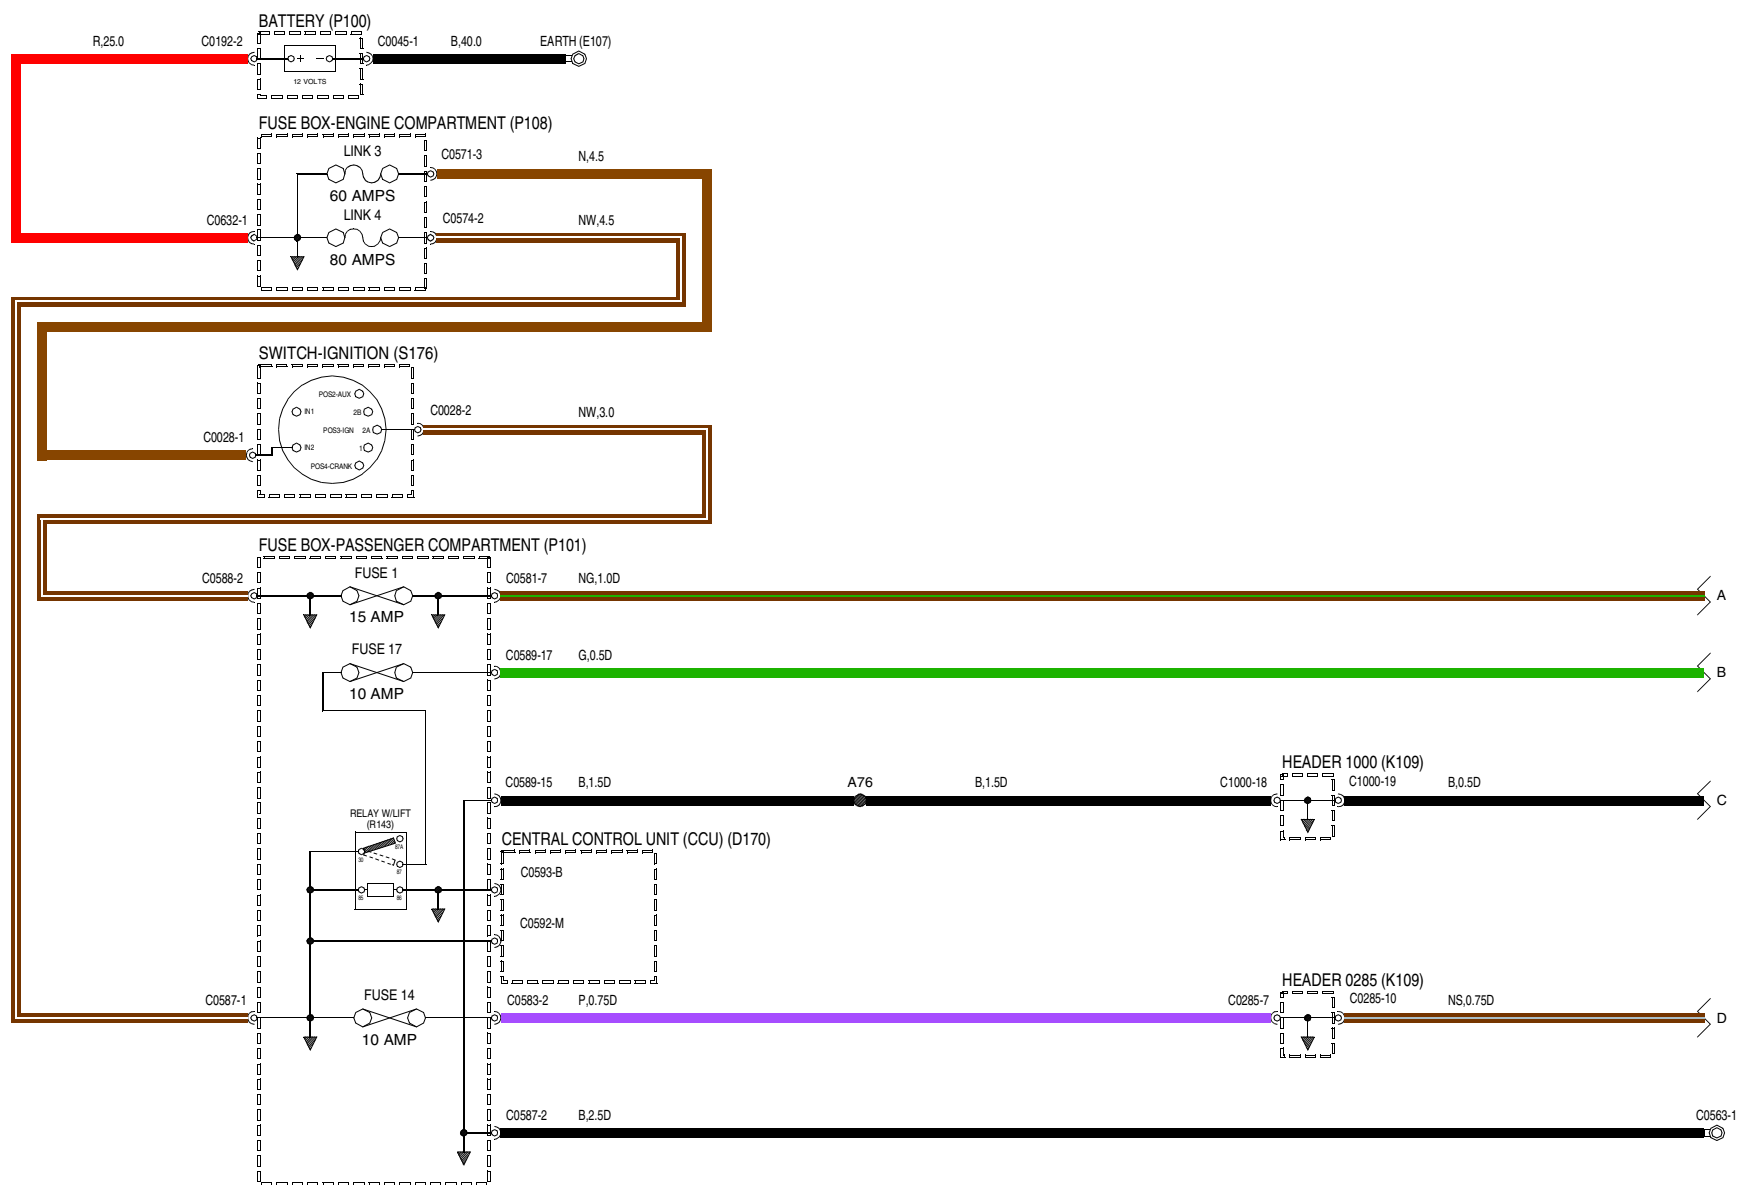

VWR004600-A-01

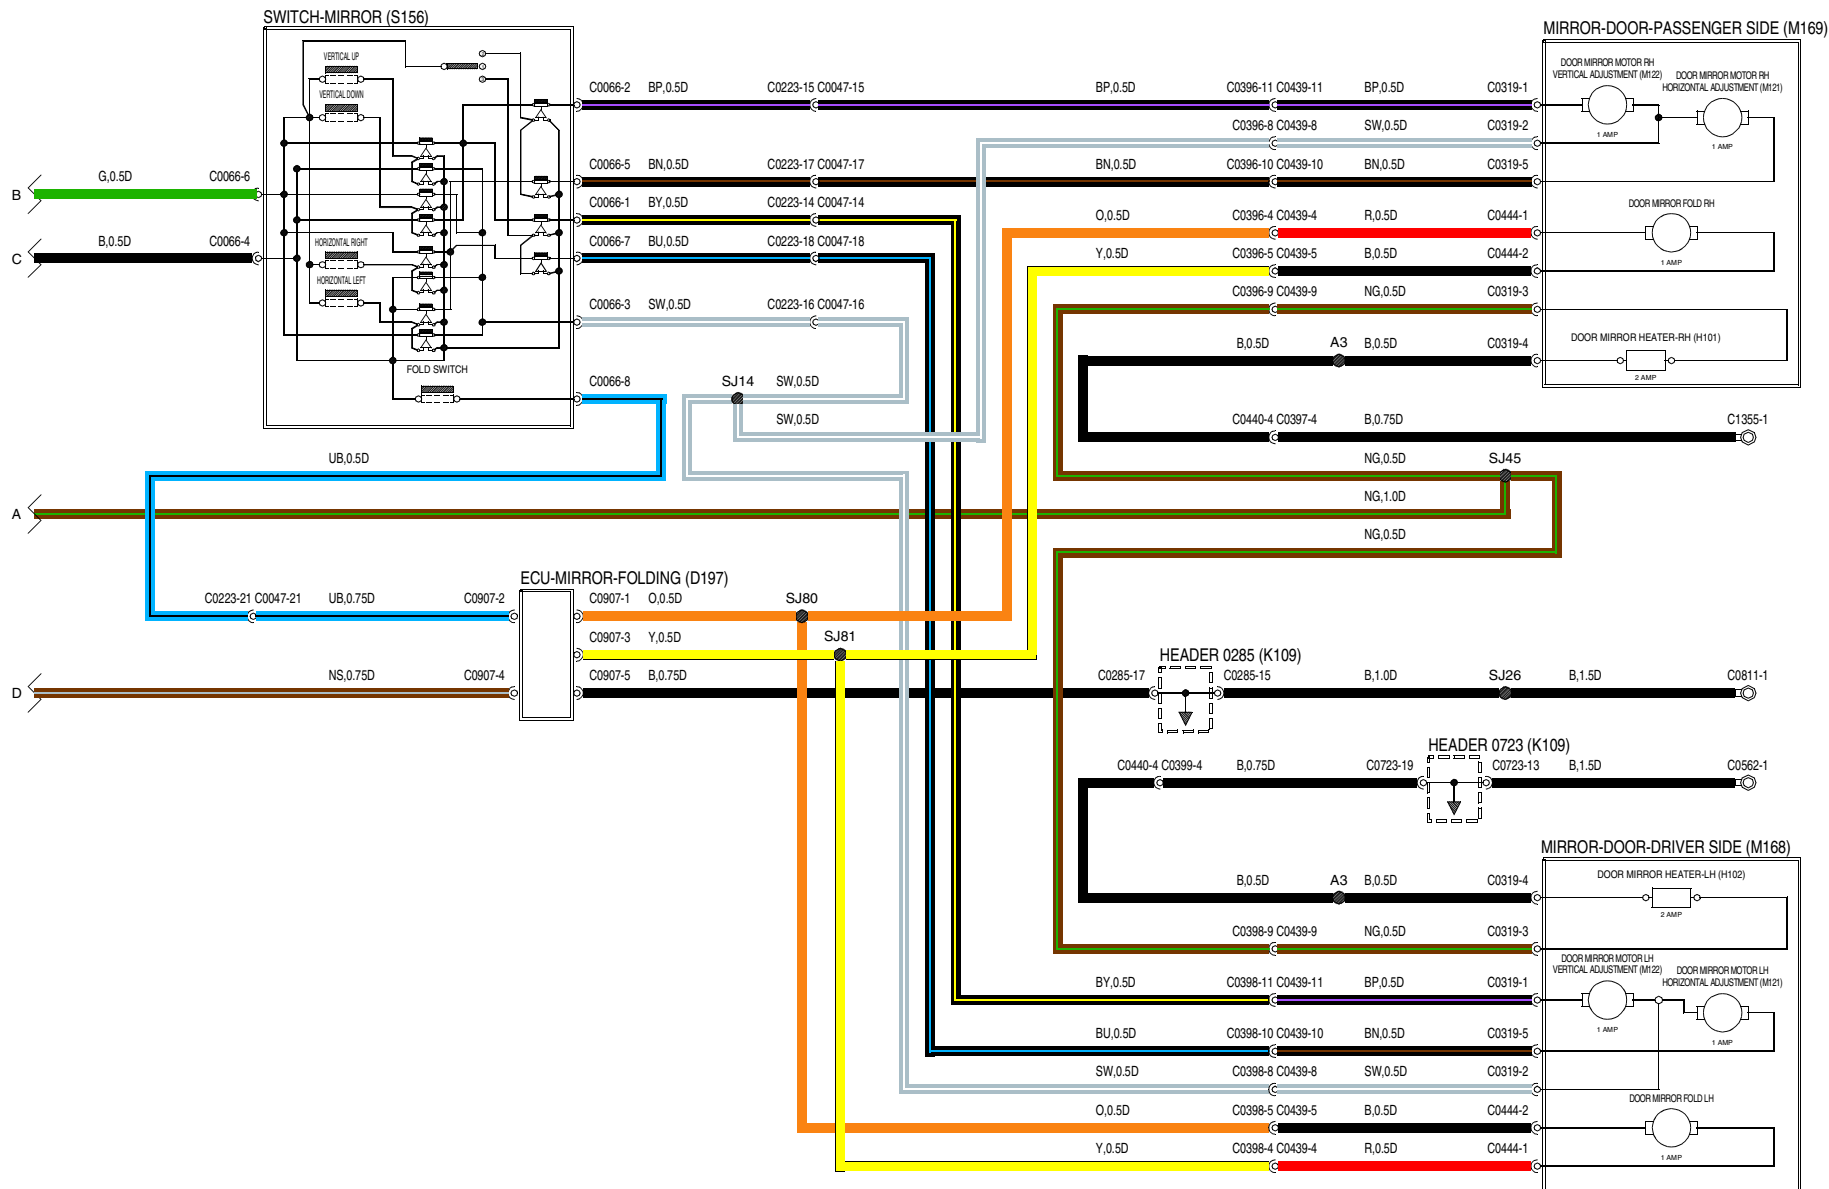


VWR004600-A-02

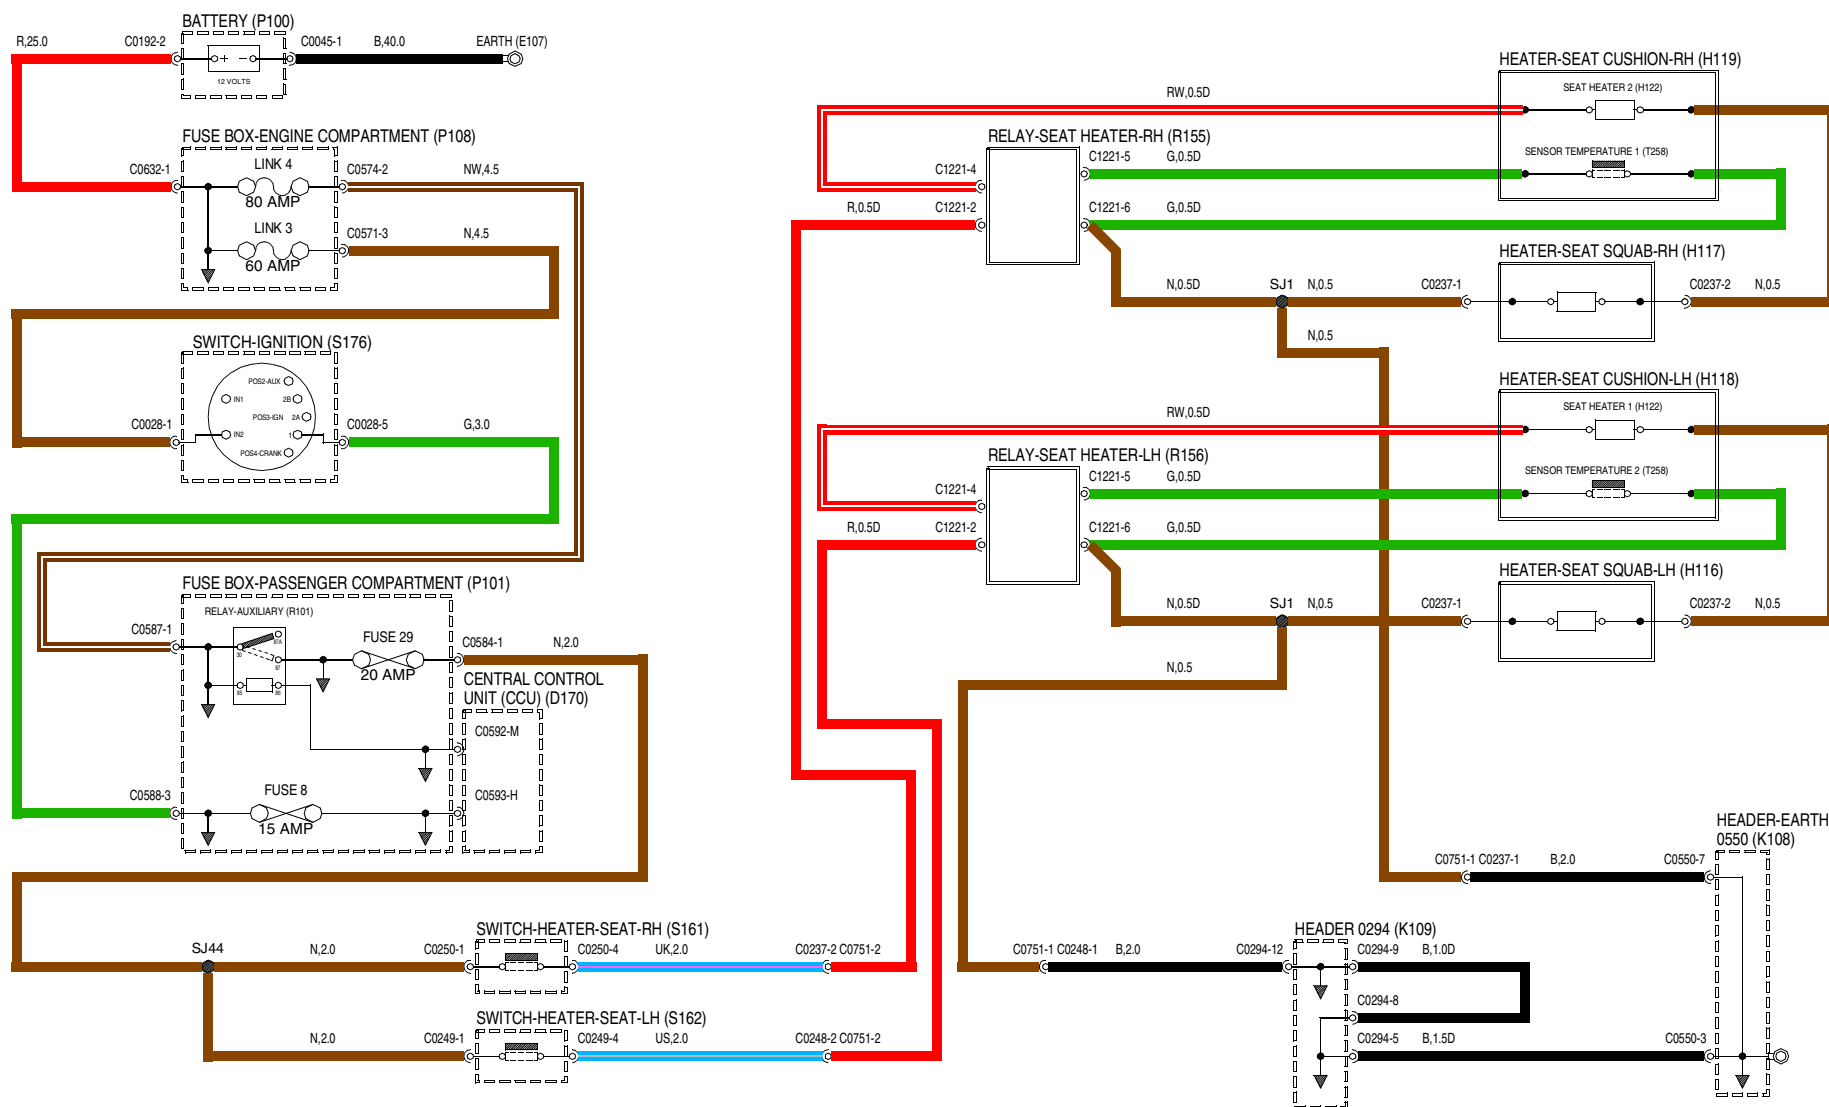


VWR004280-A-01

10 DIAGNOSTIC SOCKET

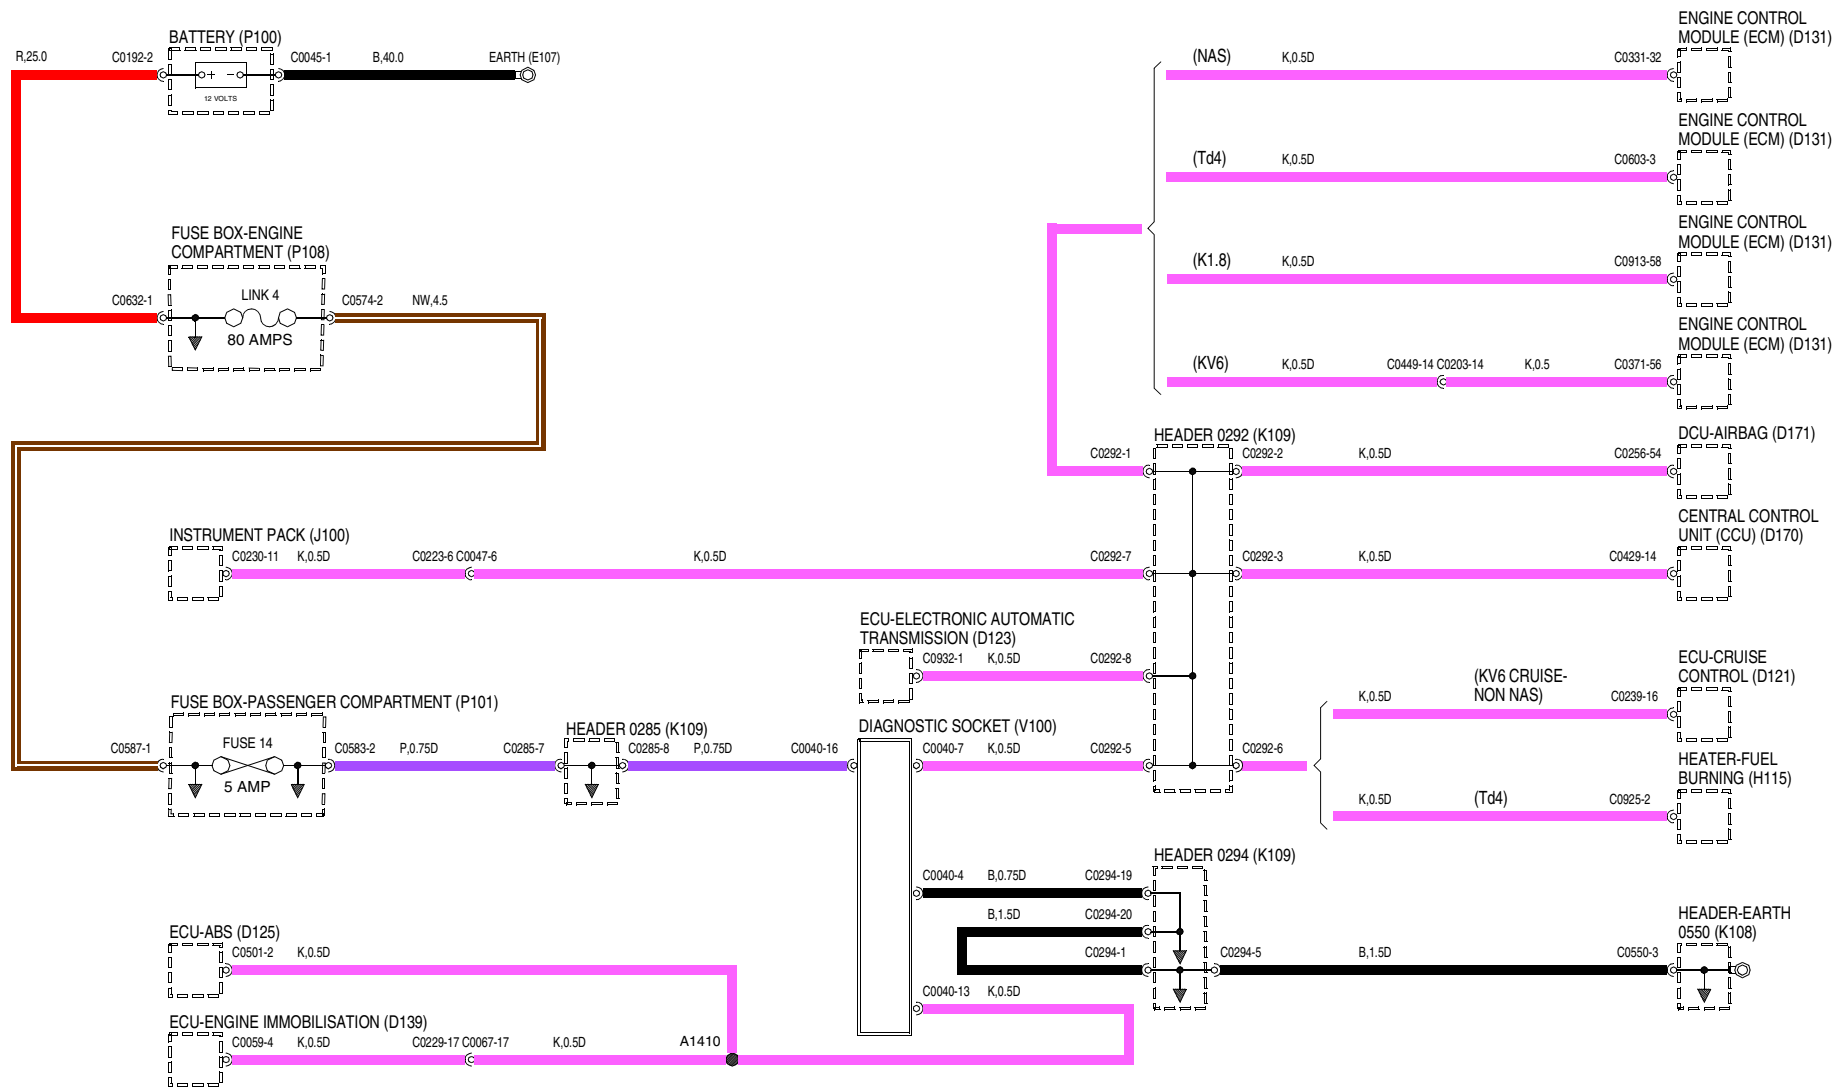


VWR004050-A-01

11 BODY CONTROL UNIT

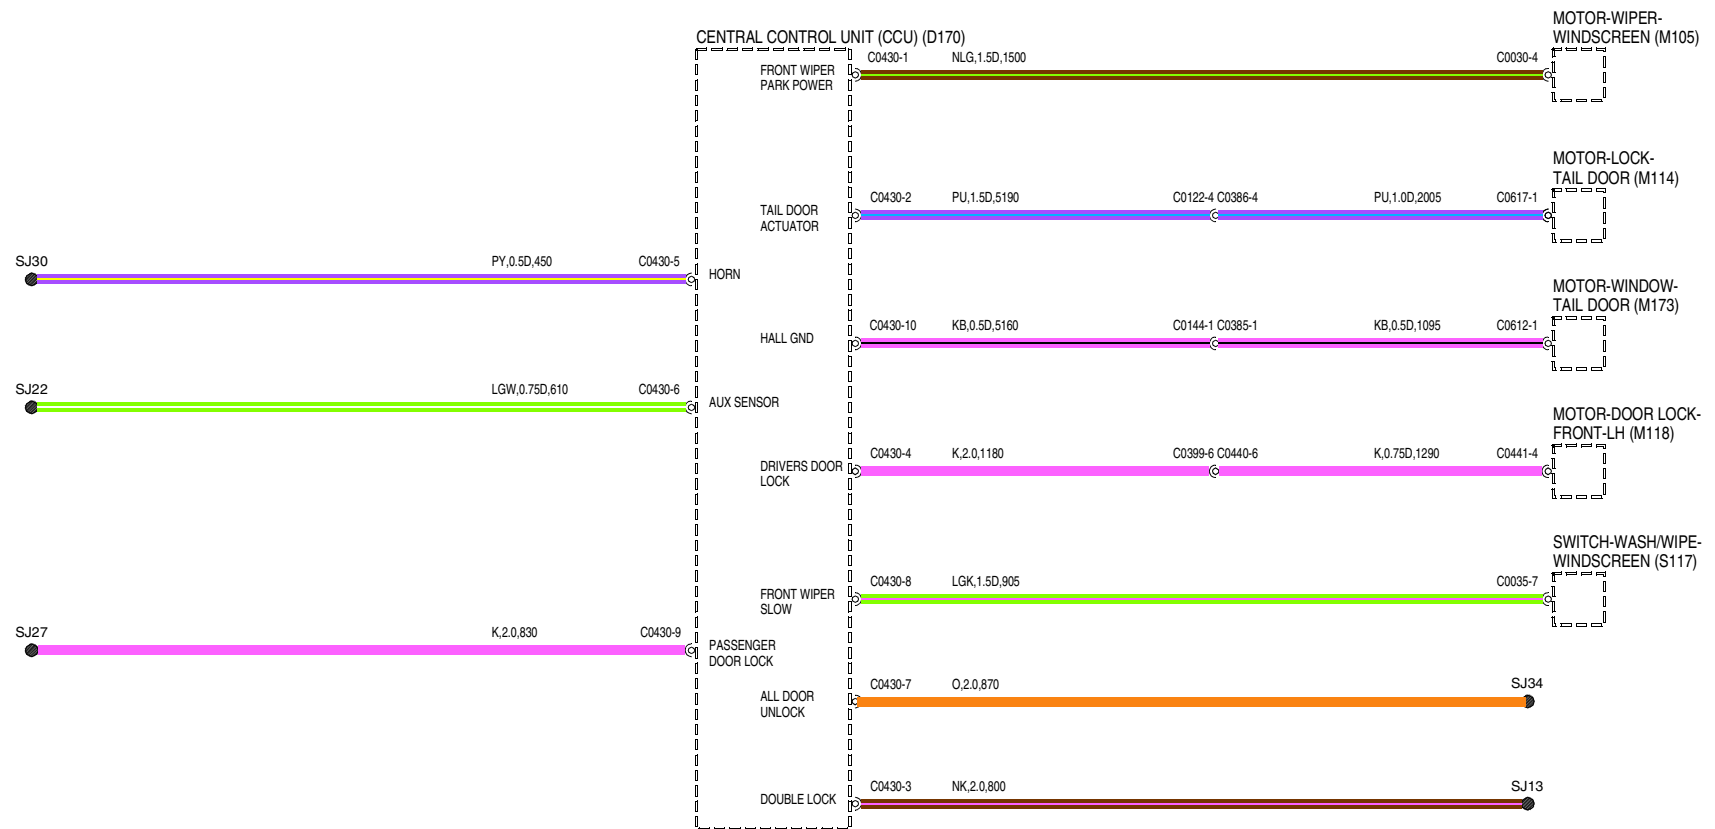


VWR004010-A-01

11 BODY CONTROL UNIT

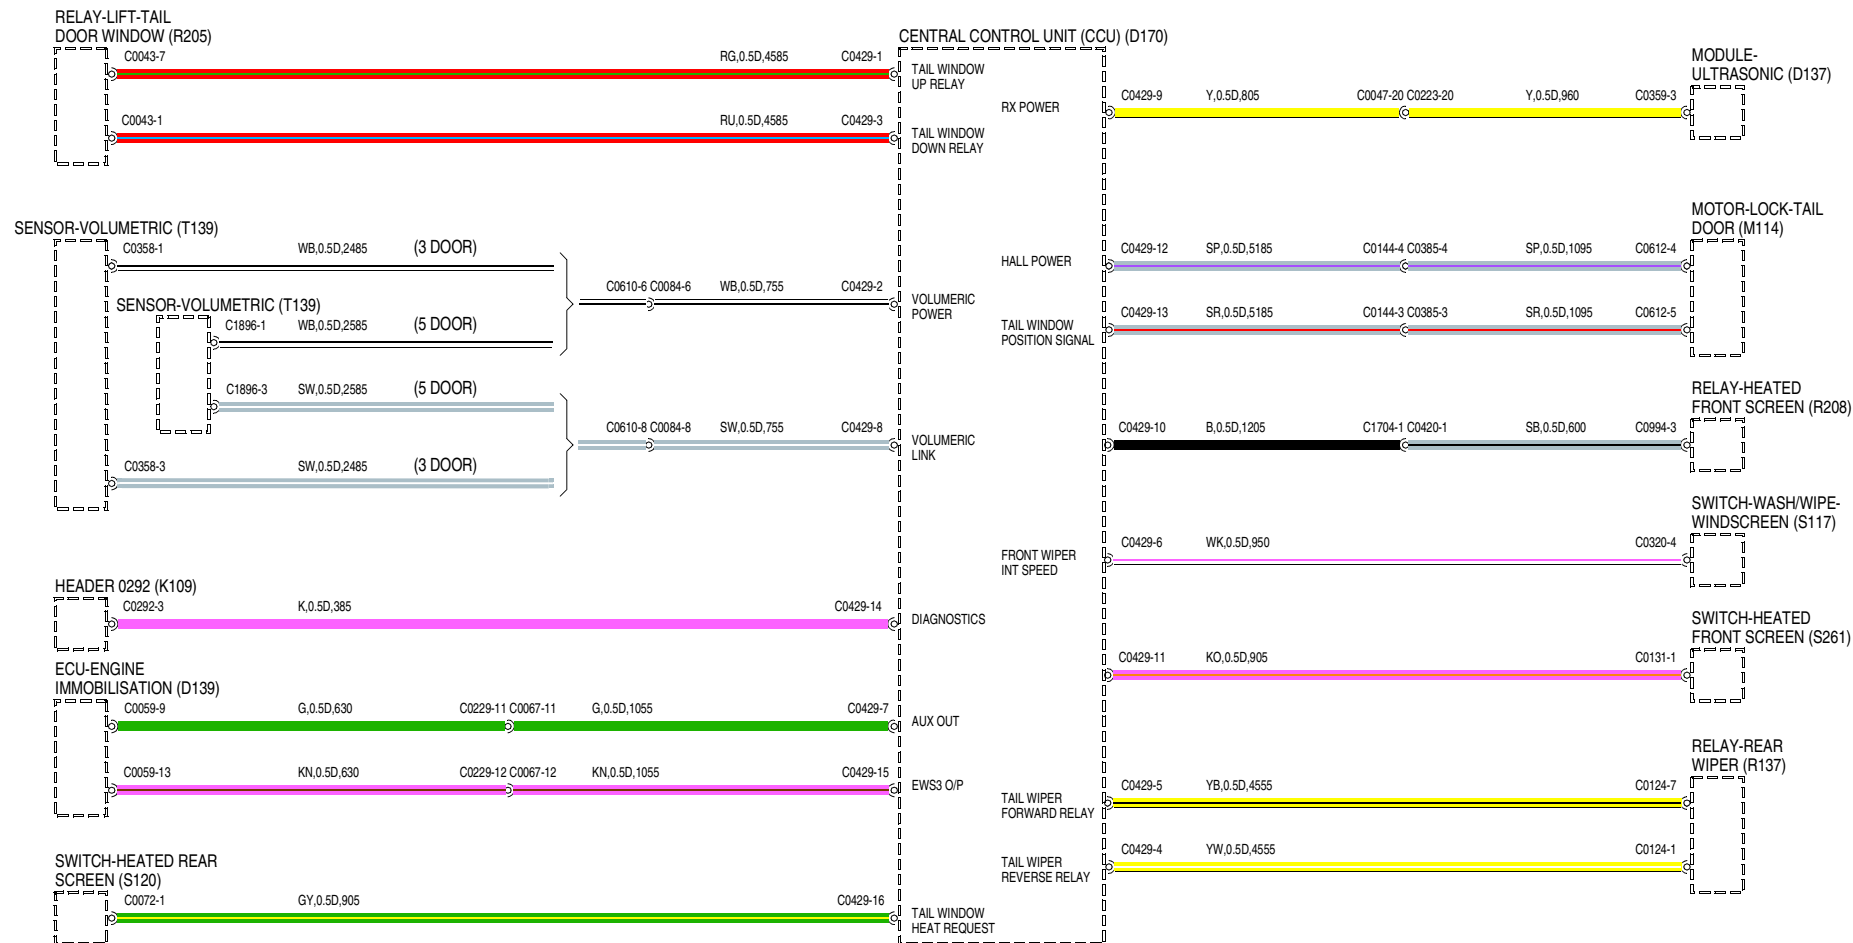


VWR004010-A-02

11 BODY CONTROL UNIT

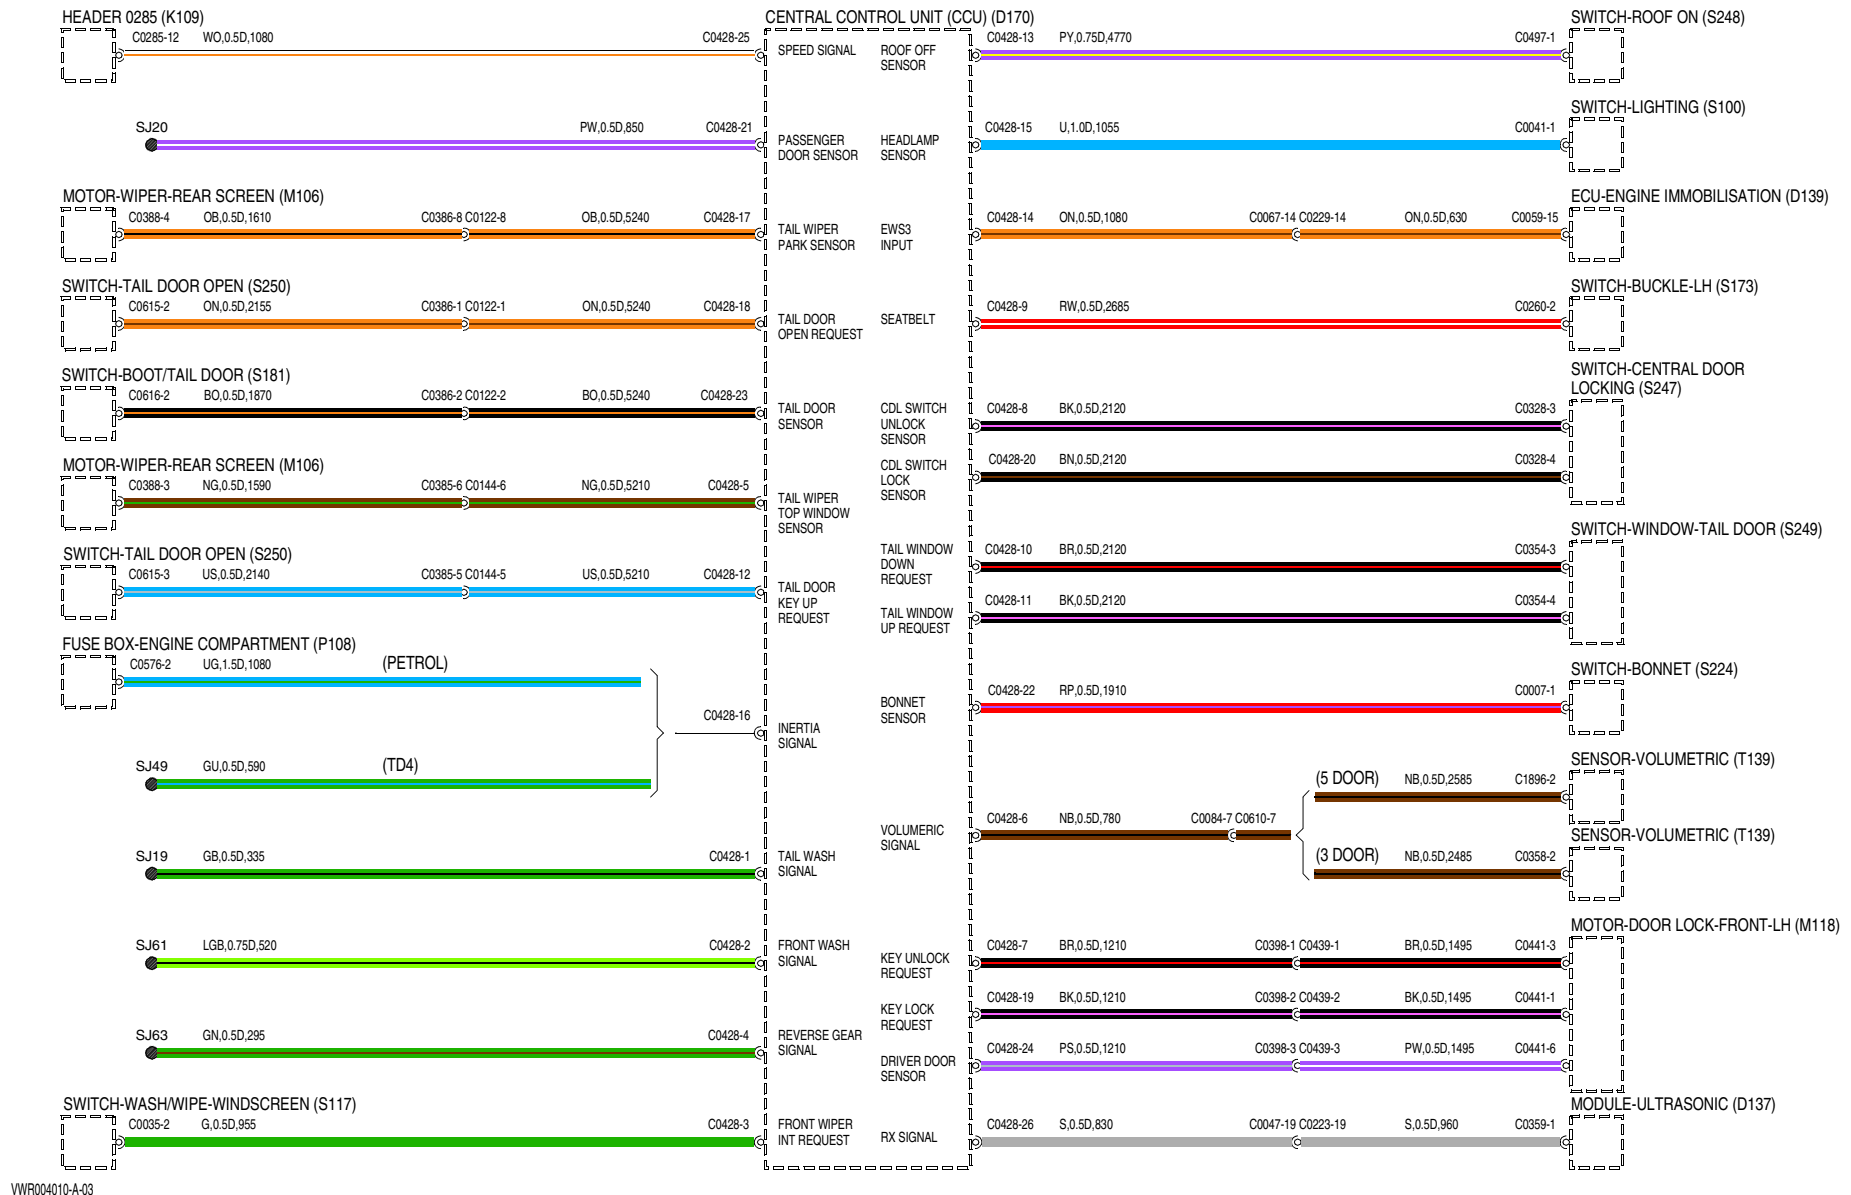


VWR004010-A-03

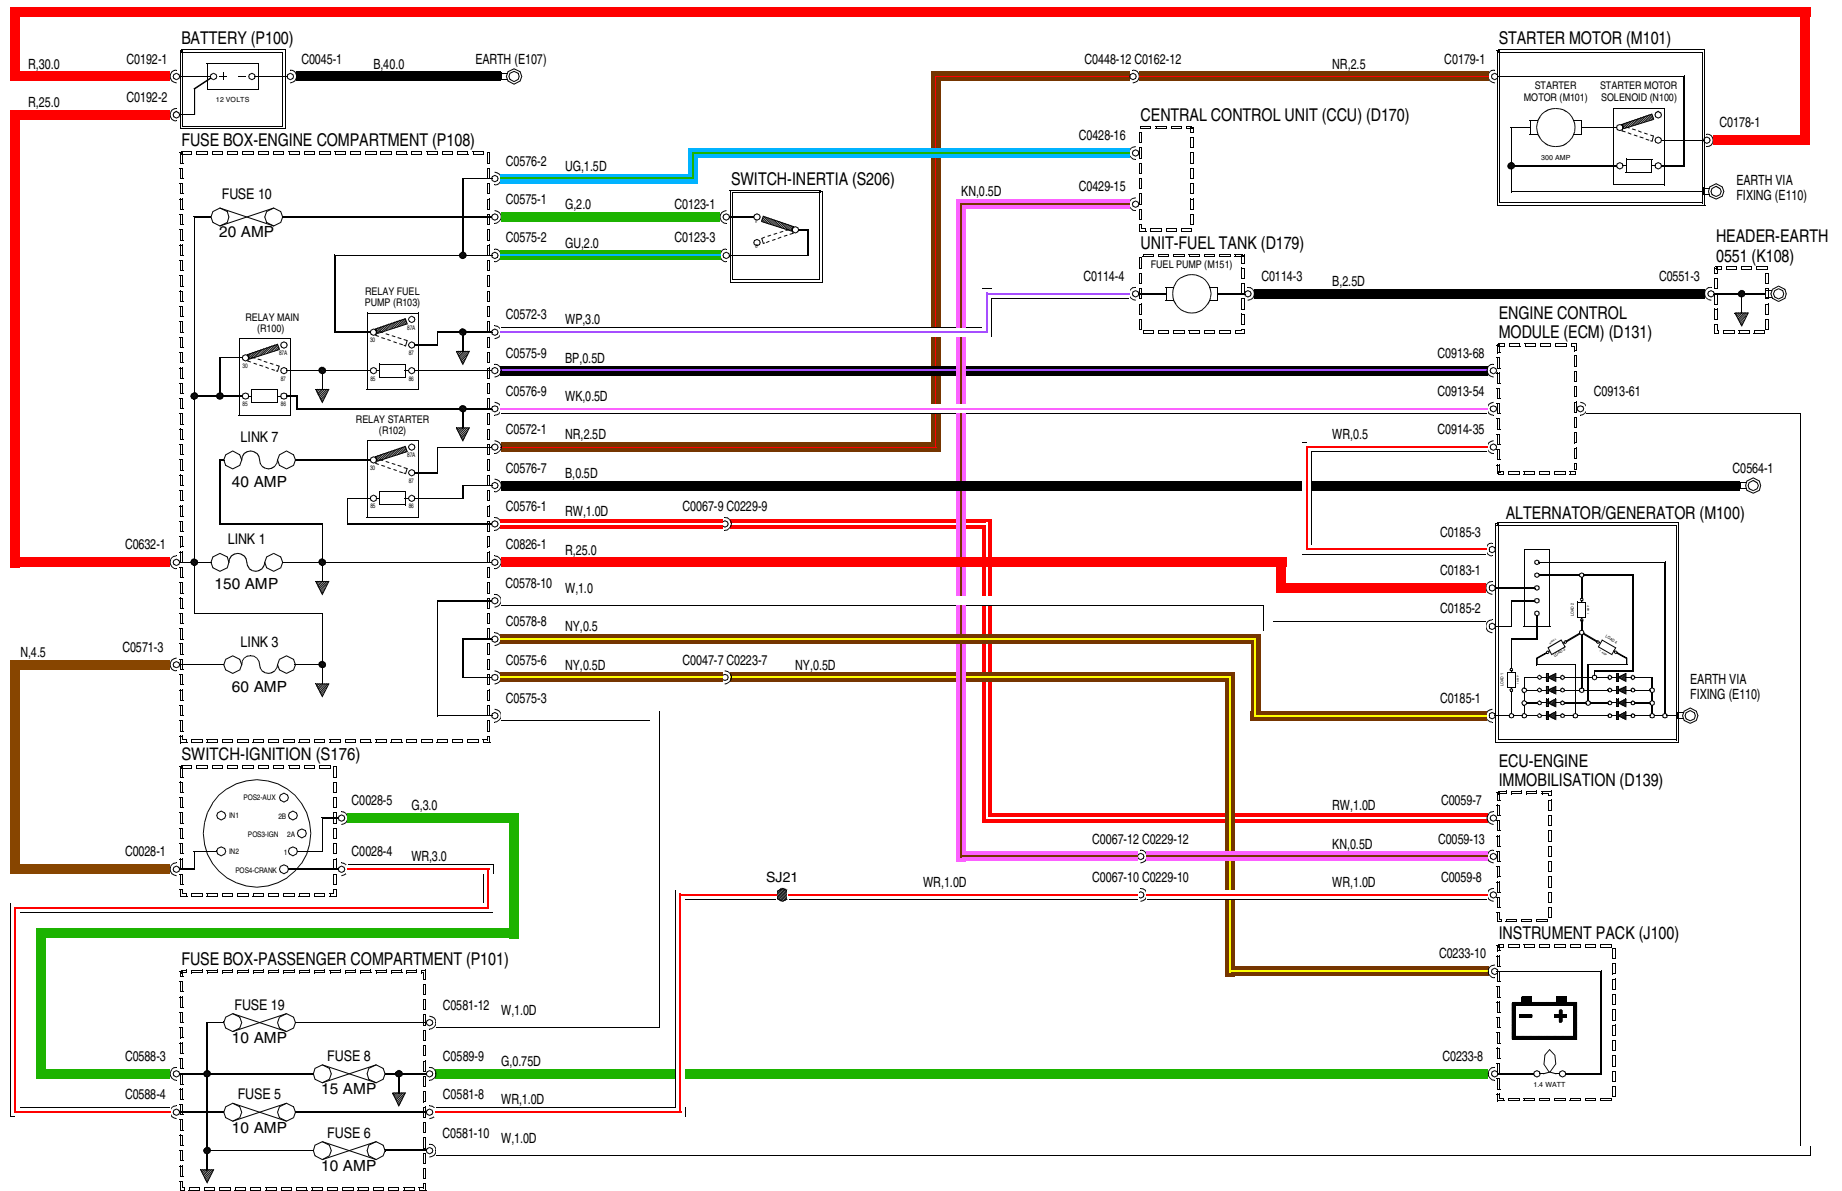

VWR004310-A-01




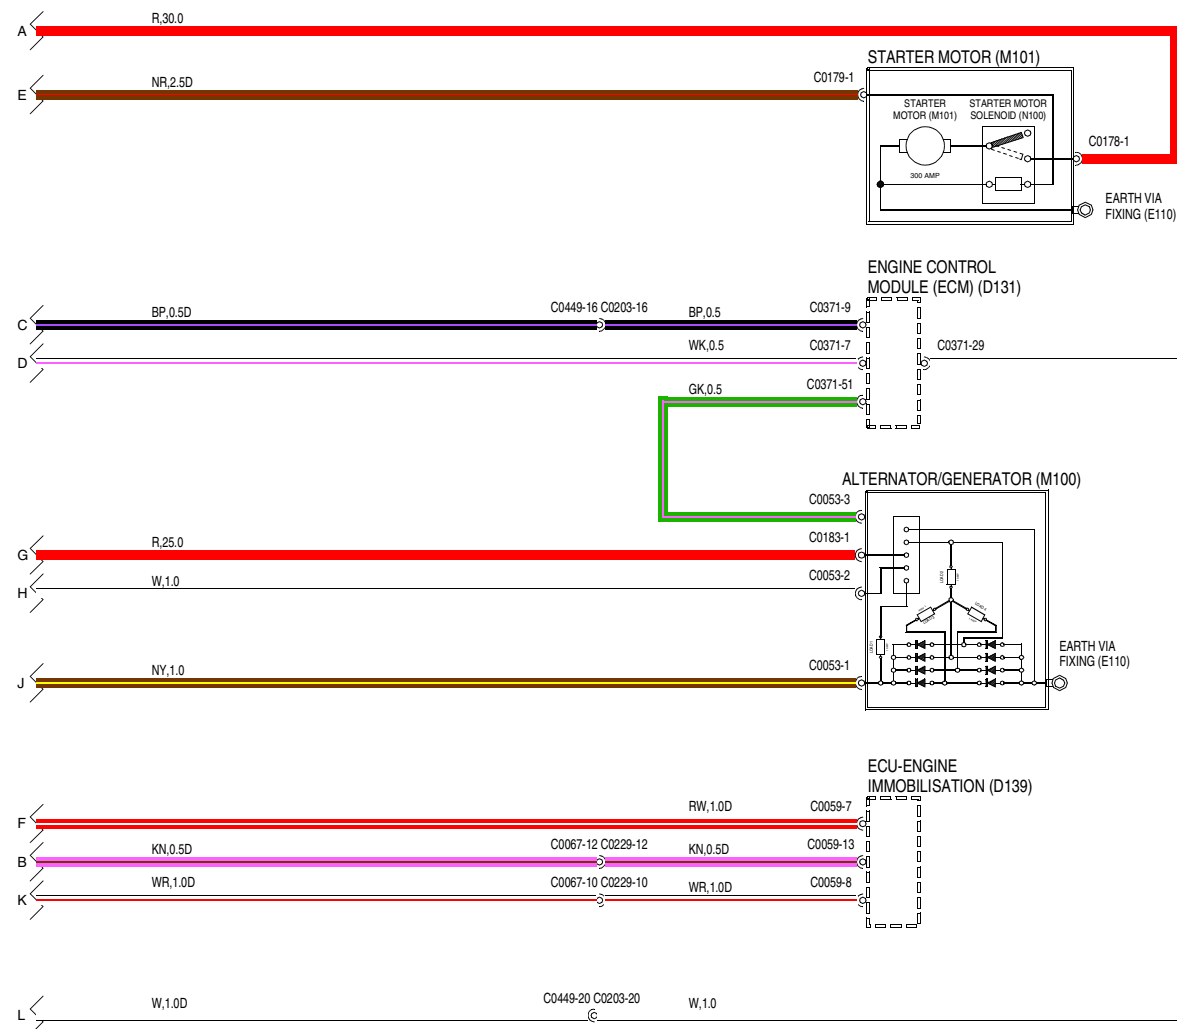


VWR004320-A-02

15 CHARGING AND STARTING

KV6 - NAS

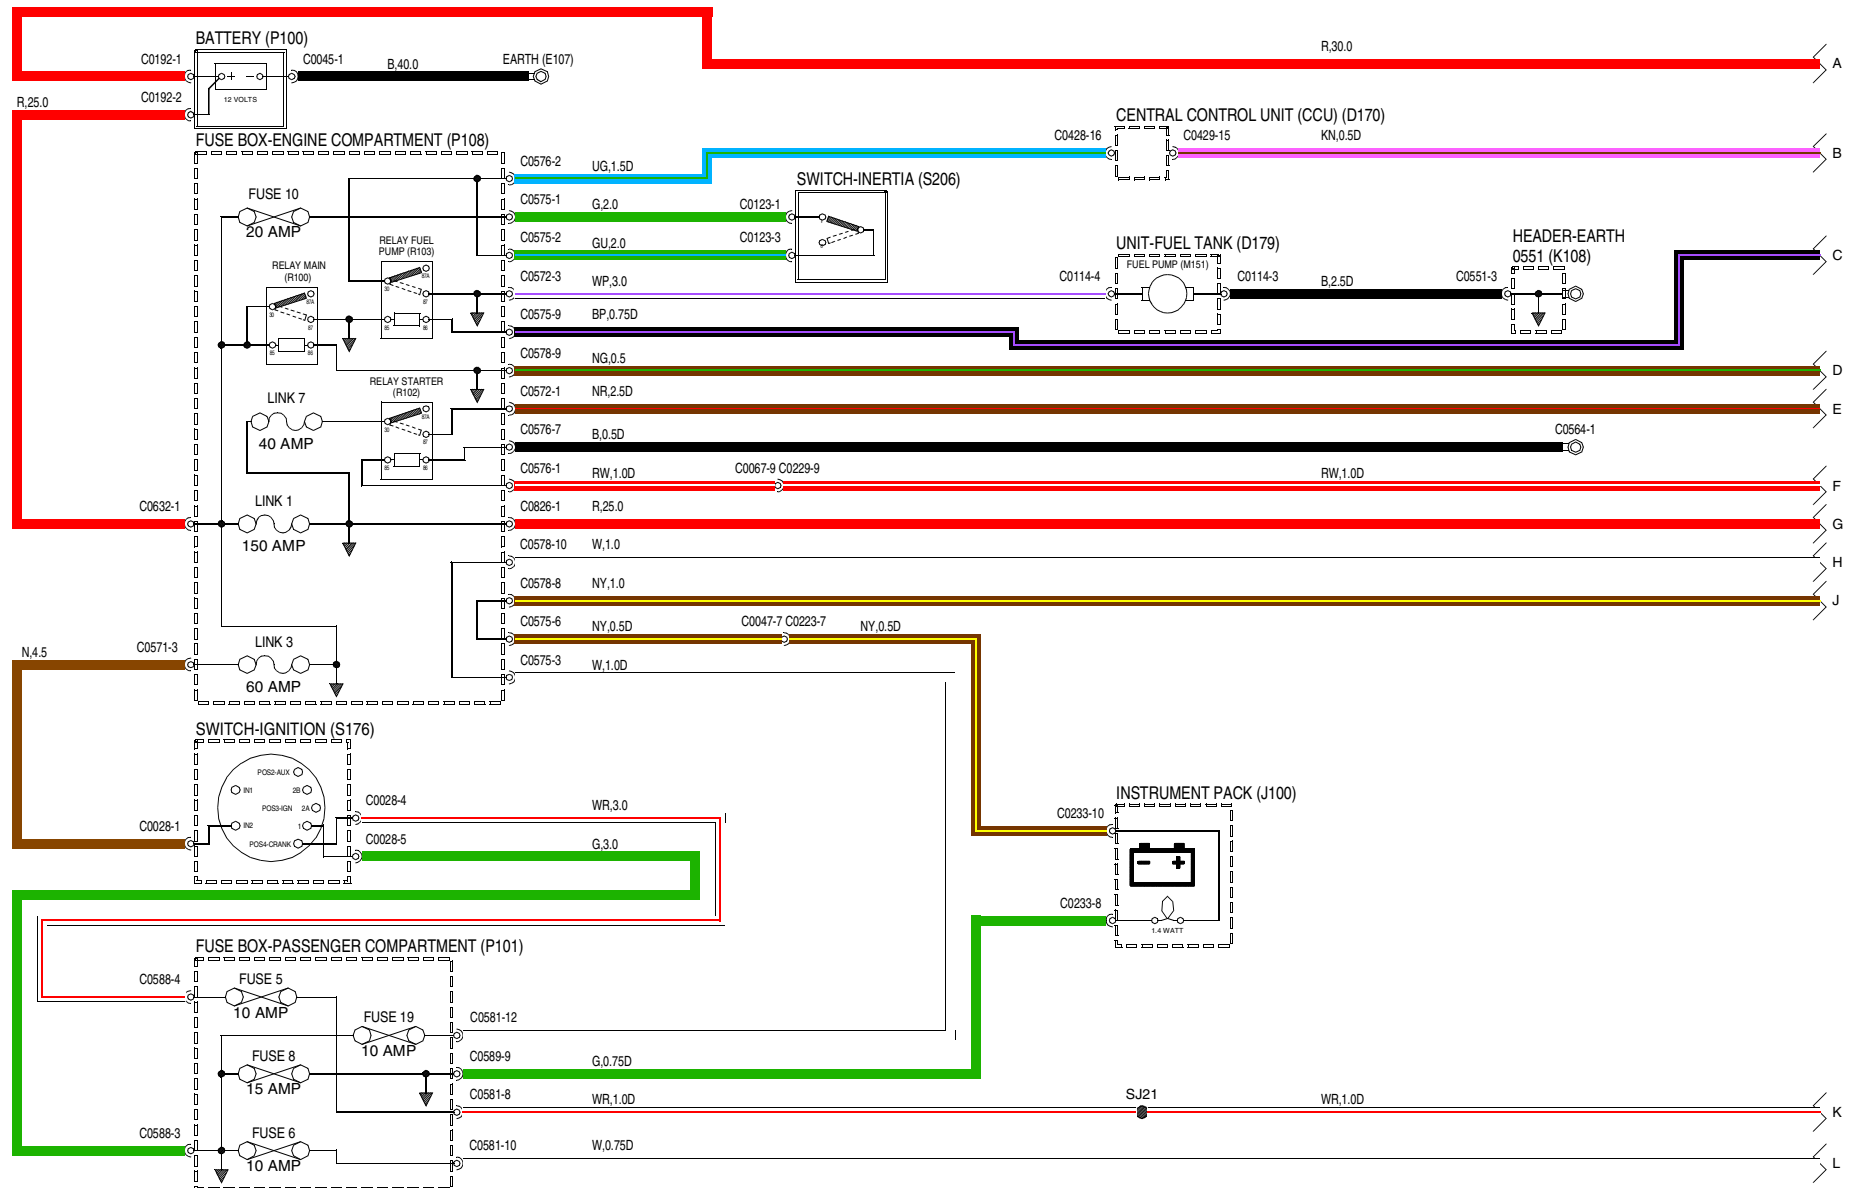


VWR004560-A-01

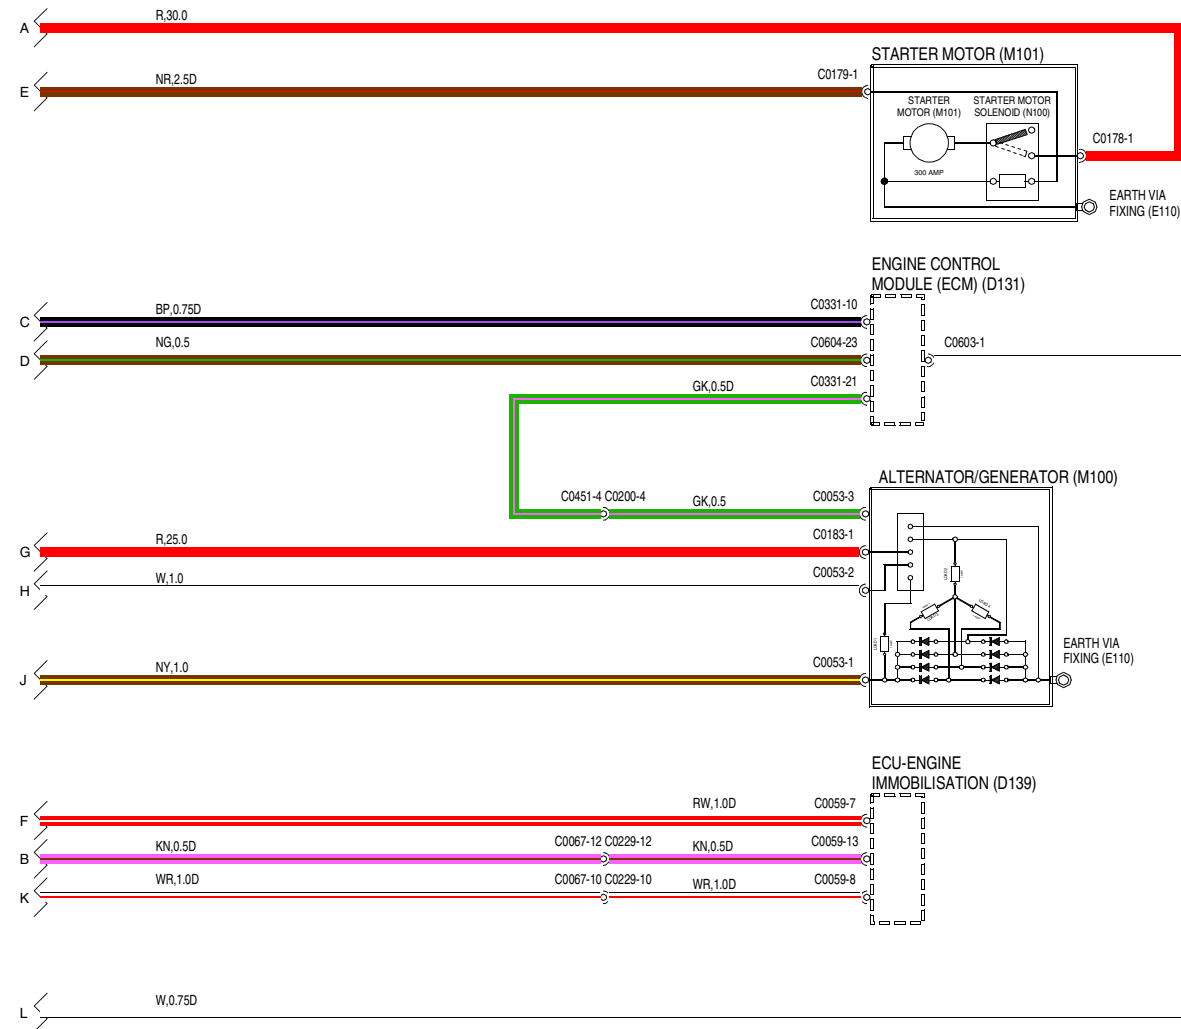


VWR004560-A-02

15 CHARGING AND STARTING

Td4

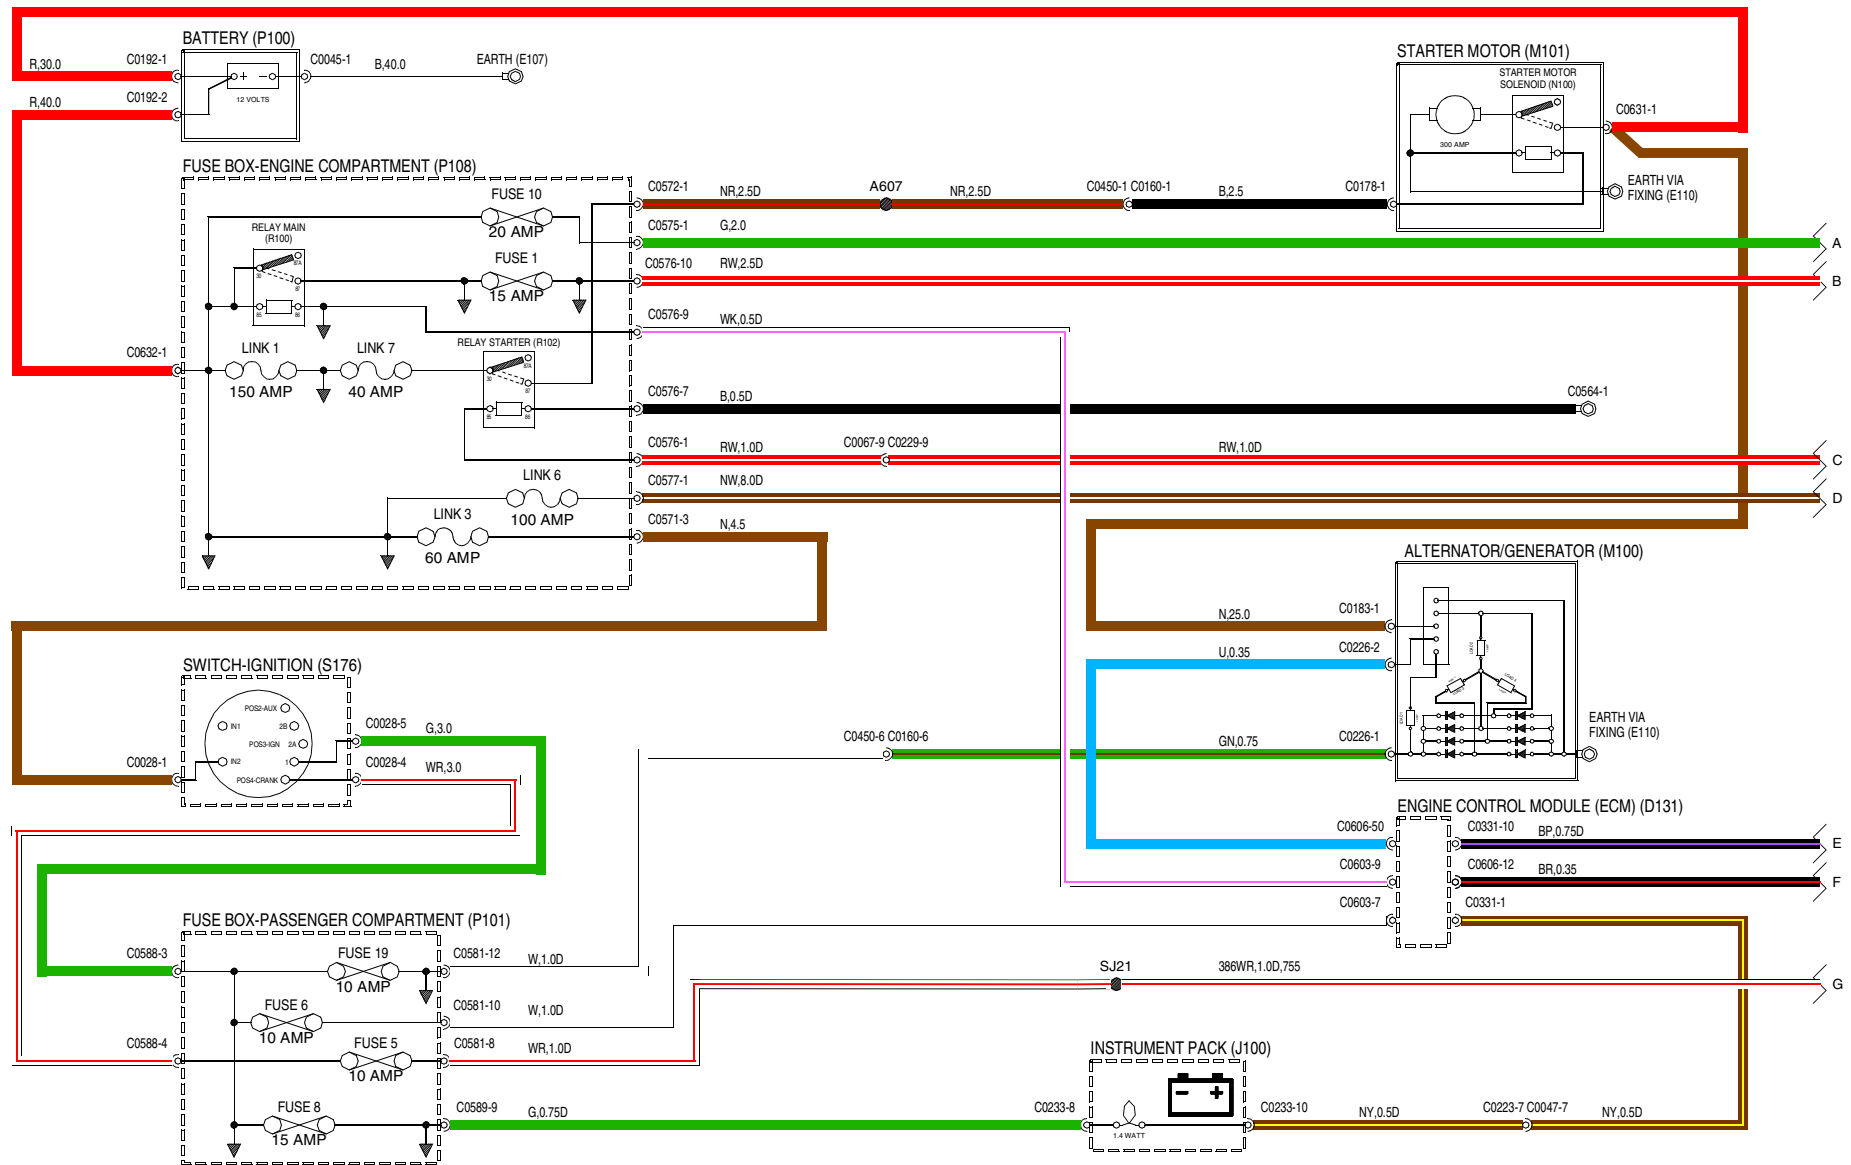


VWR004330-A-01

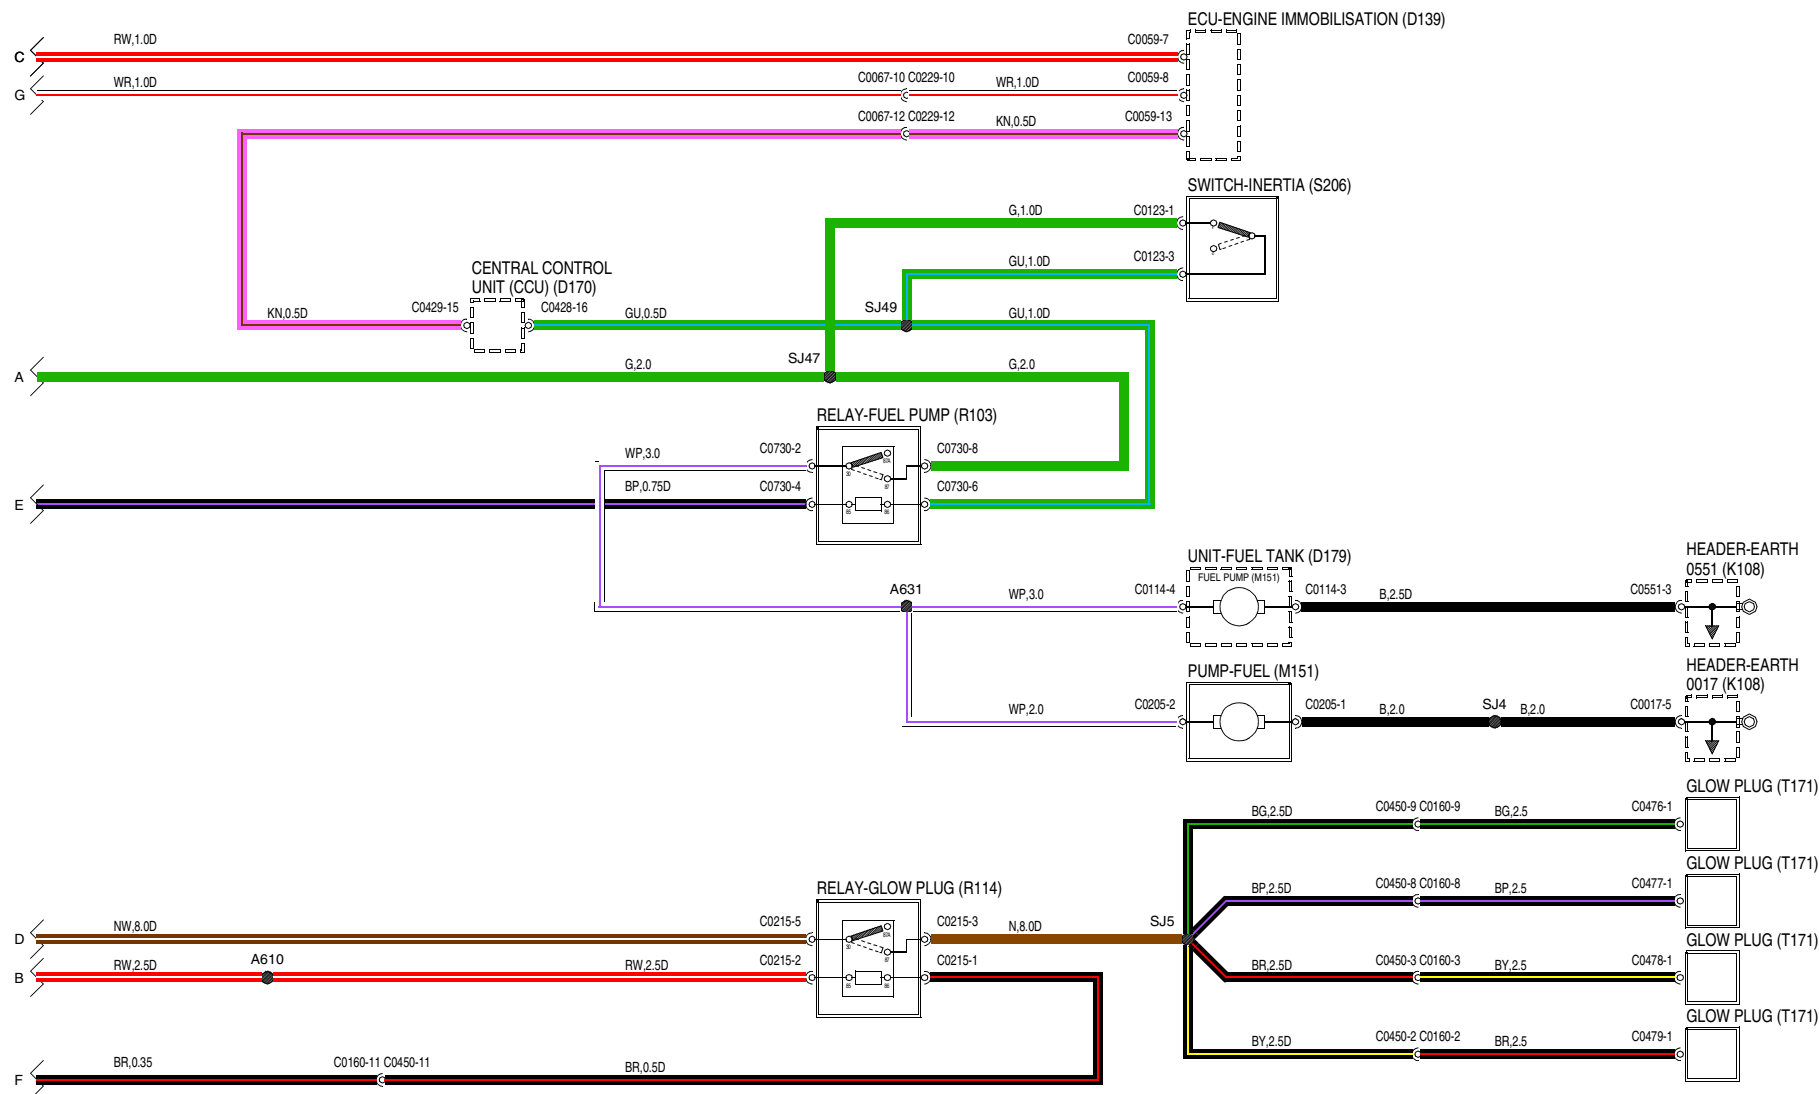


VWR004330-A-02




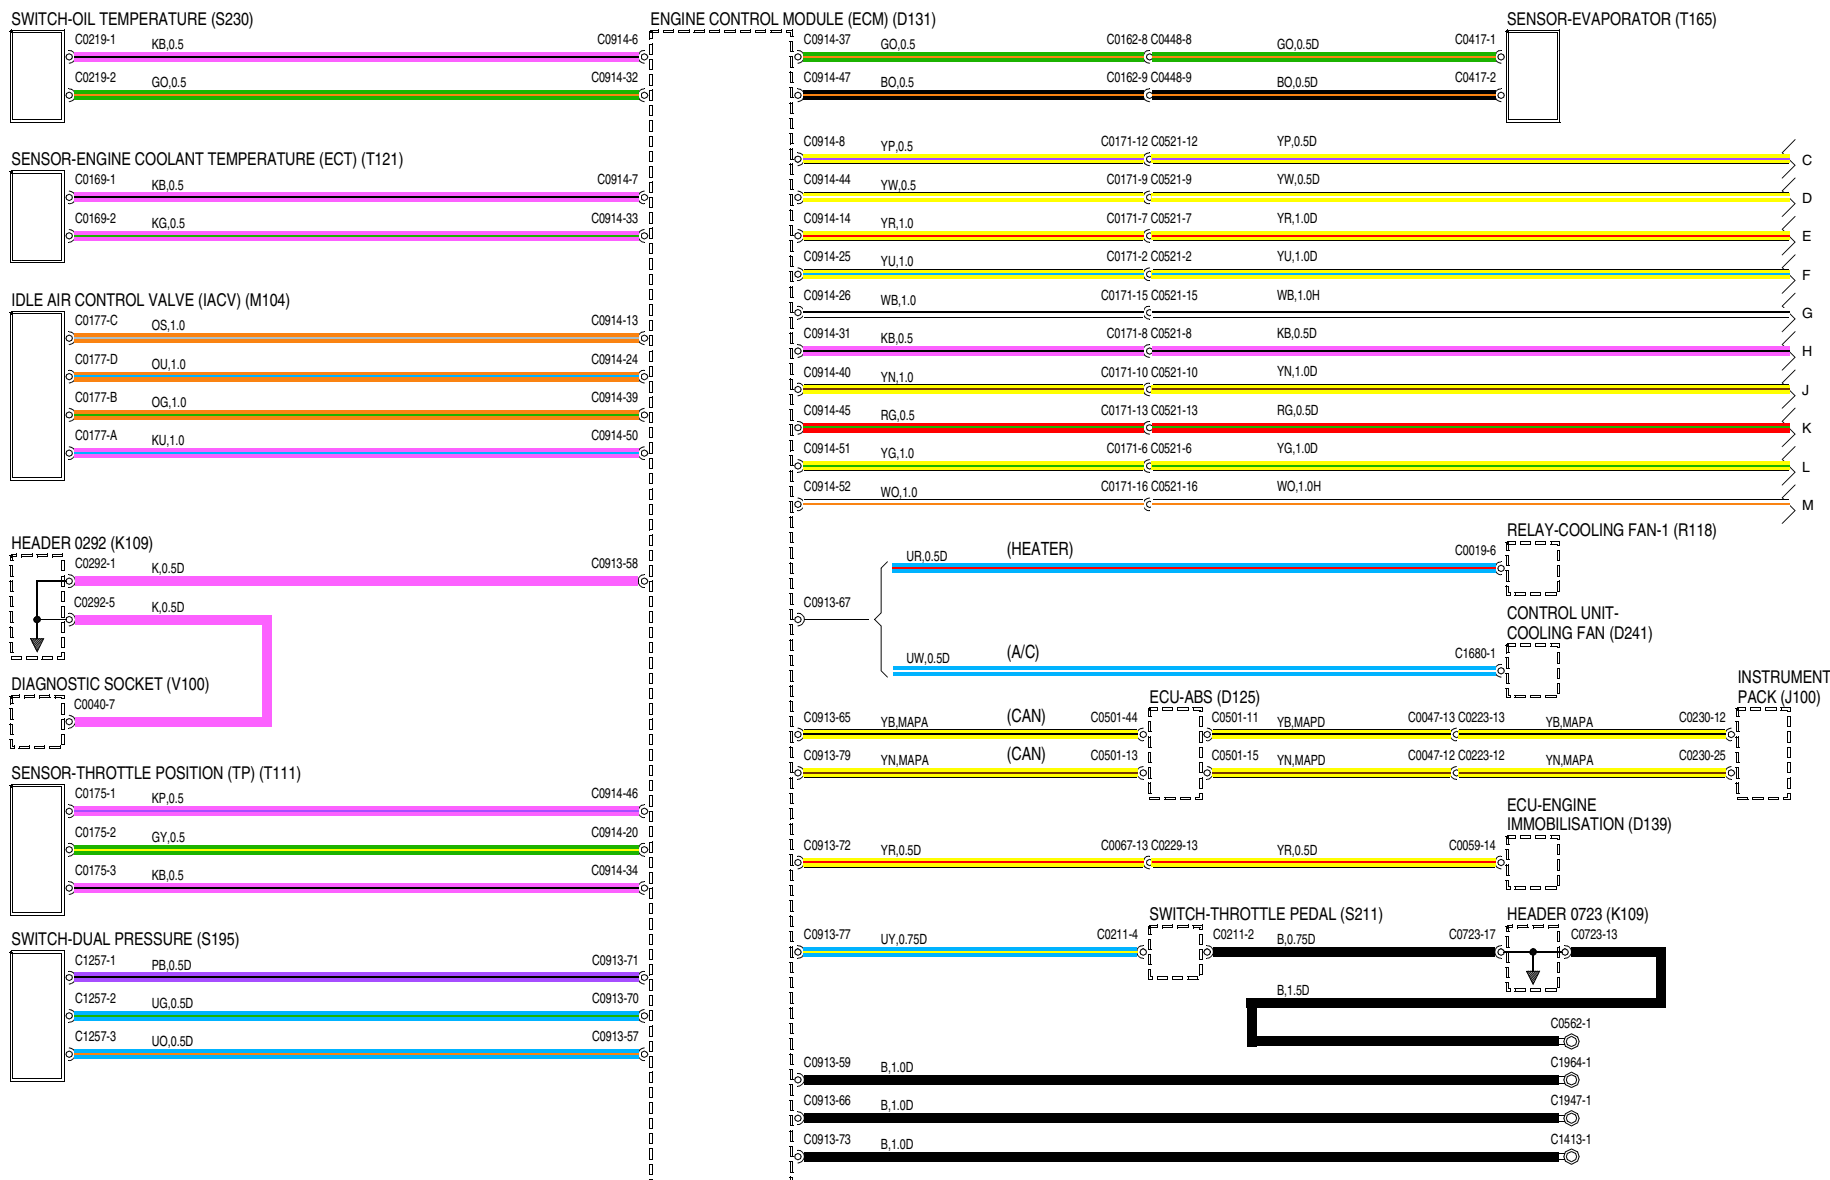

VWR004070-A-02

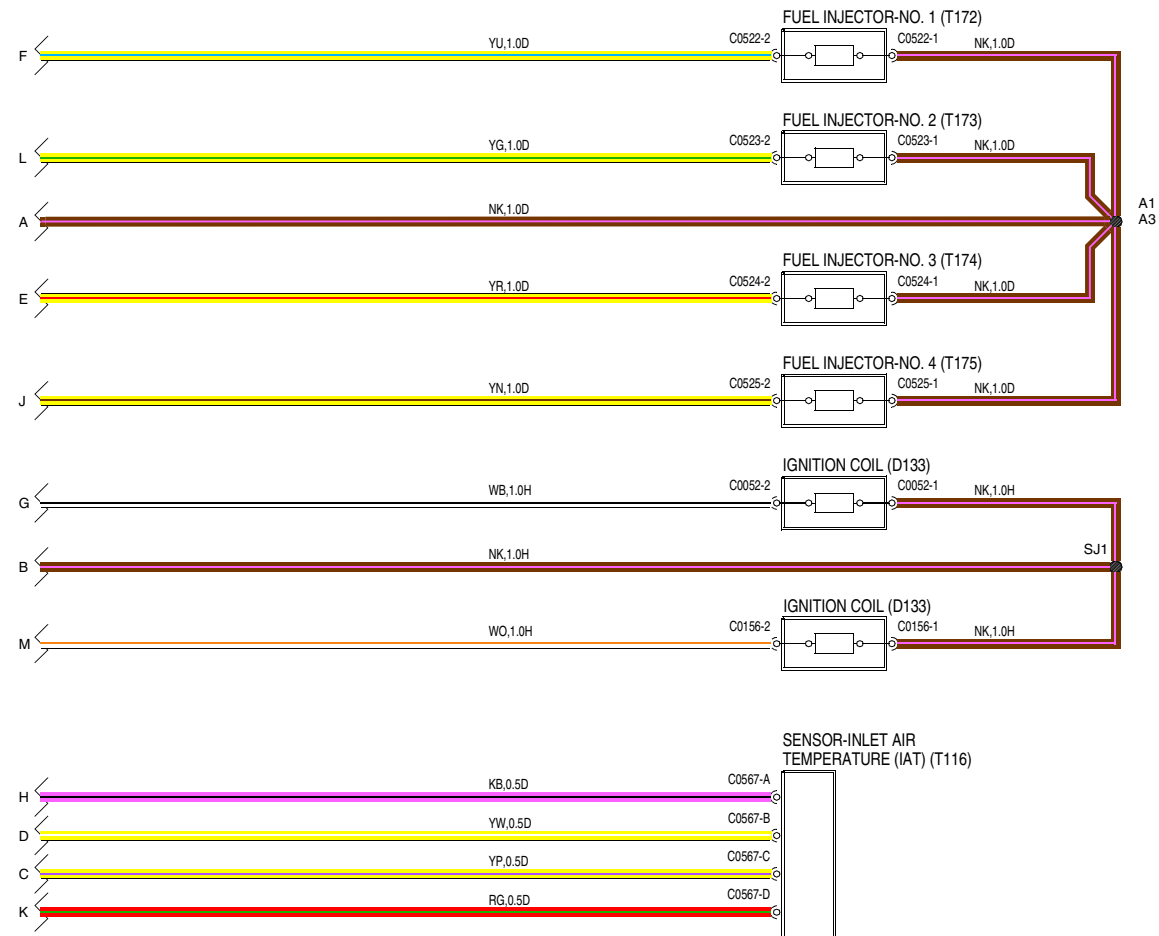


VWR004070-A-03

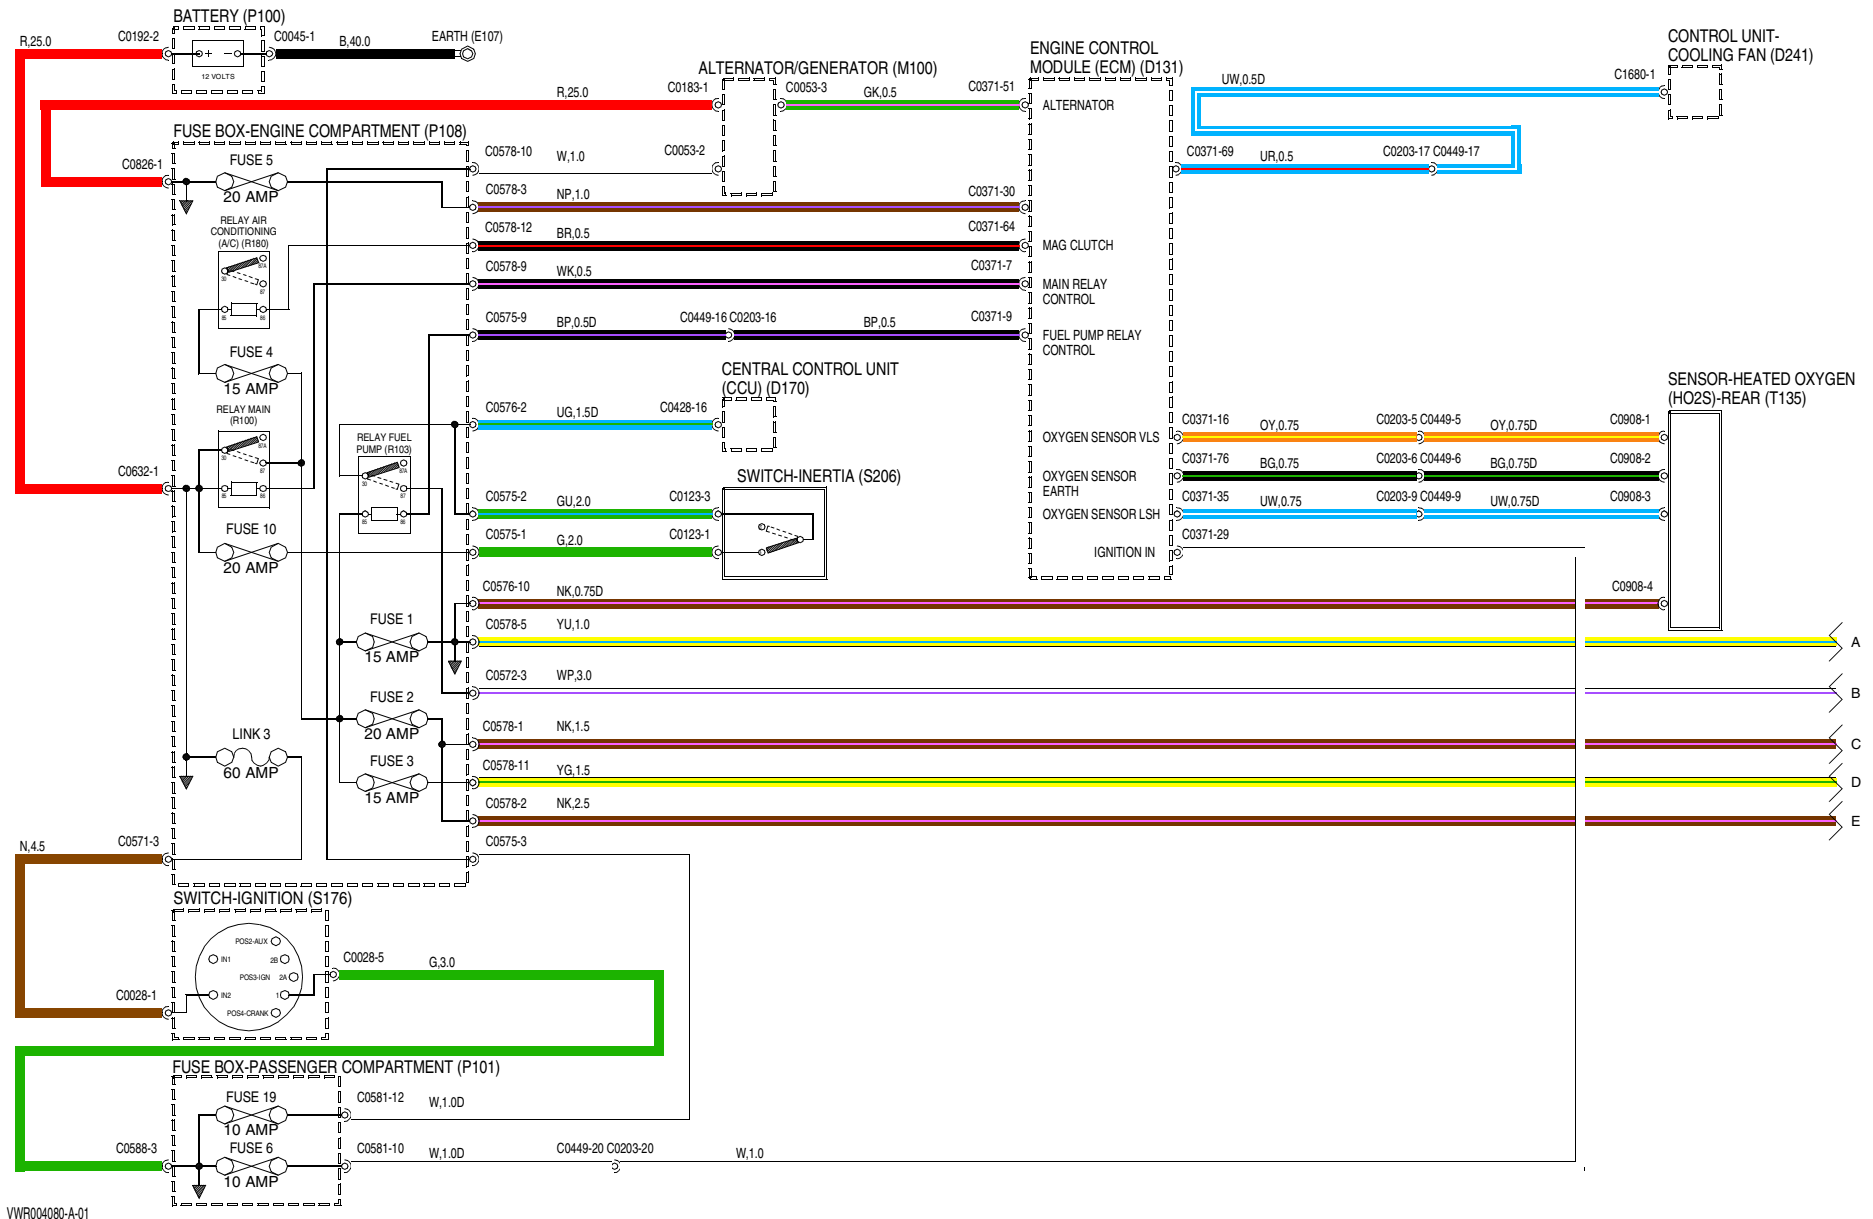



VWR004080-A-01



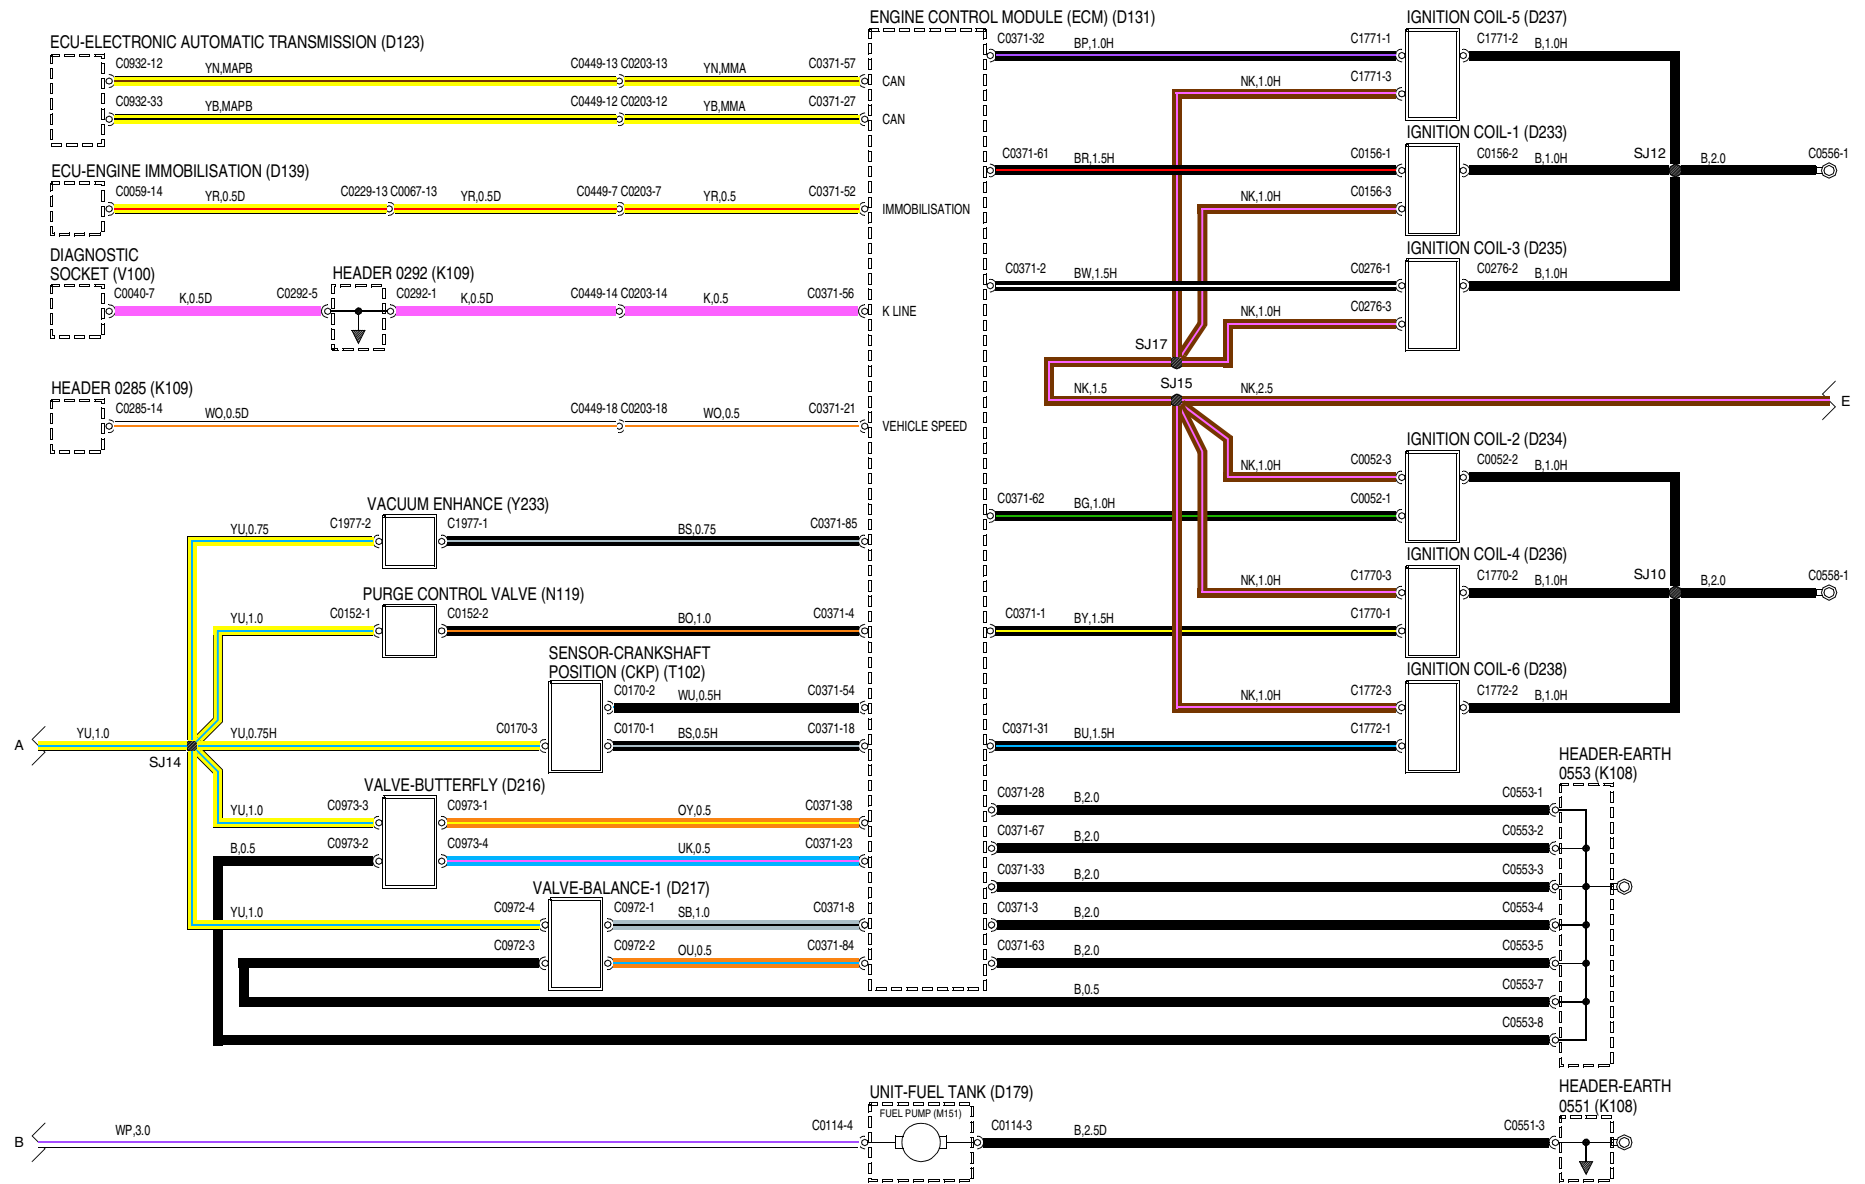



VWR004080-A-03

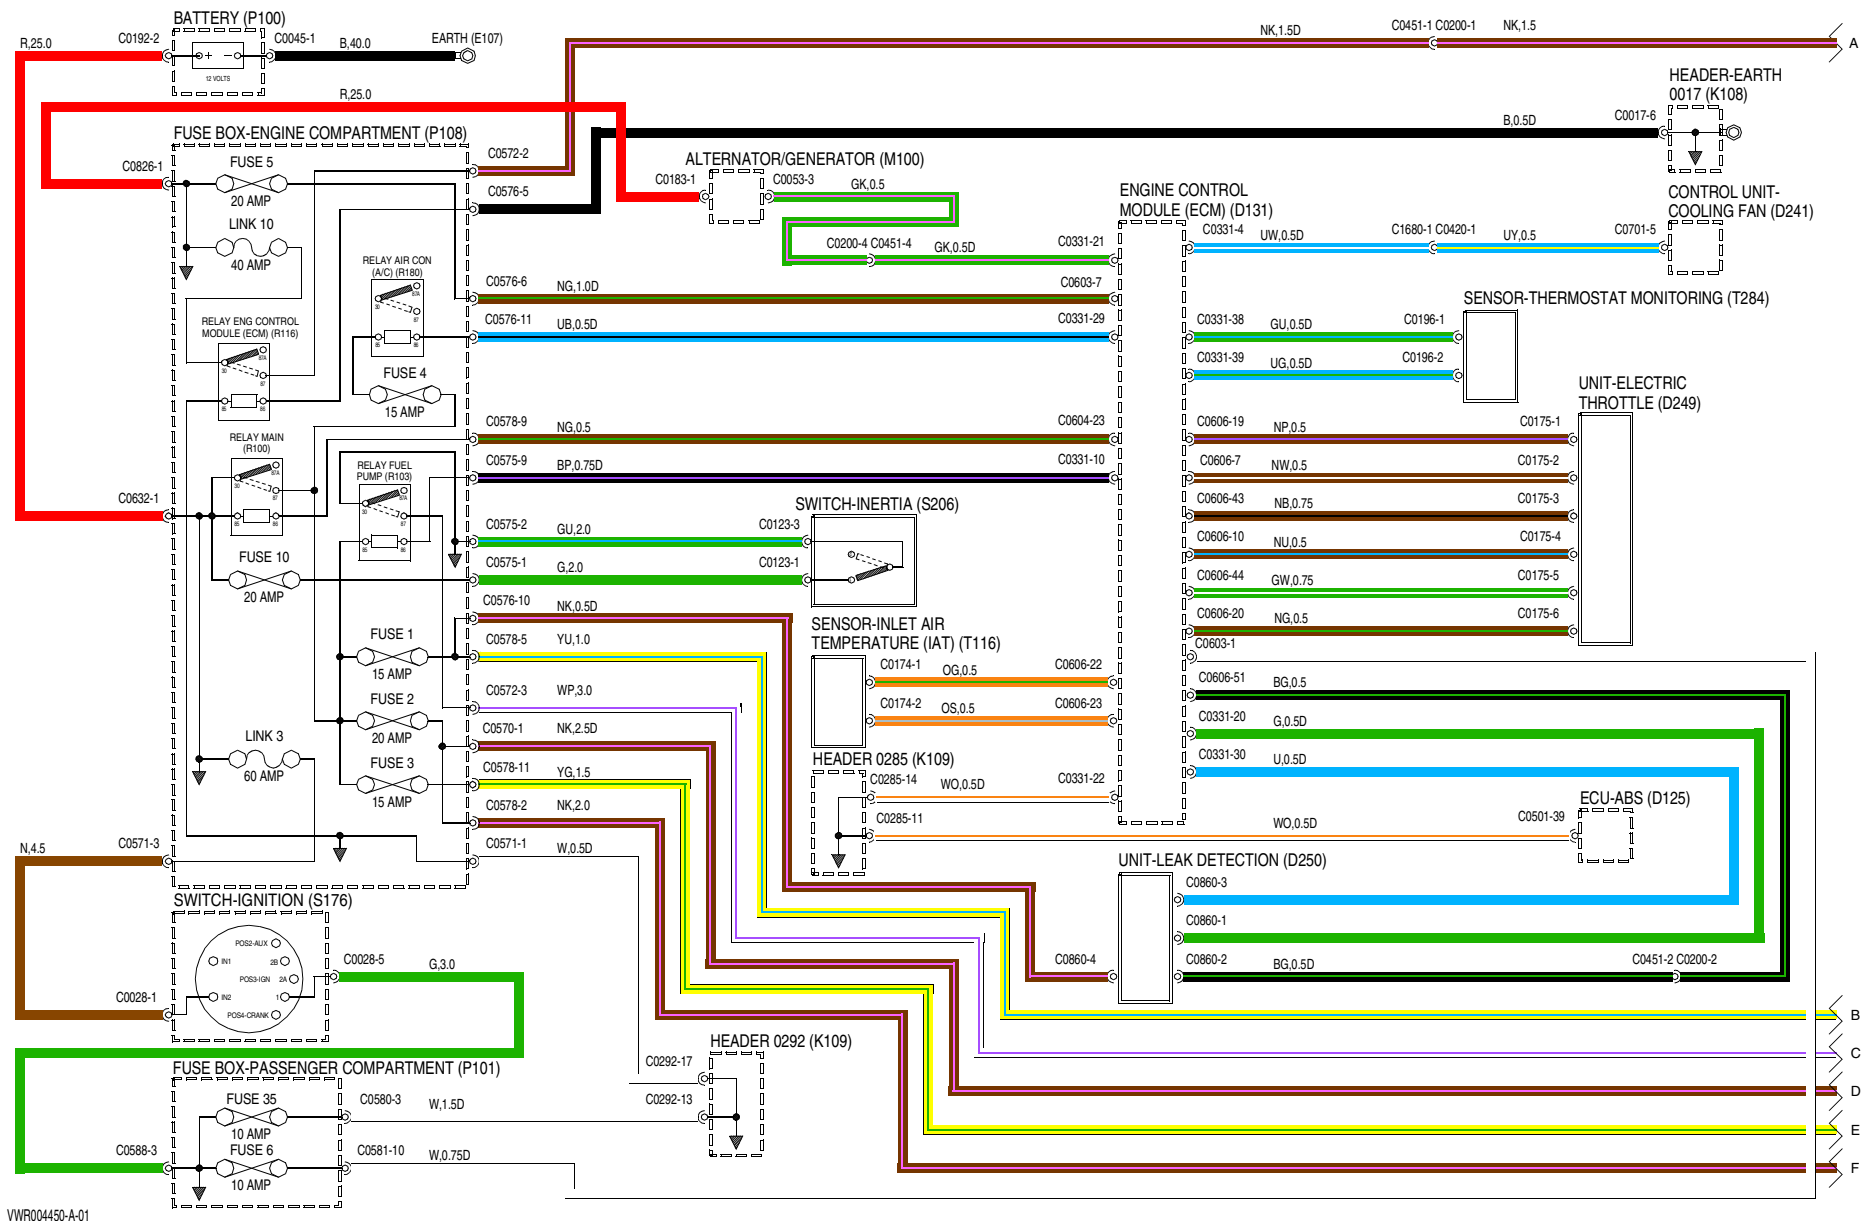

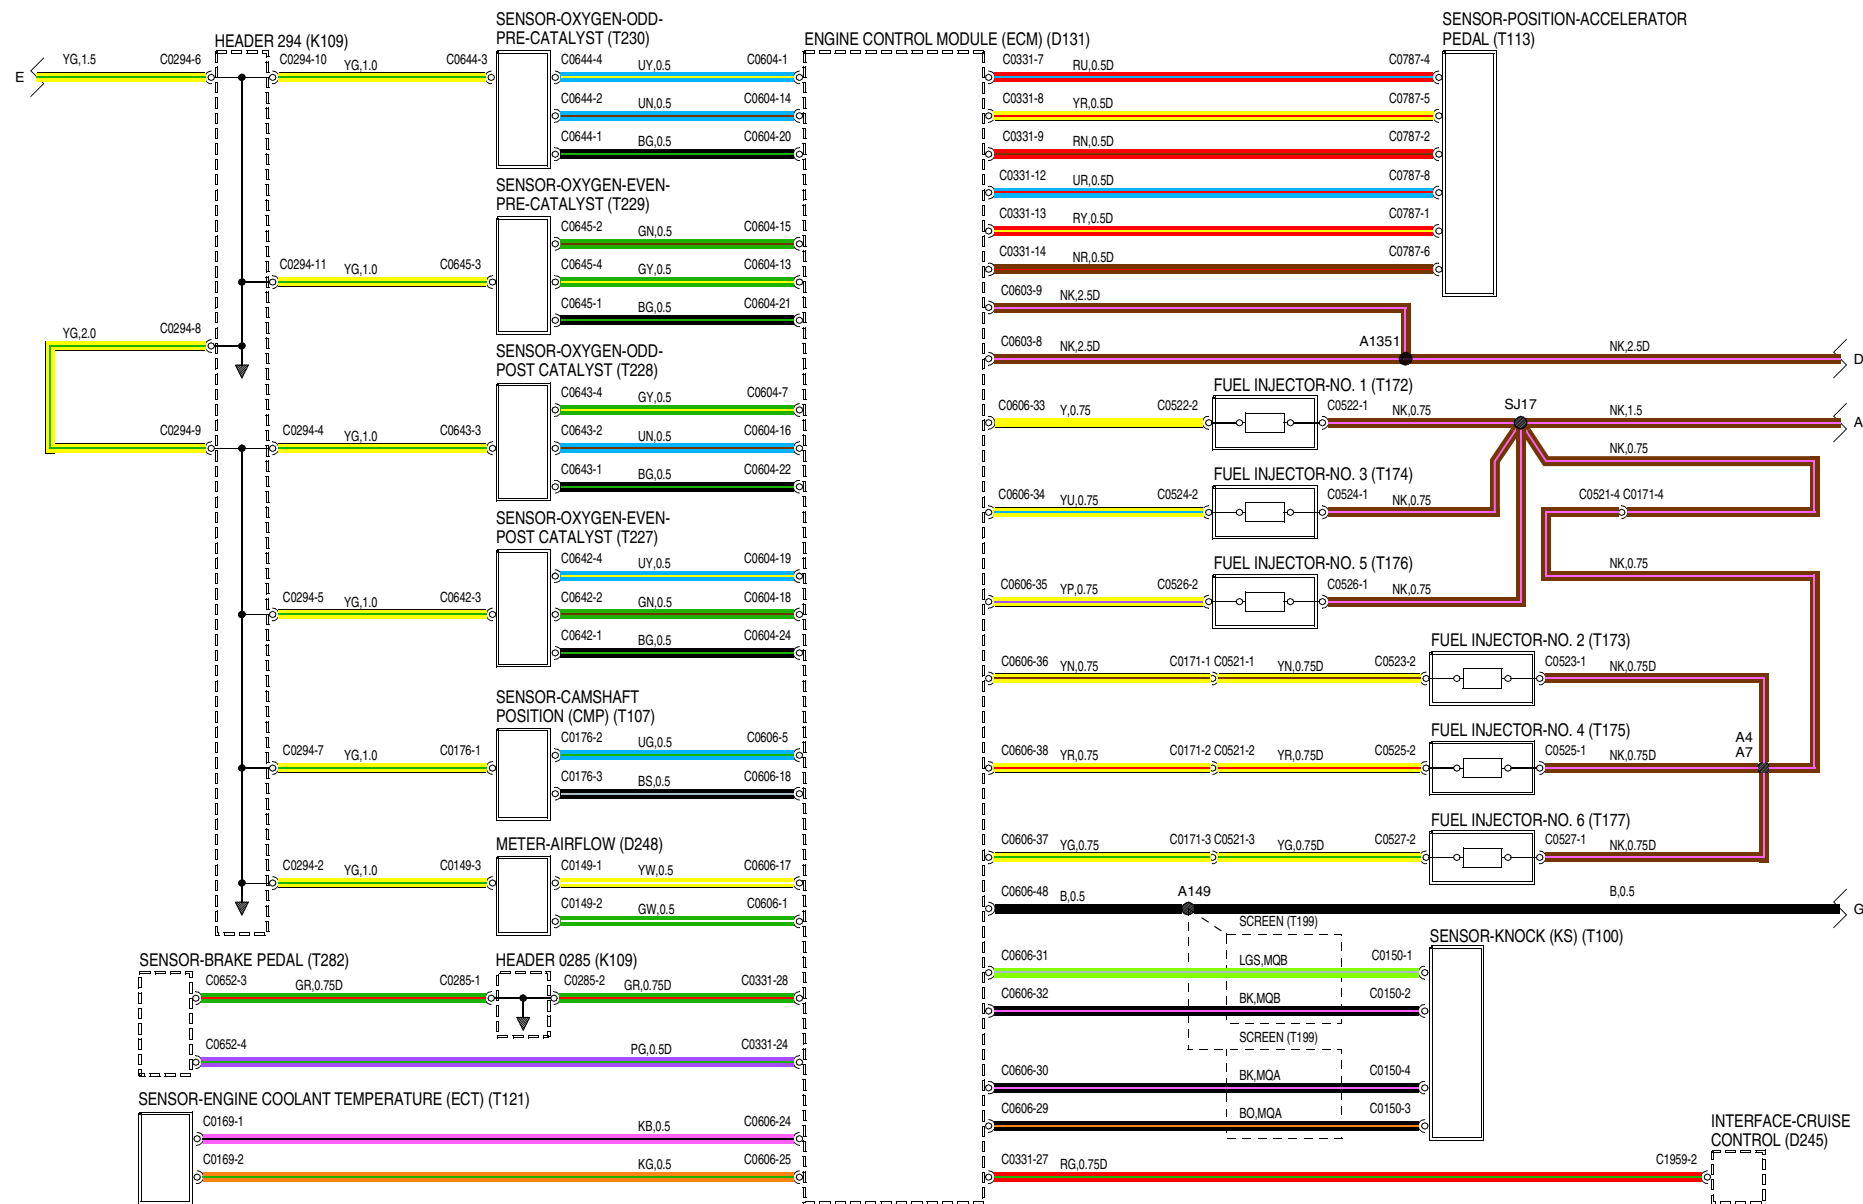



VWR004450-A-02

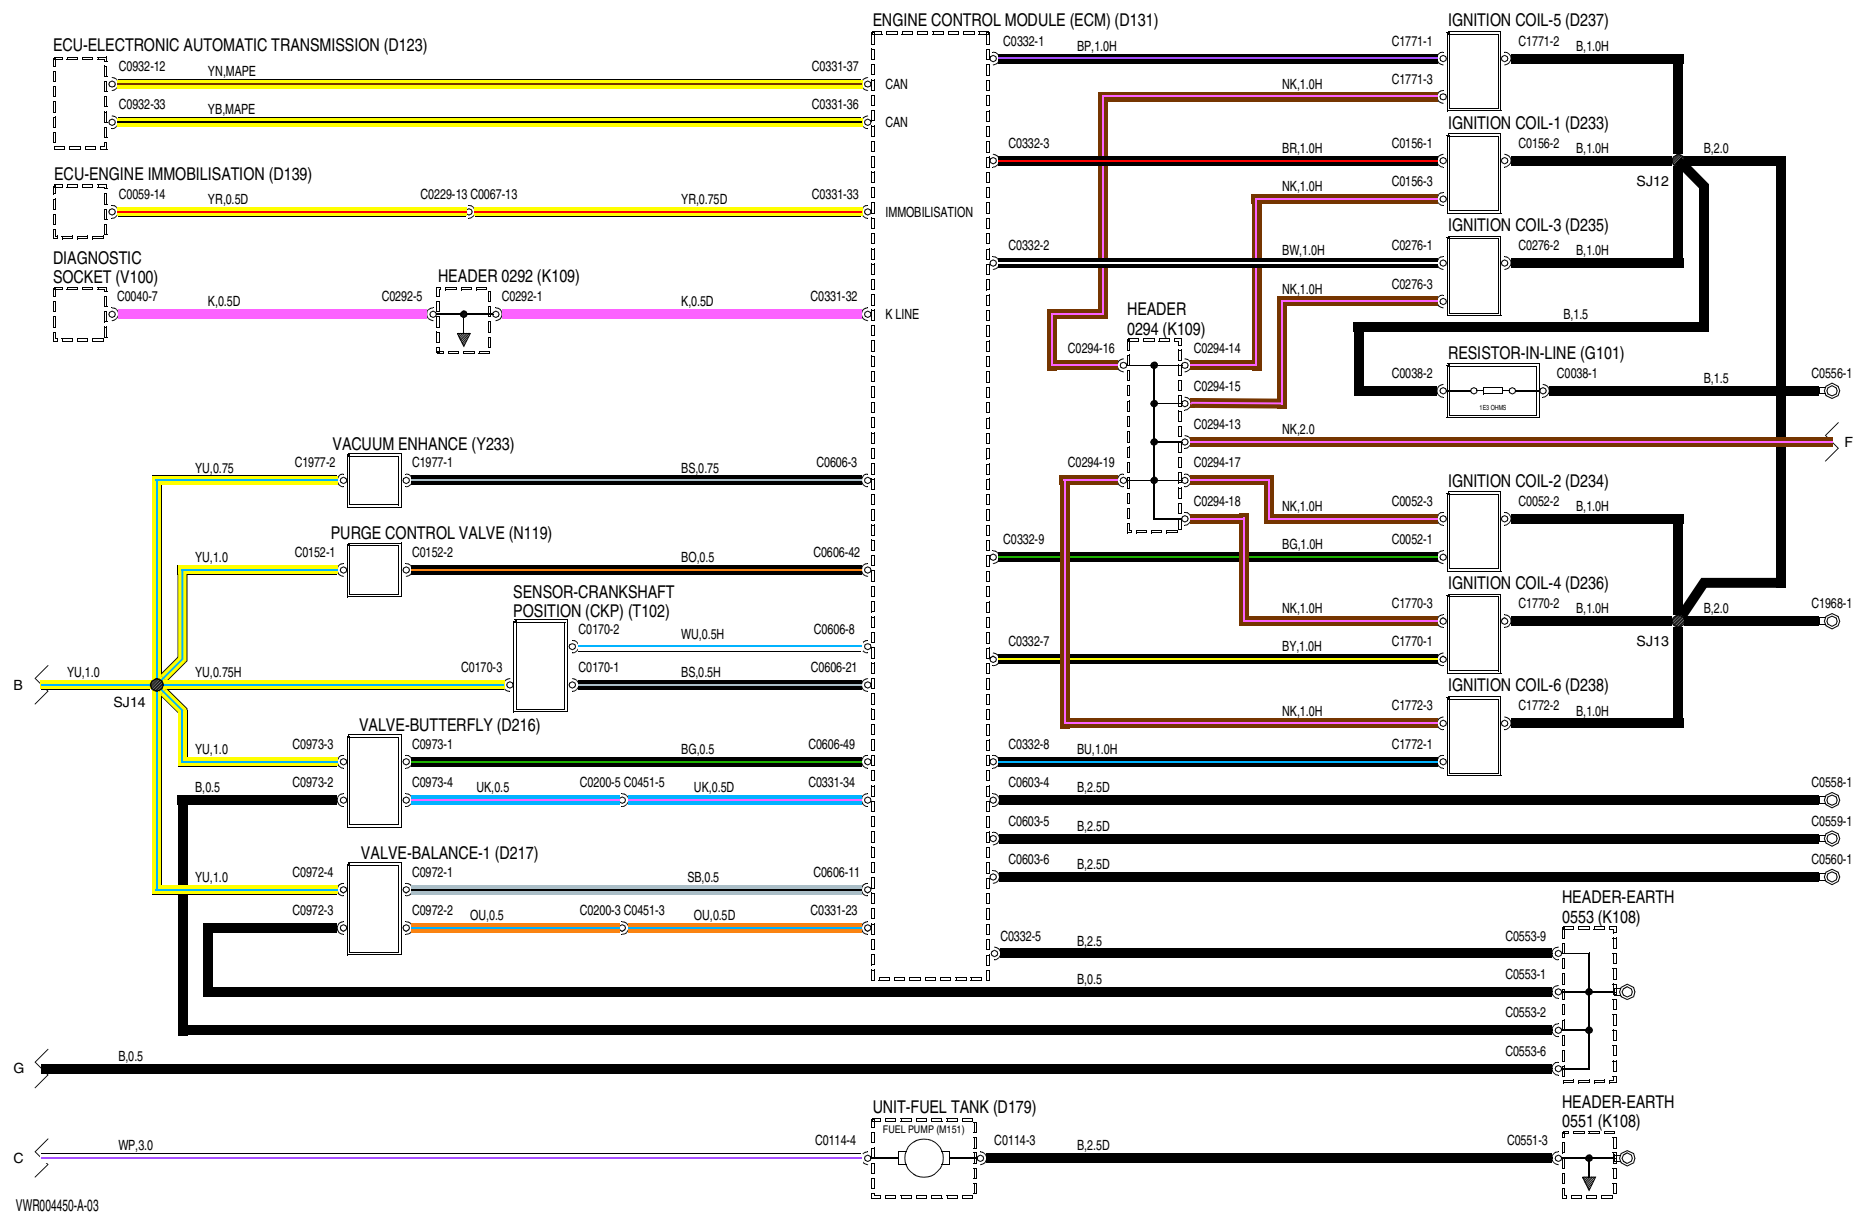

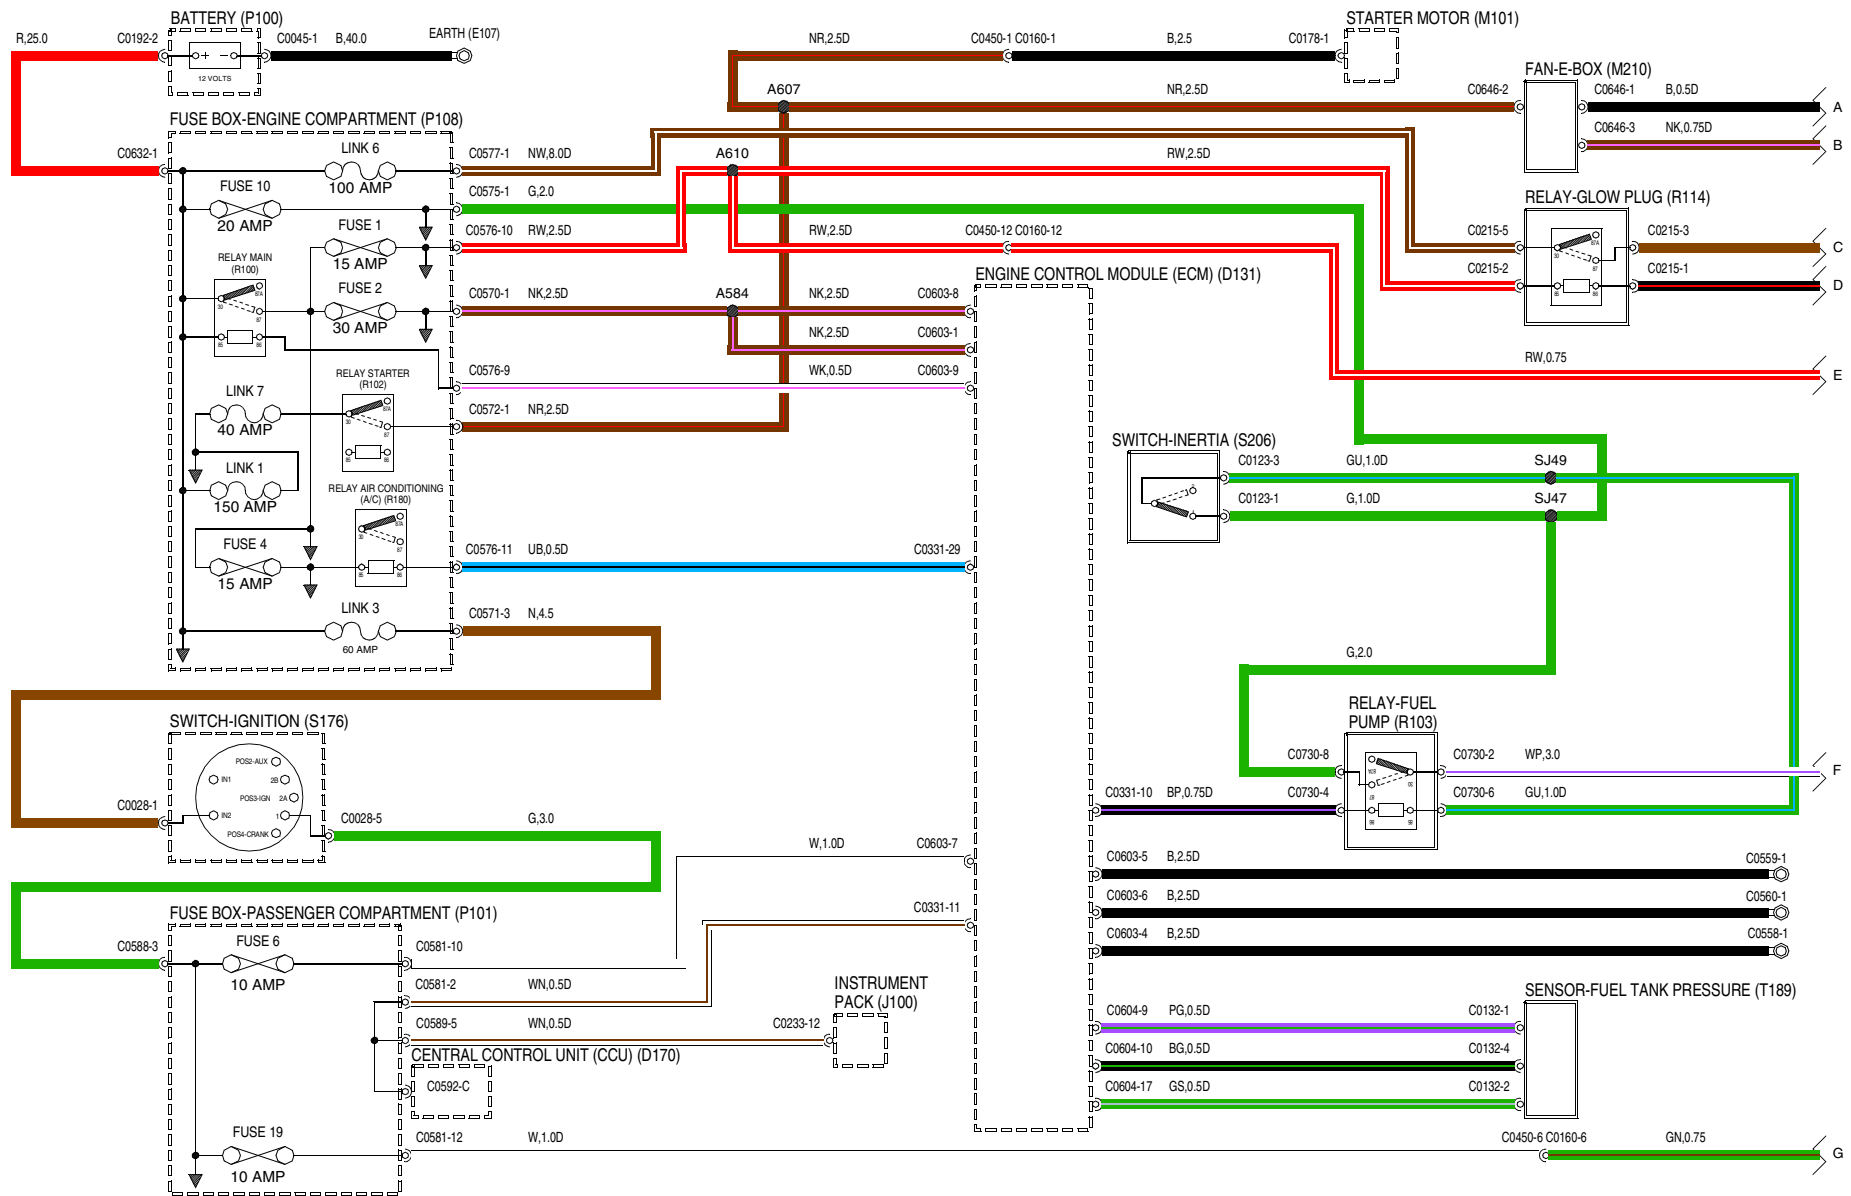

VWR004090-A-01

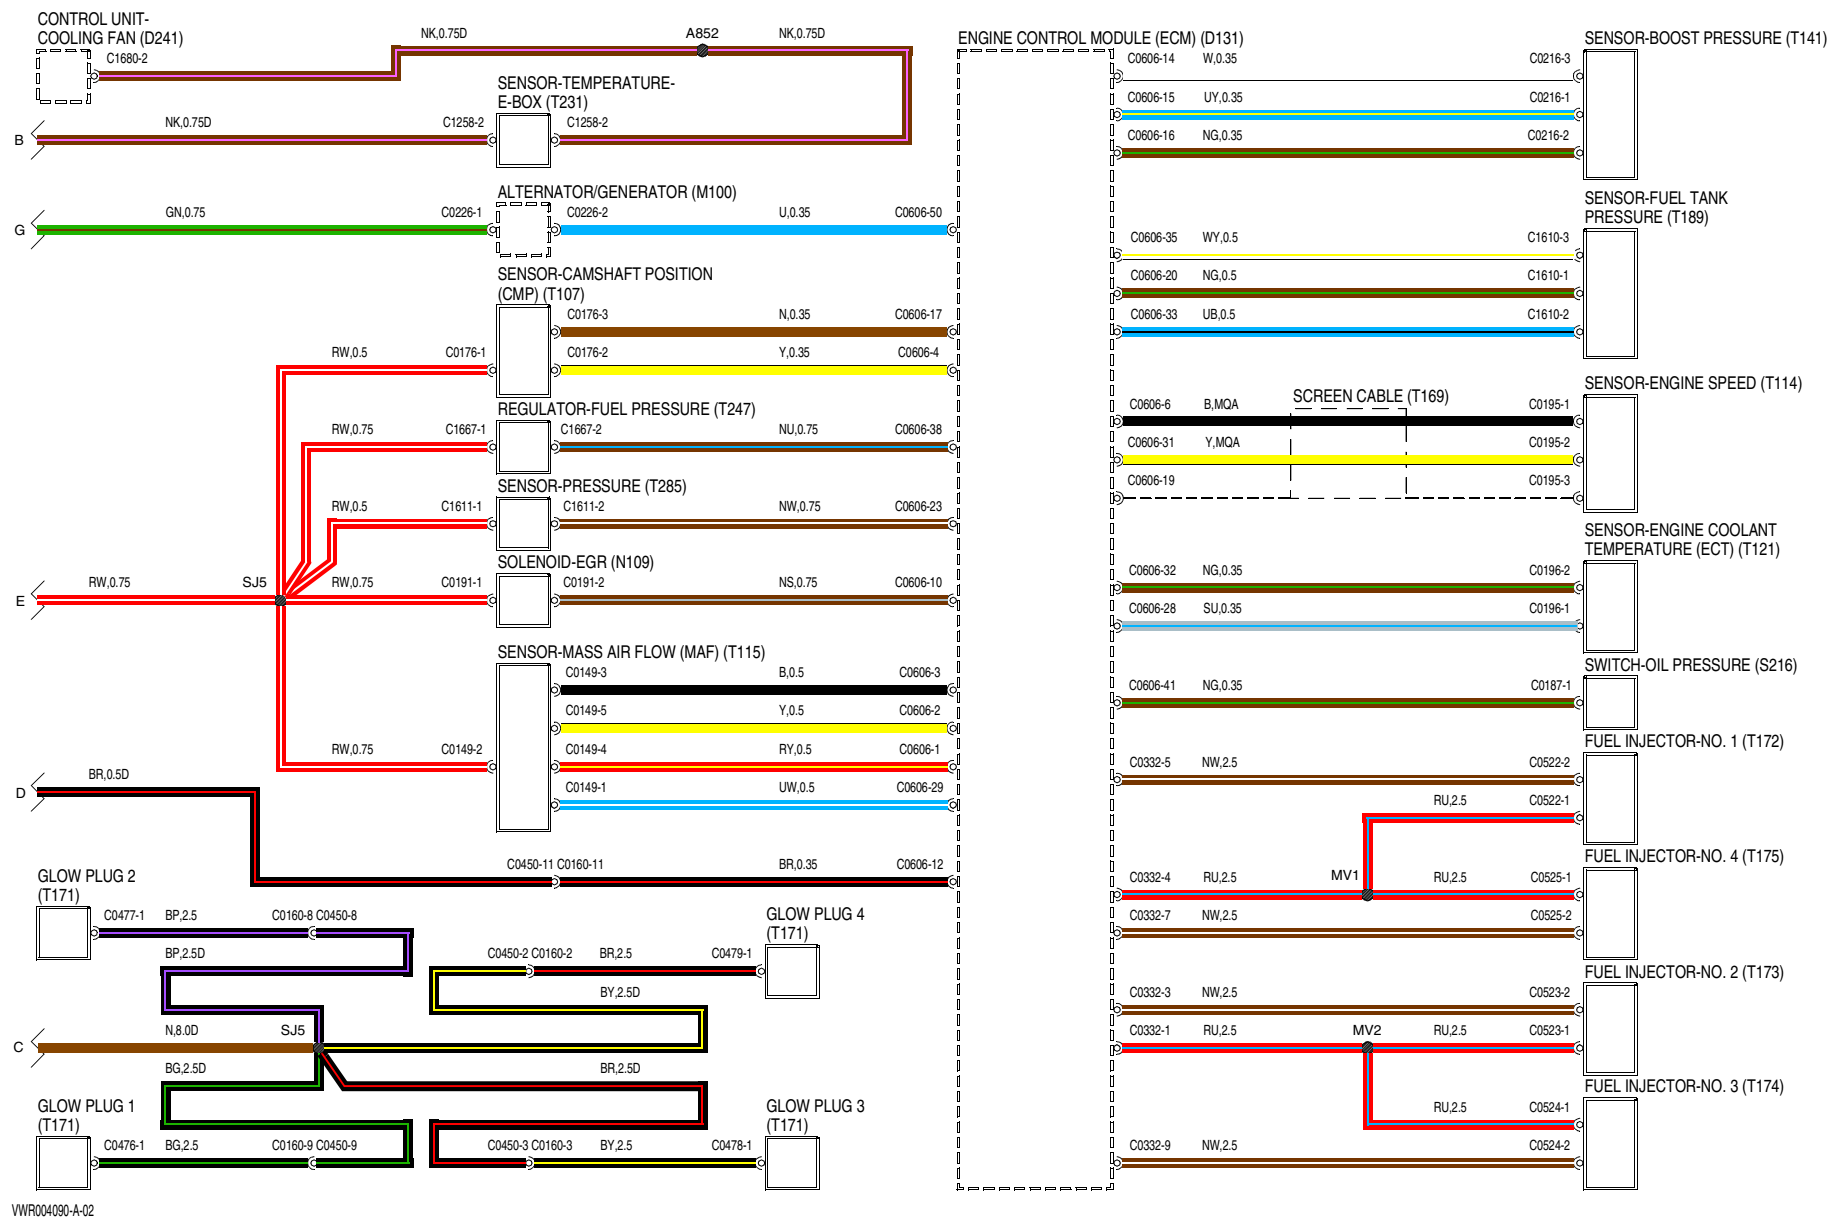

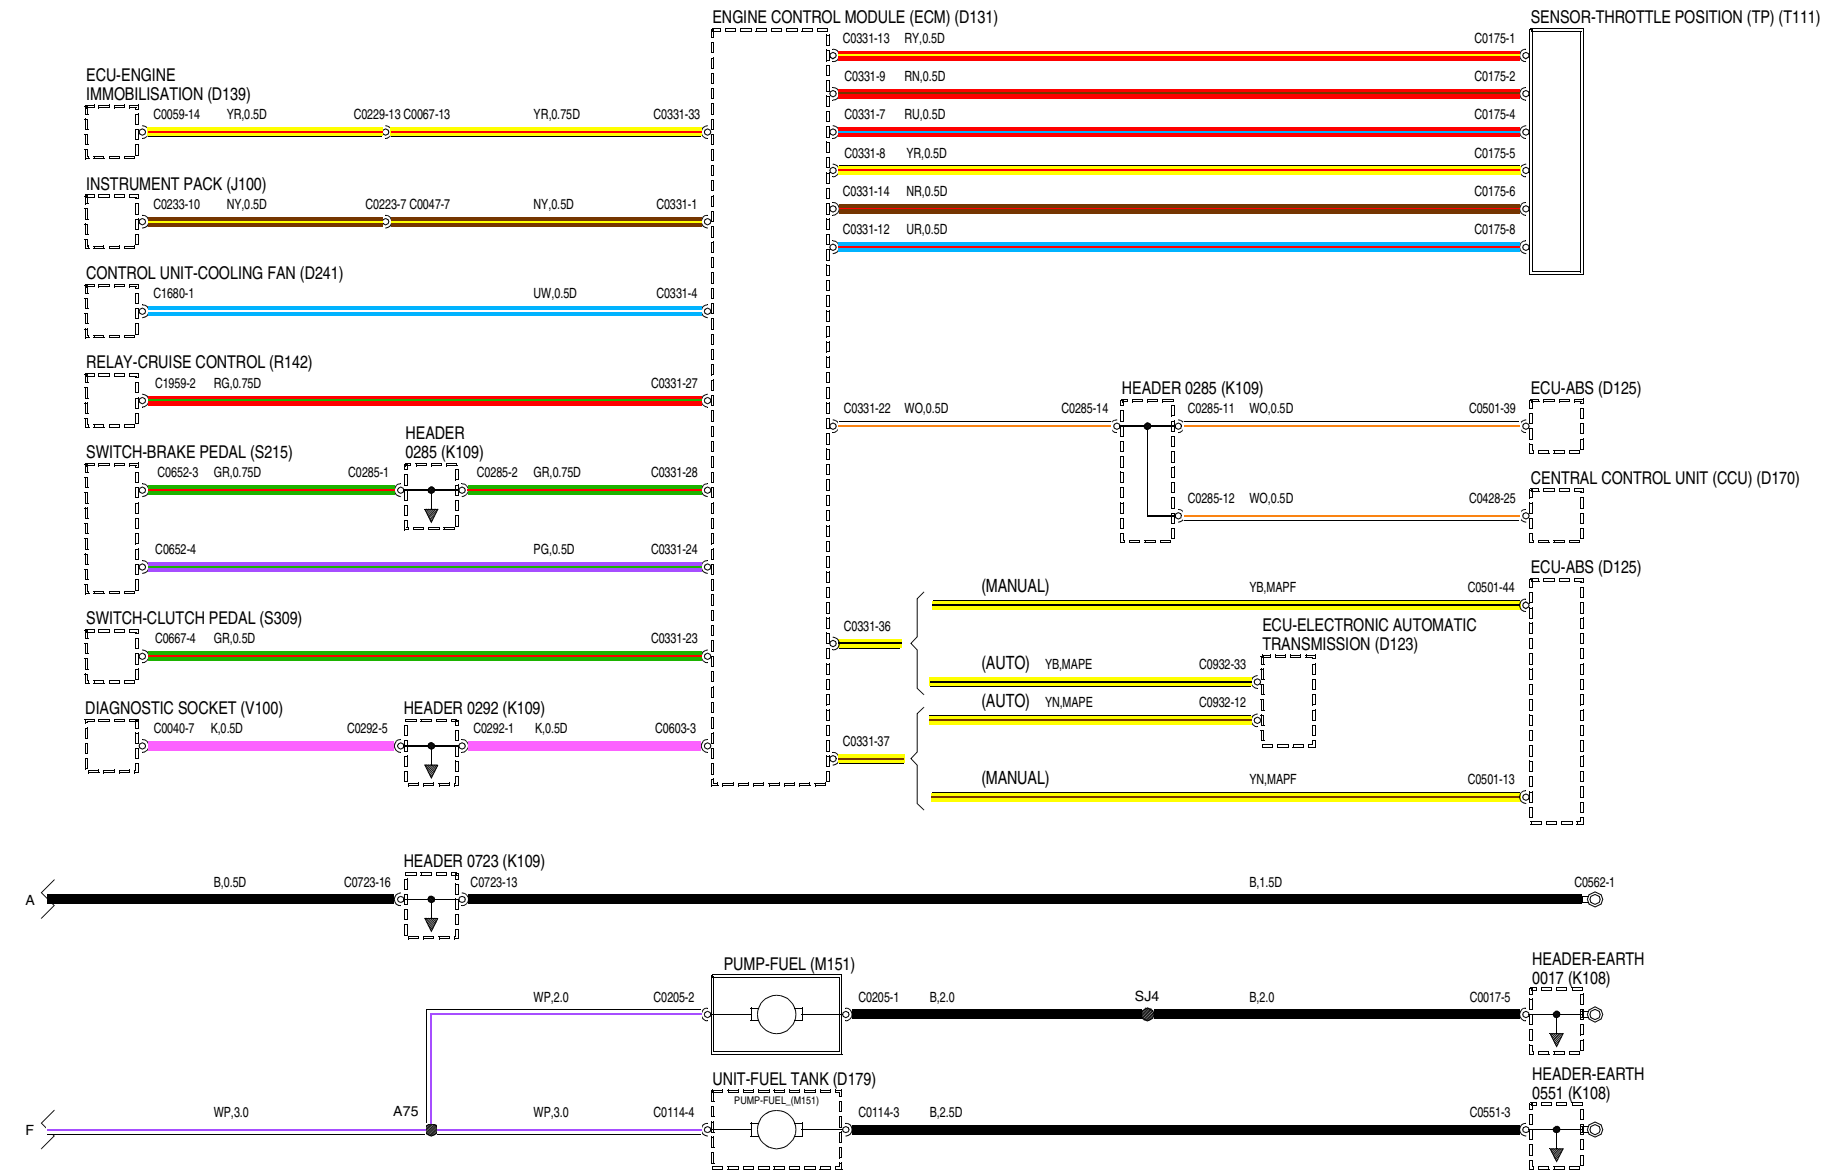

VWR004090-A-03


20 FUEL PUMP






VWR004120-A-02


22 COOLING FANS

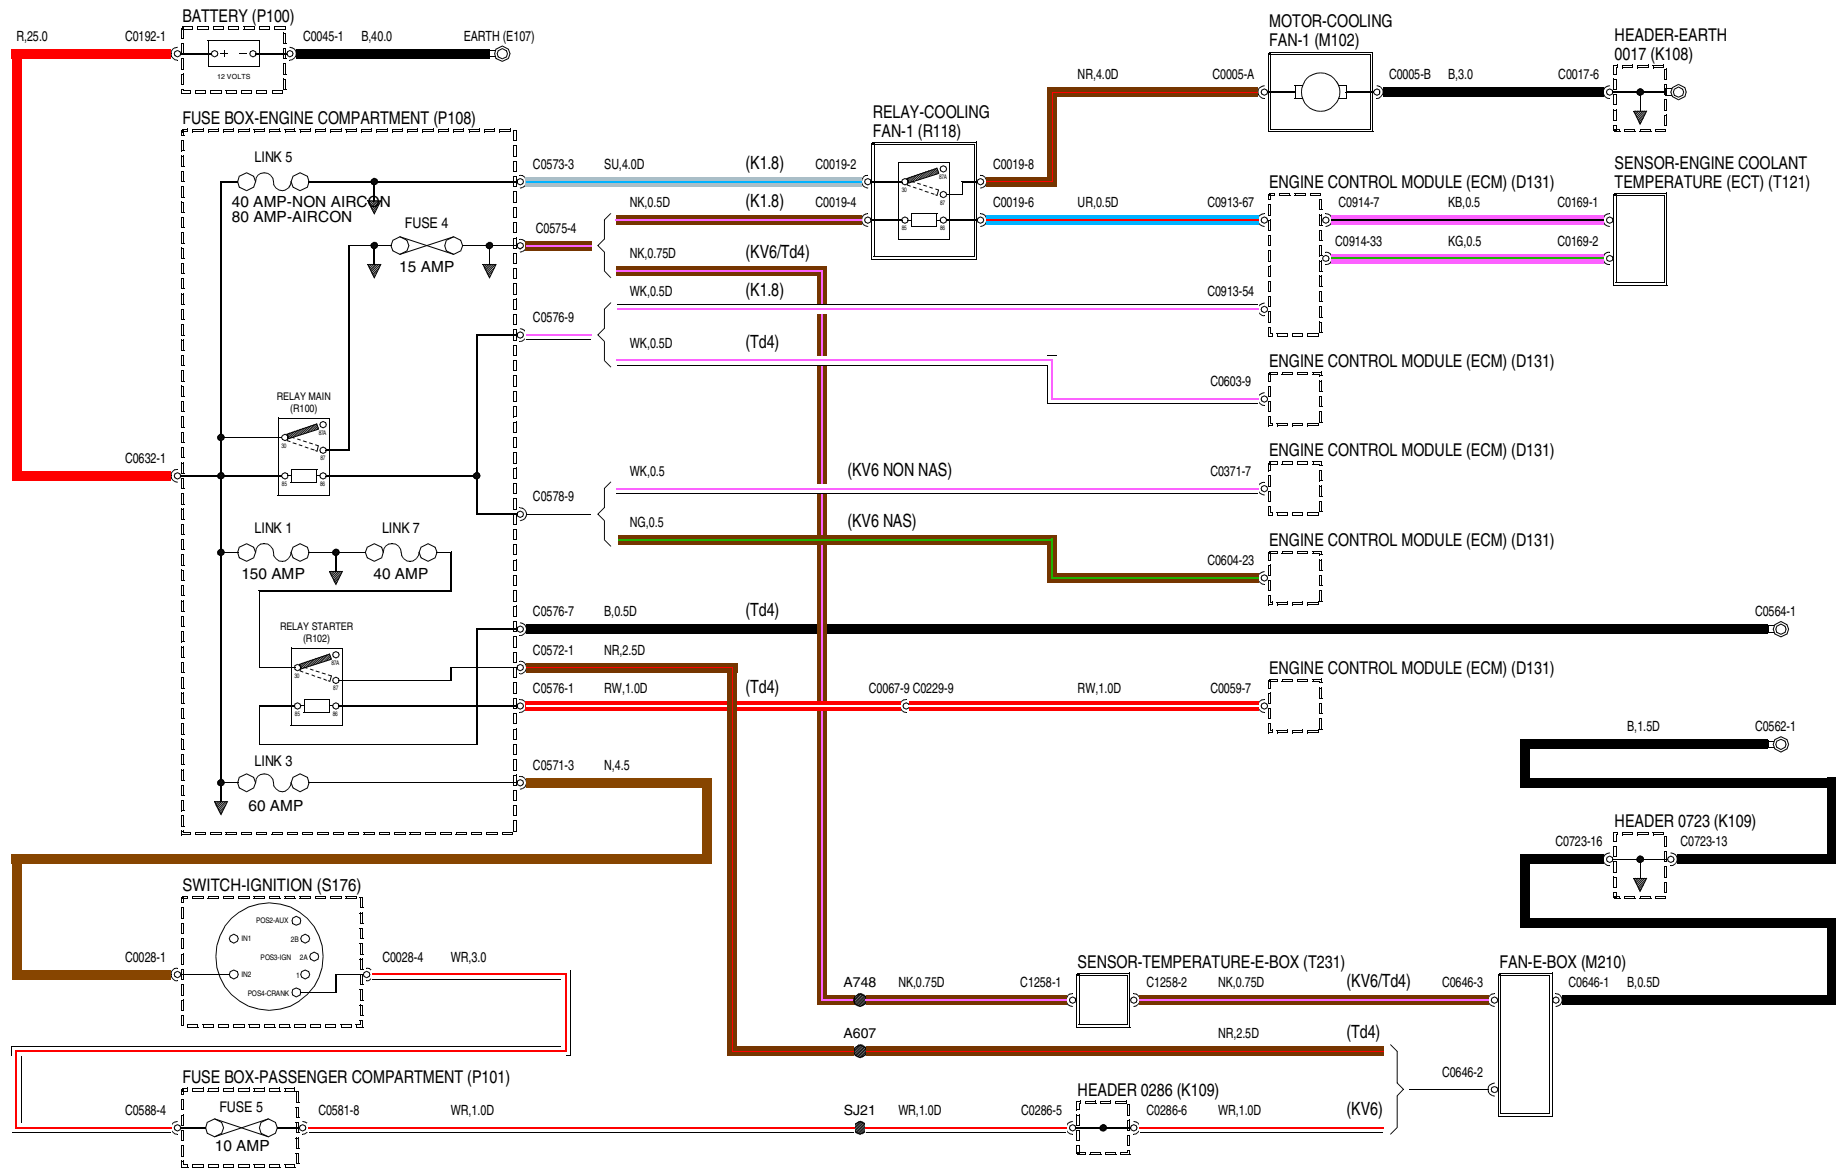


VWR004020-A-01

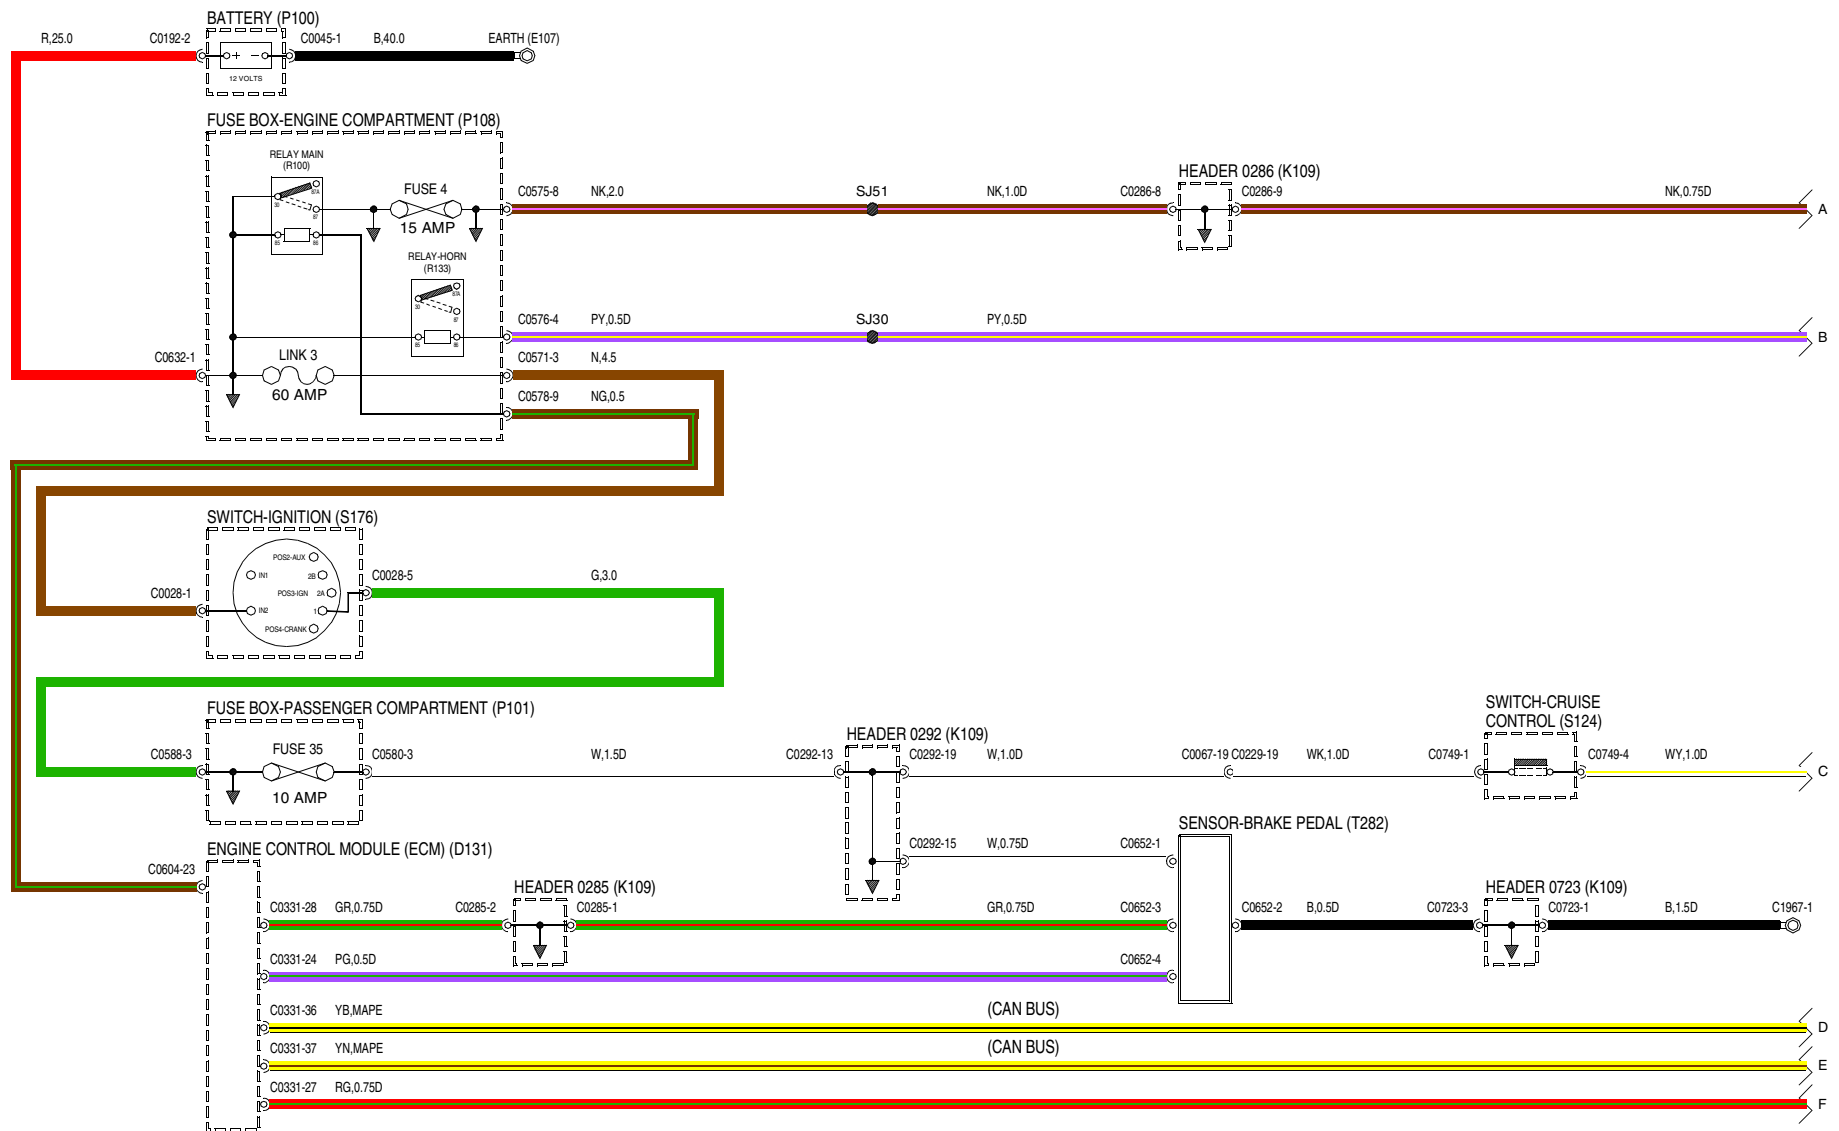


VWR004030-A-01

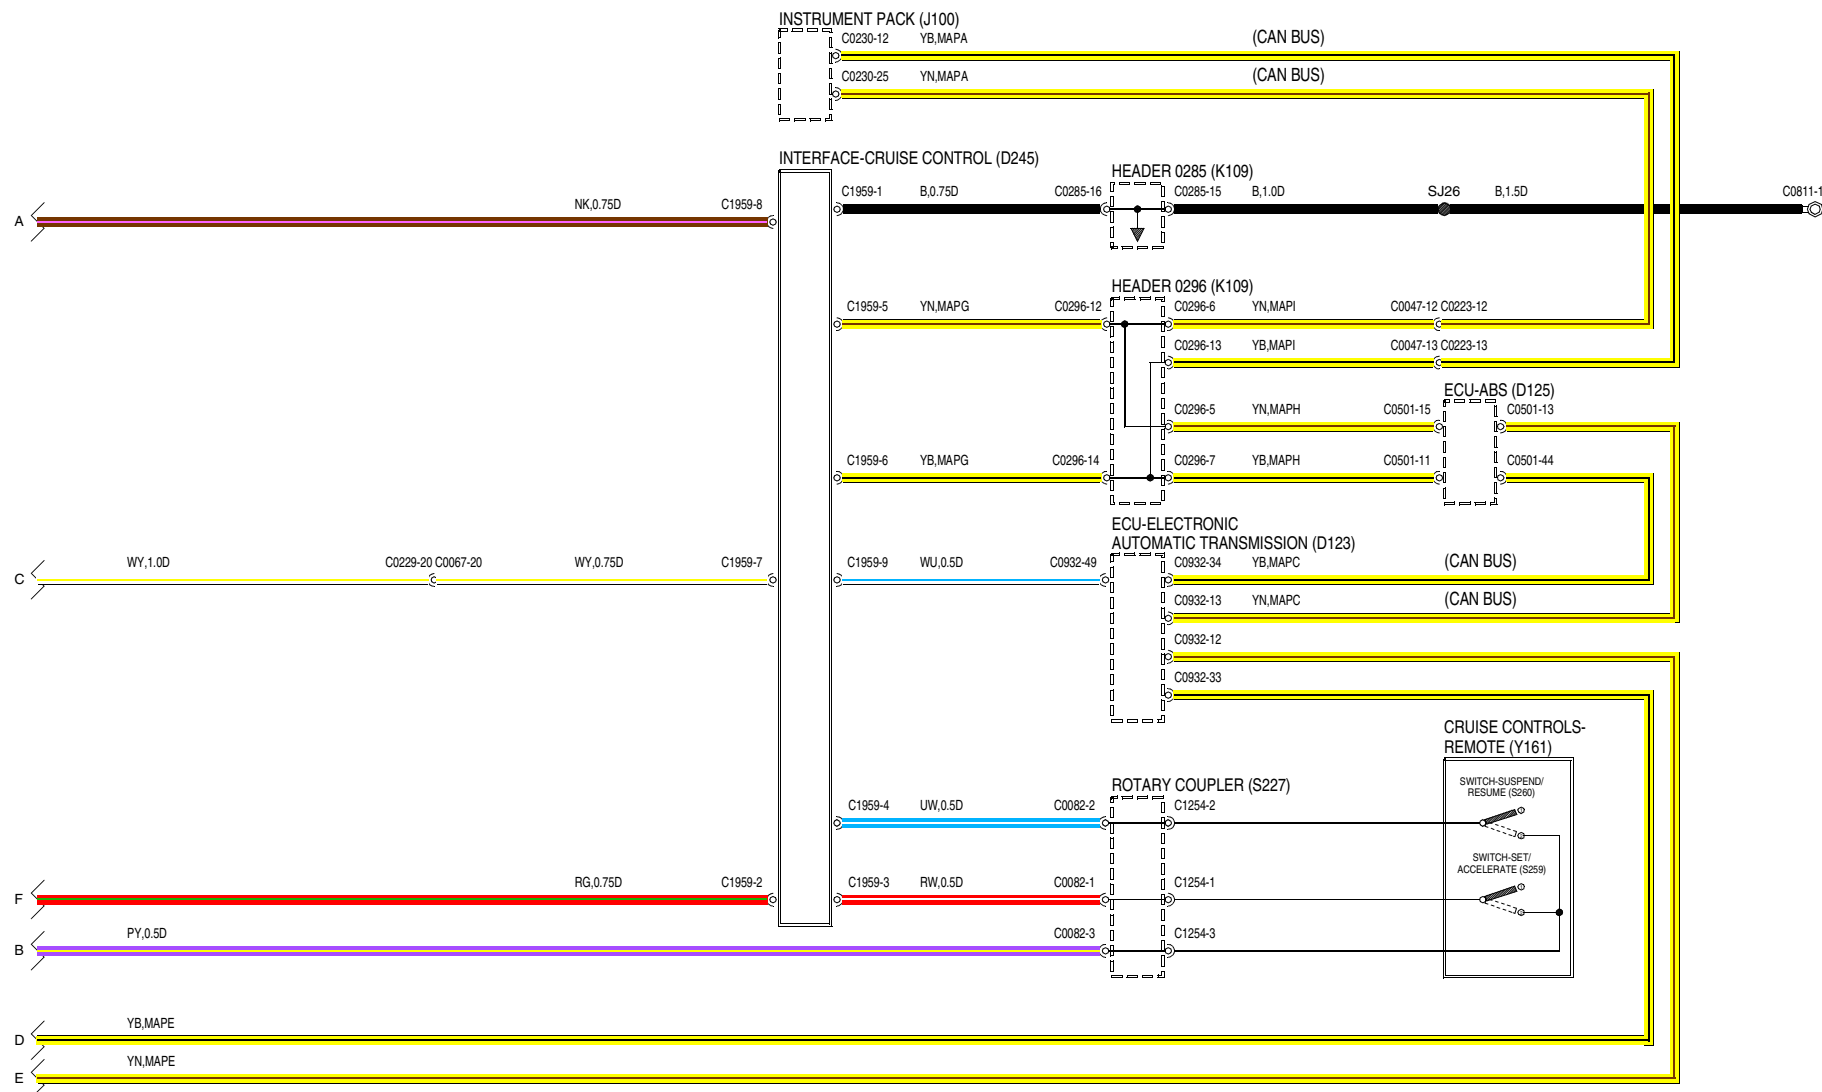


VWR004030-A-02

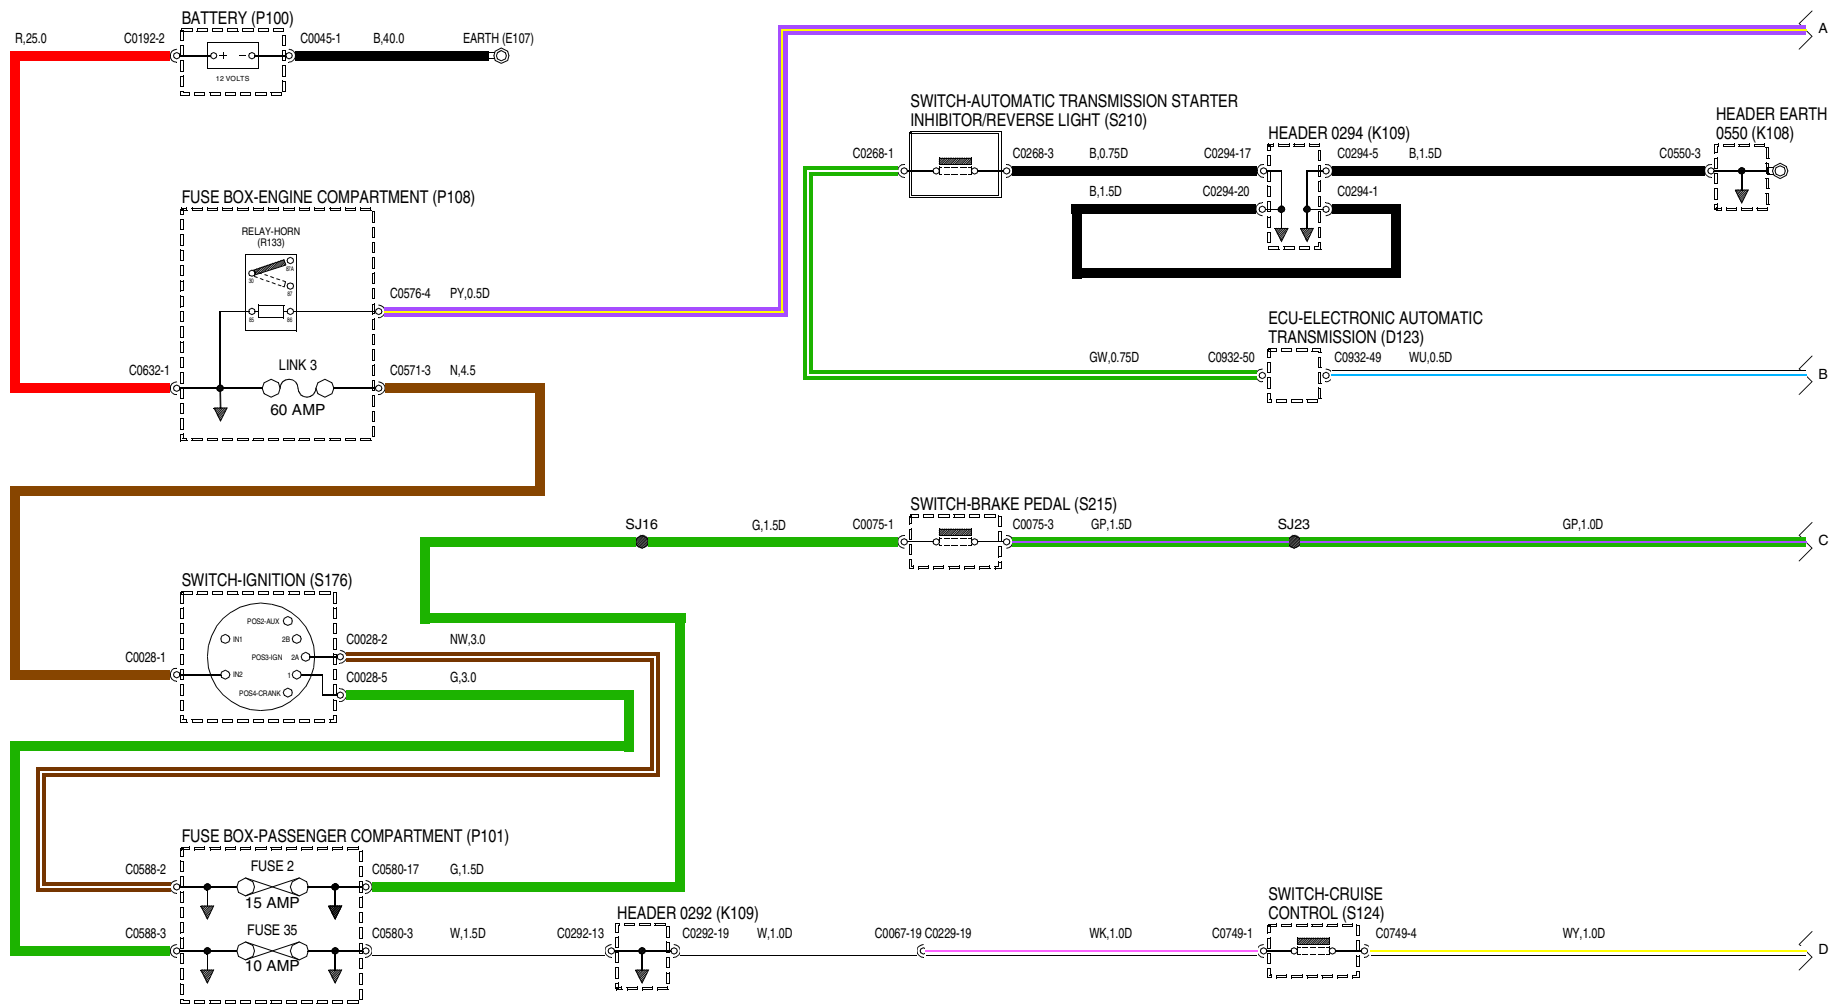

VWR004040-A-01

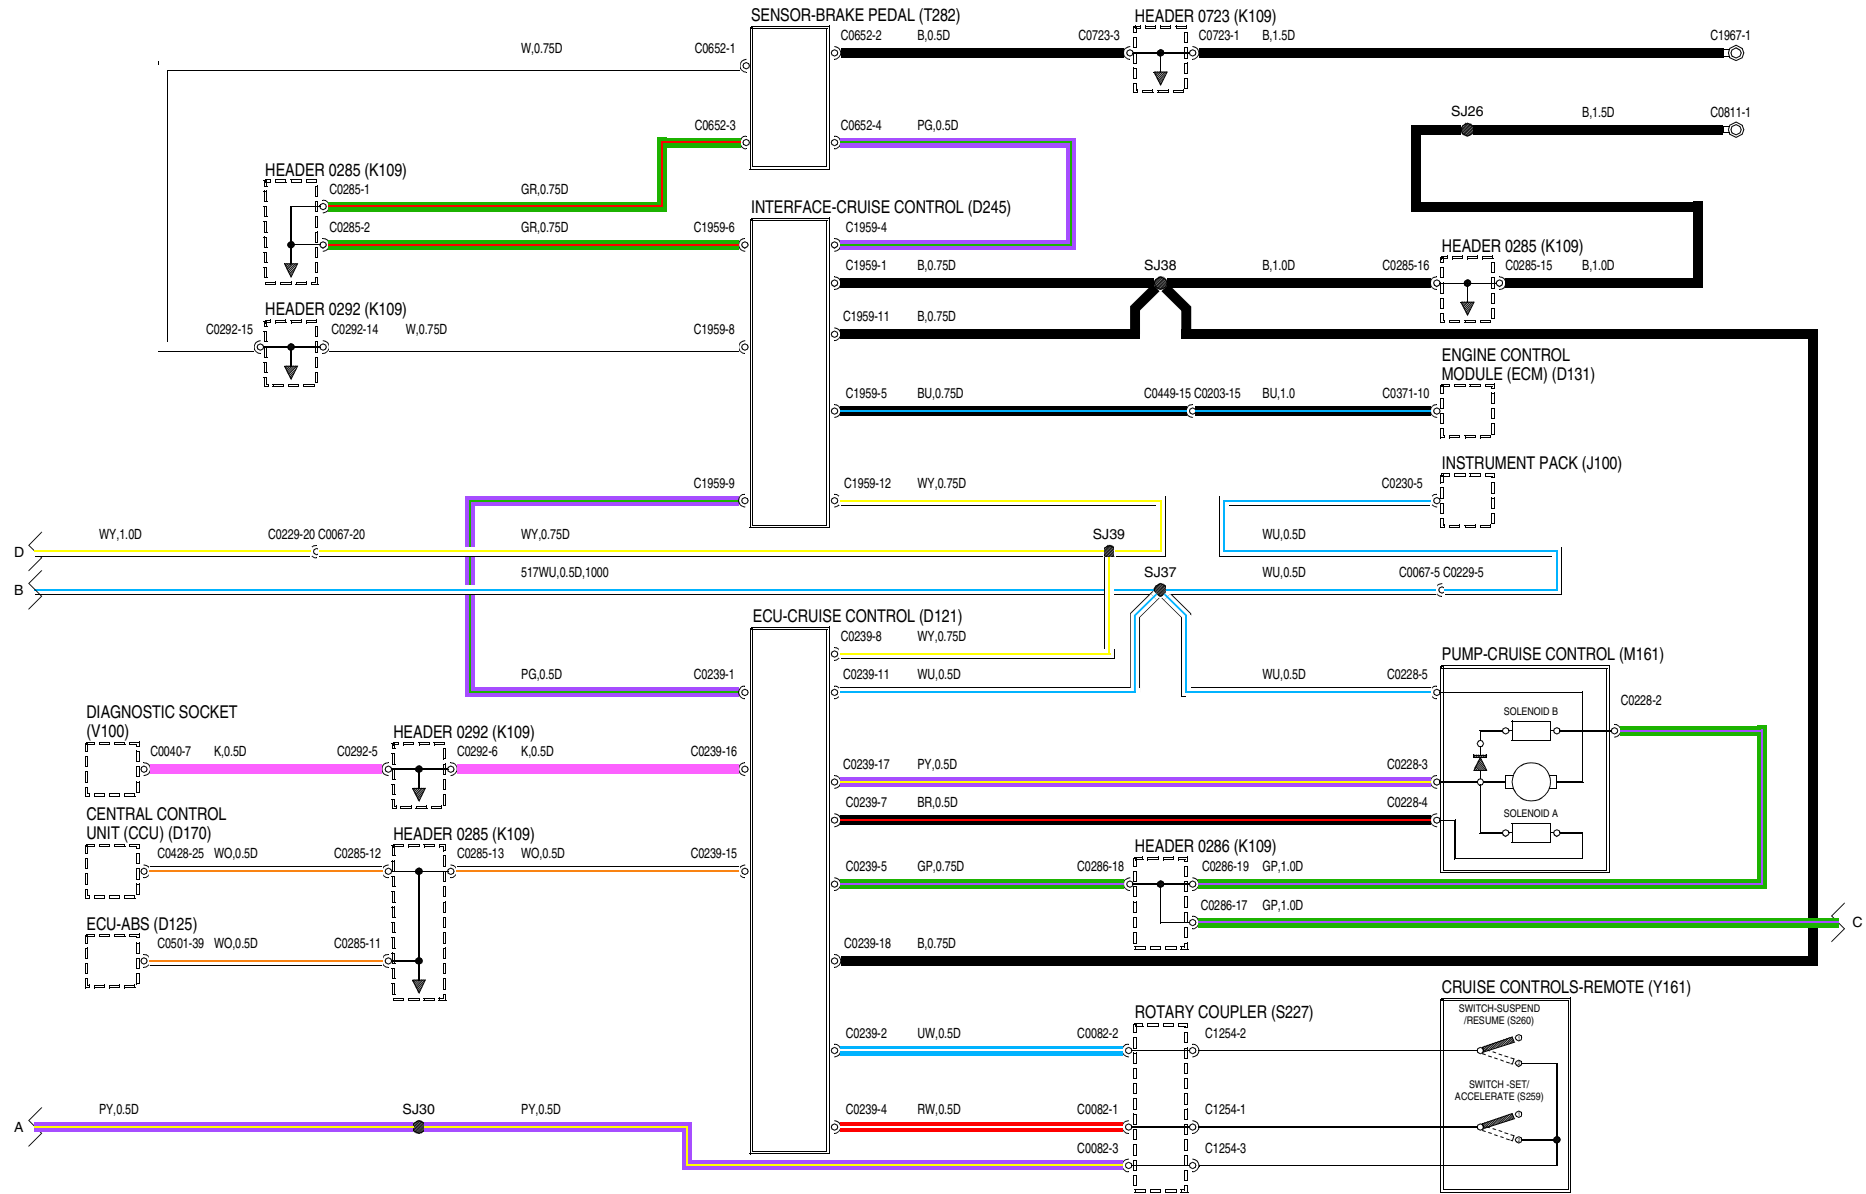


32 ELECTRONIC AUTOMATIC TRANSMISSION

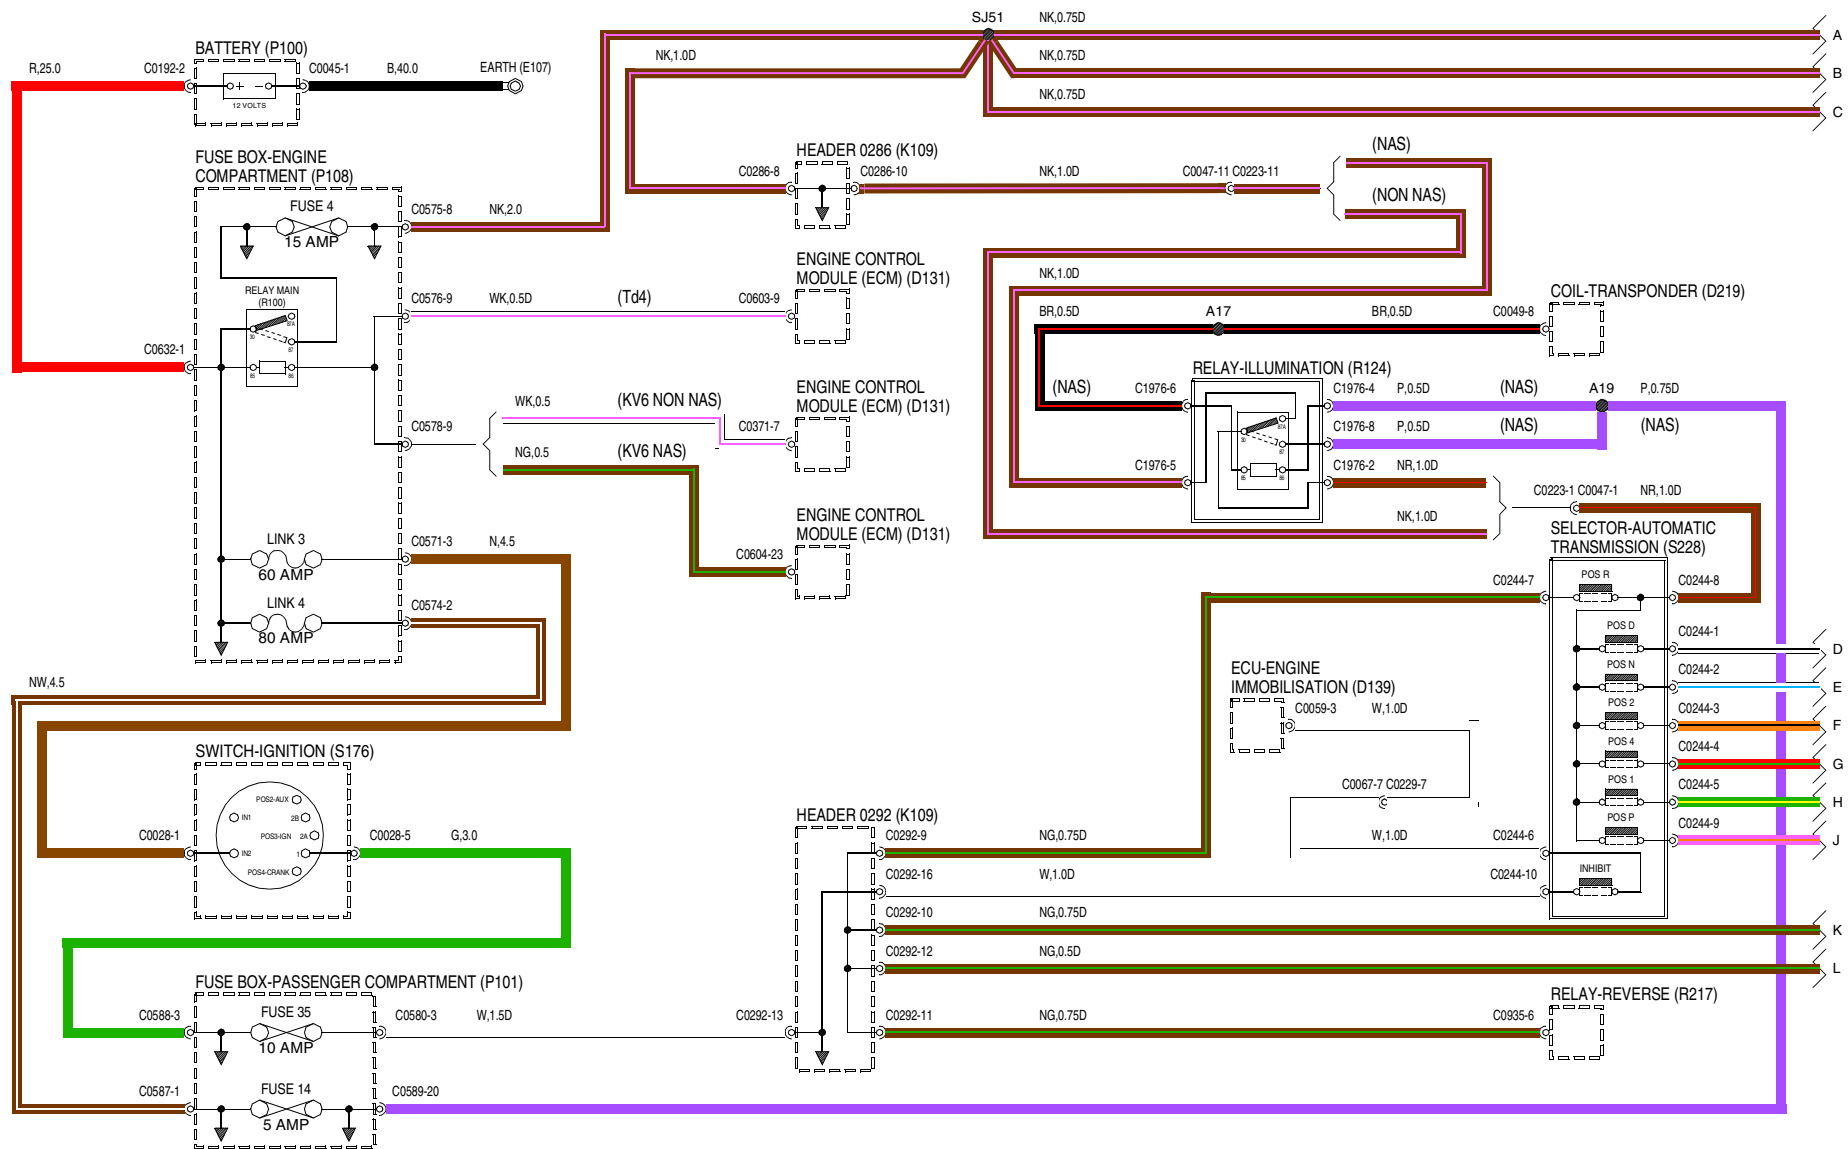


VWR004350-A-01

32 ELECTRONIC AUTOMATIC TRANSMISSION

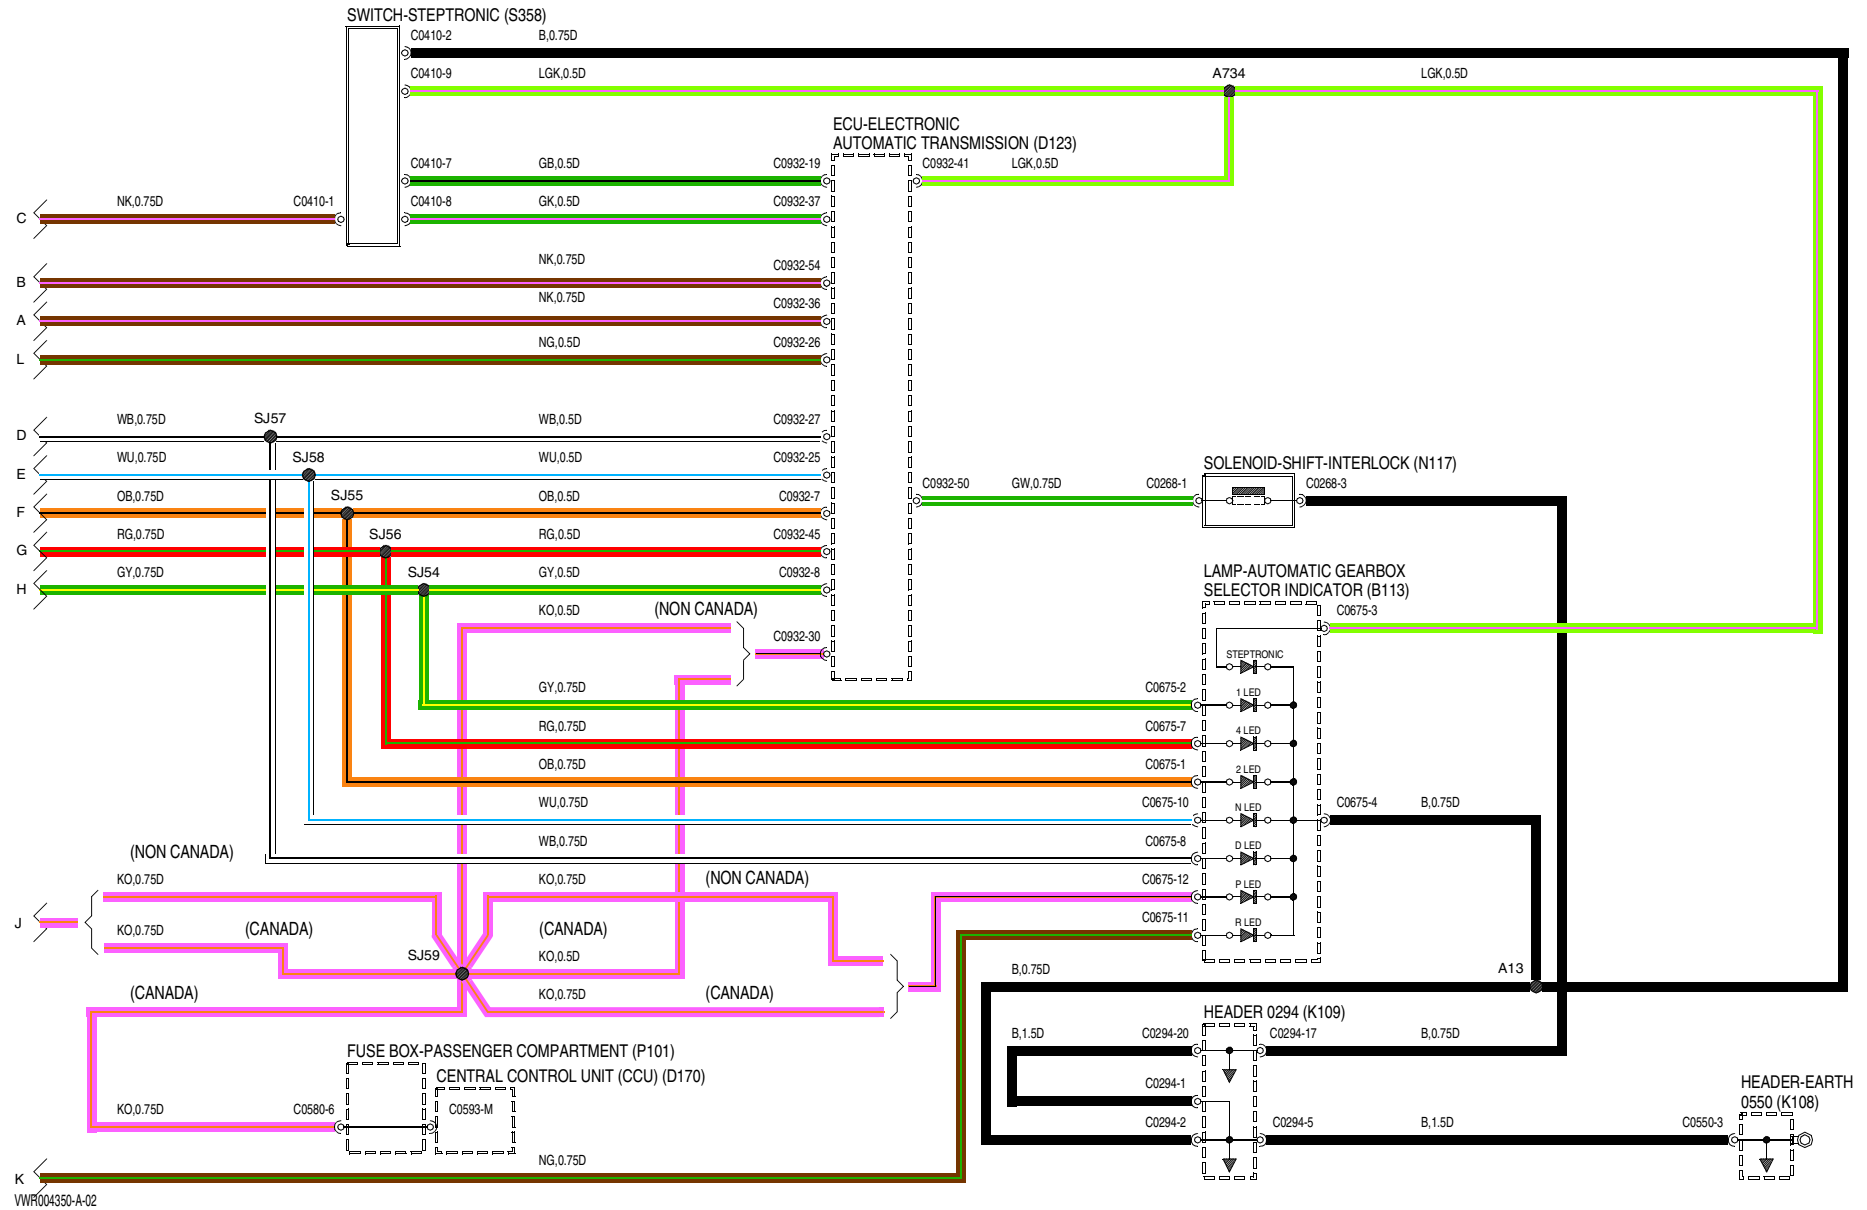


32 ELECTRONIC AUTOMATIC TRANSMISSION

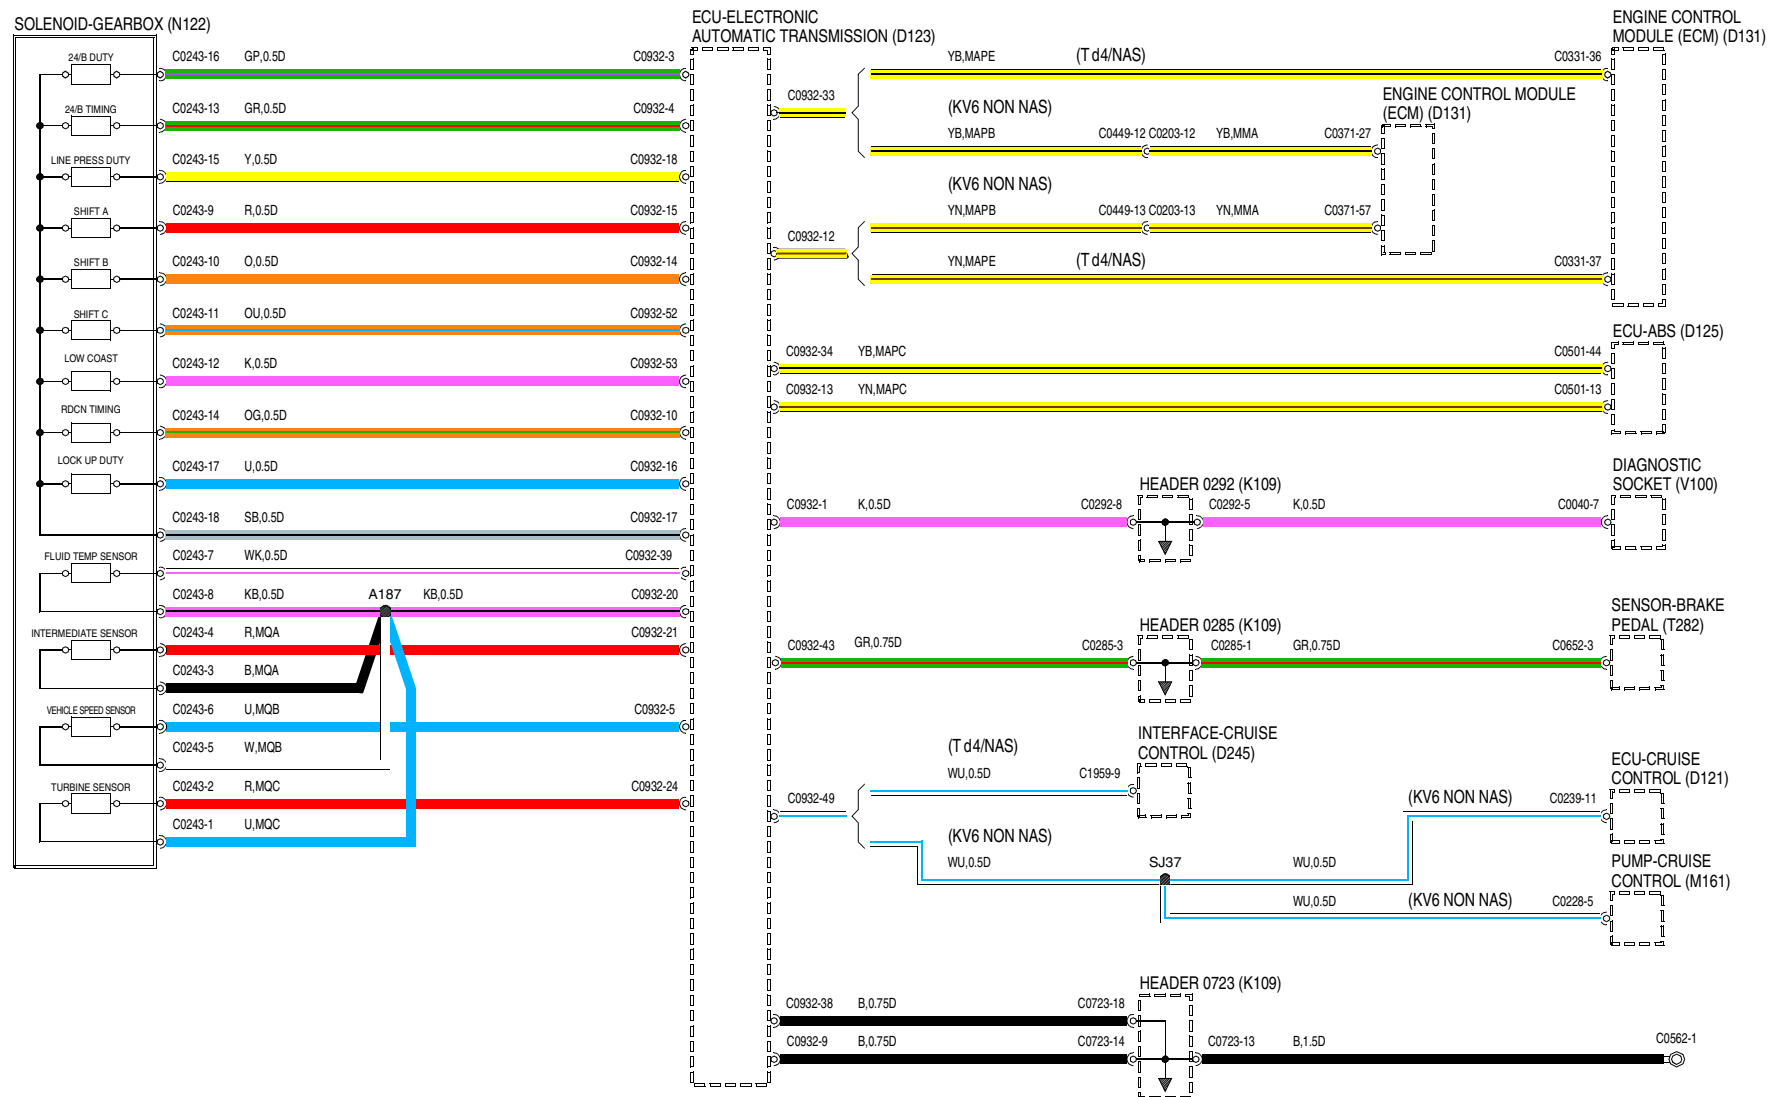


VWR004350-A-03

35 ANTI-LOCK BRAKING SYSTEM (ABS)

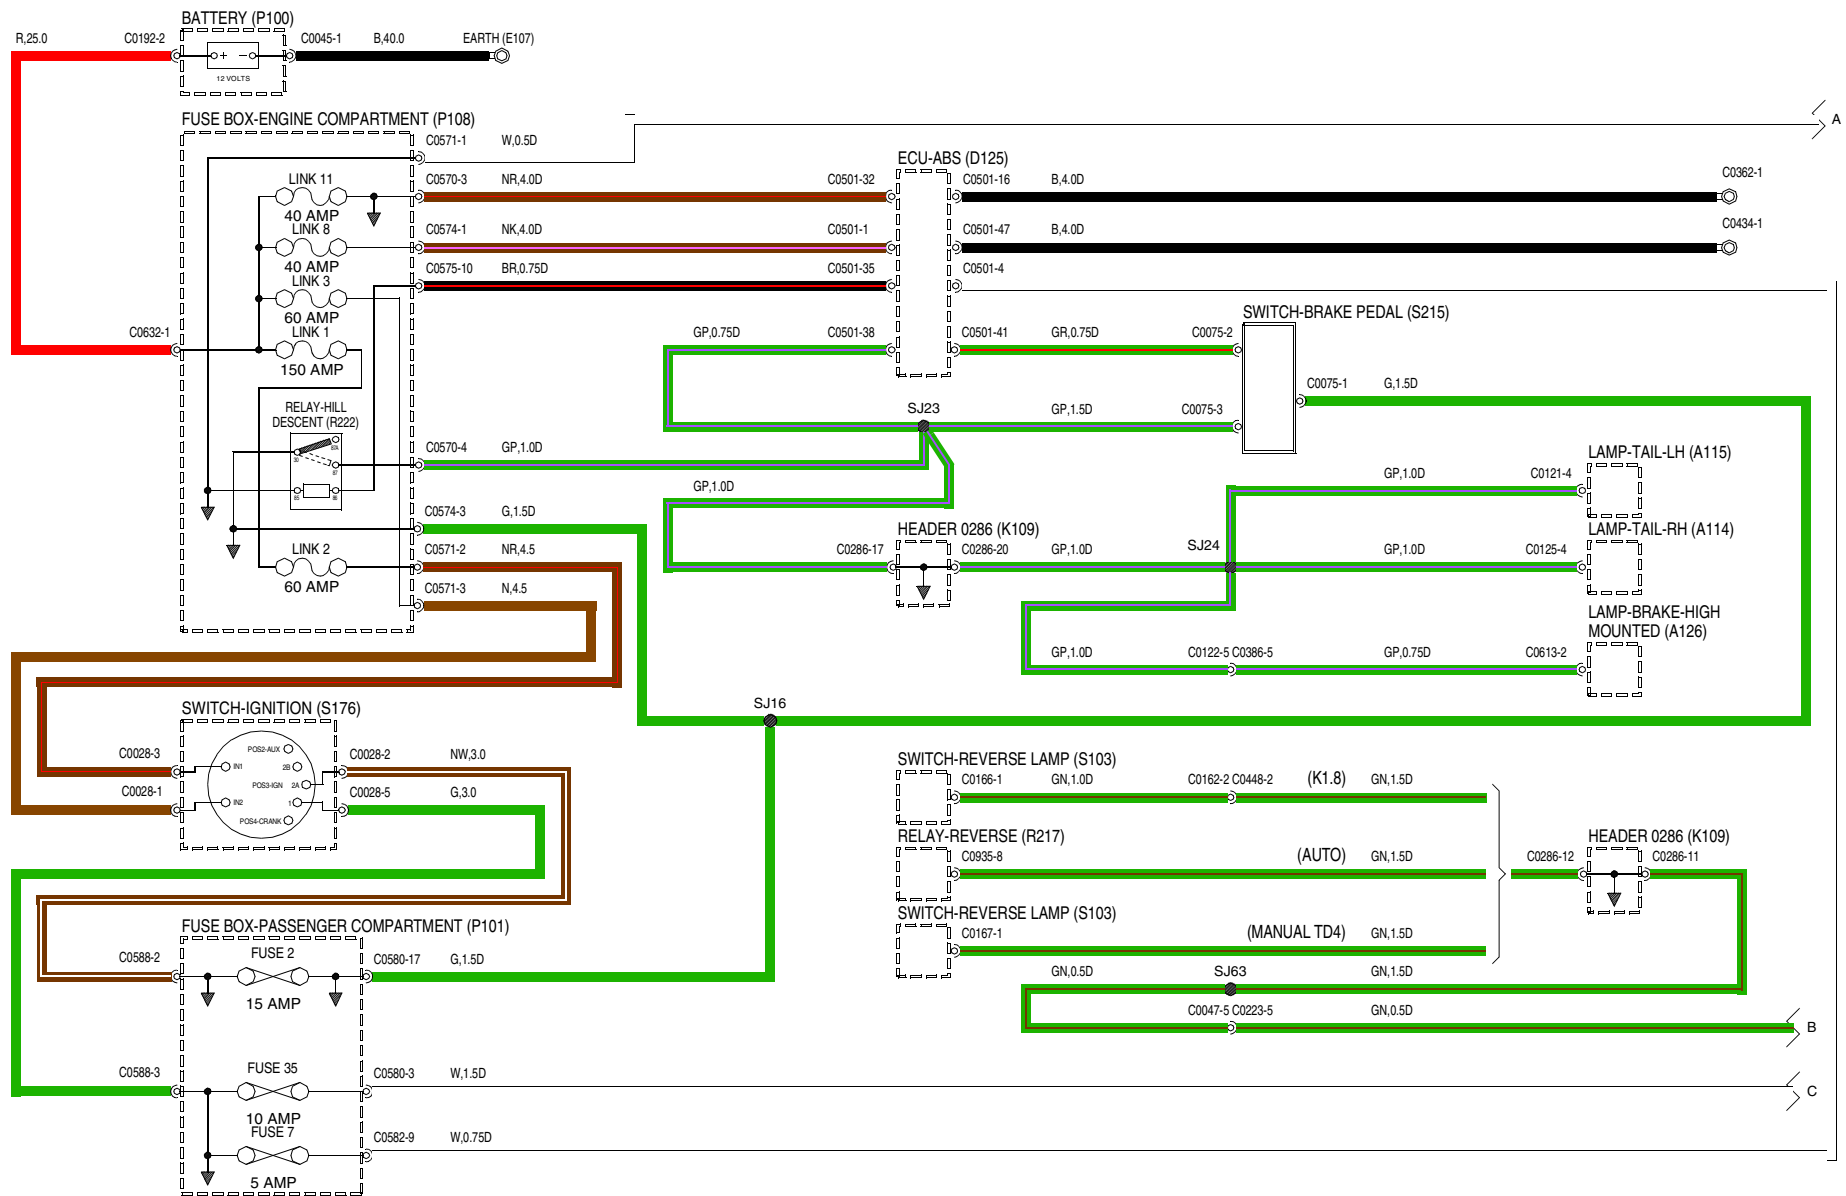


VWR004410-A-01

35 ANTI-LOCK BRAKING SYSTEM (ABS)

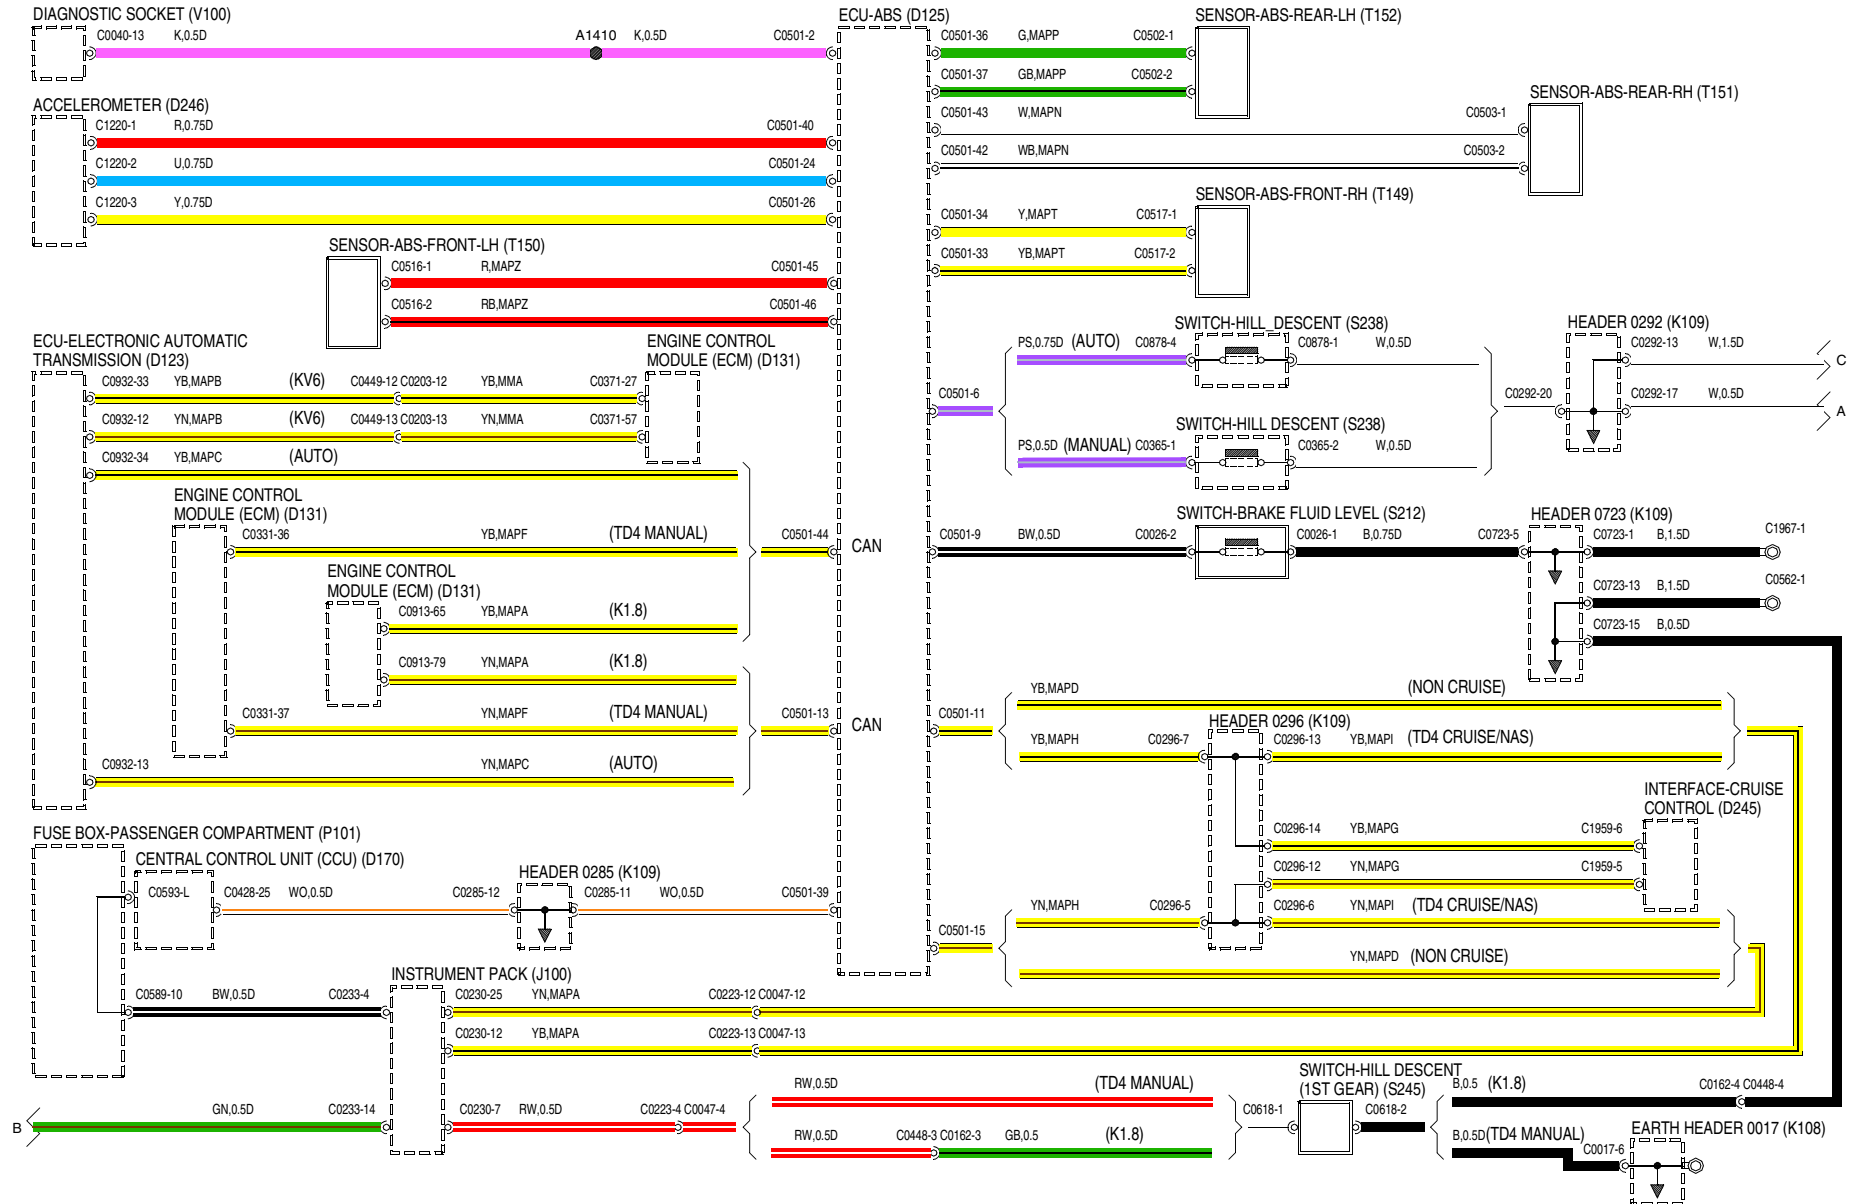


VWR004410-A-02


36 SUPPLEMENTARY RESTRAINT SYSTEM (SRS)

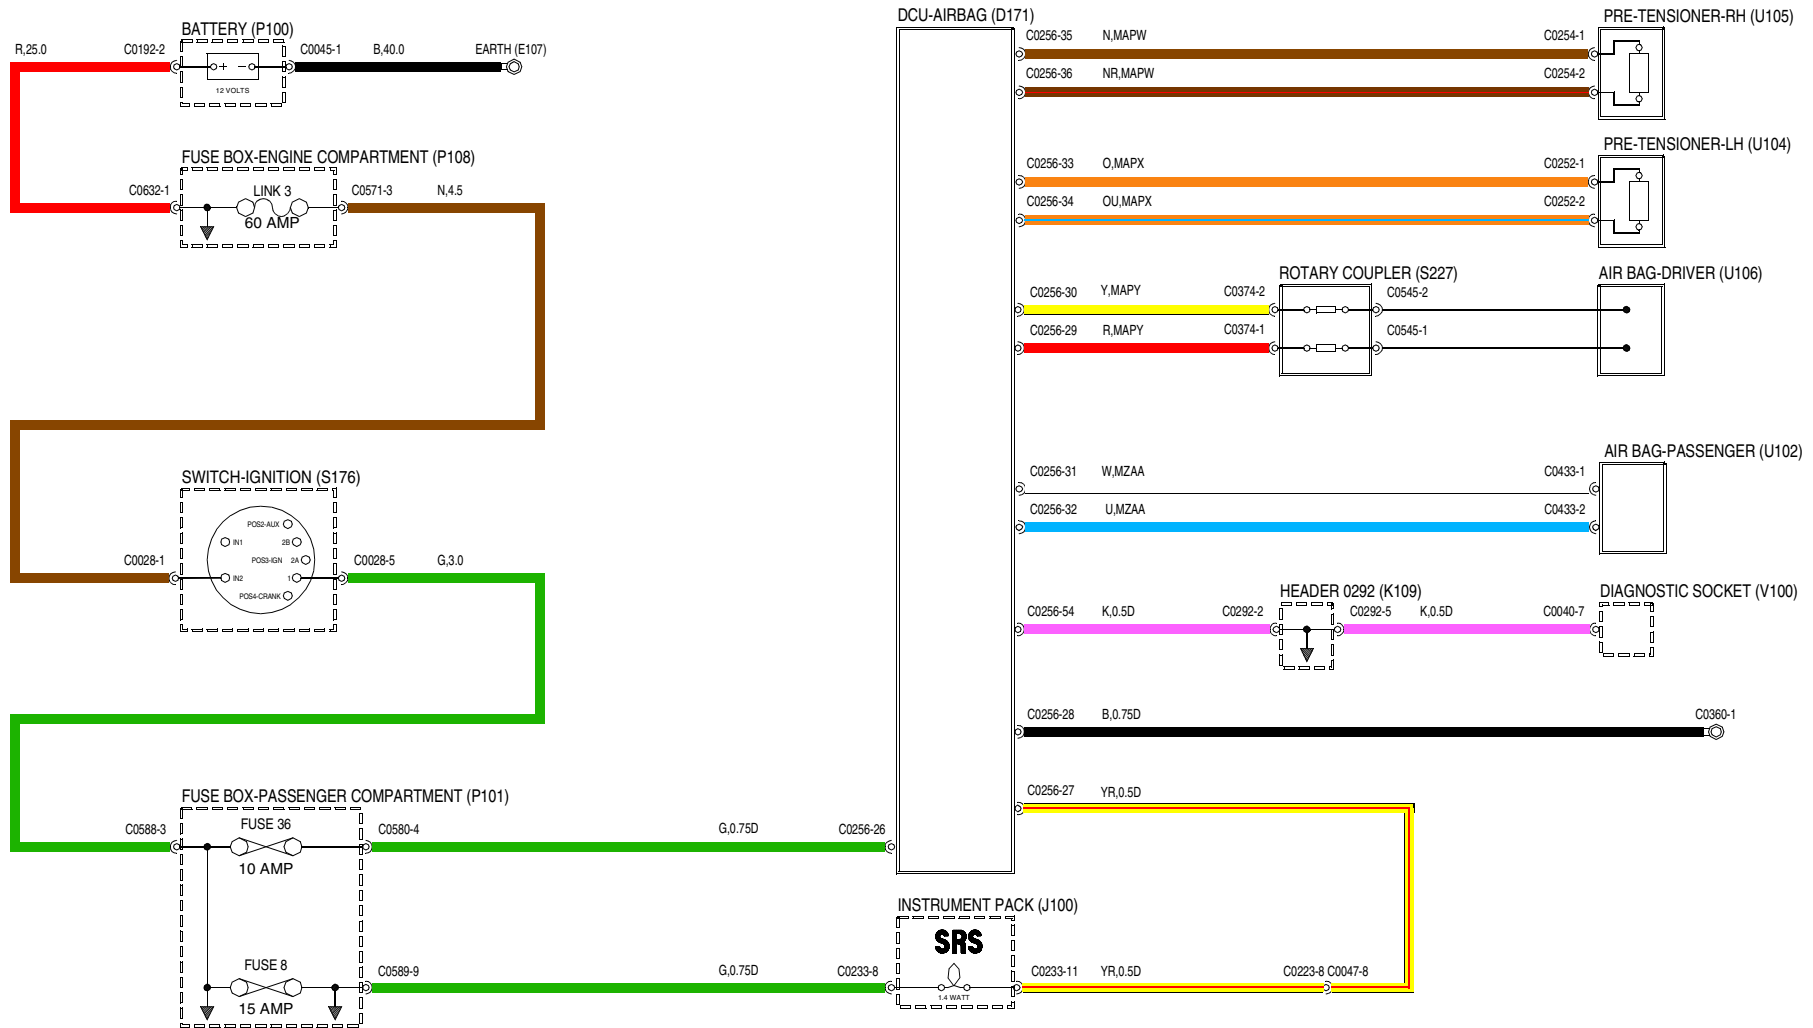


VWR004300-A-01

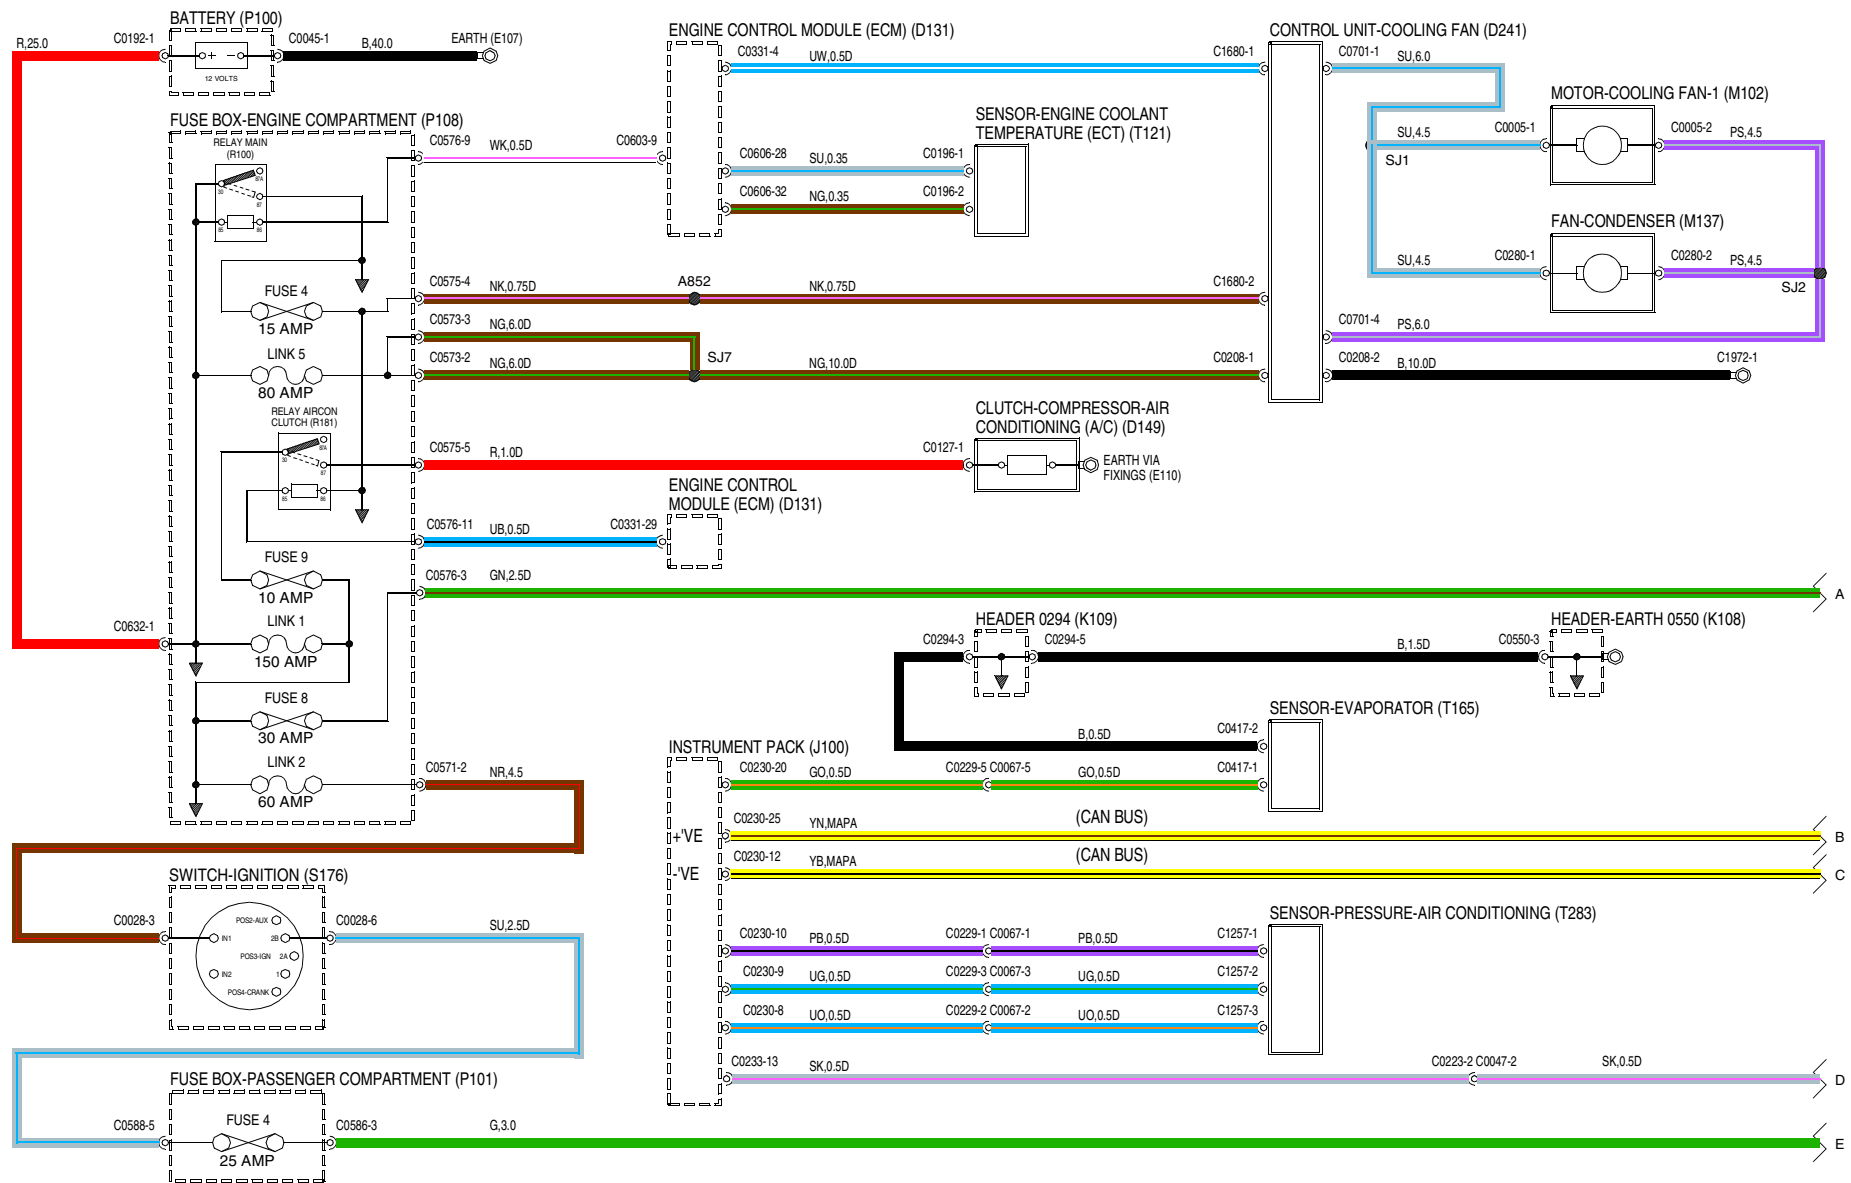


VWR003950-A-01

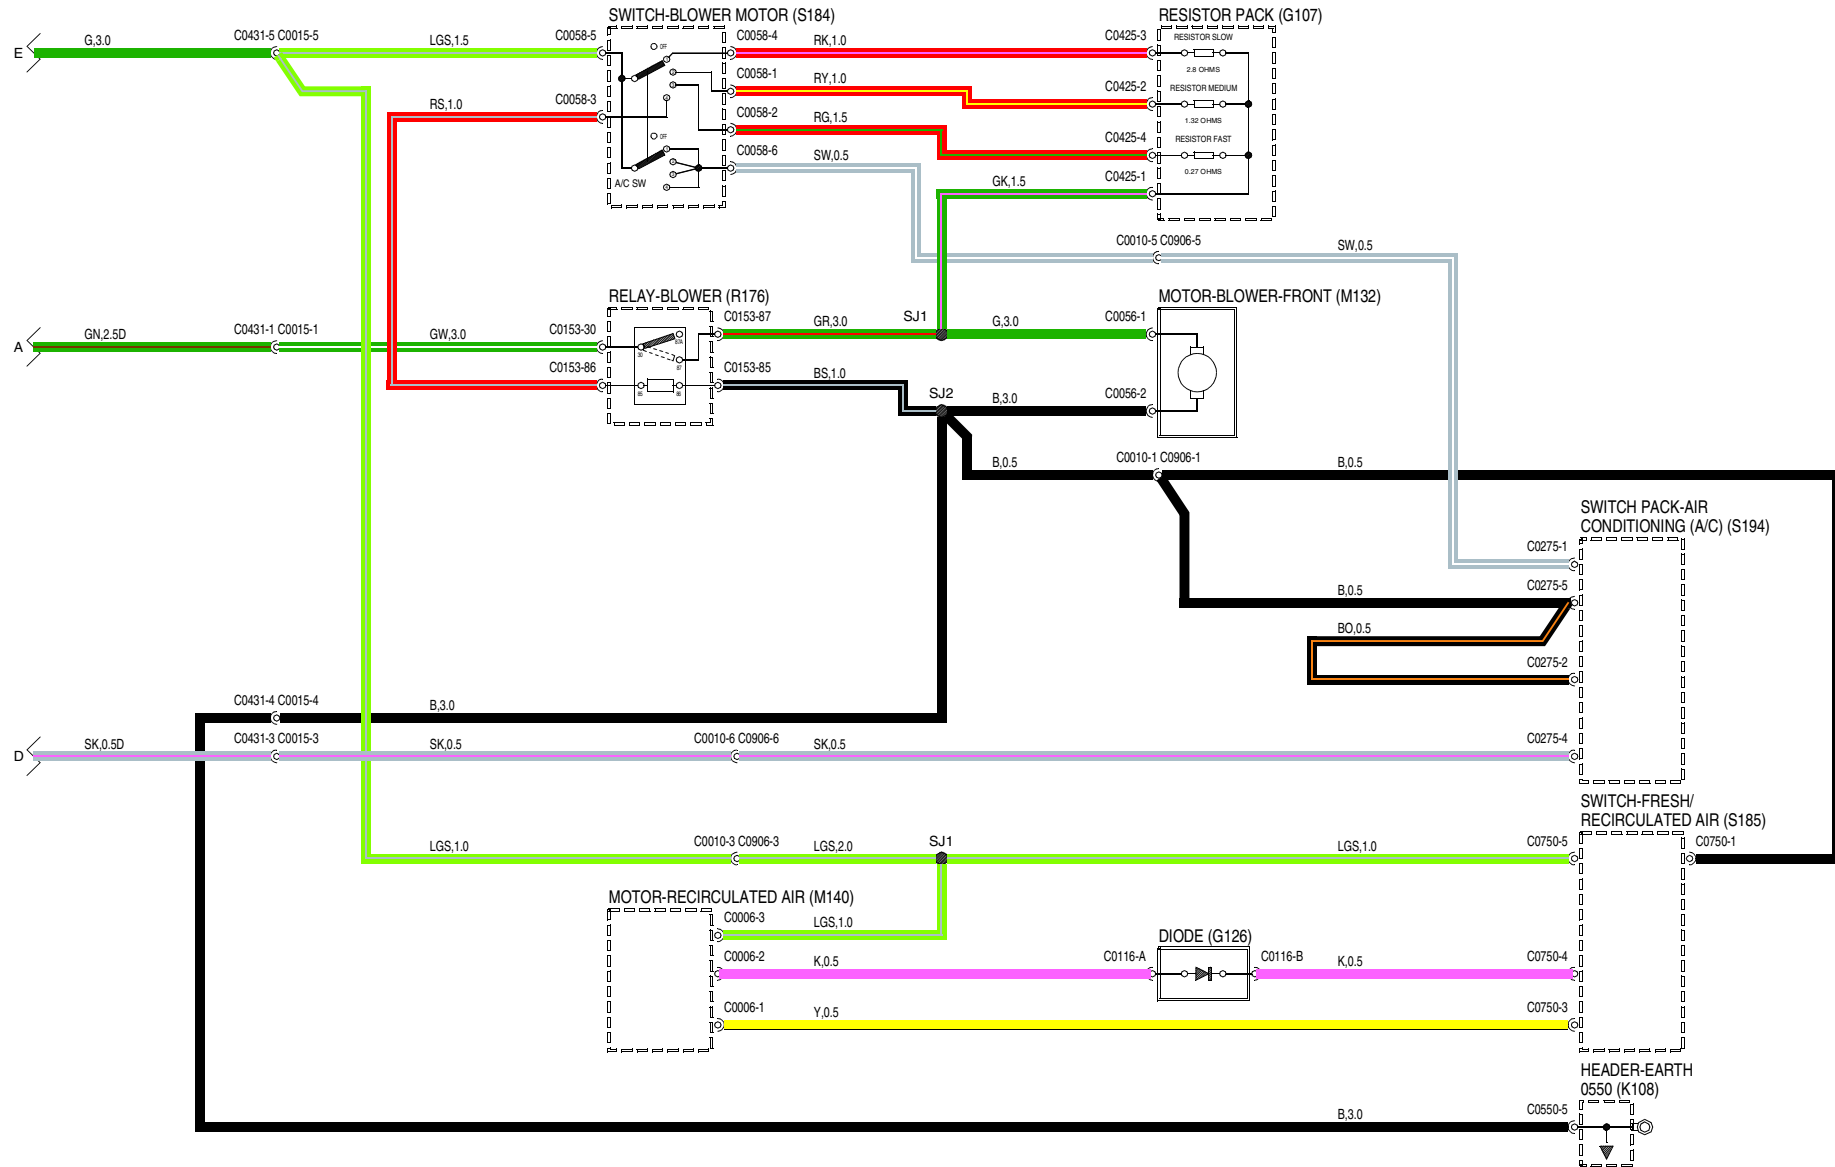


VWR003950-A-02

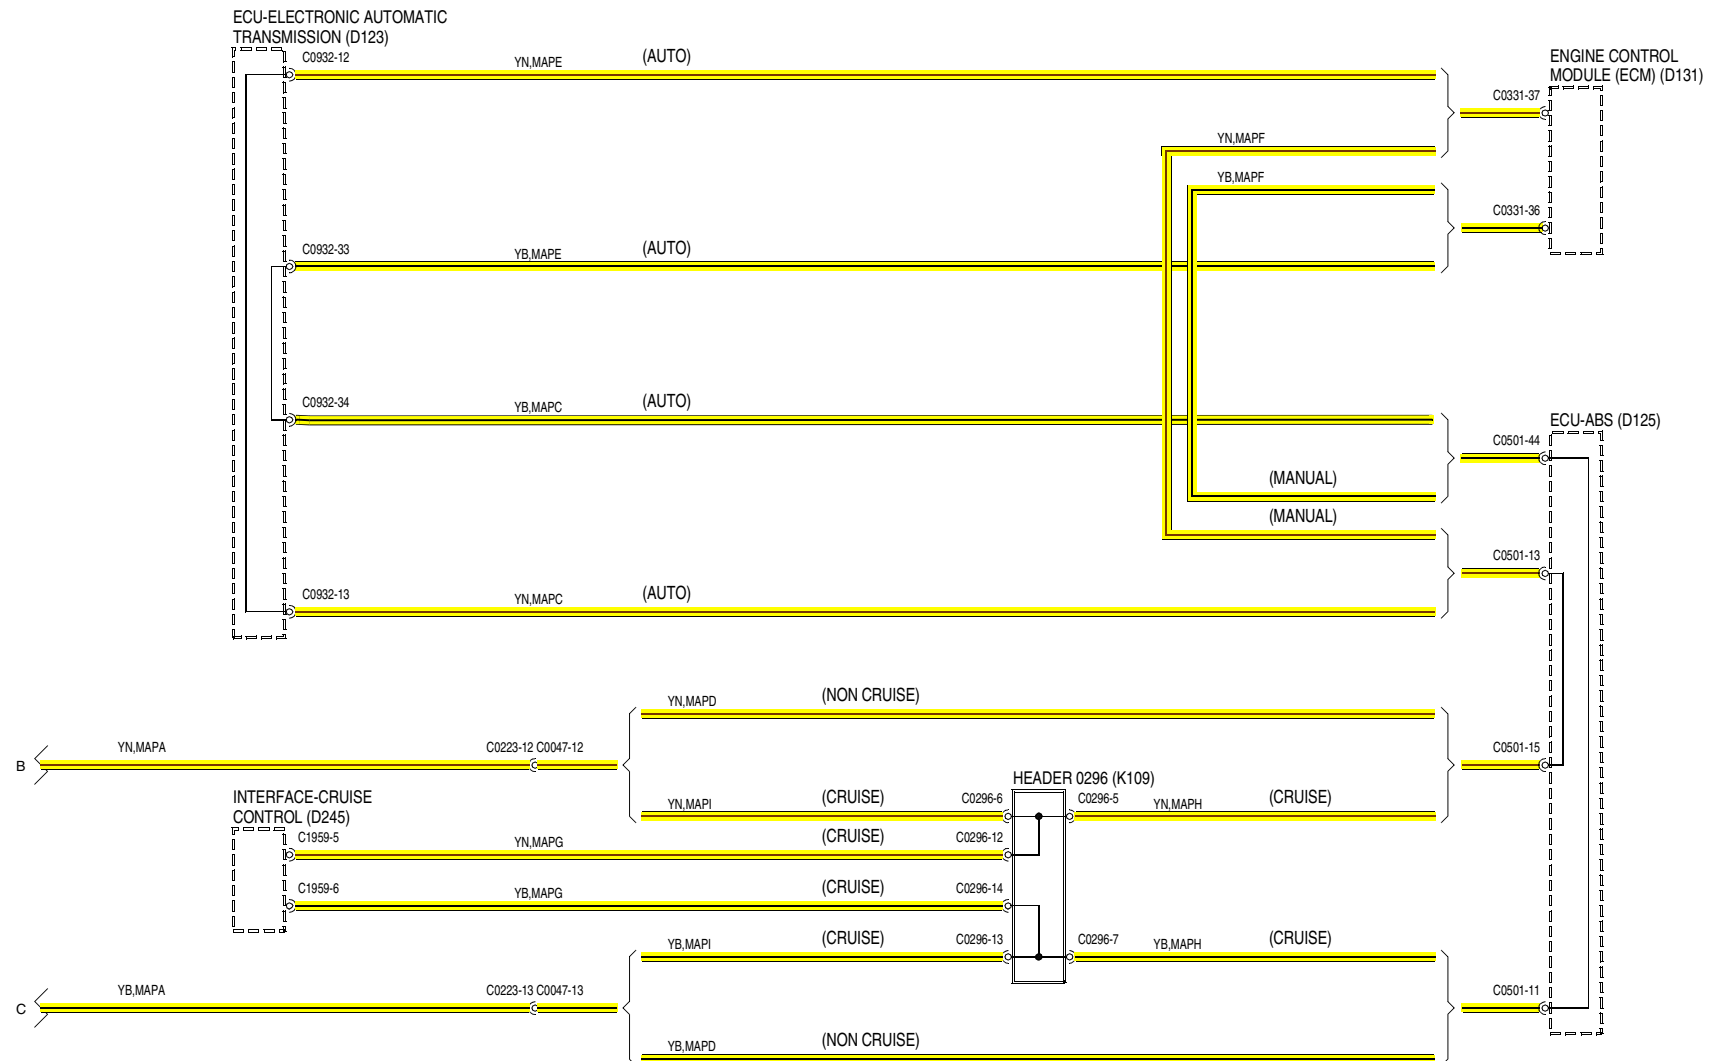


VWR003950-A-03

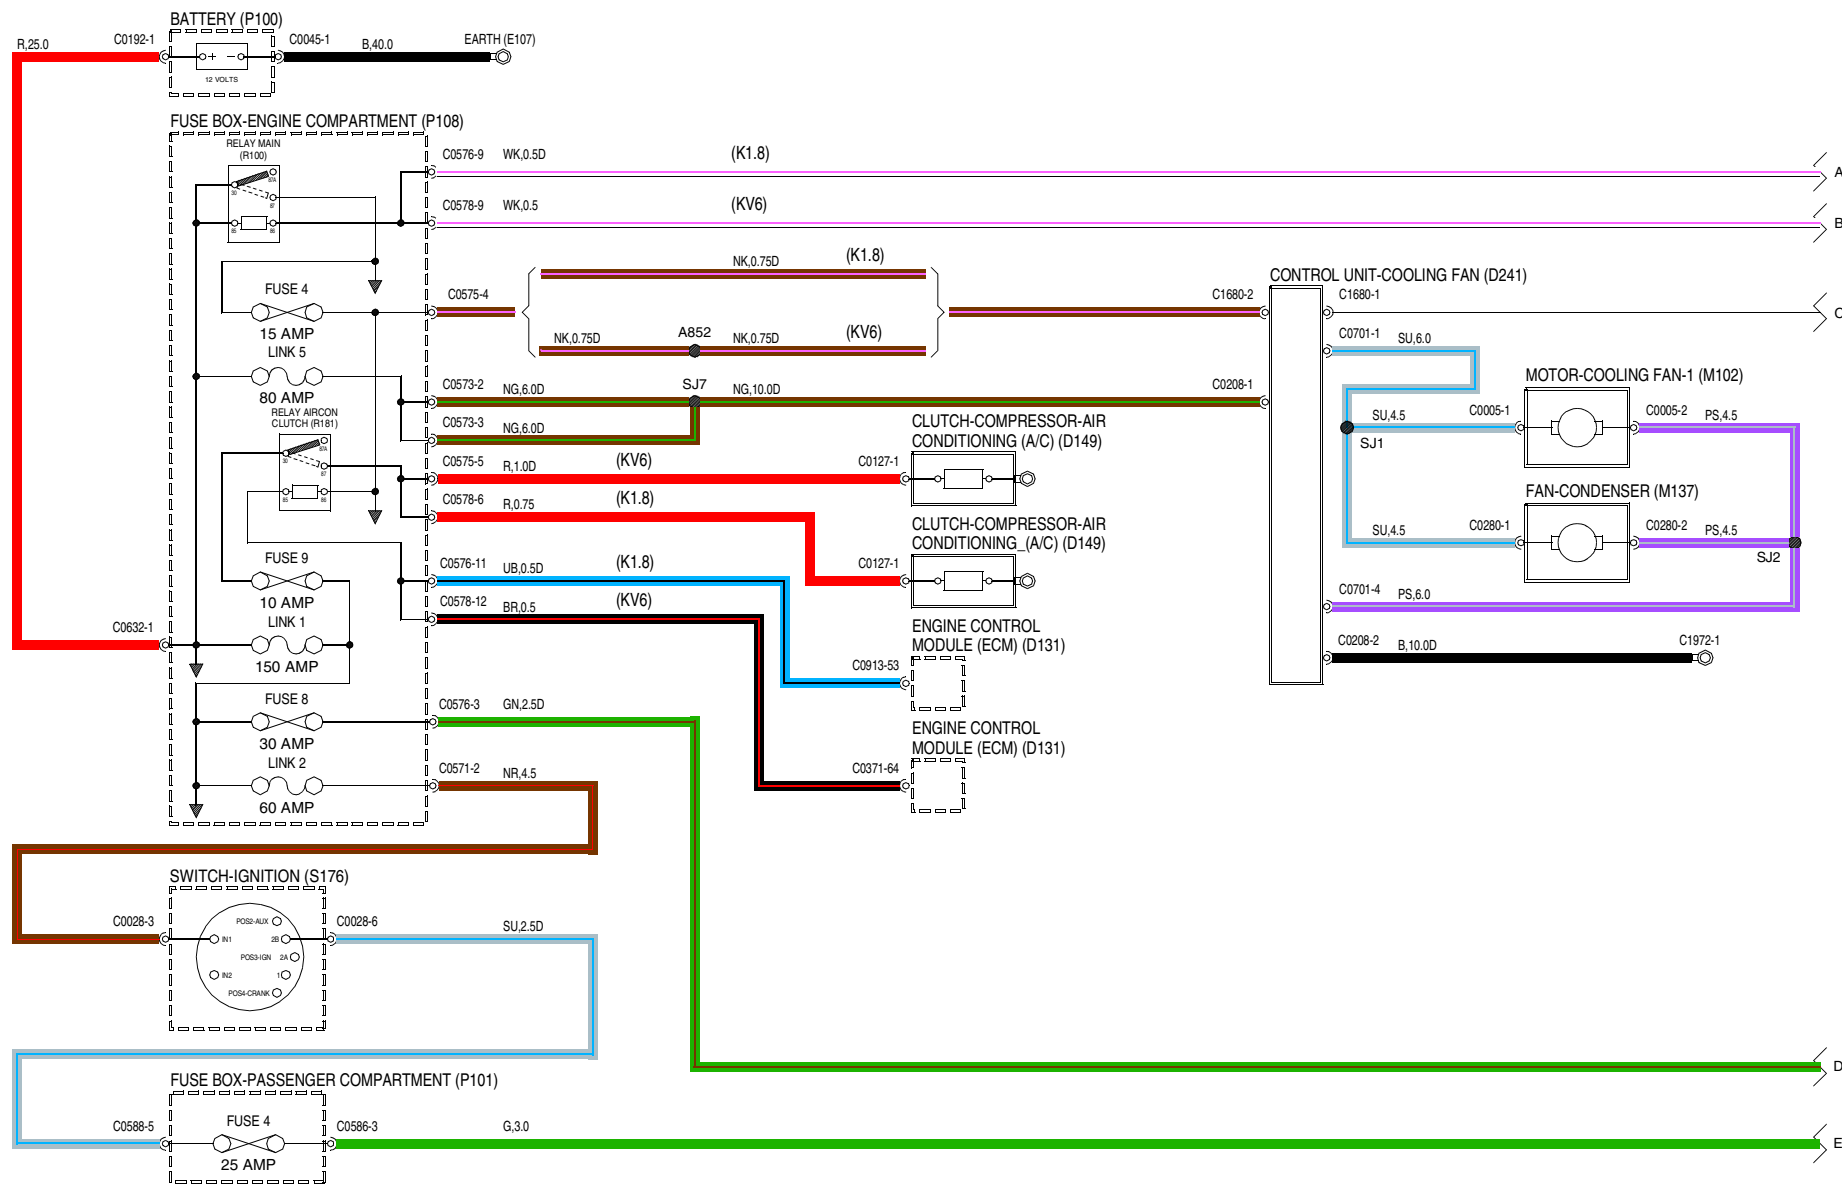


VWR004590-A-01

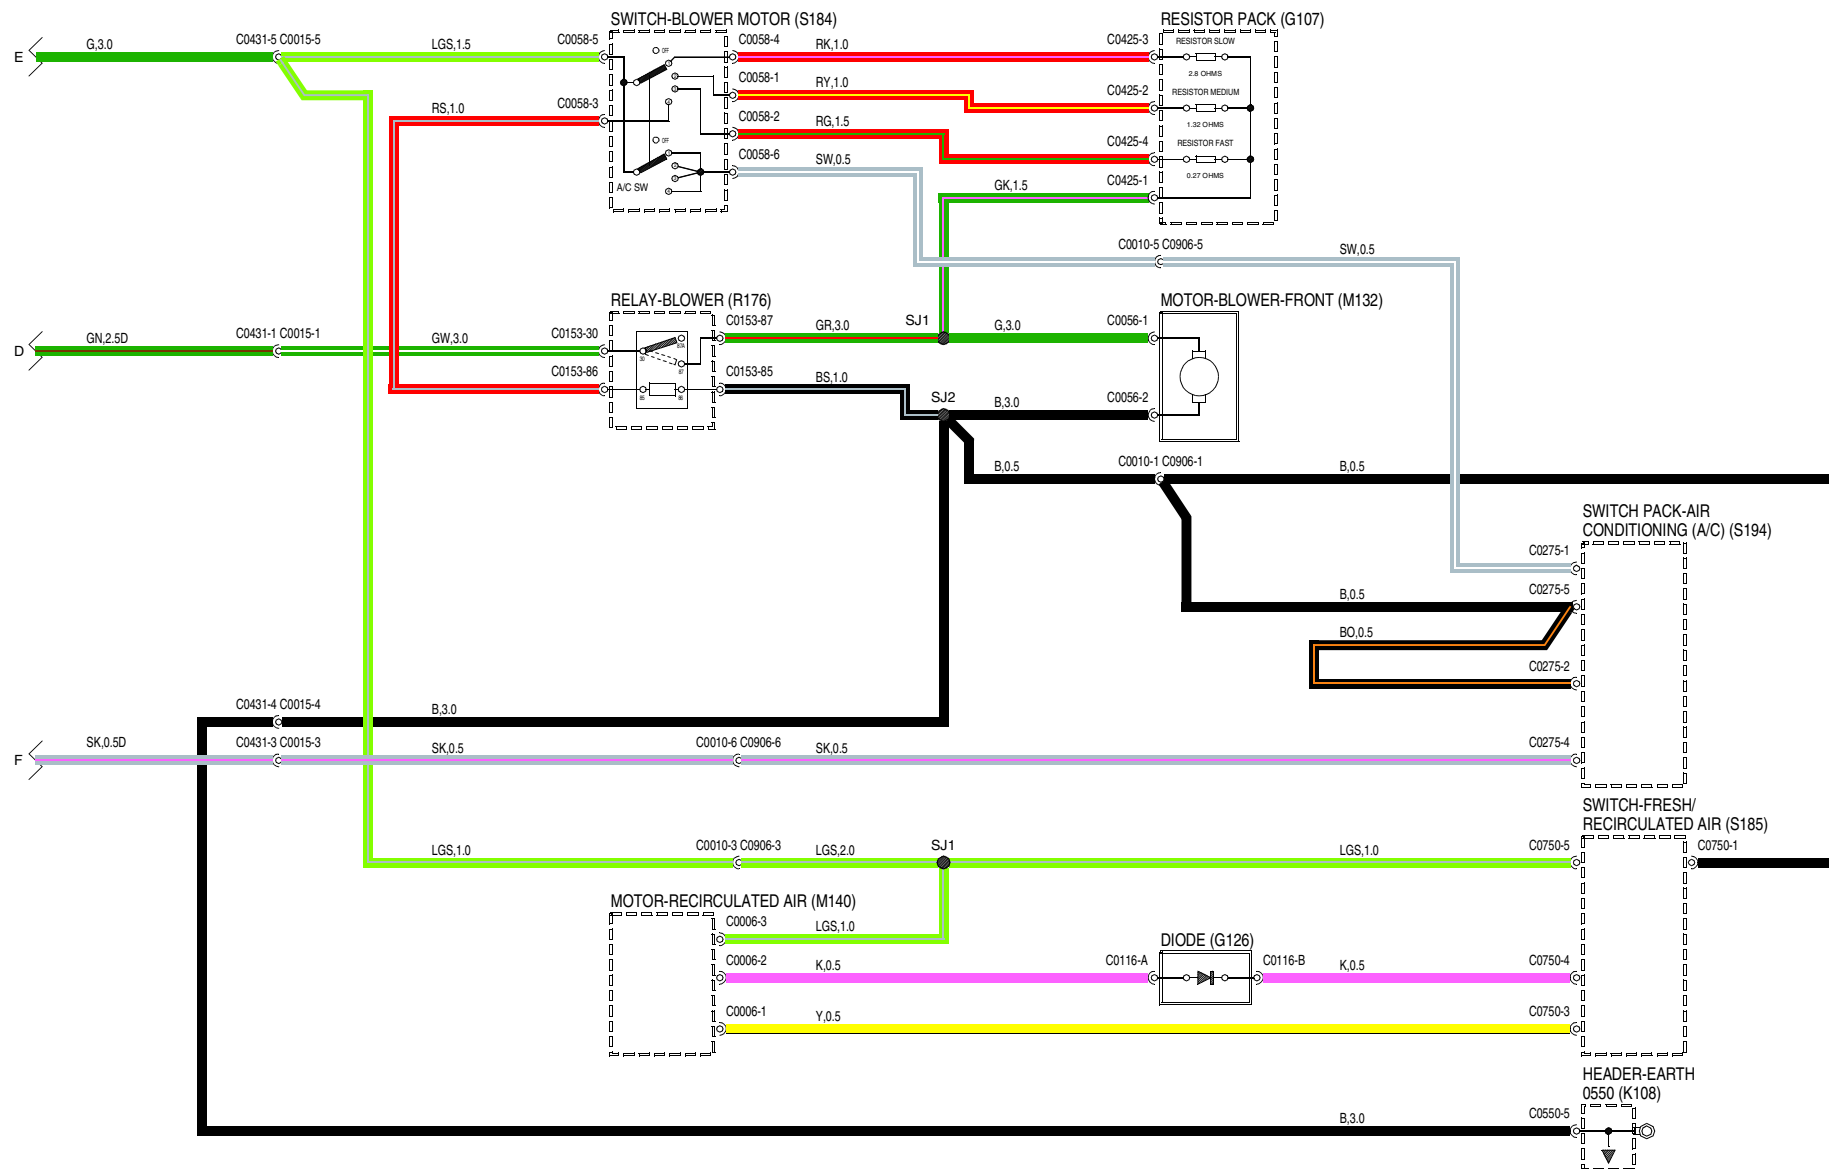


VWR004590-A-02

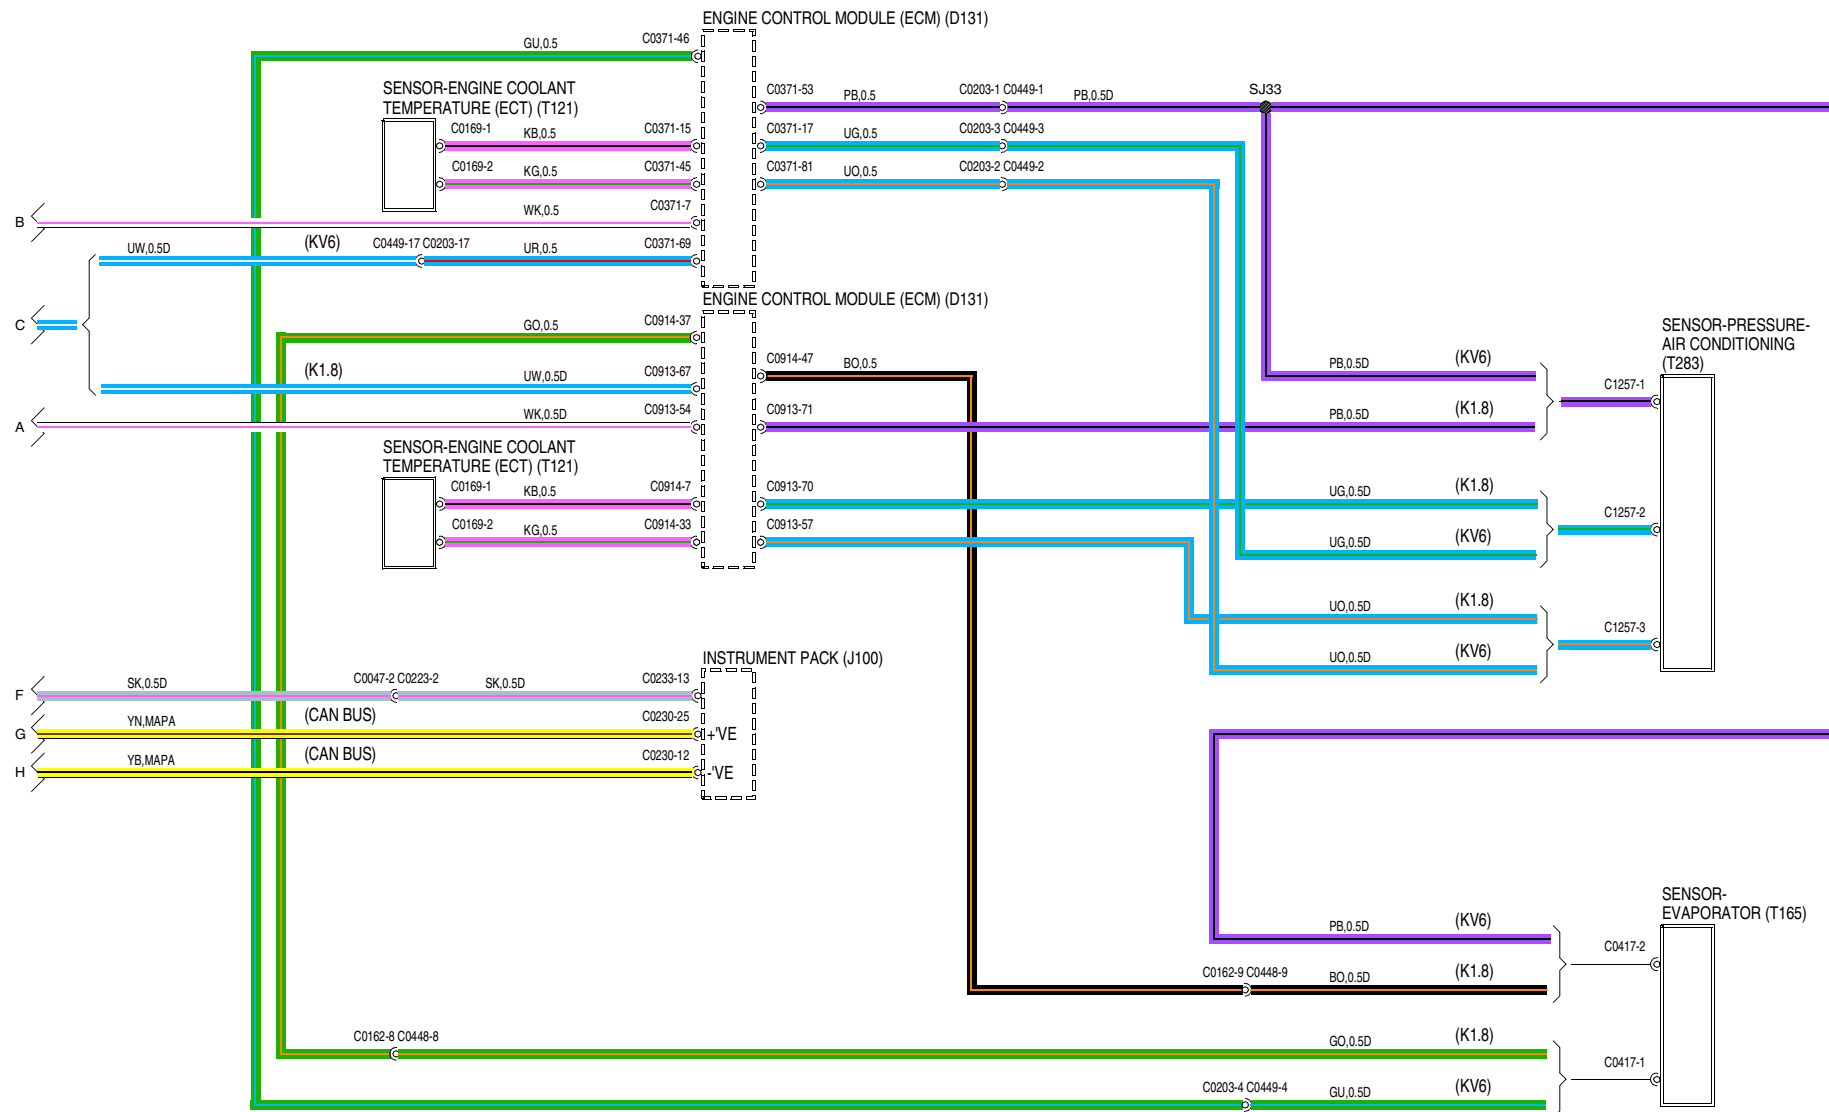


VWR004590-A-03

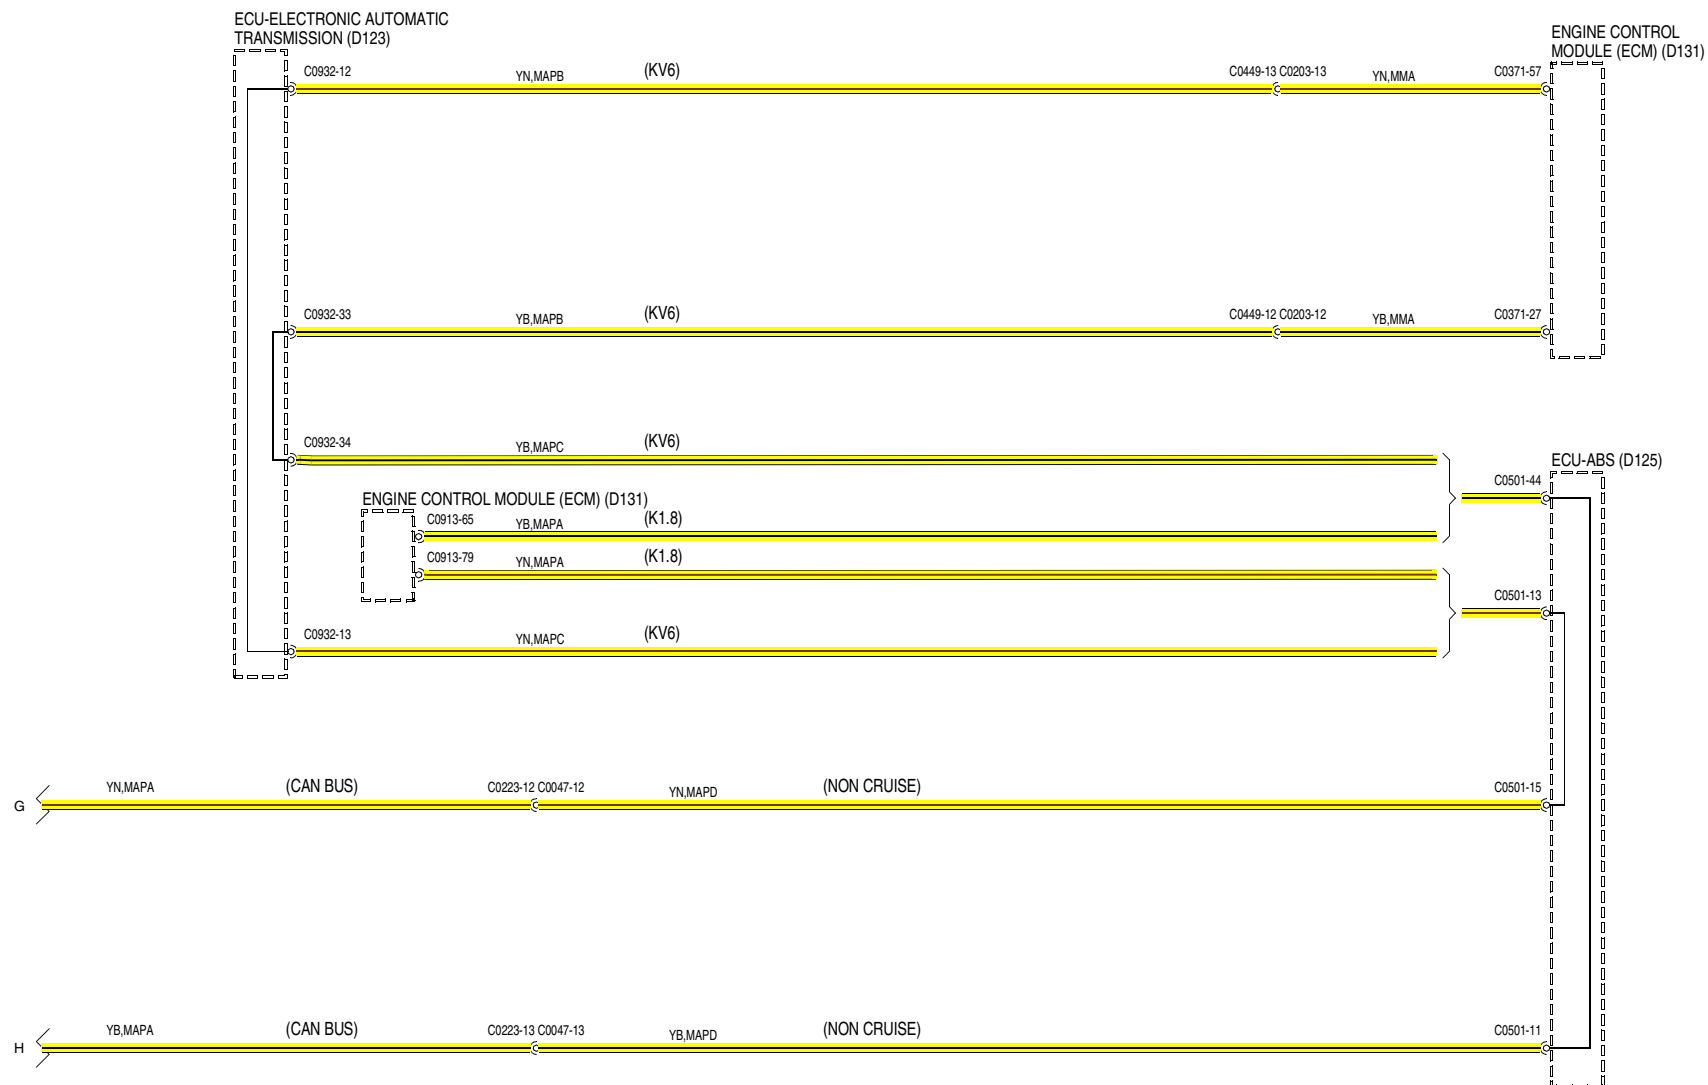


VWR004590-A-04

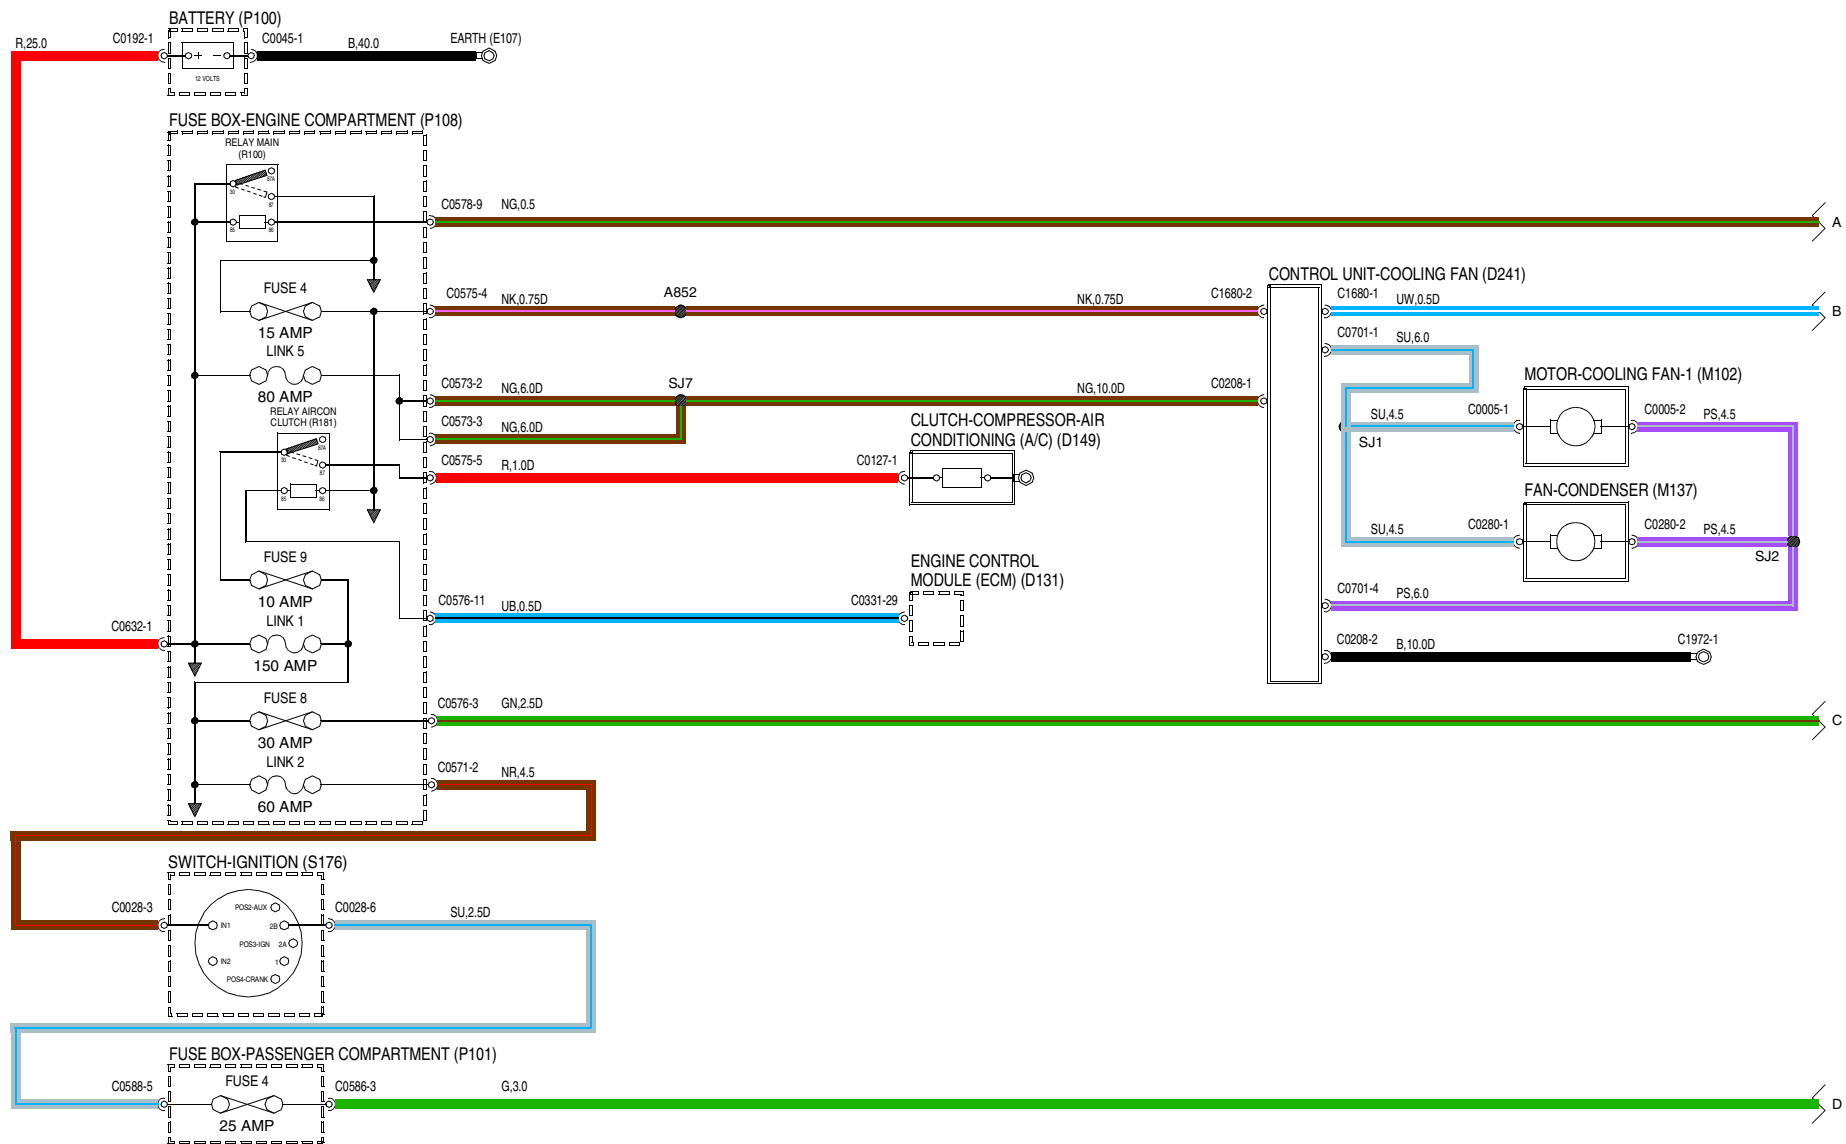

VWR003960-A-01

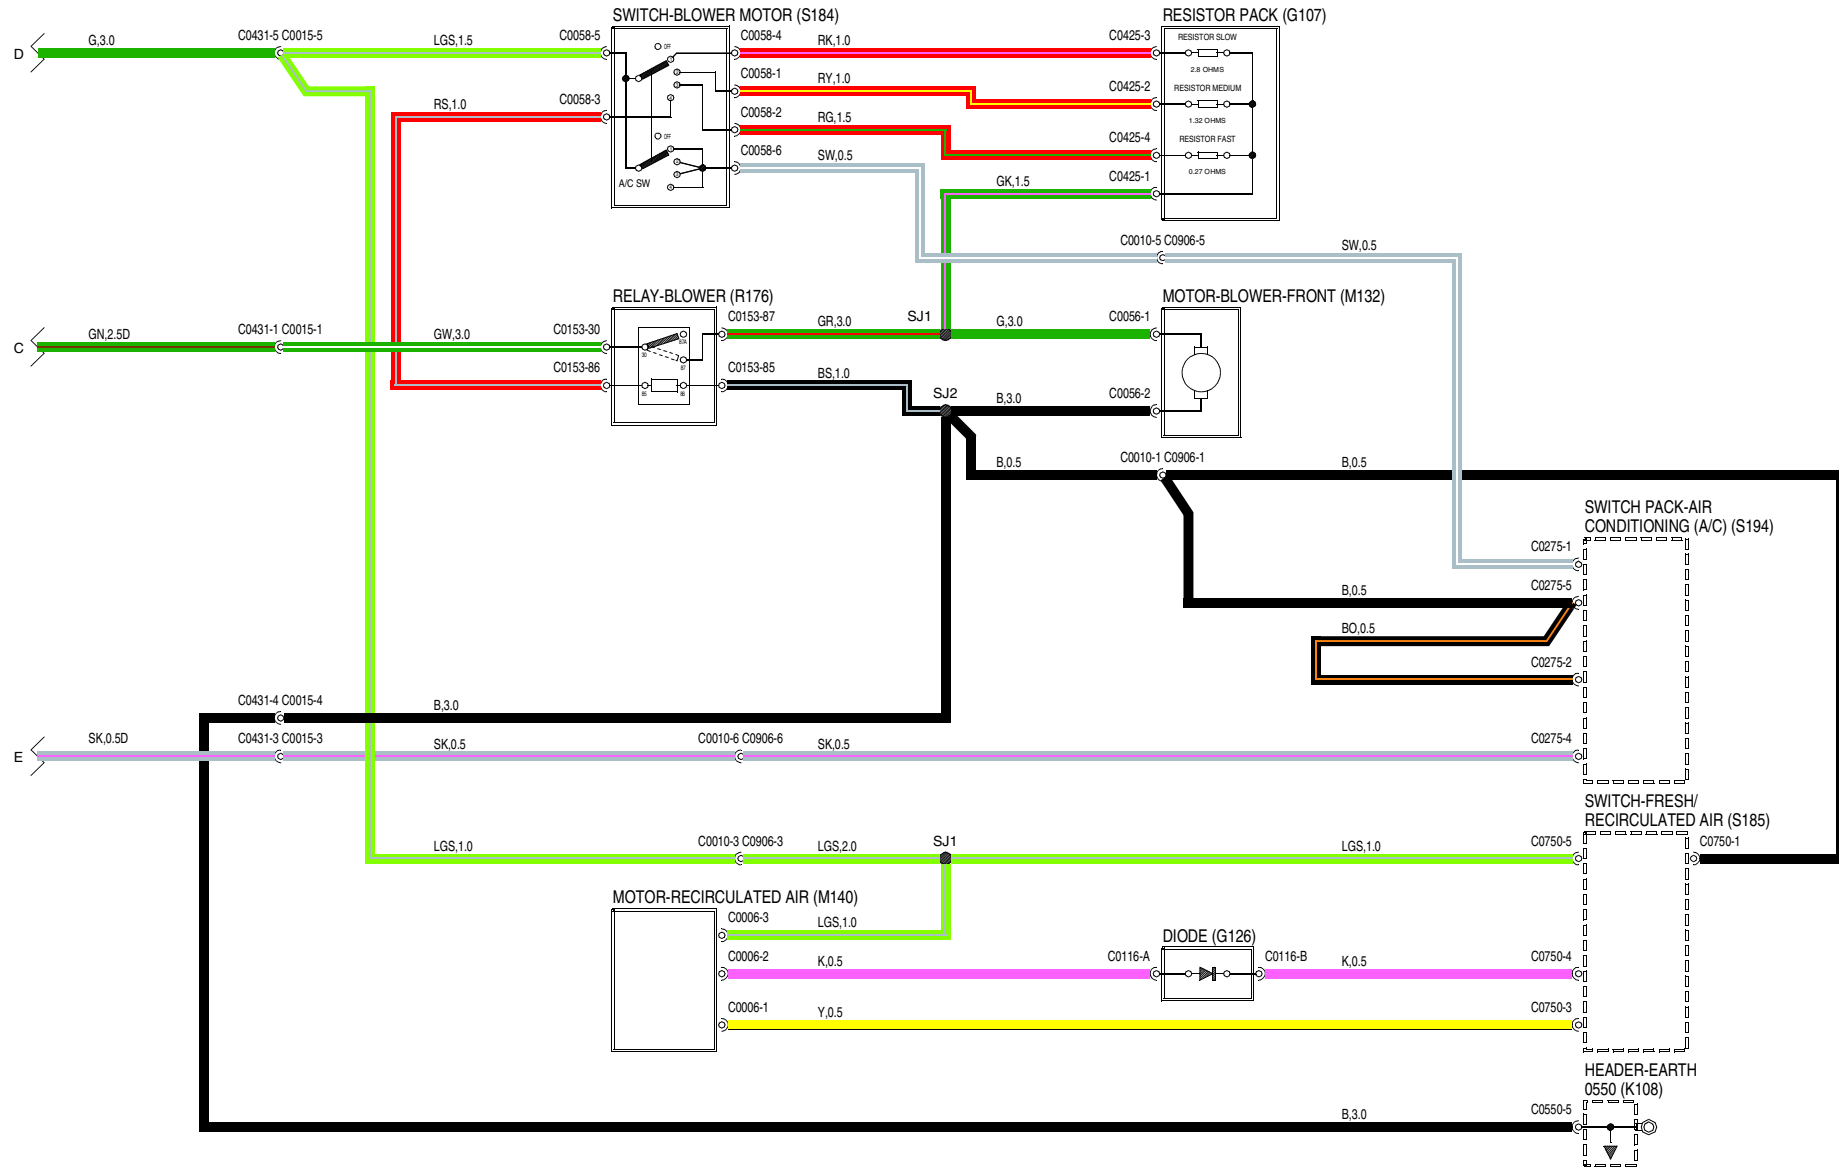


VWR003960-A-02

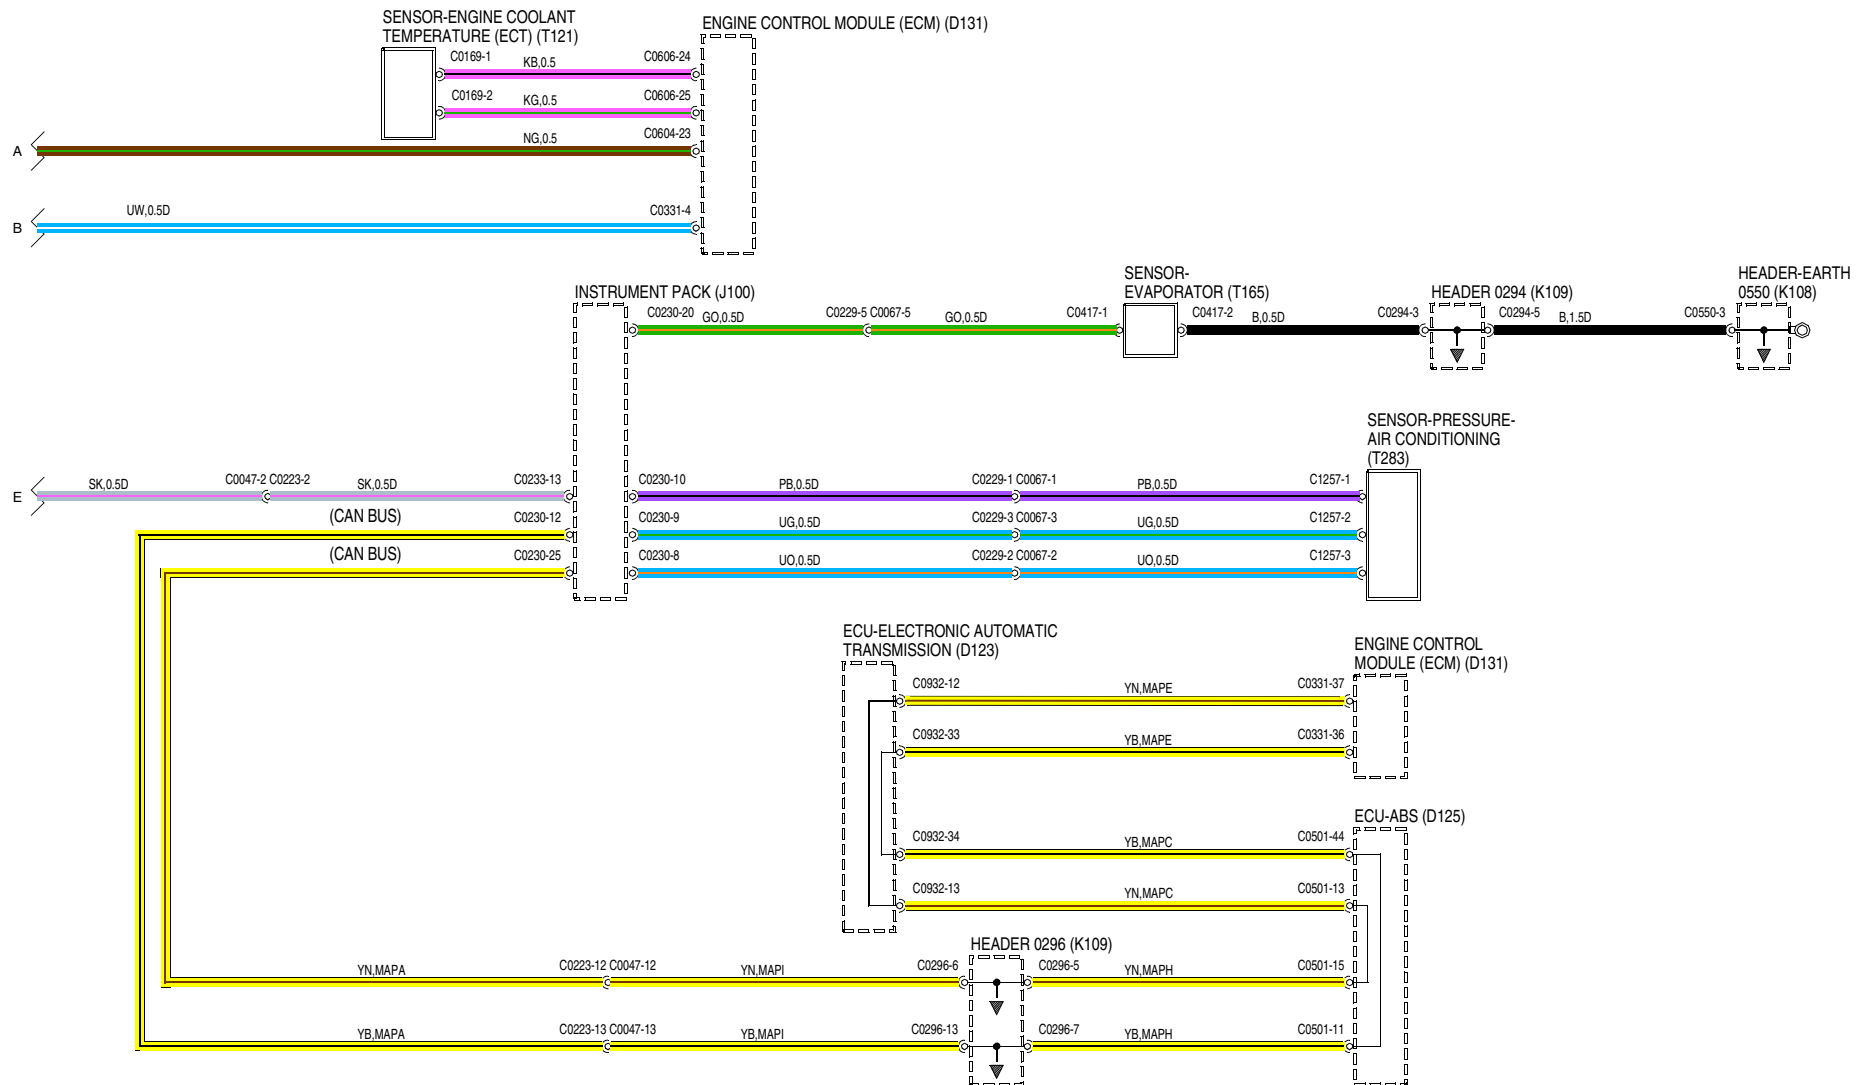


VWR003960-A-03

39 FUEL BURNING HEATER

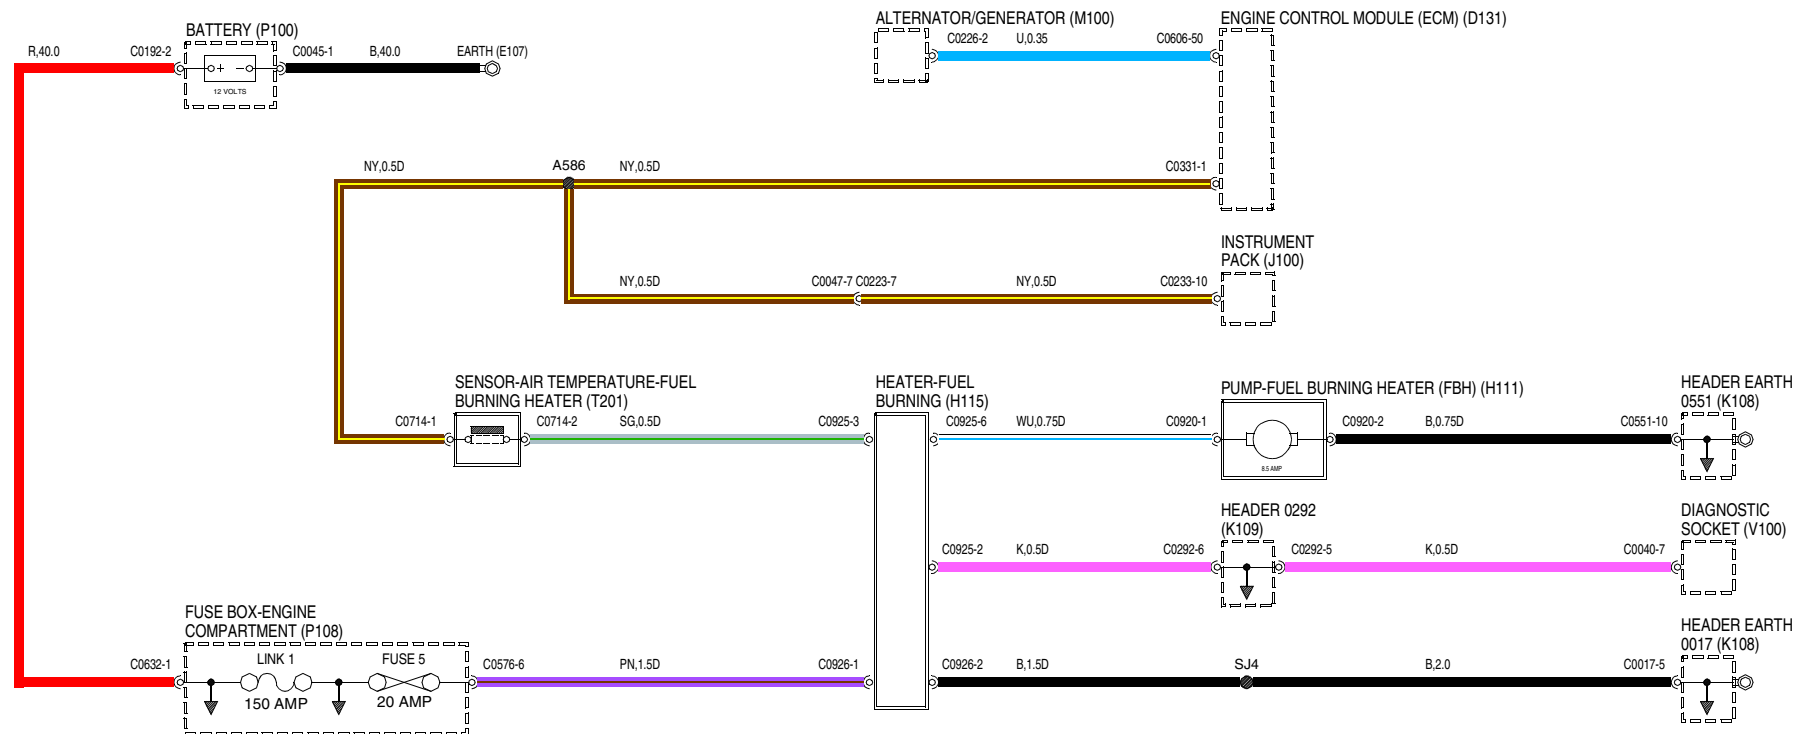


VWR004110-A-01

39 HEATER

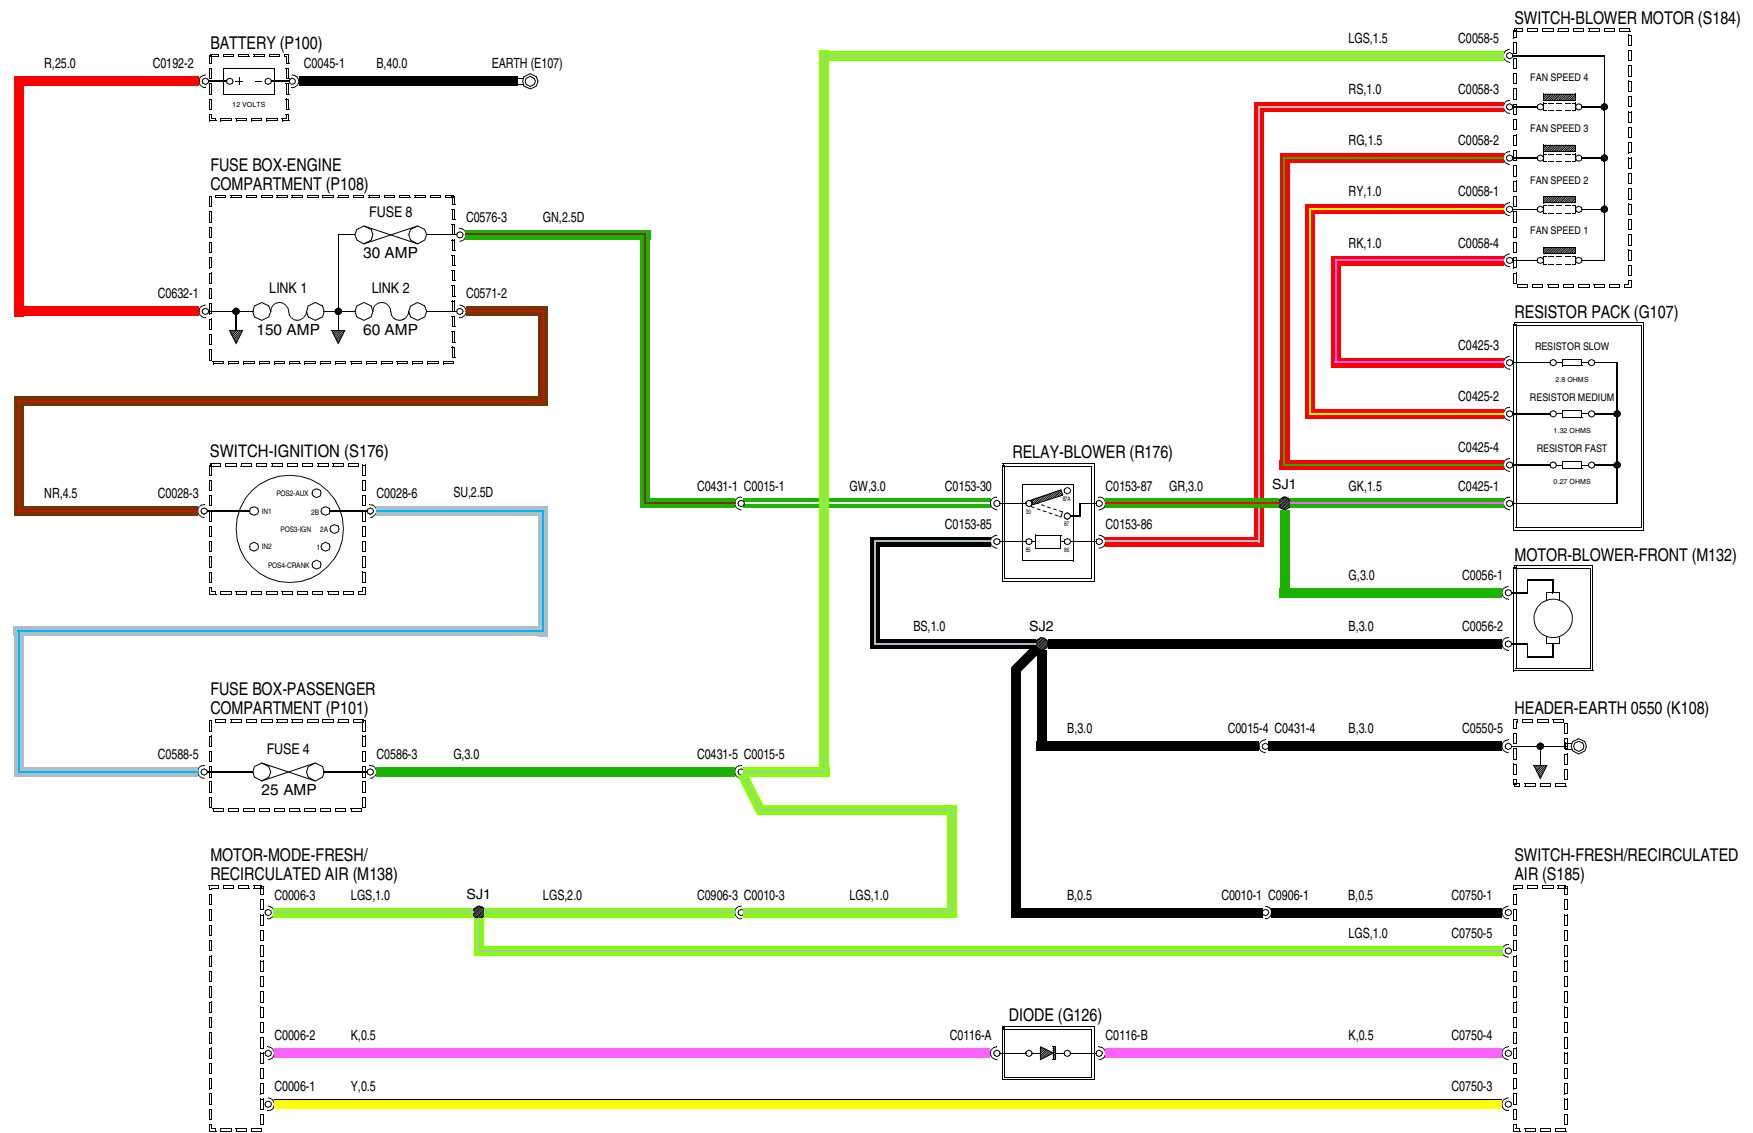


VWR004160-A-01

40 HEATED REAR SCREEN

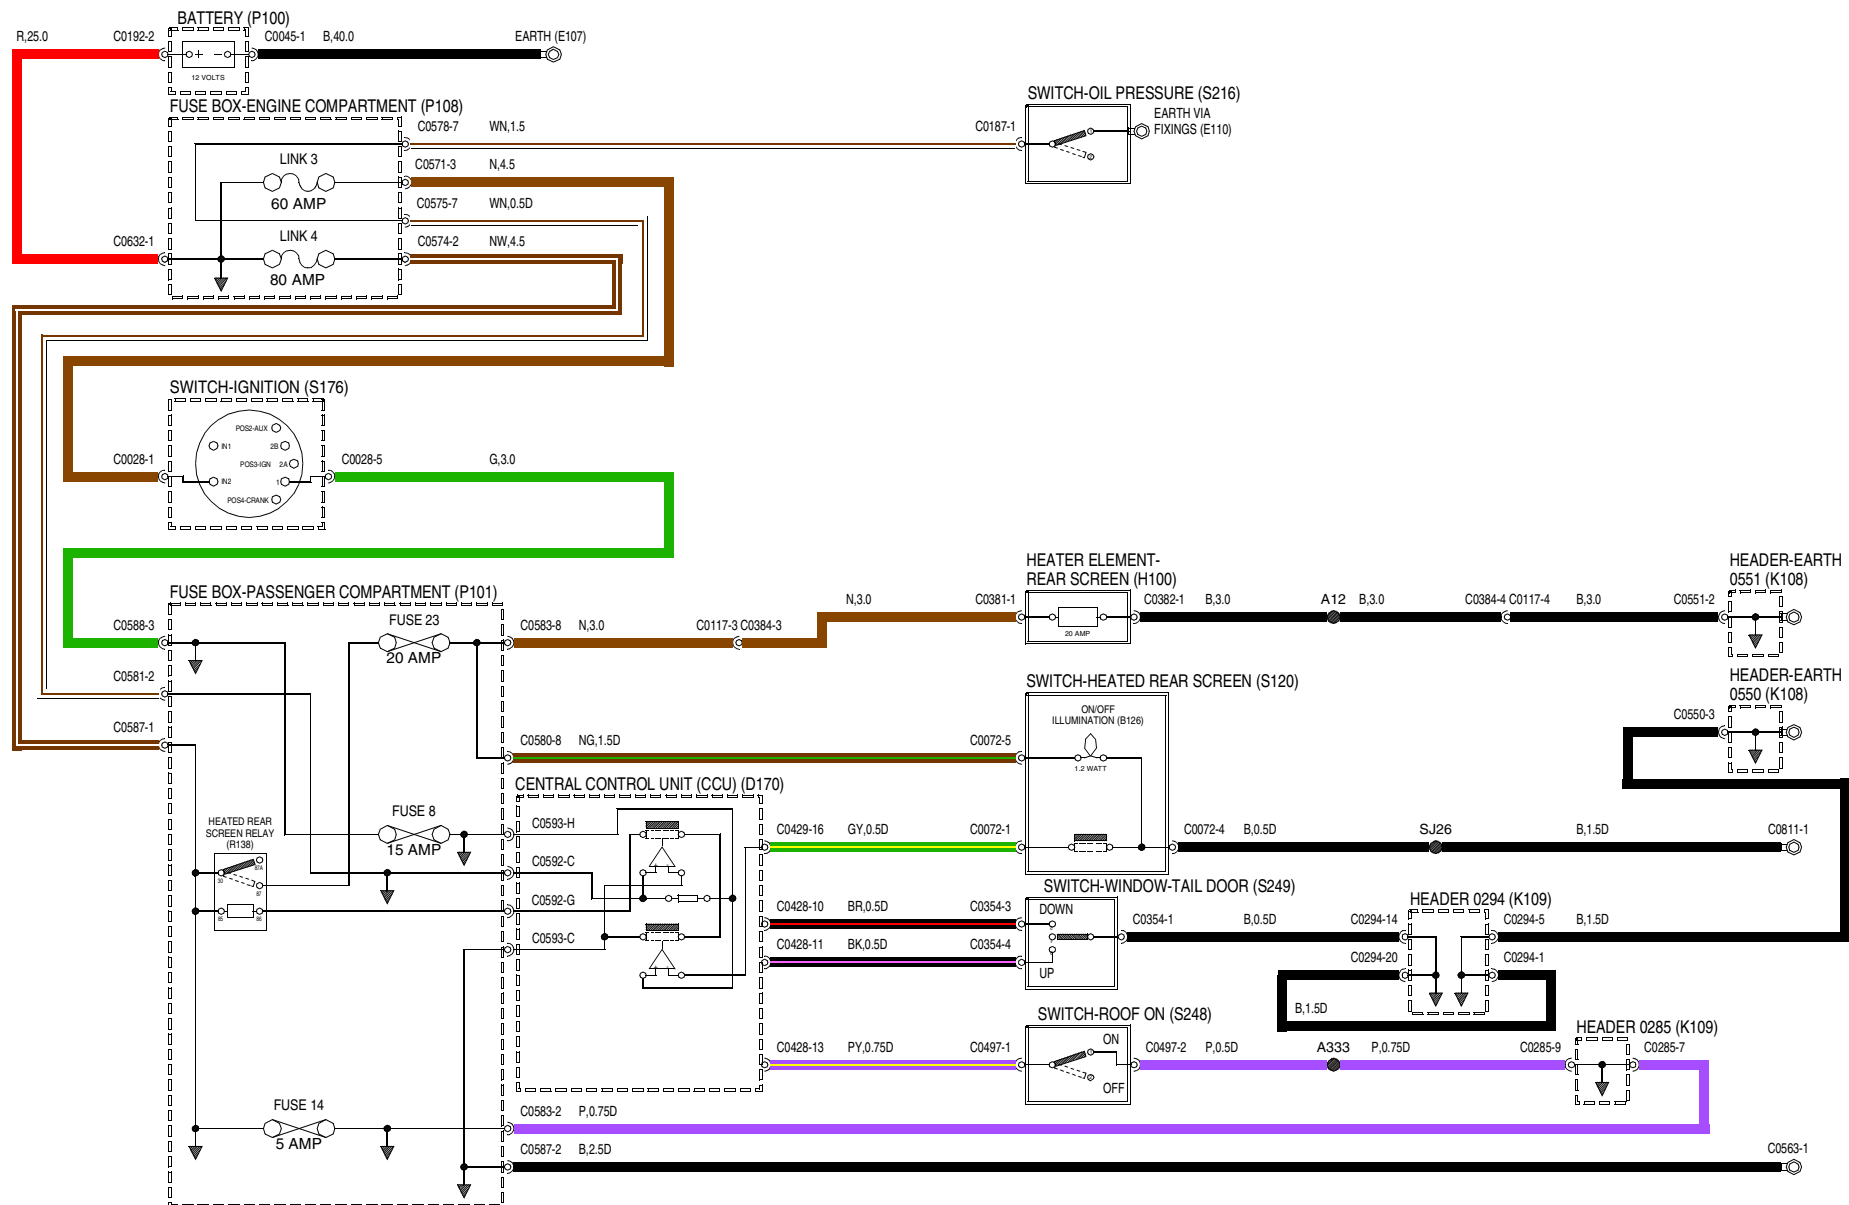


VWR004150-A-01


40 HEATED FRONT SCREEN

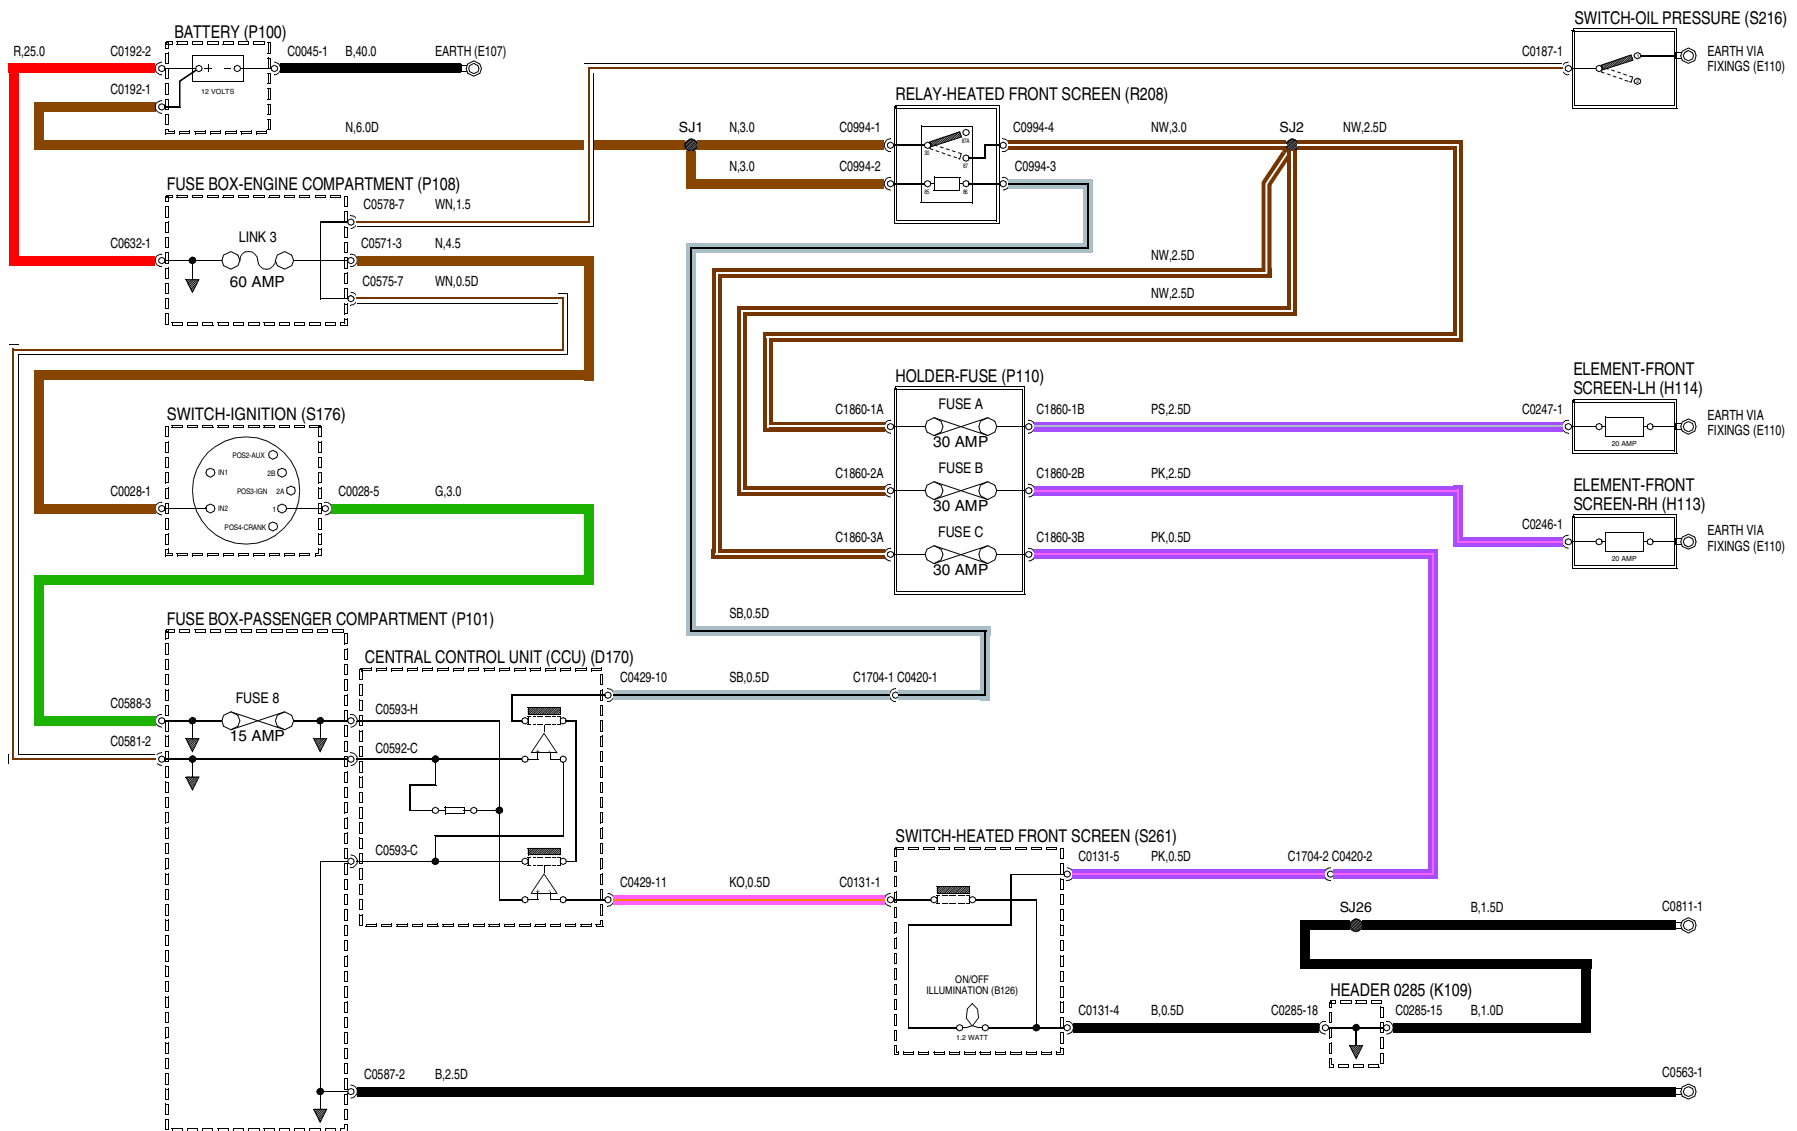


VWR004570-A-01

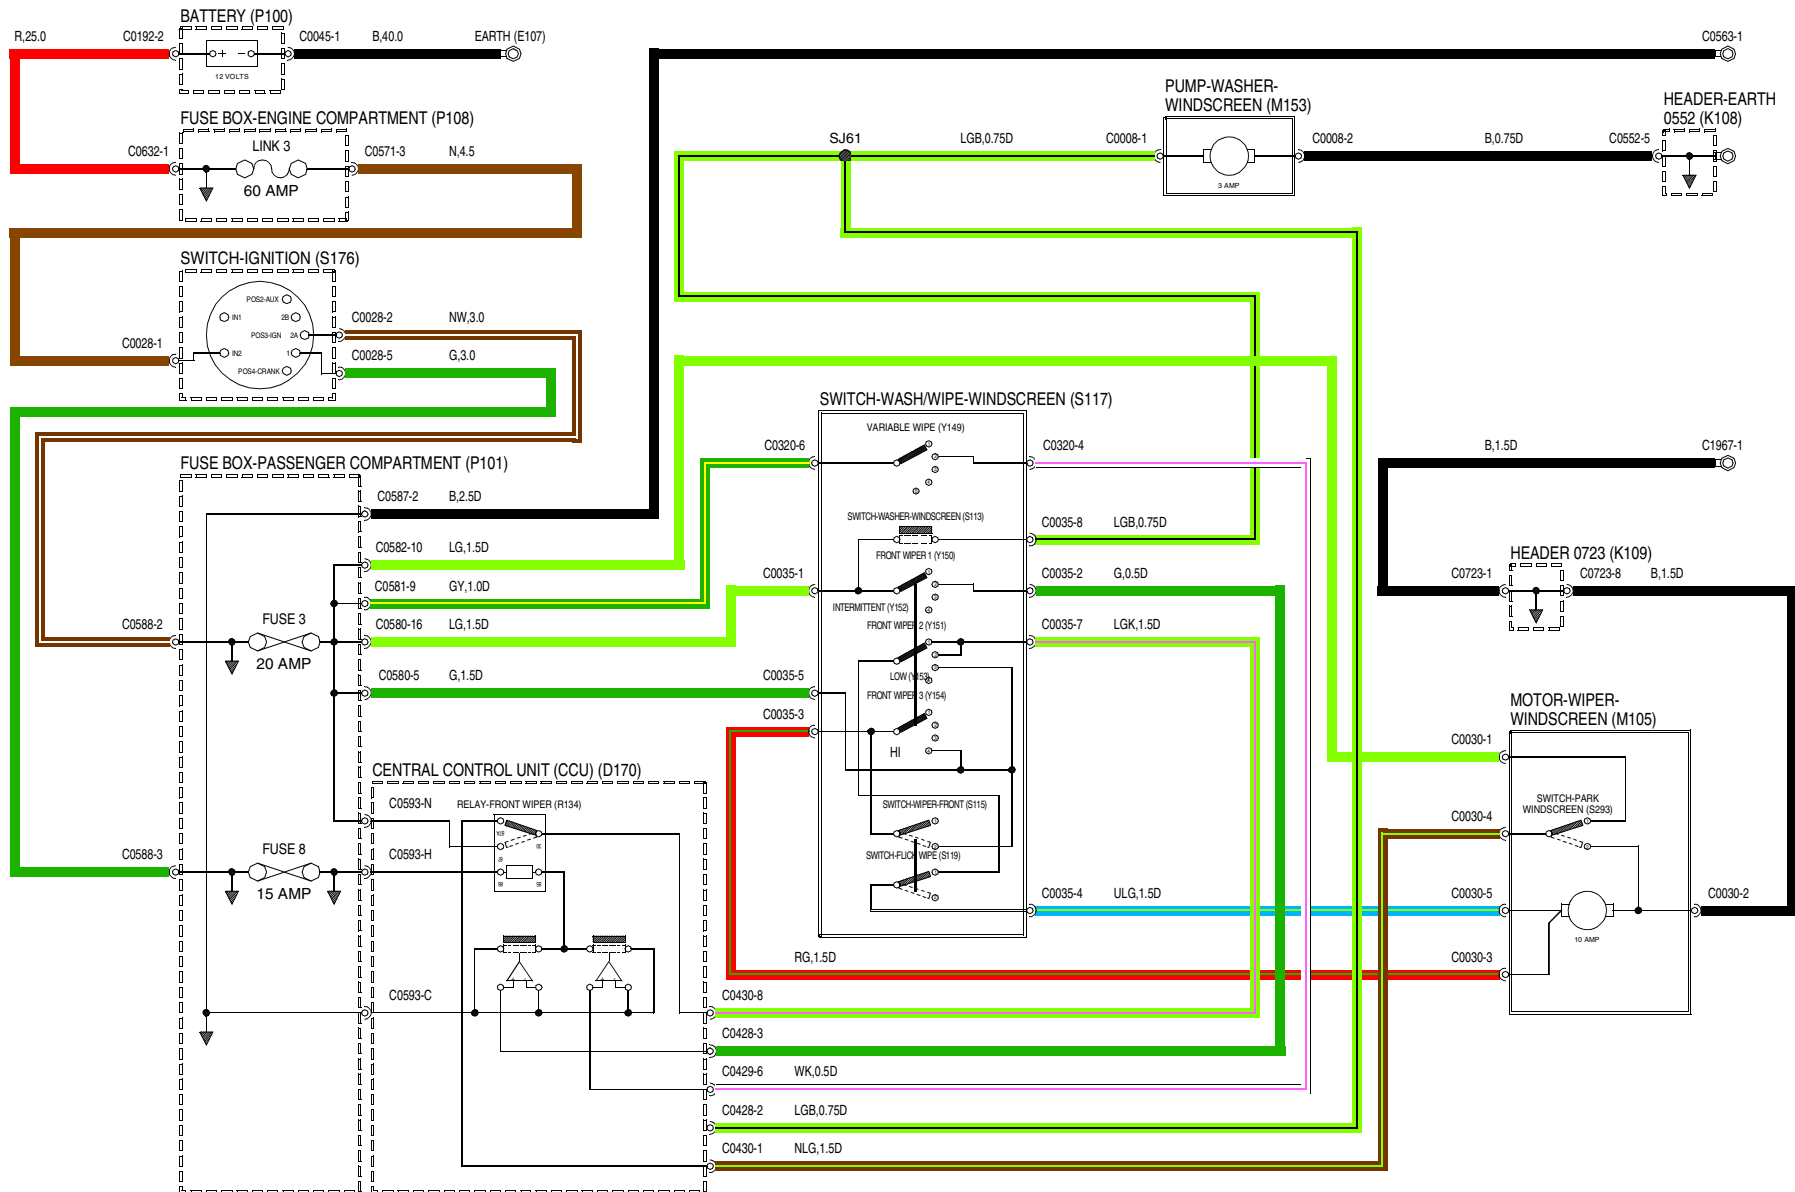


VWR004390-A-01

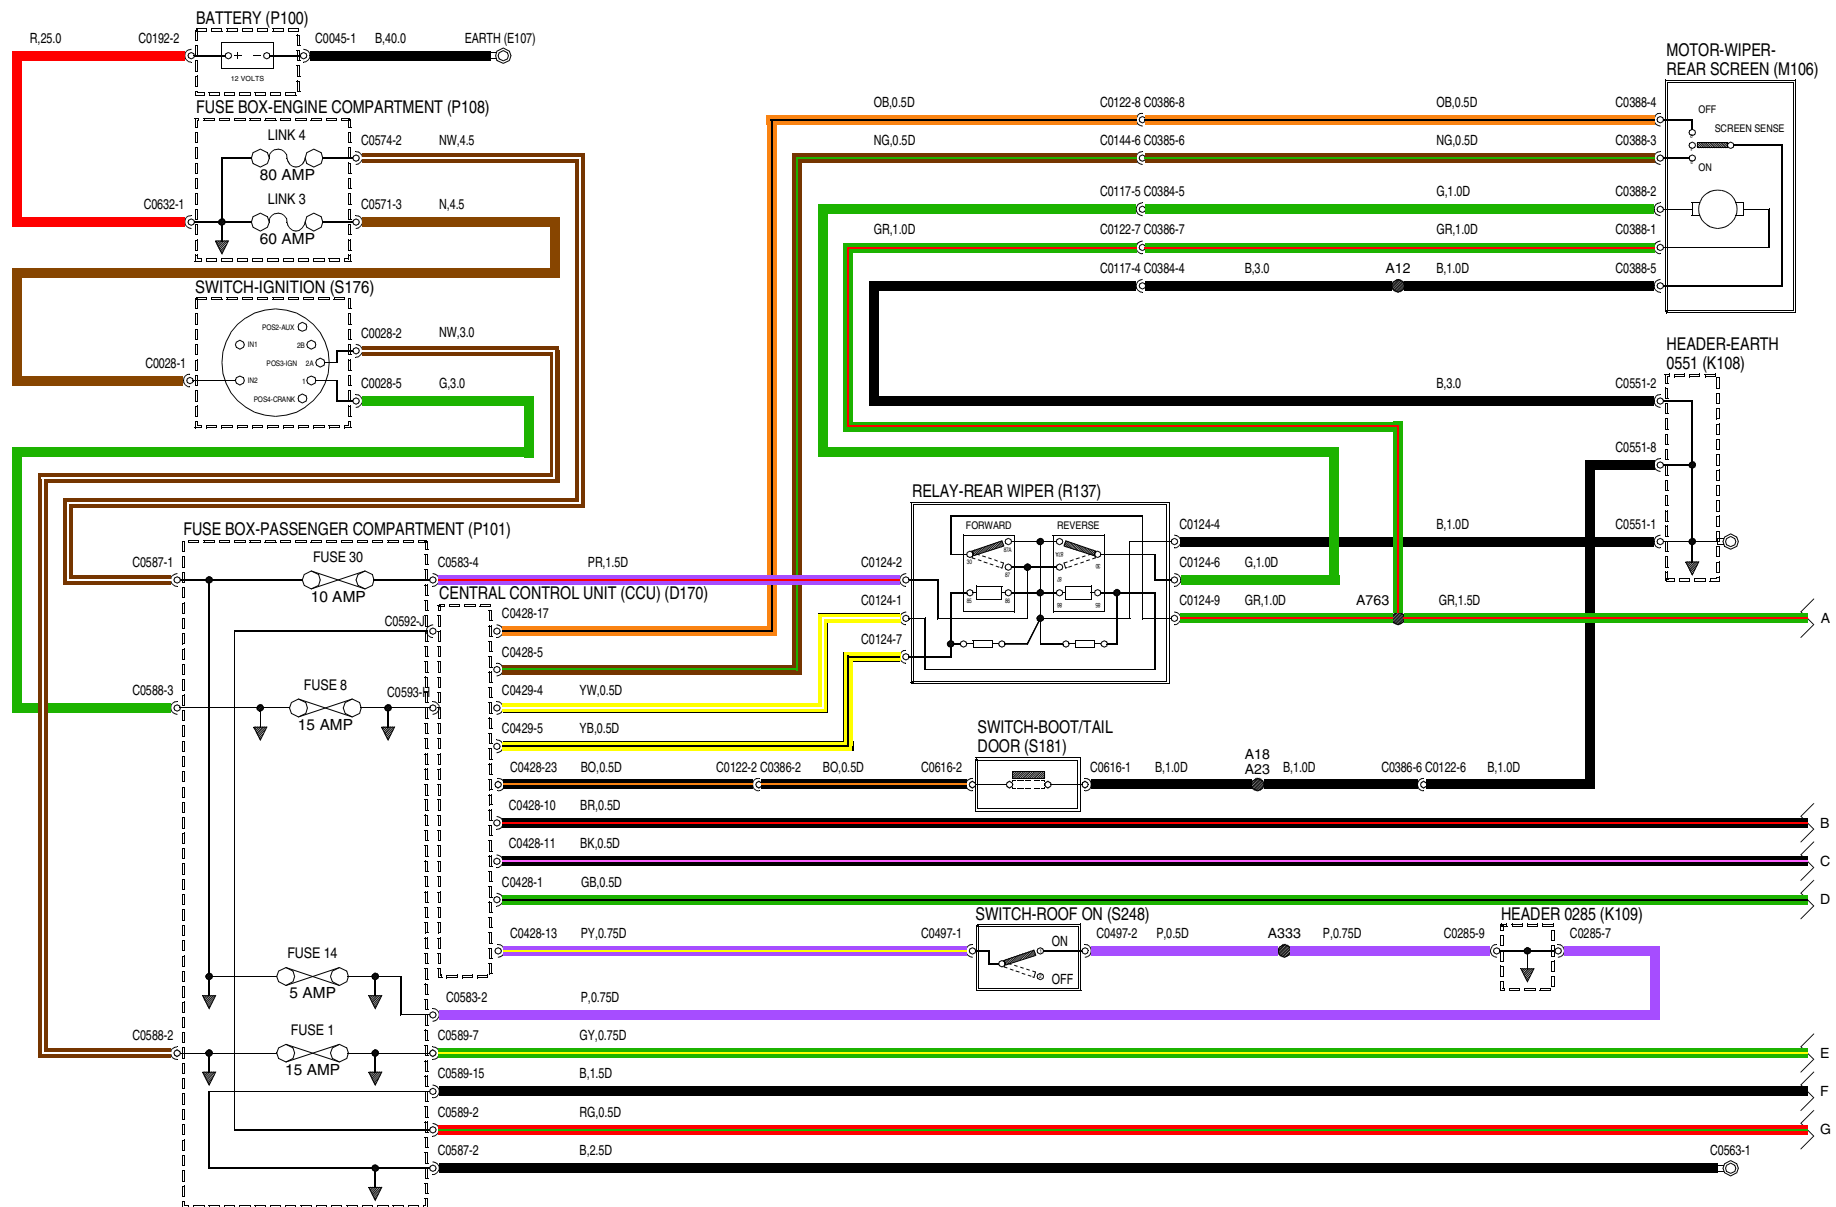


VWR004400-A-01

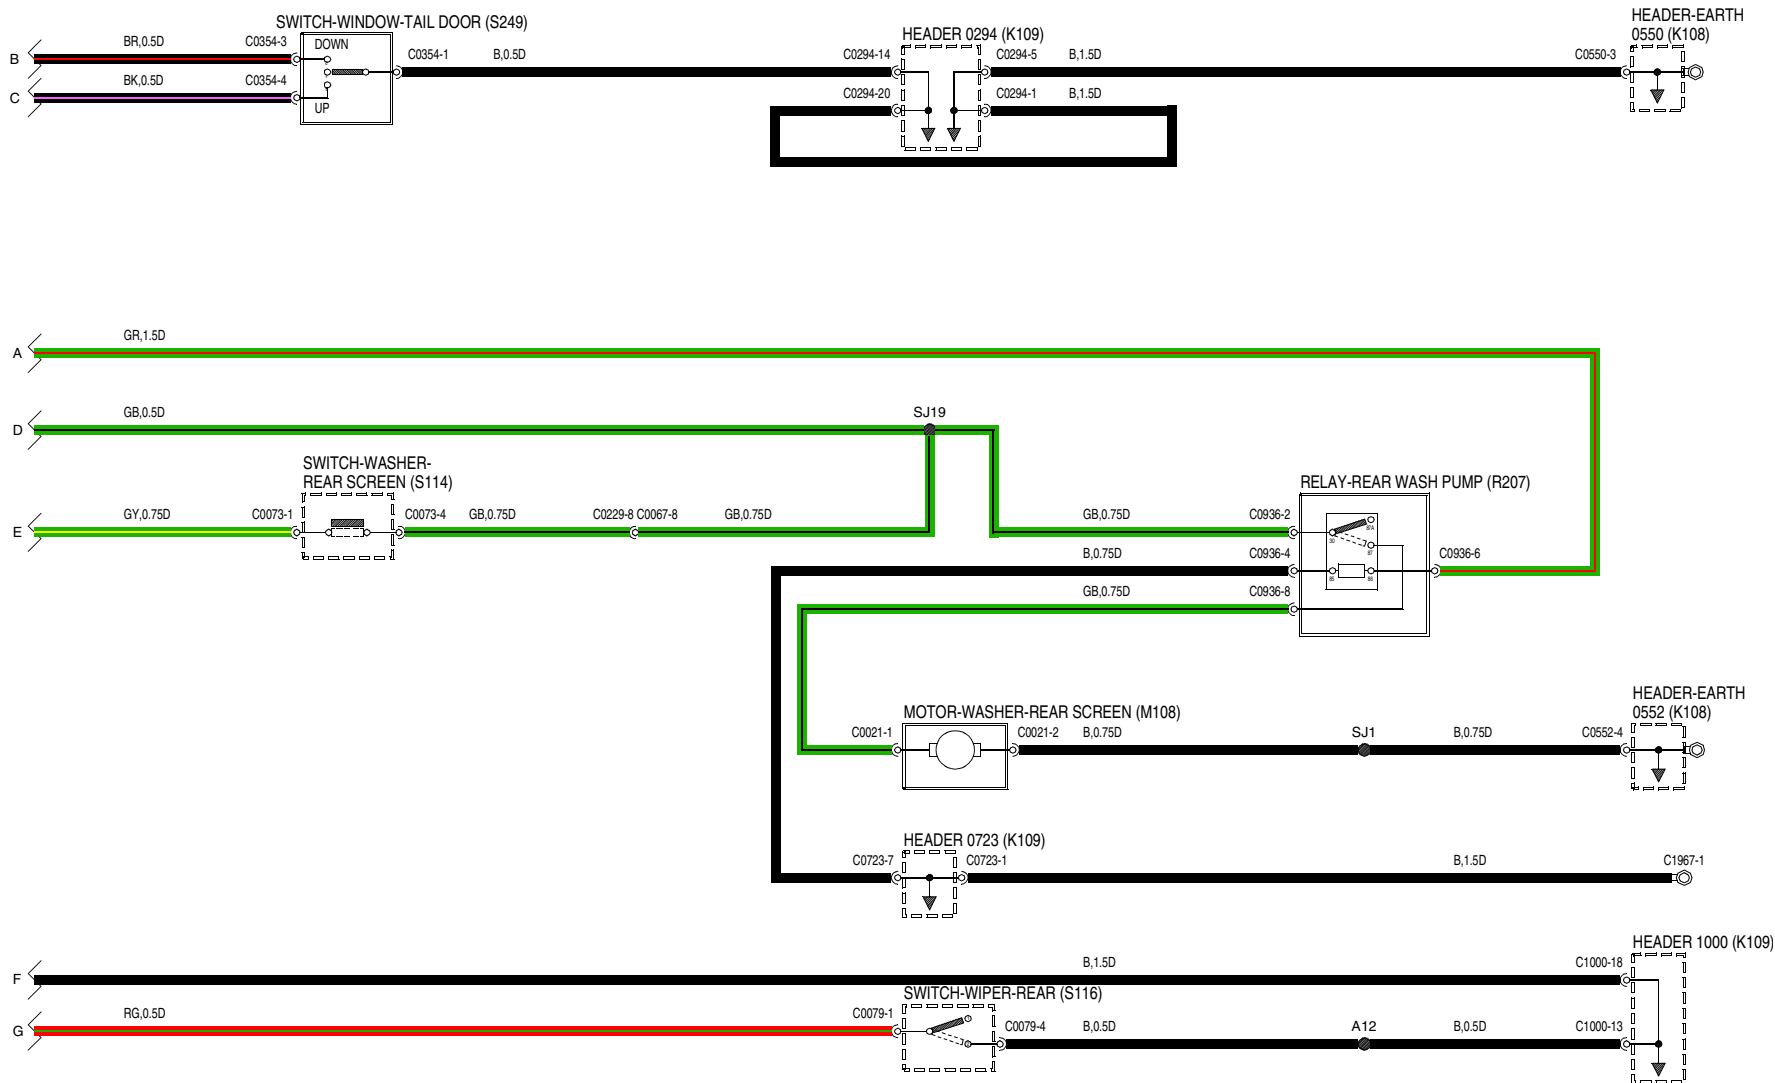


VWR004400-A-02

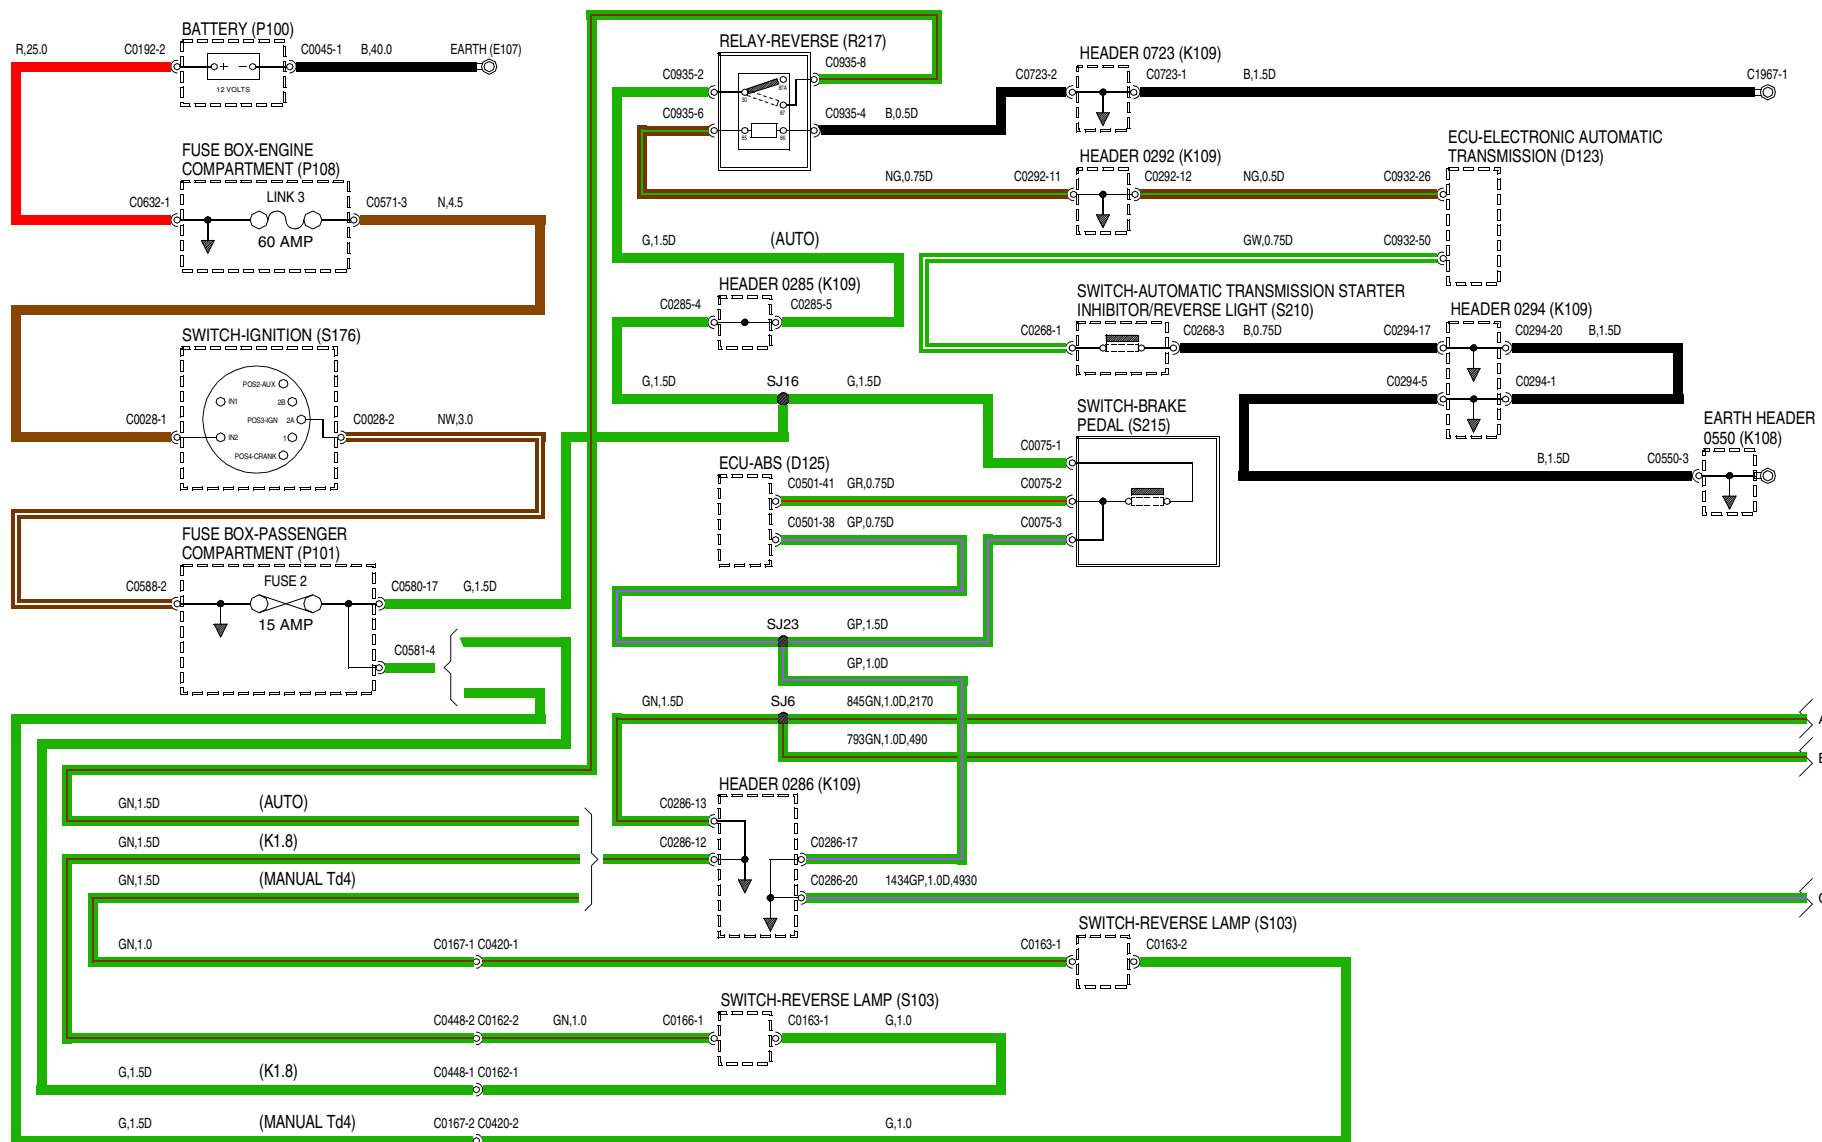


VWR003980-A-01

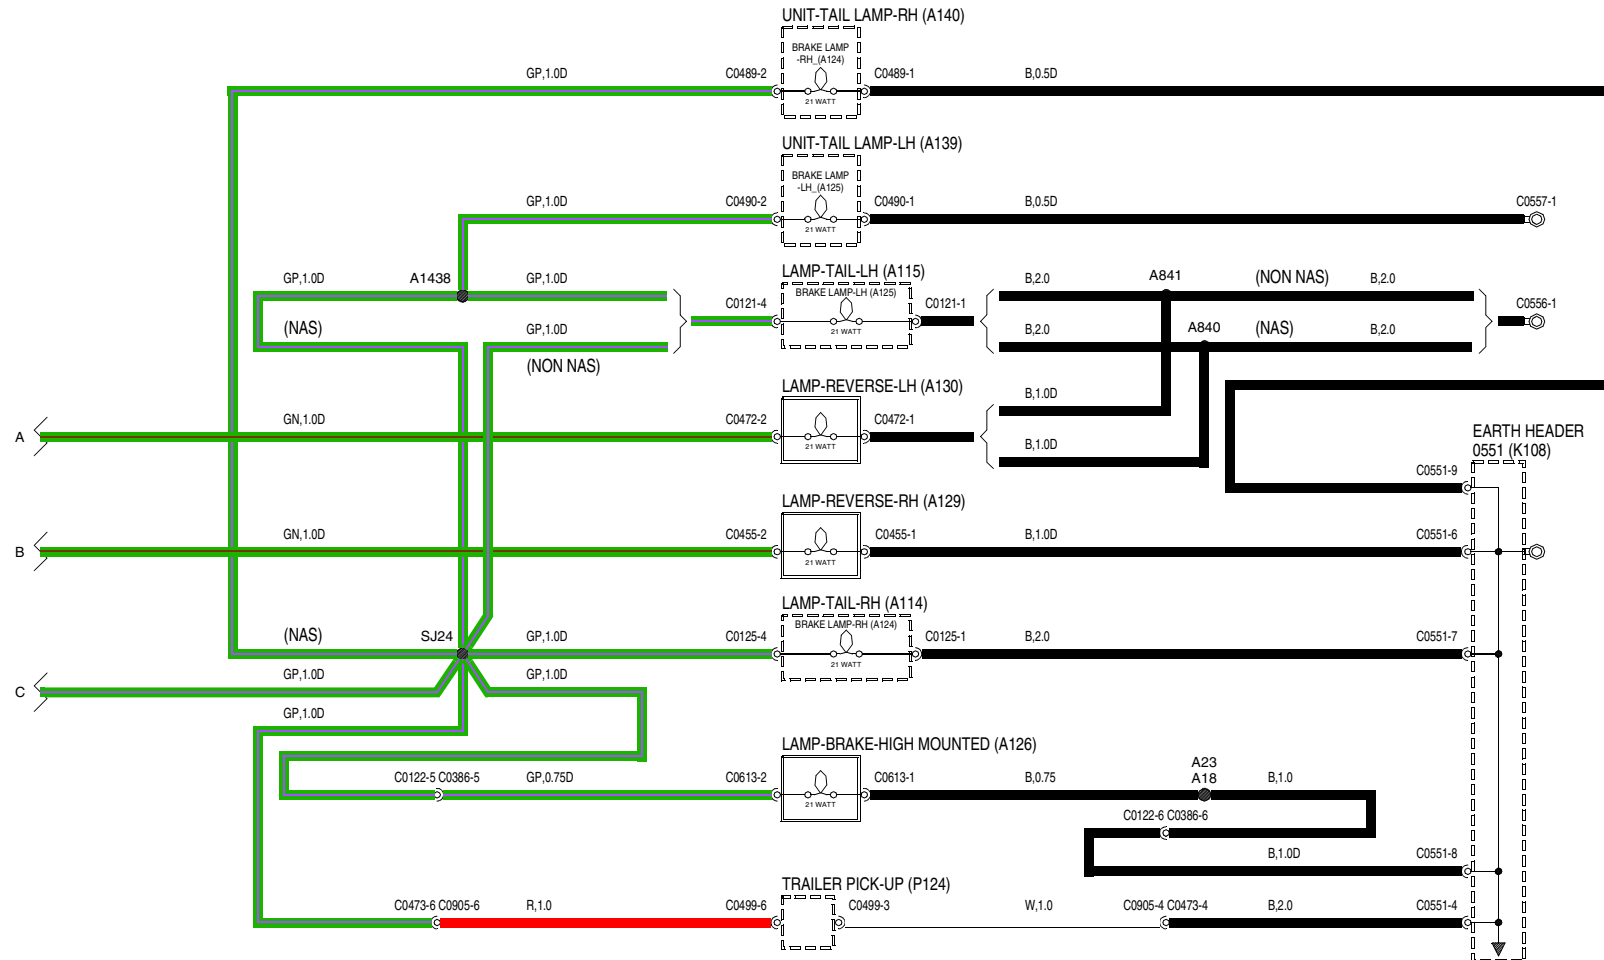



VWR003980-A-02

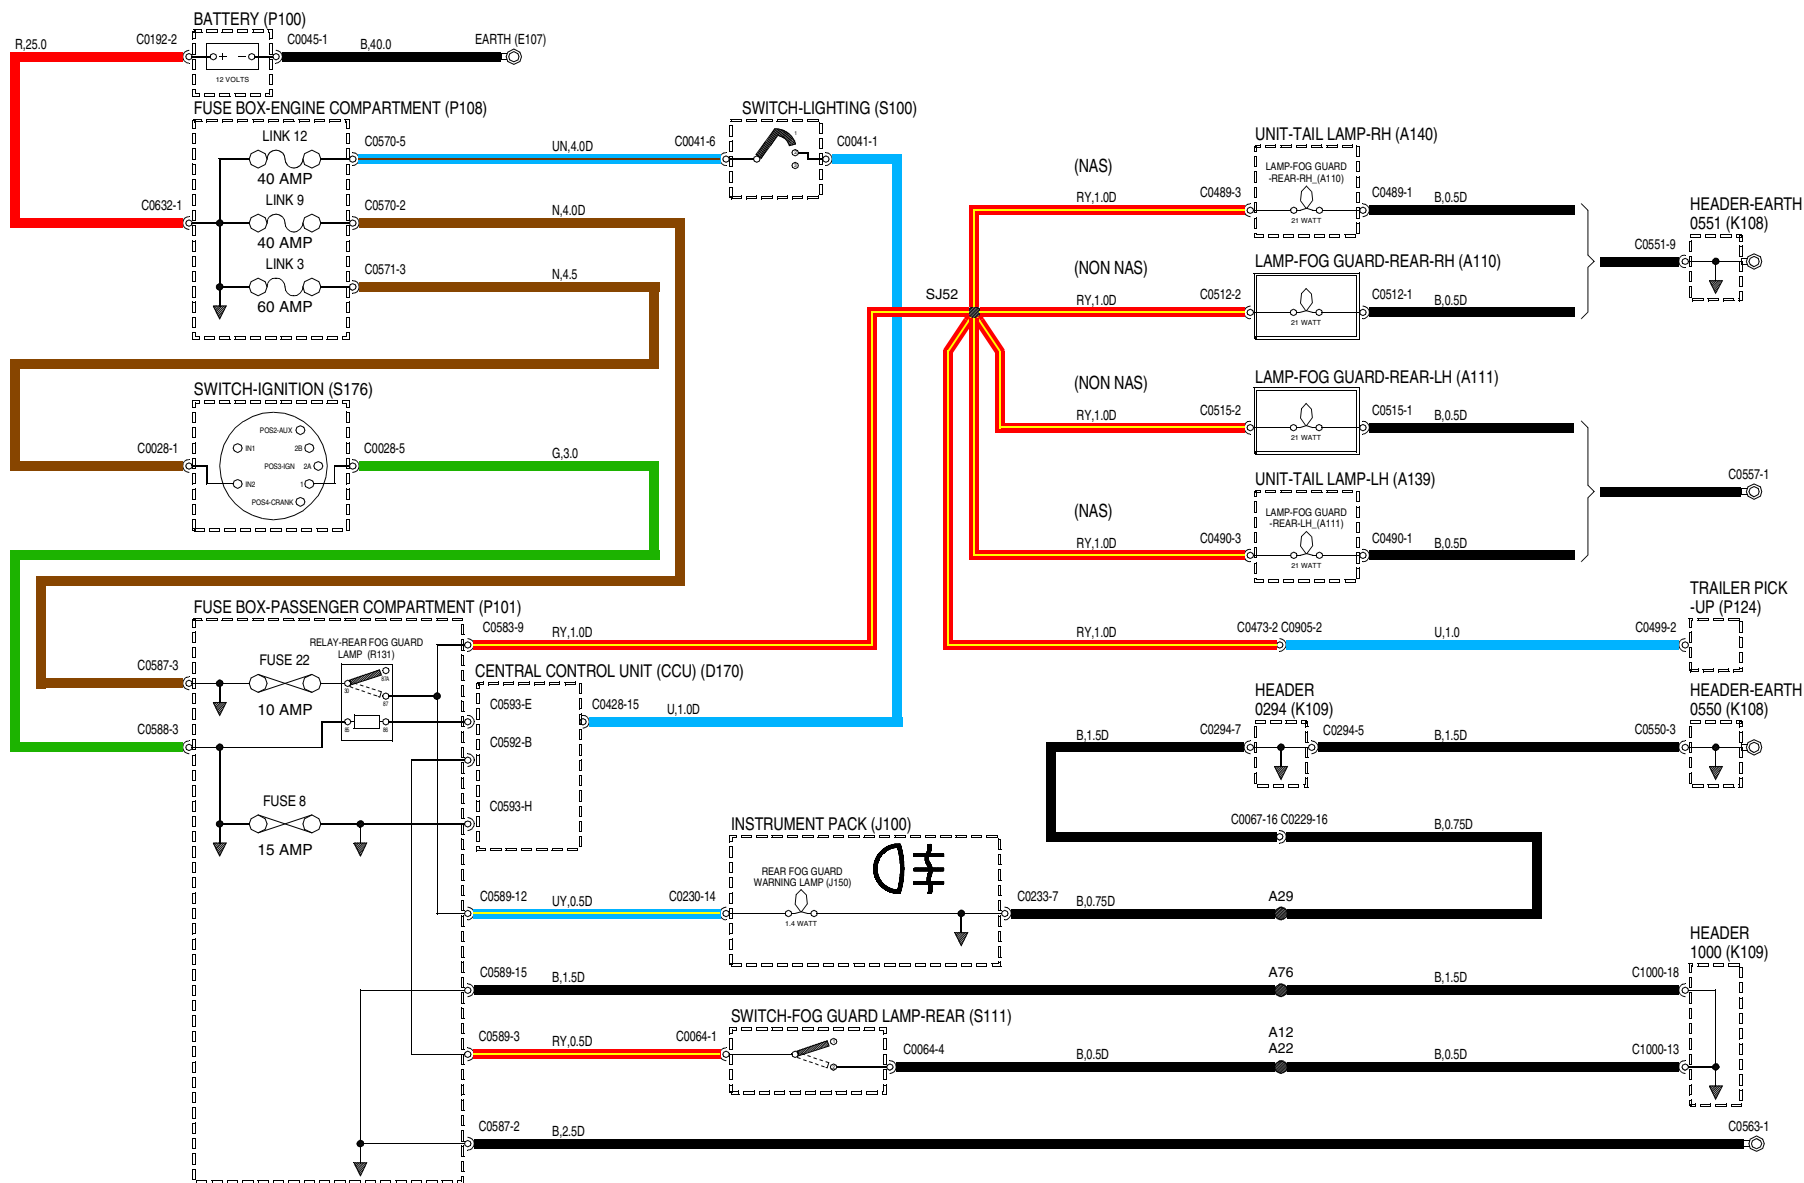


VWR004100-A-01

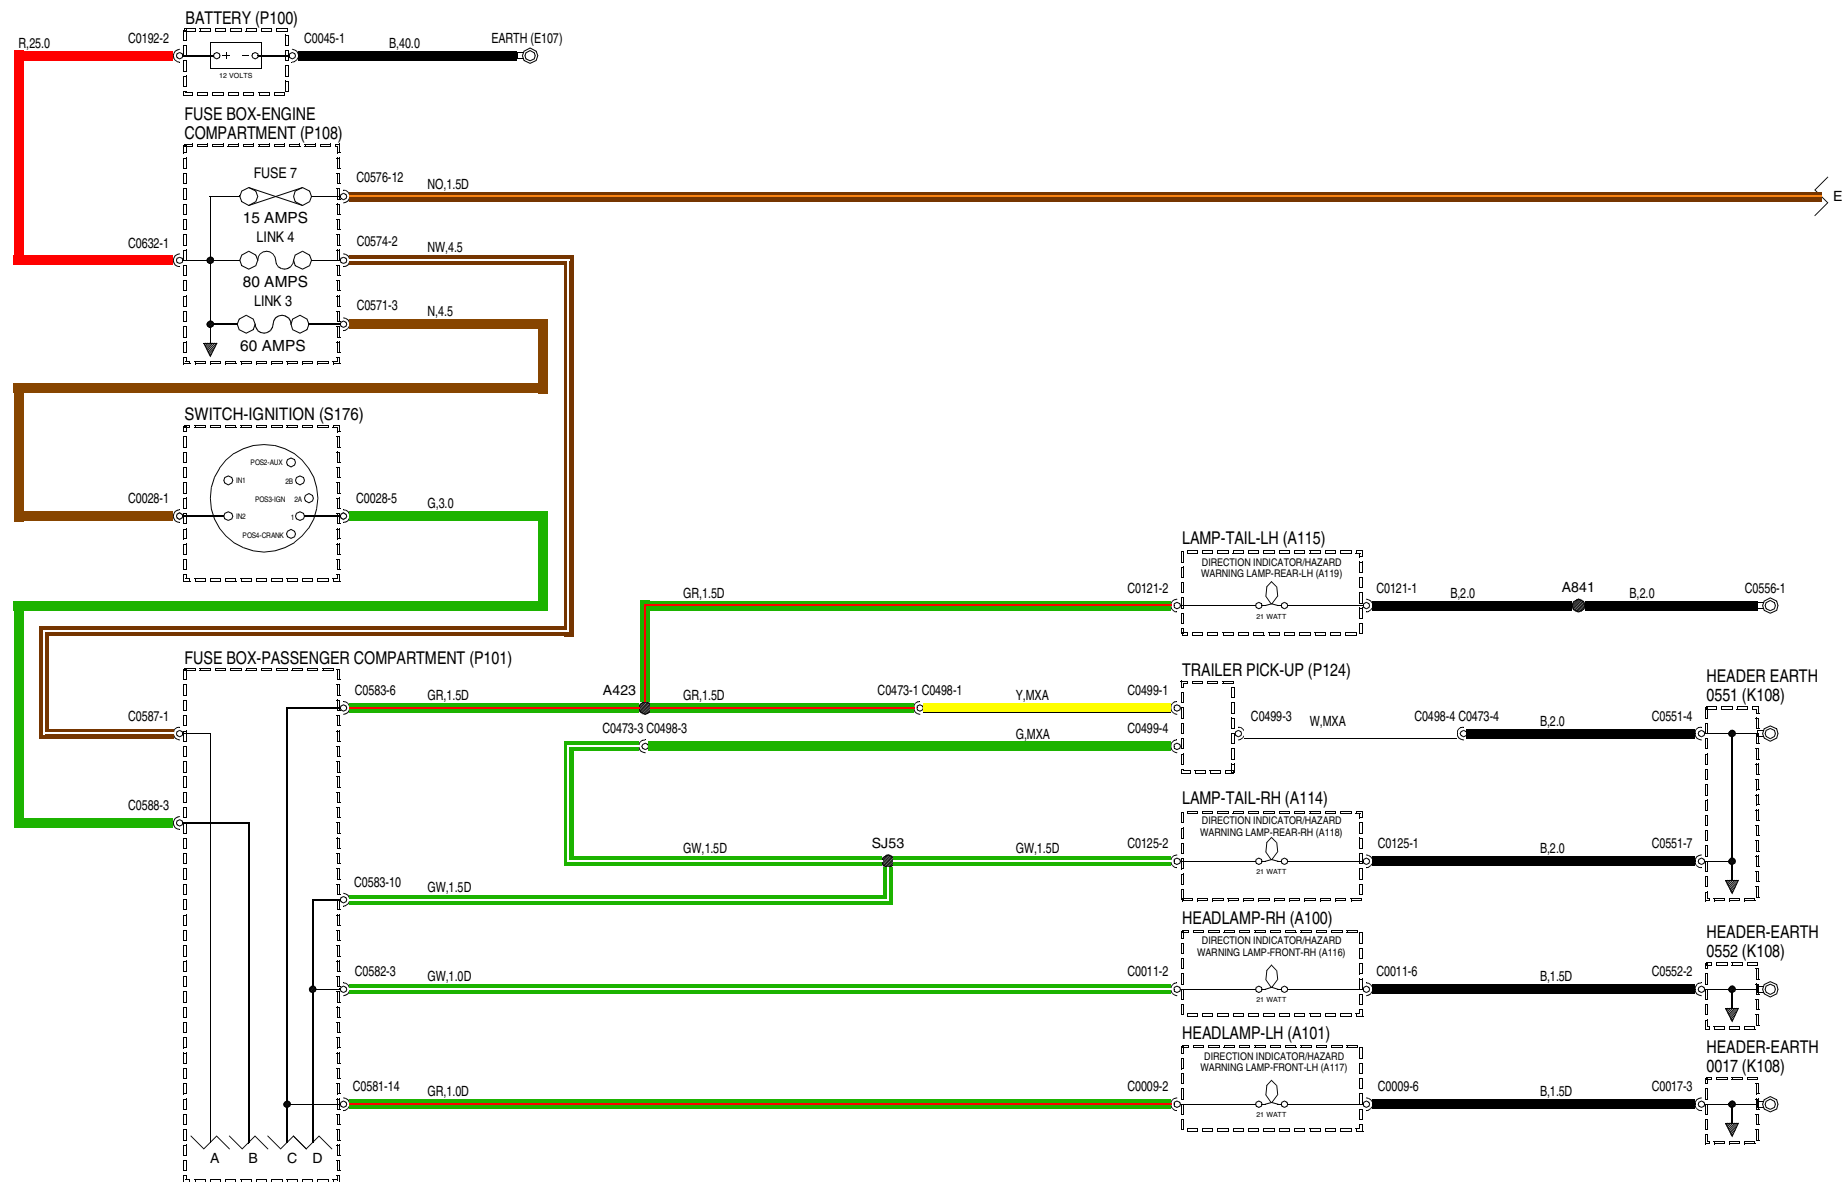


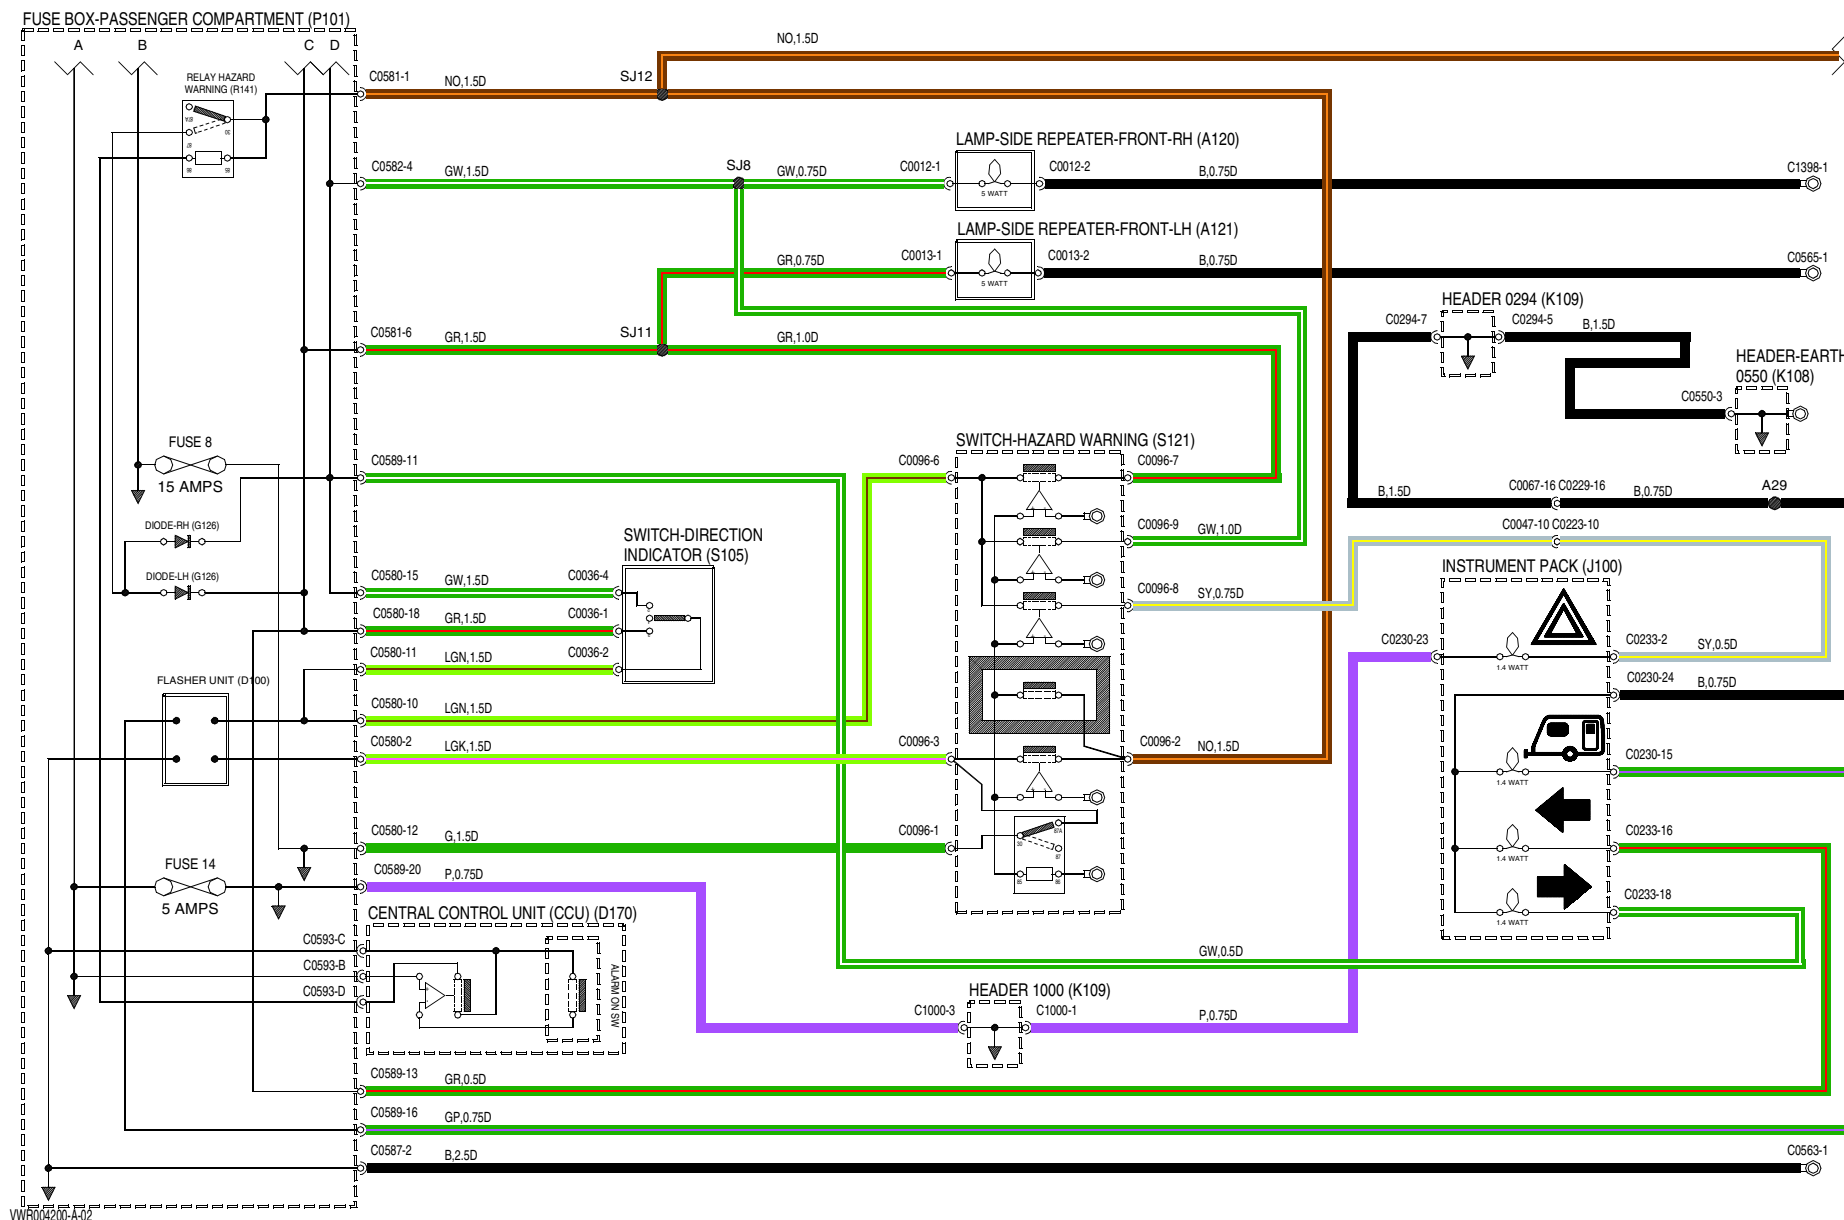

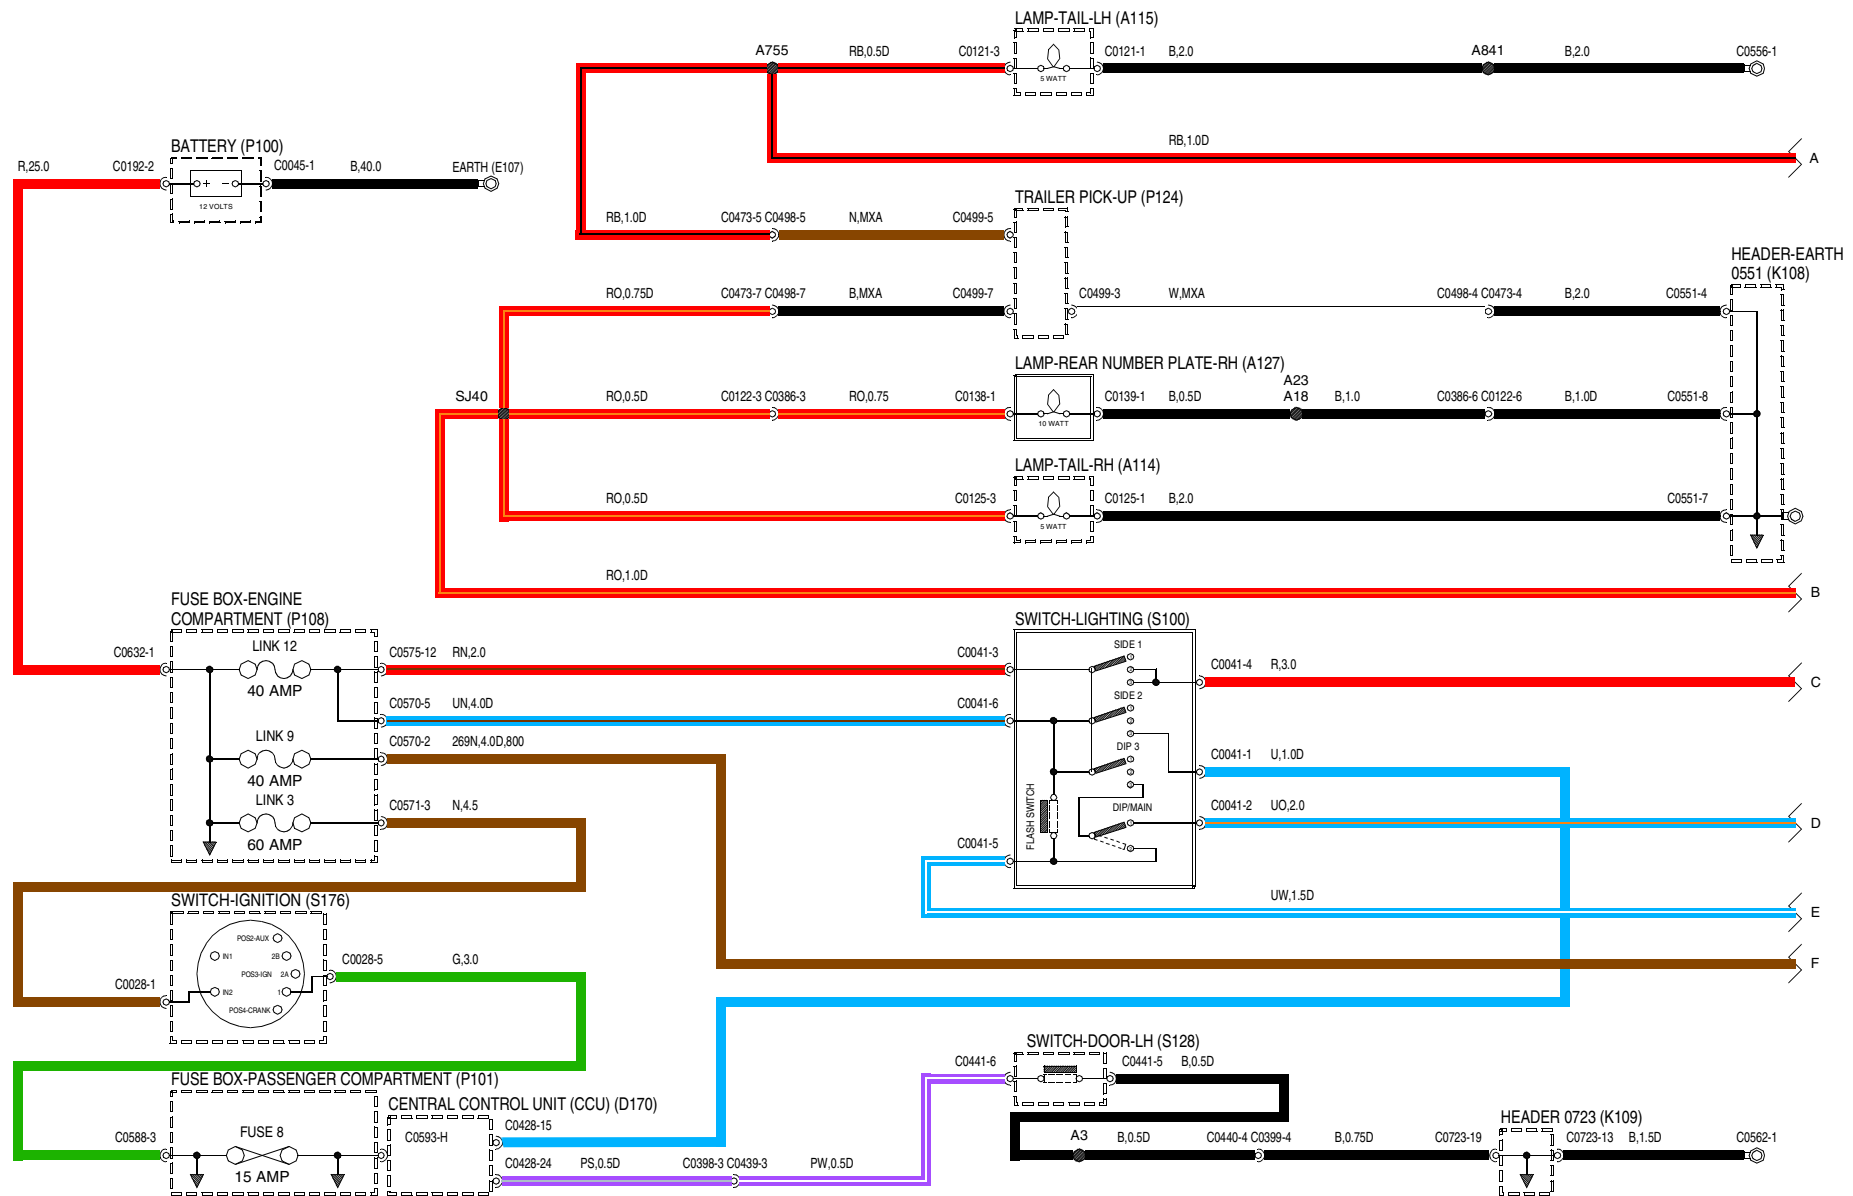



VWR004130-A-01

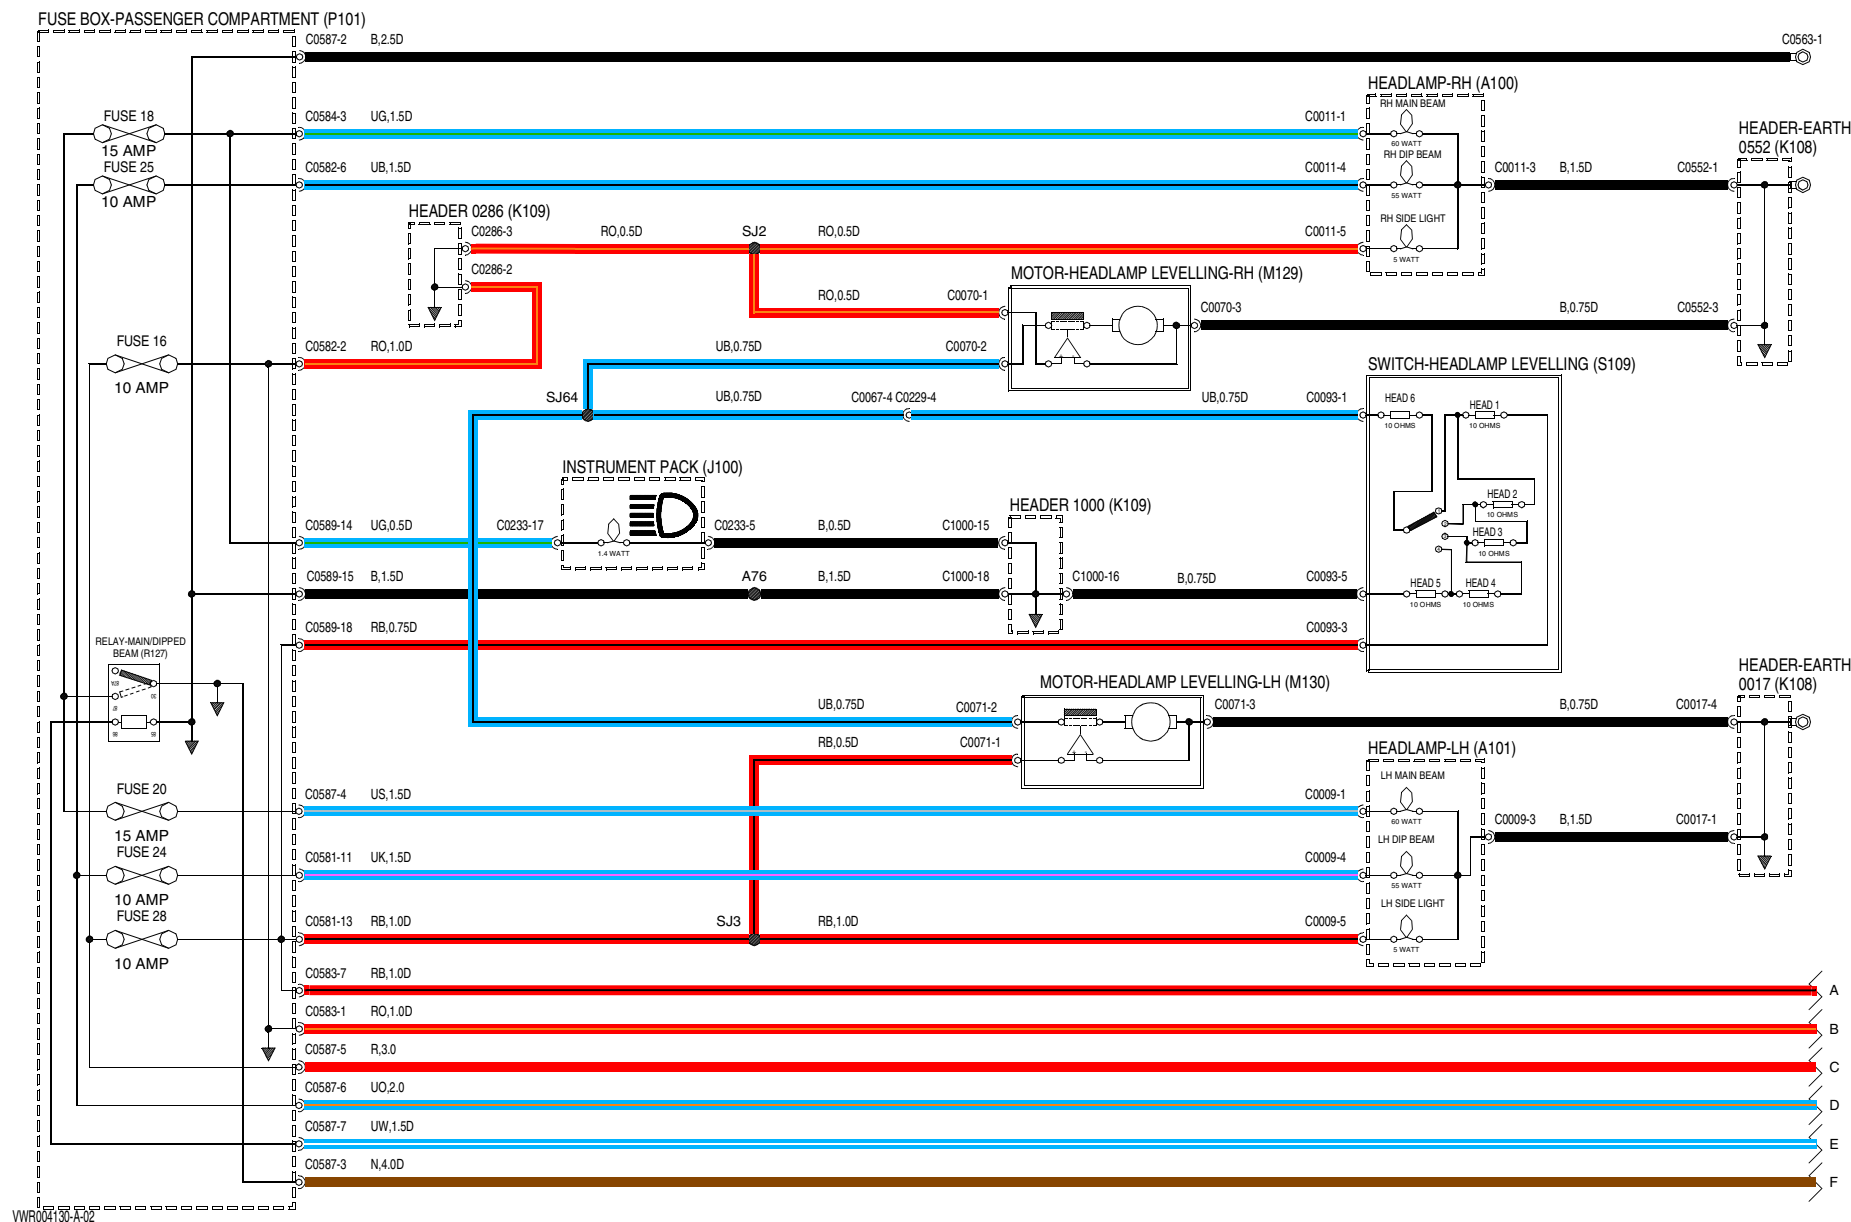

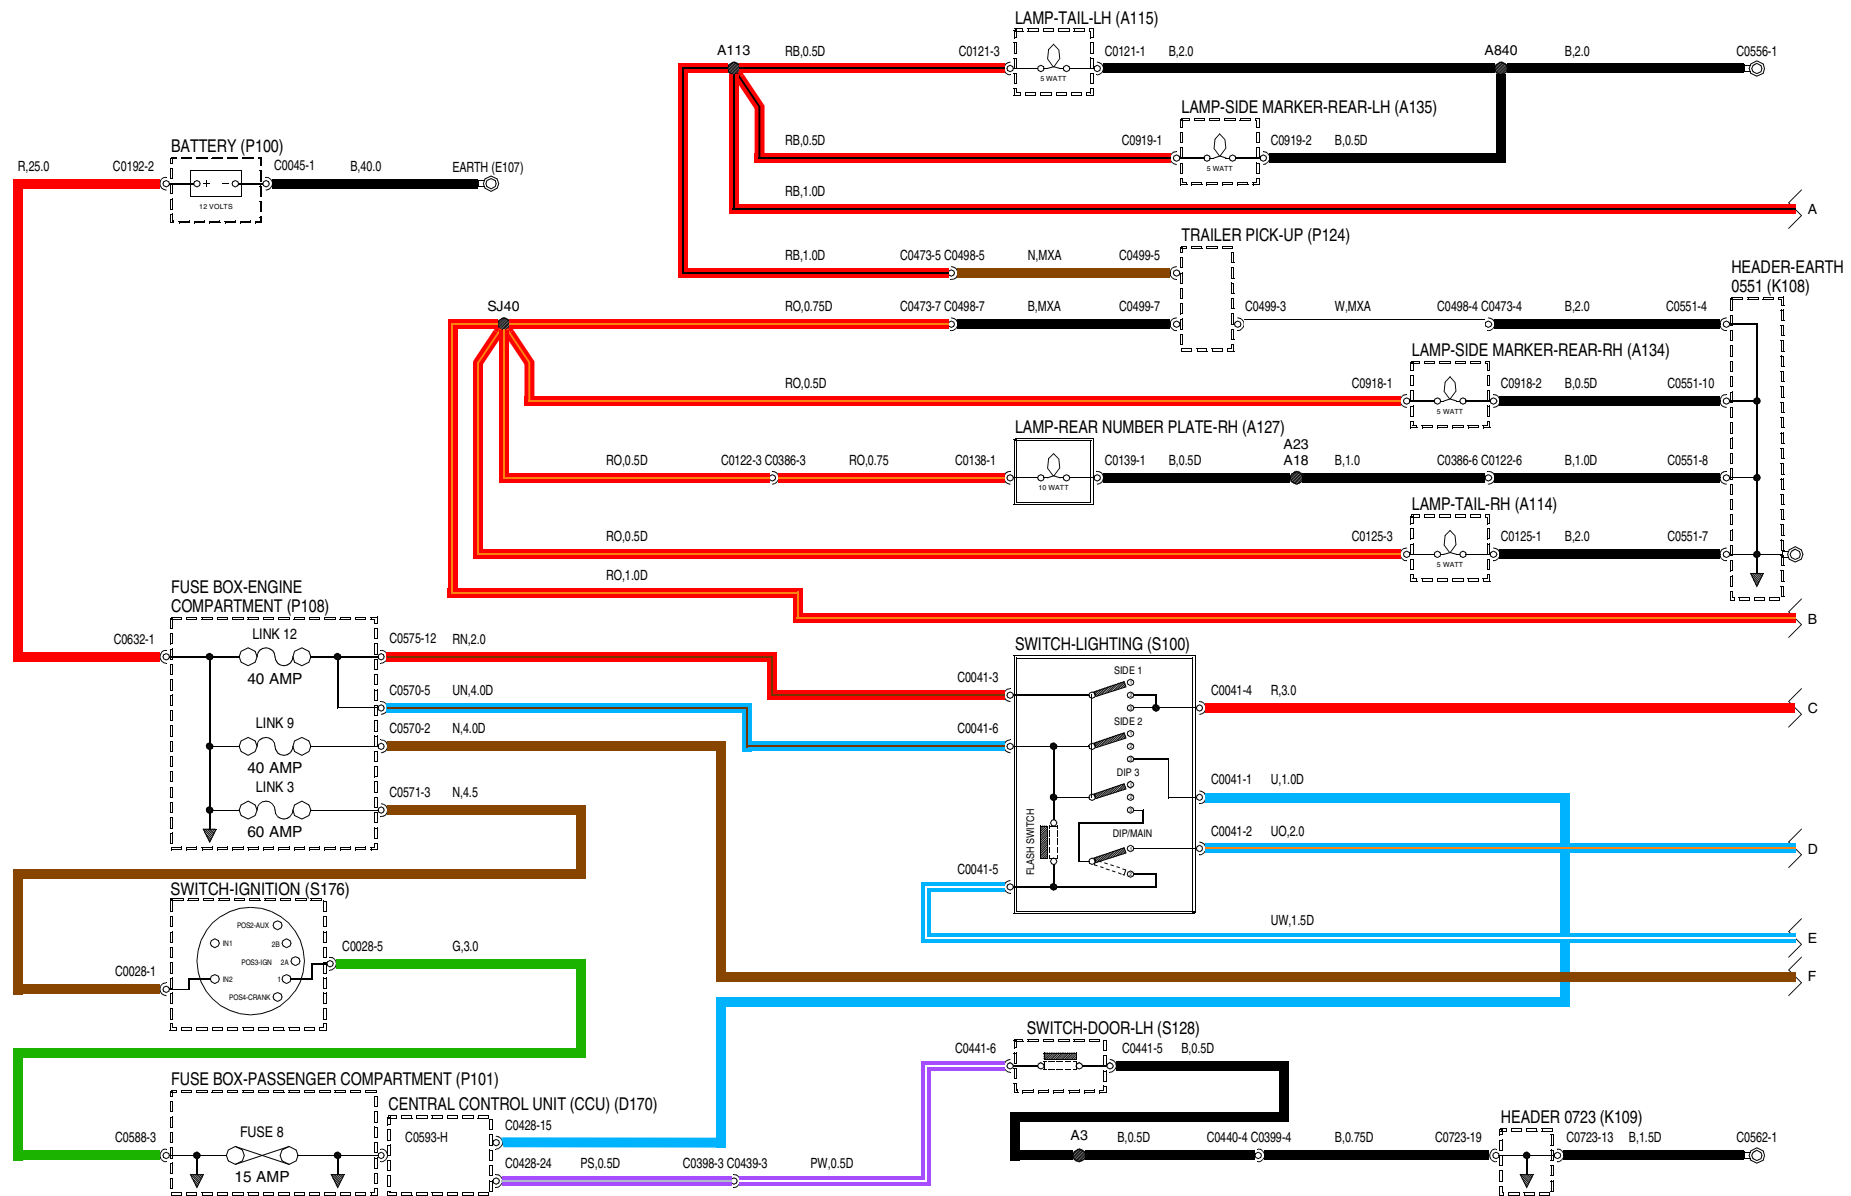



VWR004470-A-01

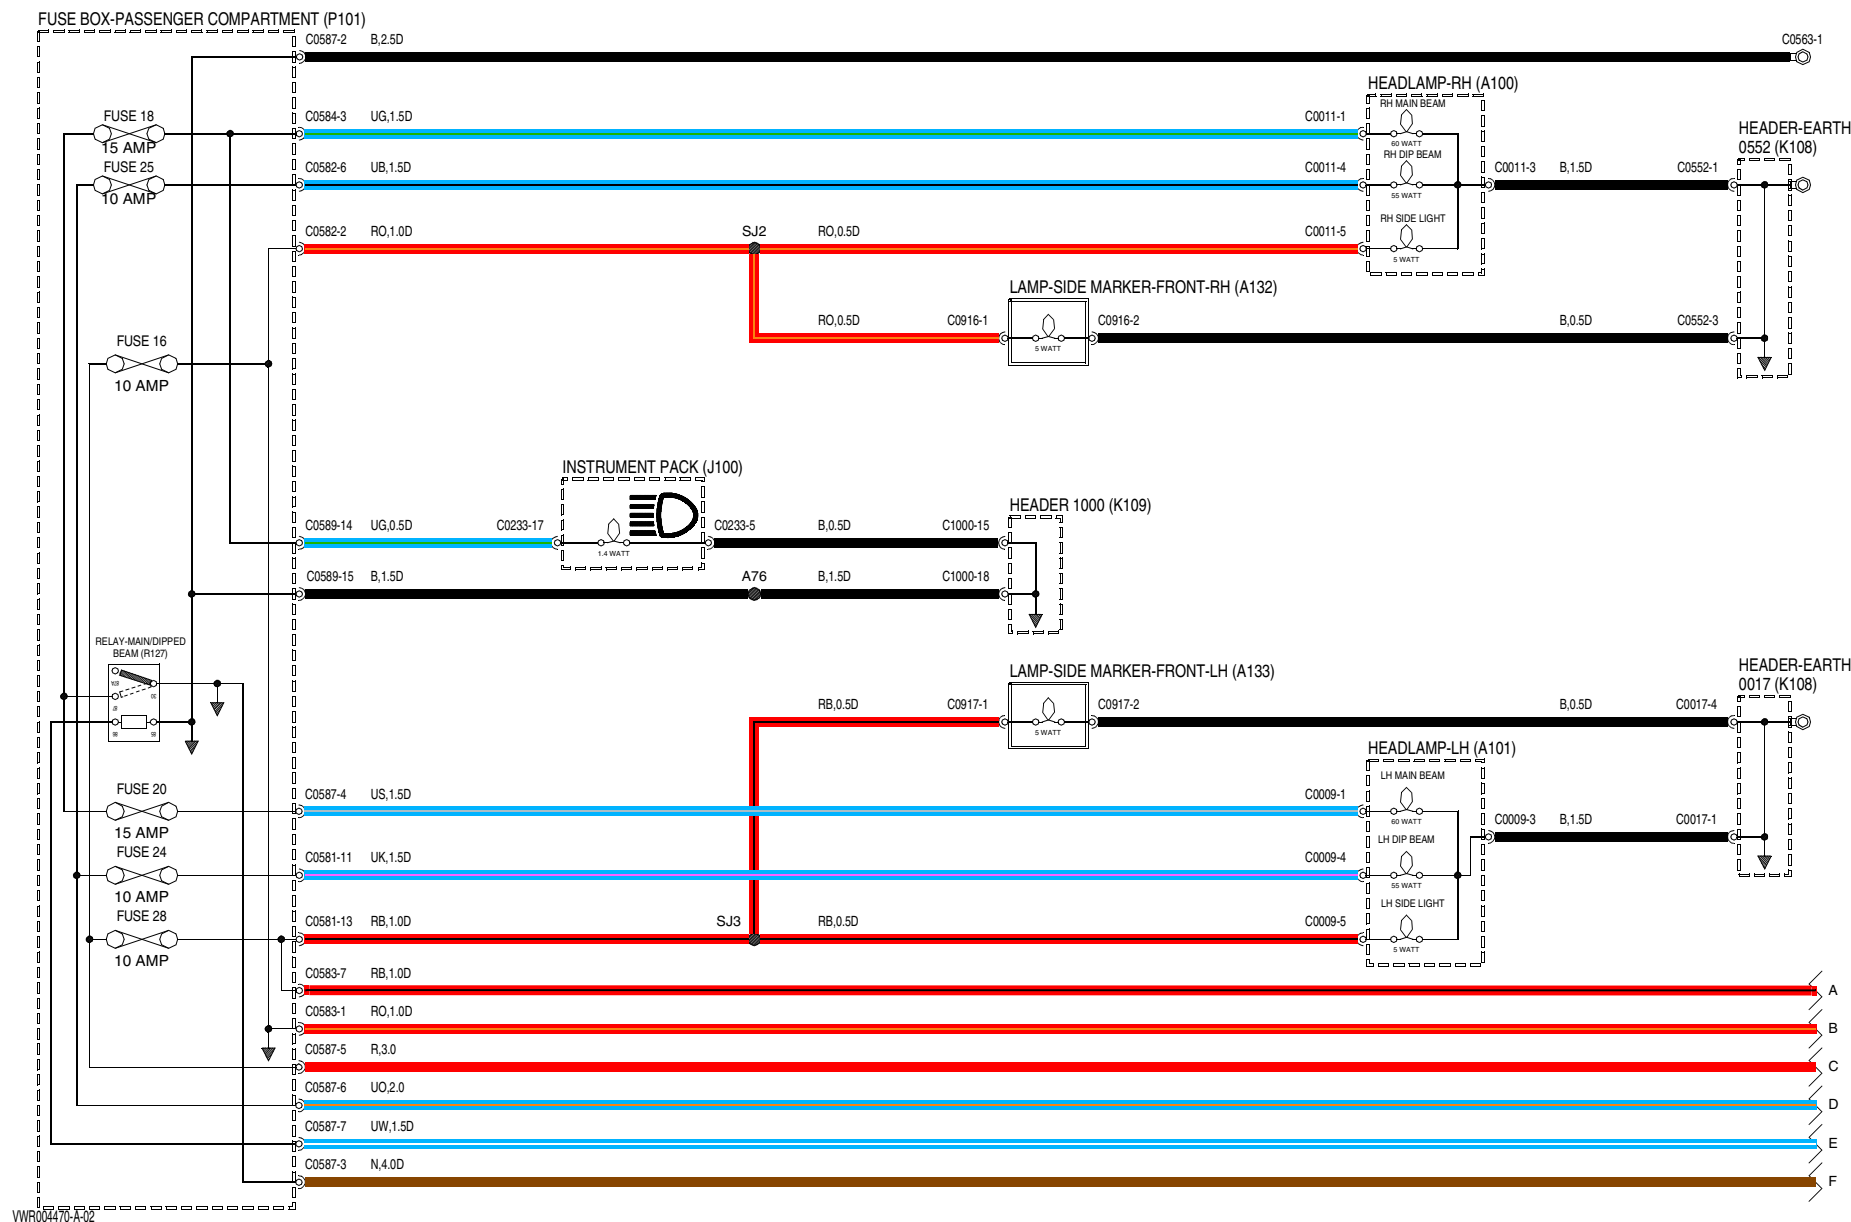

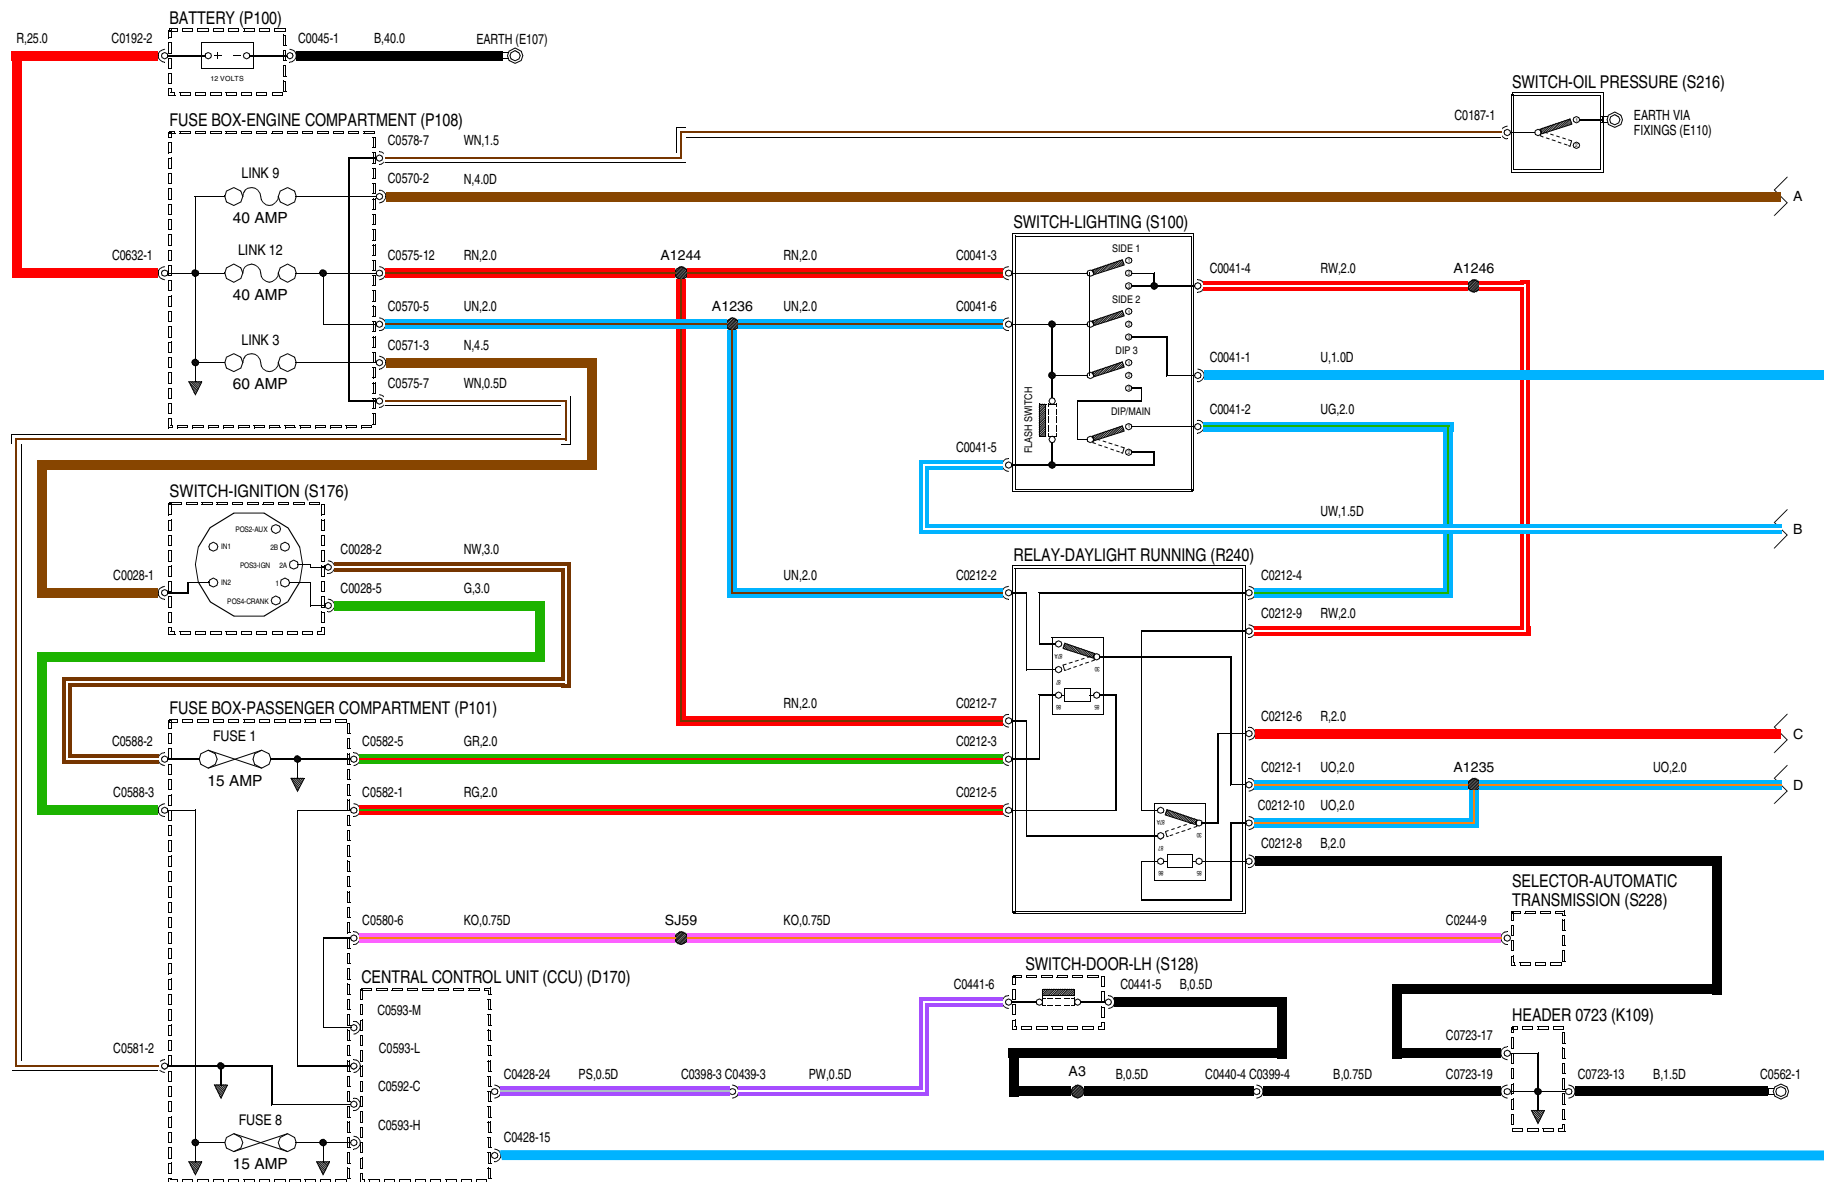


VWR004580-A-01

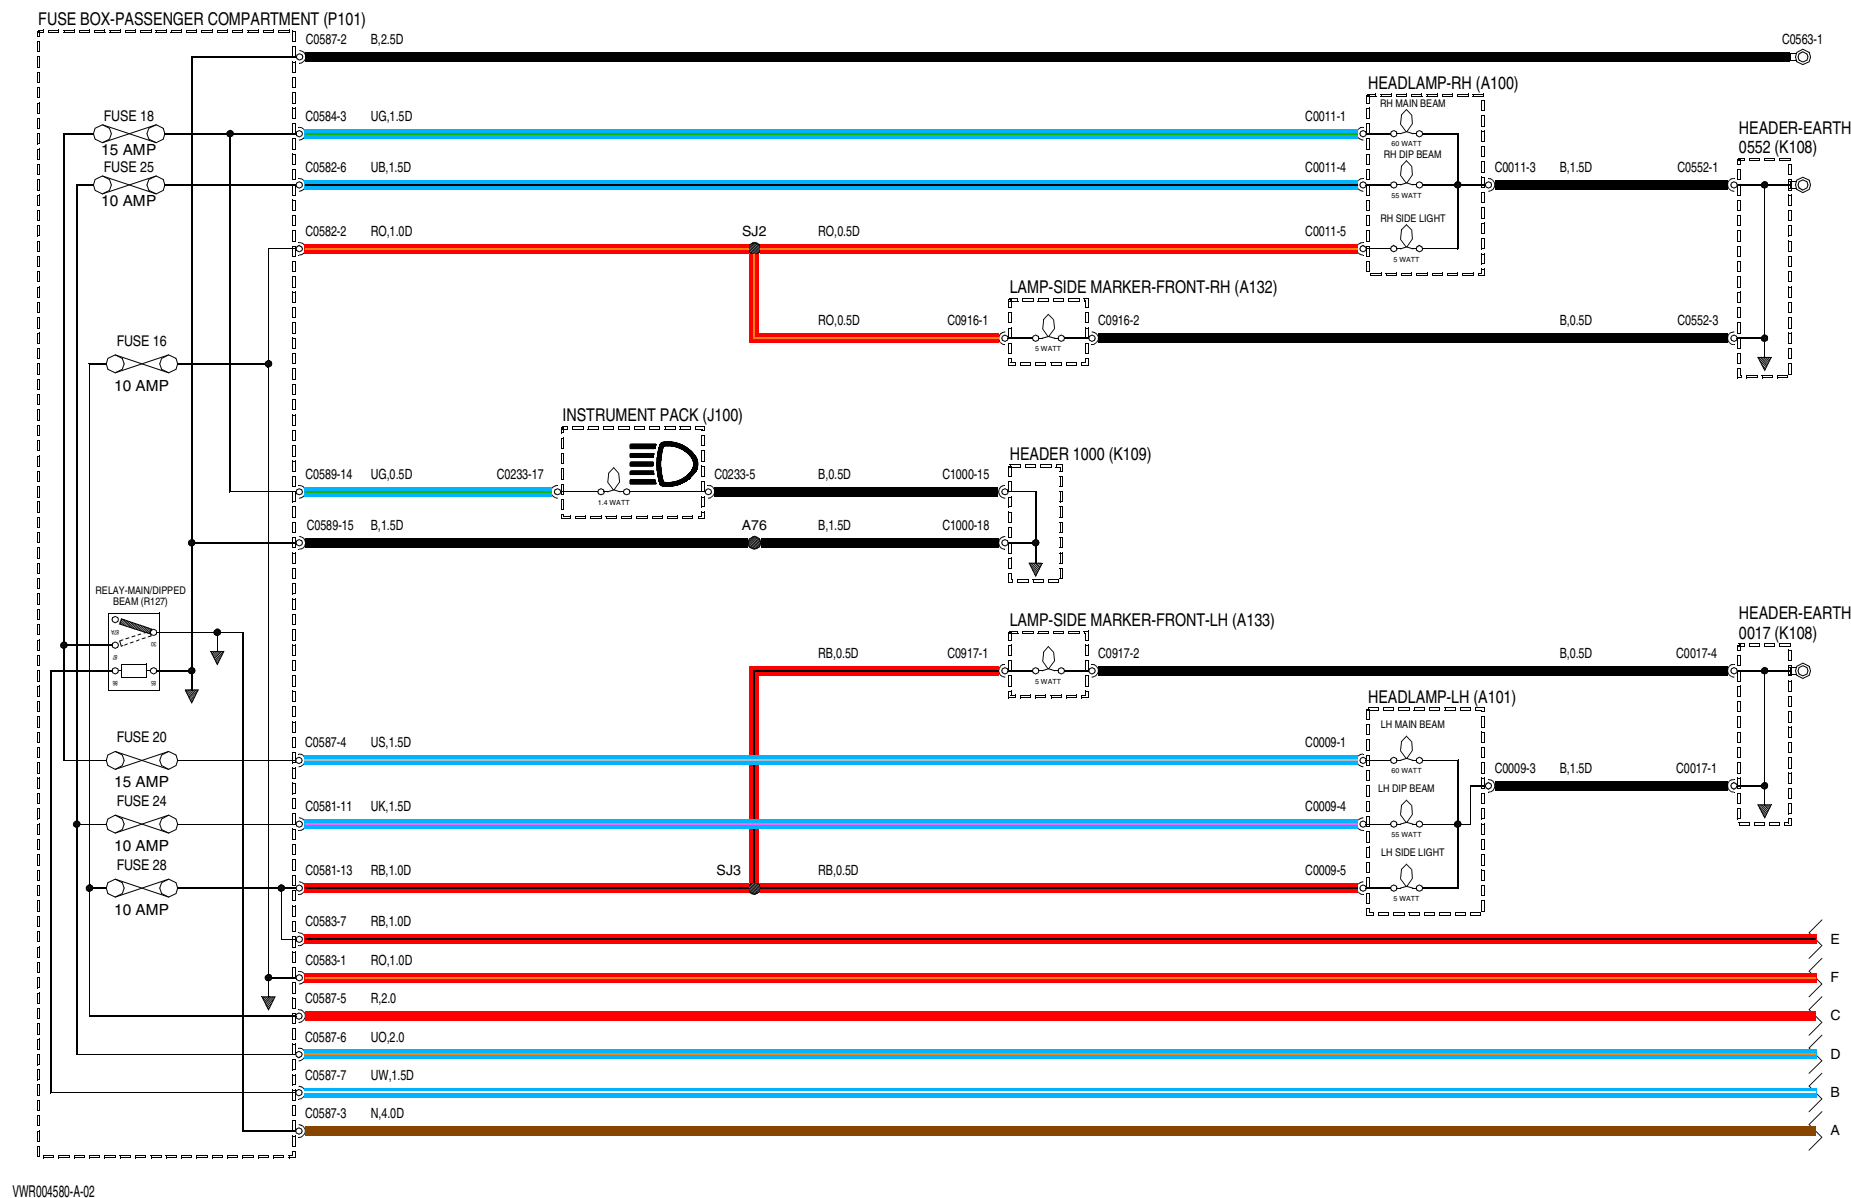

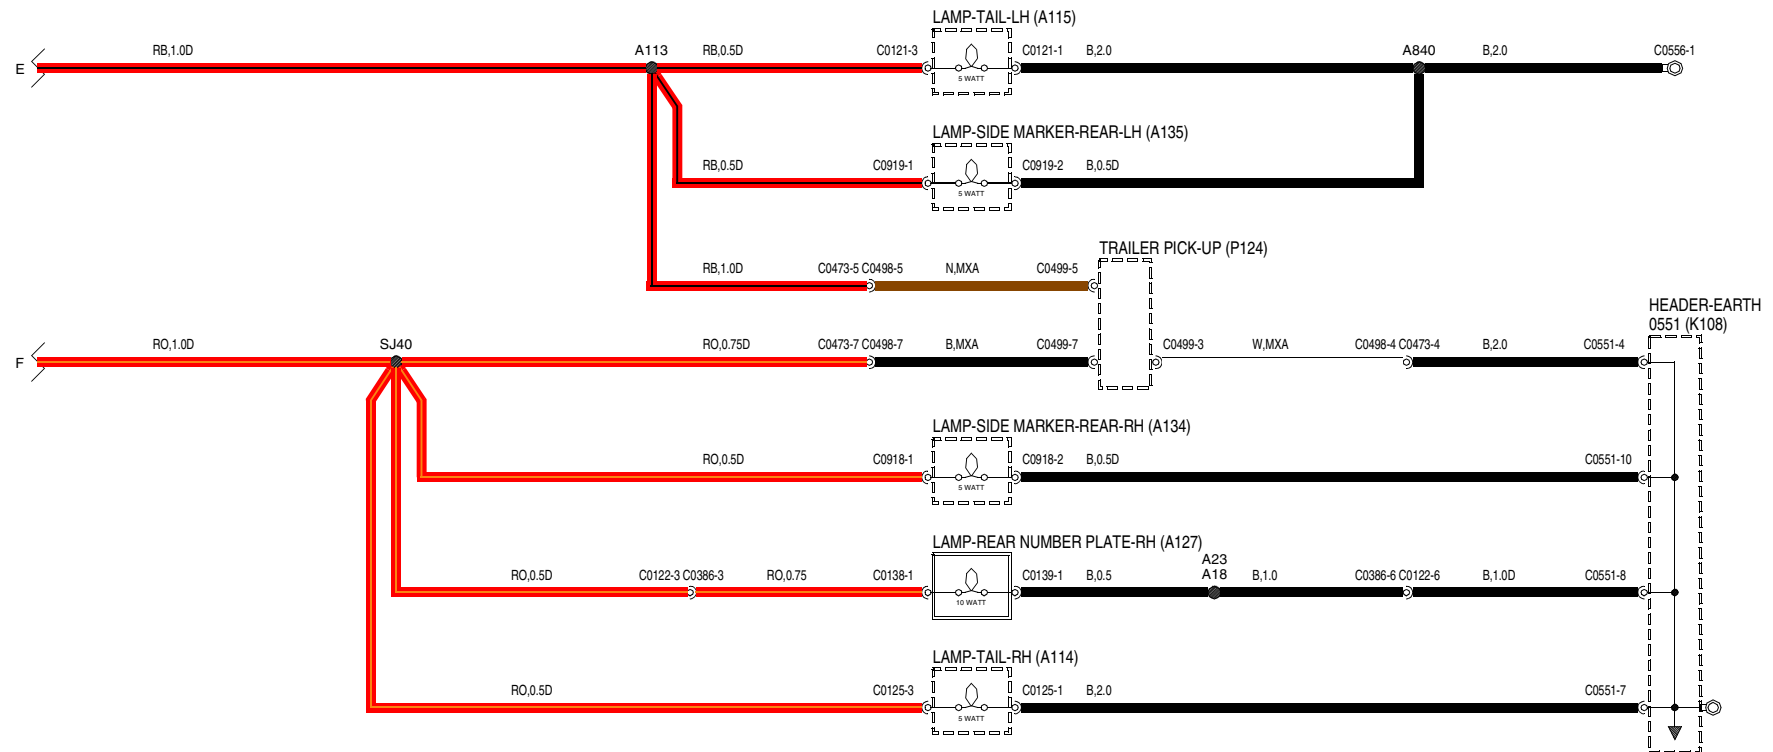


VWR004580-A-03

44 INTERIOR LAMPS

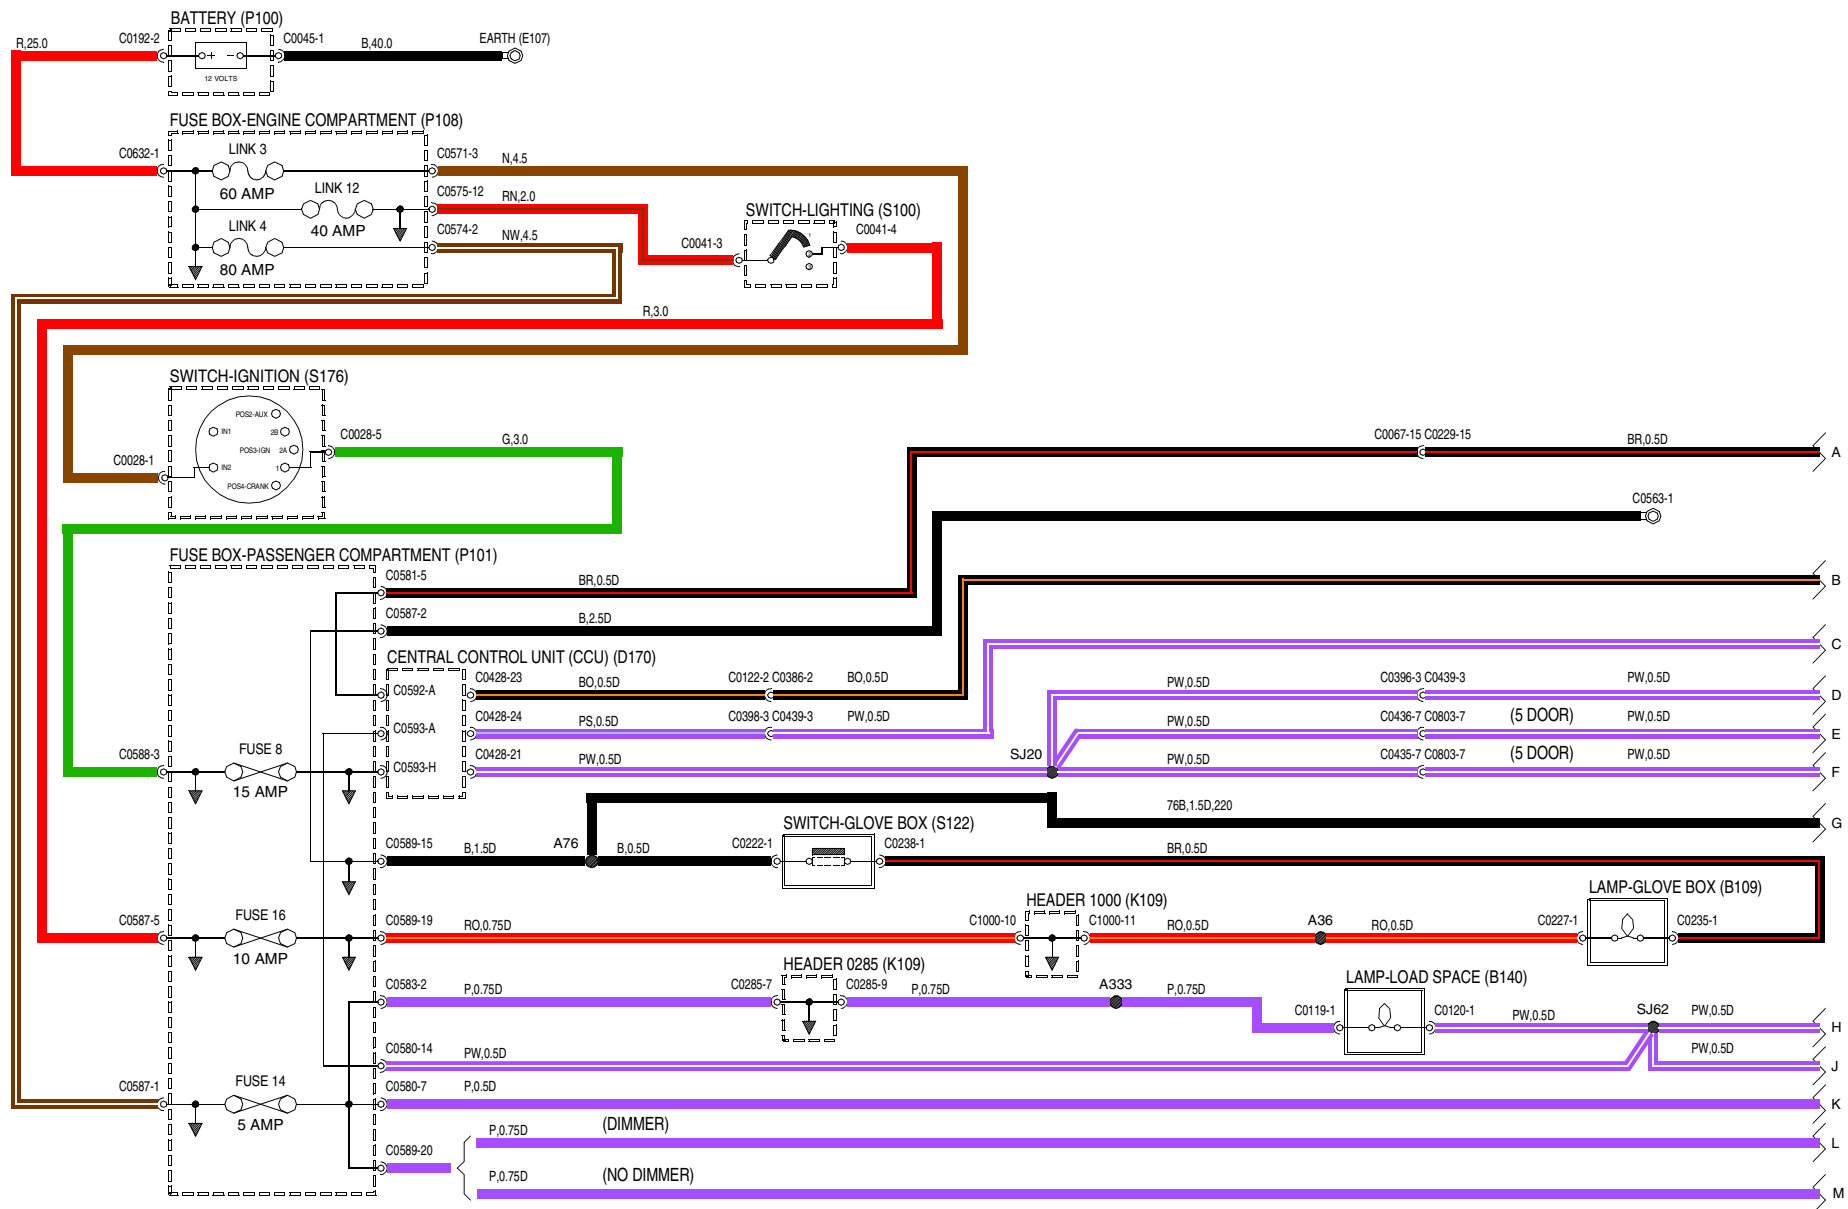


VWR004230-A-01

44 INTERIOR LAMPS

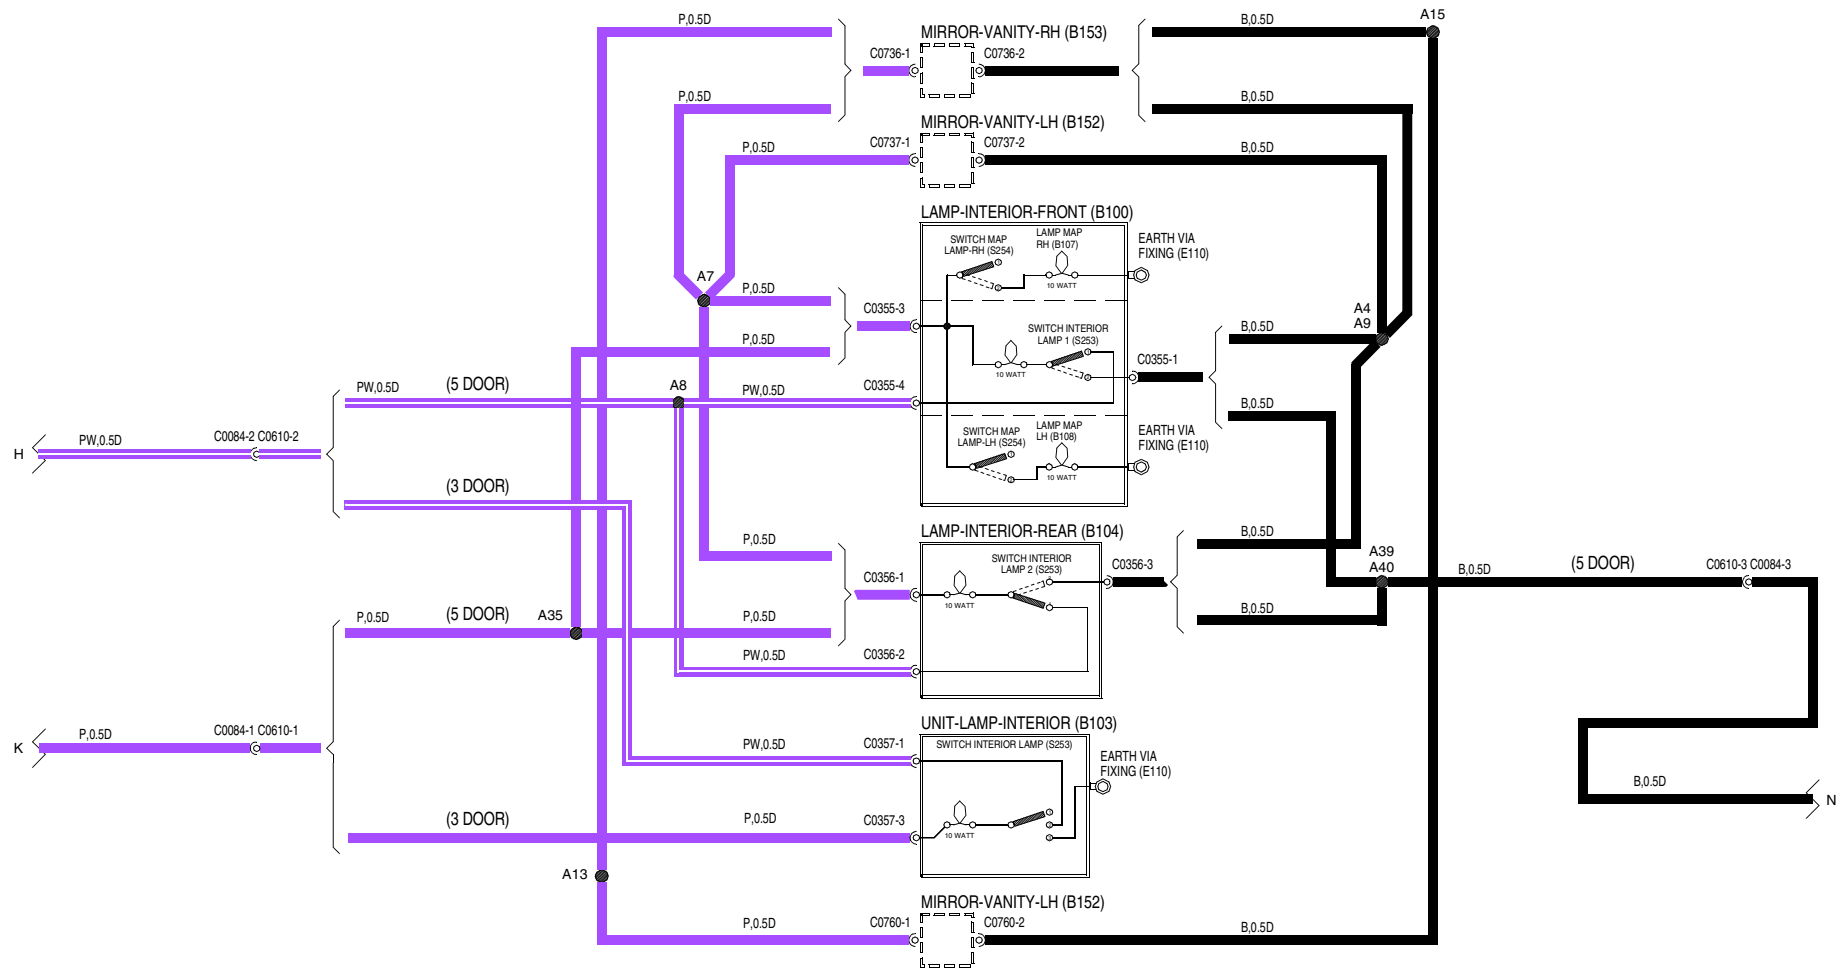


VWR004230-A-02

44 INTERIOR LAMPS

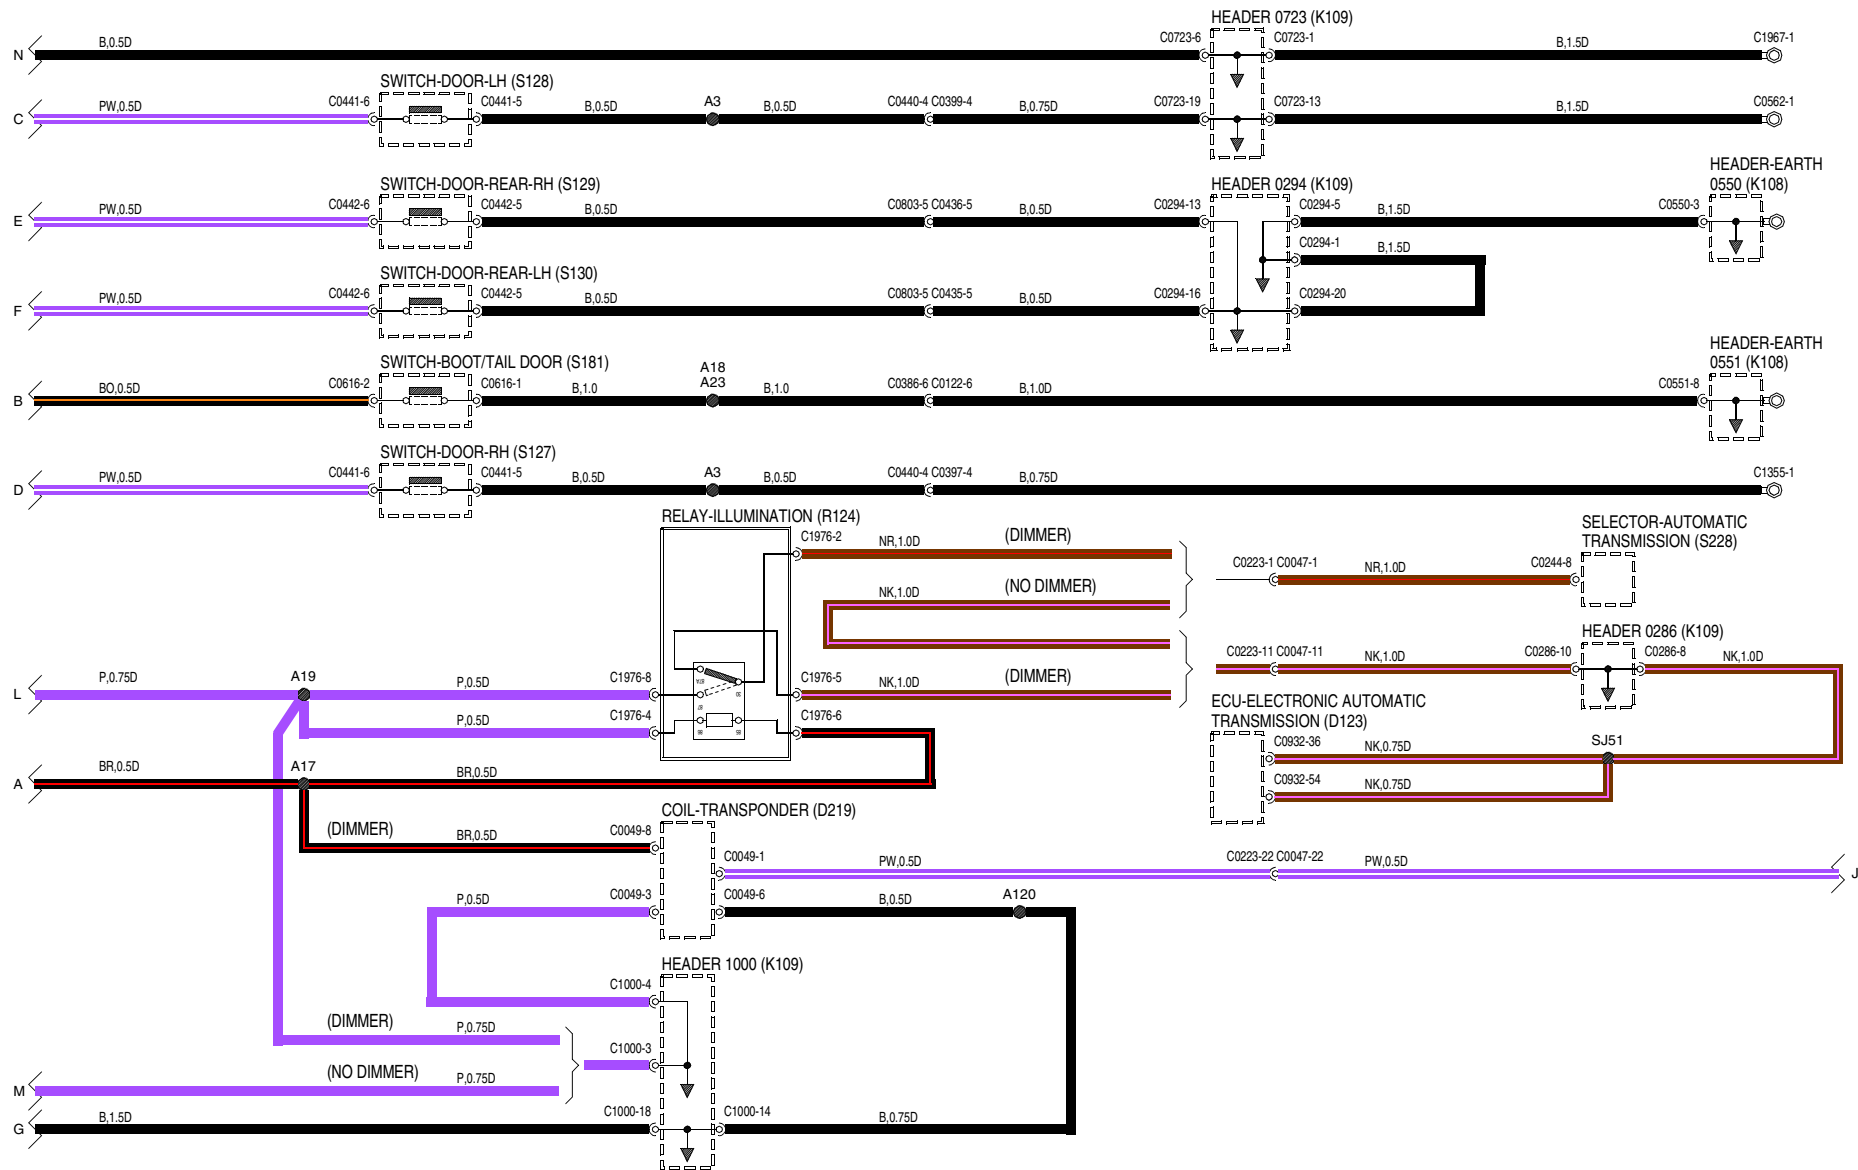


VWR004230-A-03

46 INTERIOR ILLUMINATION

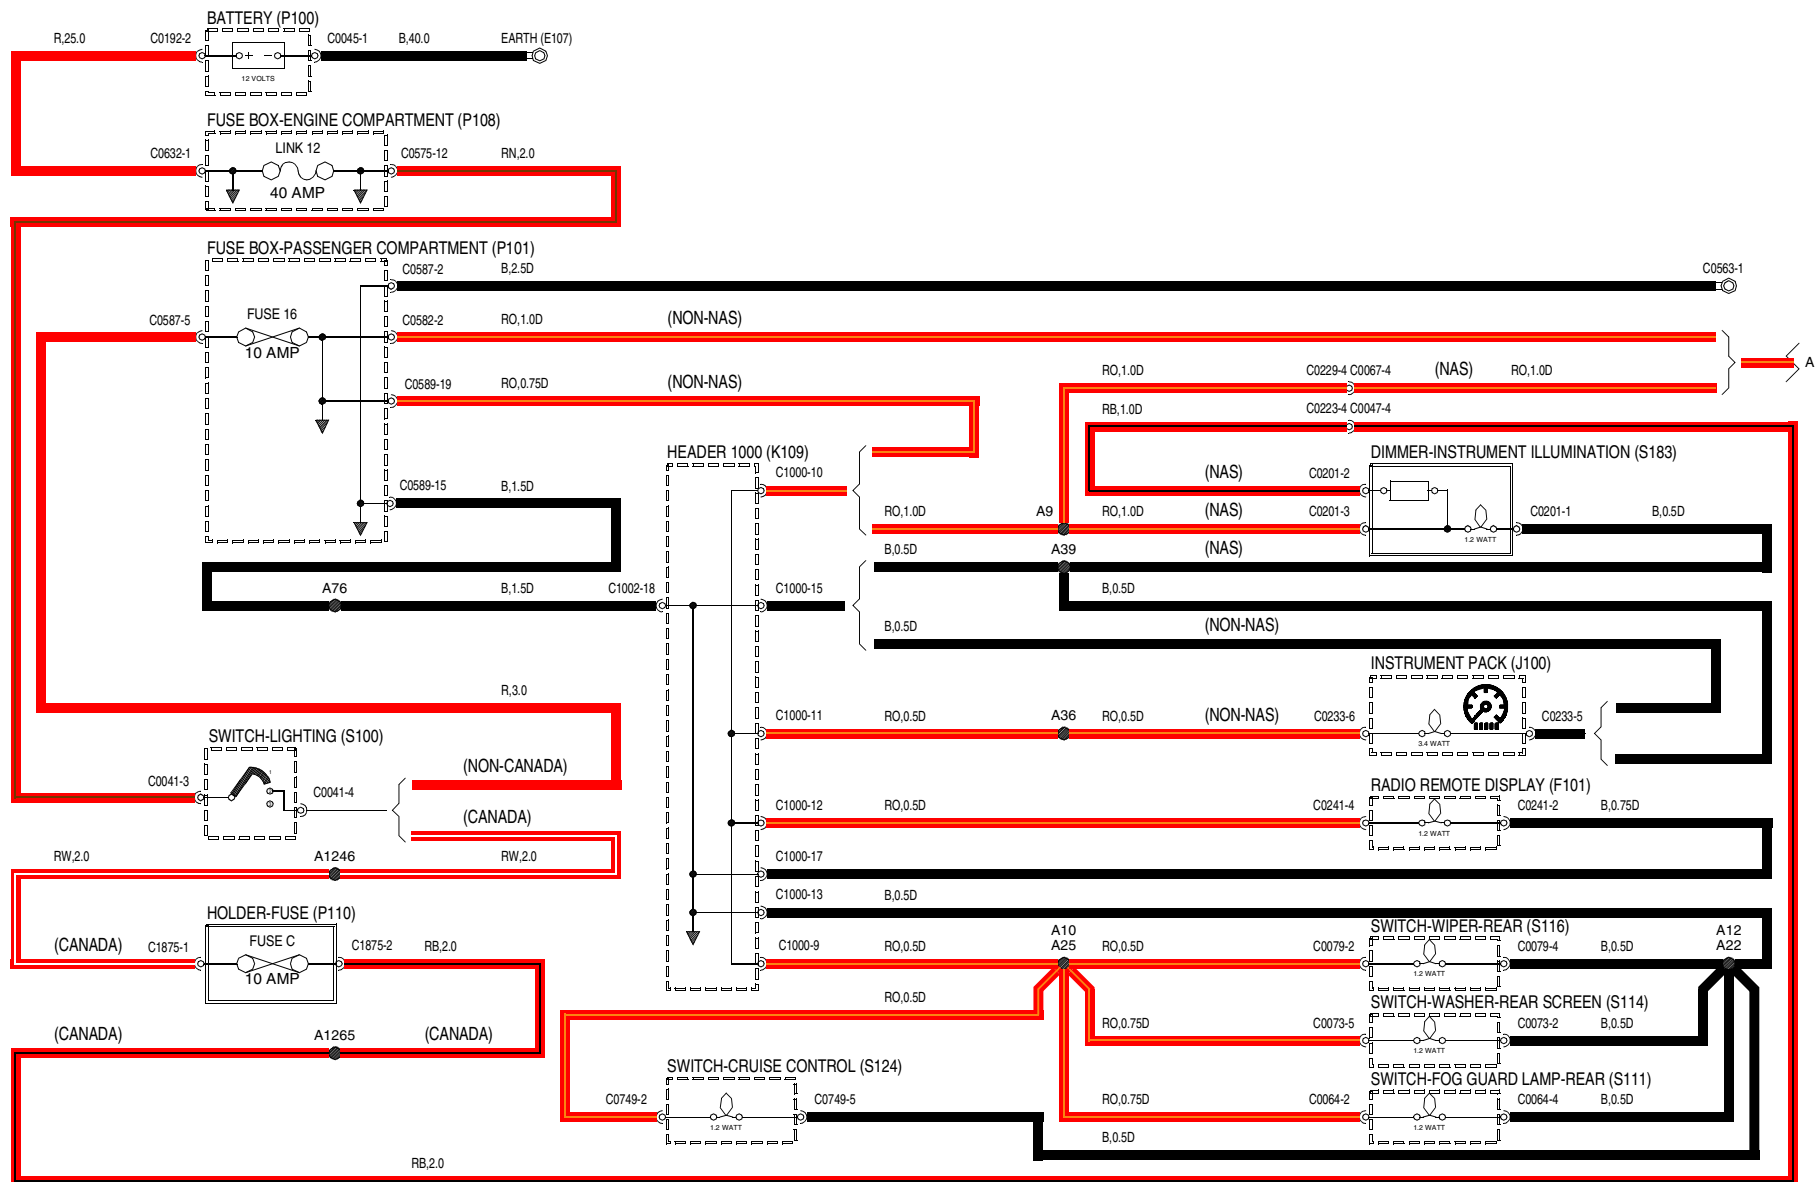


VWR004220-A-01

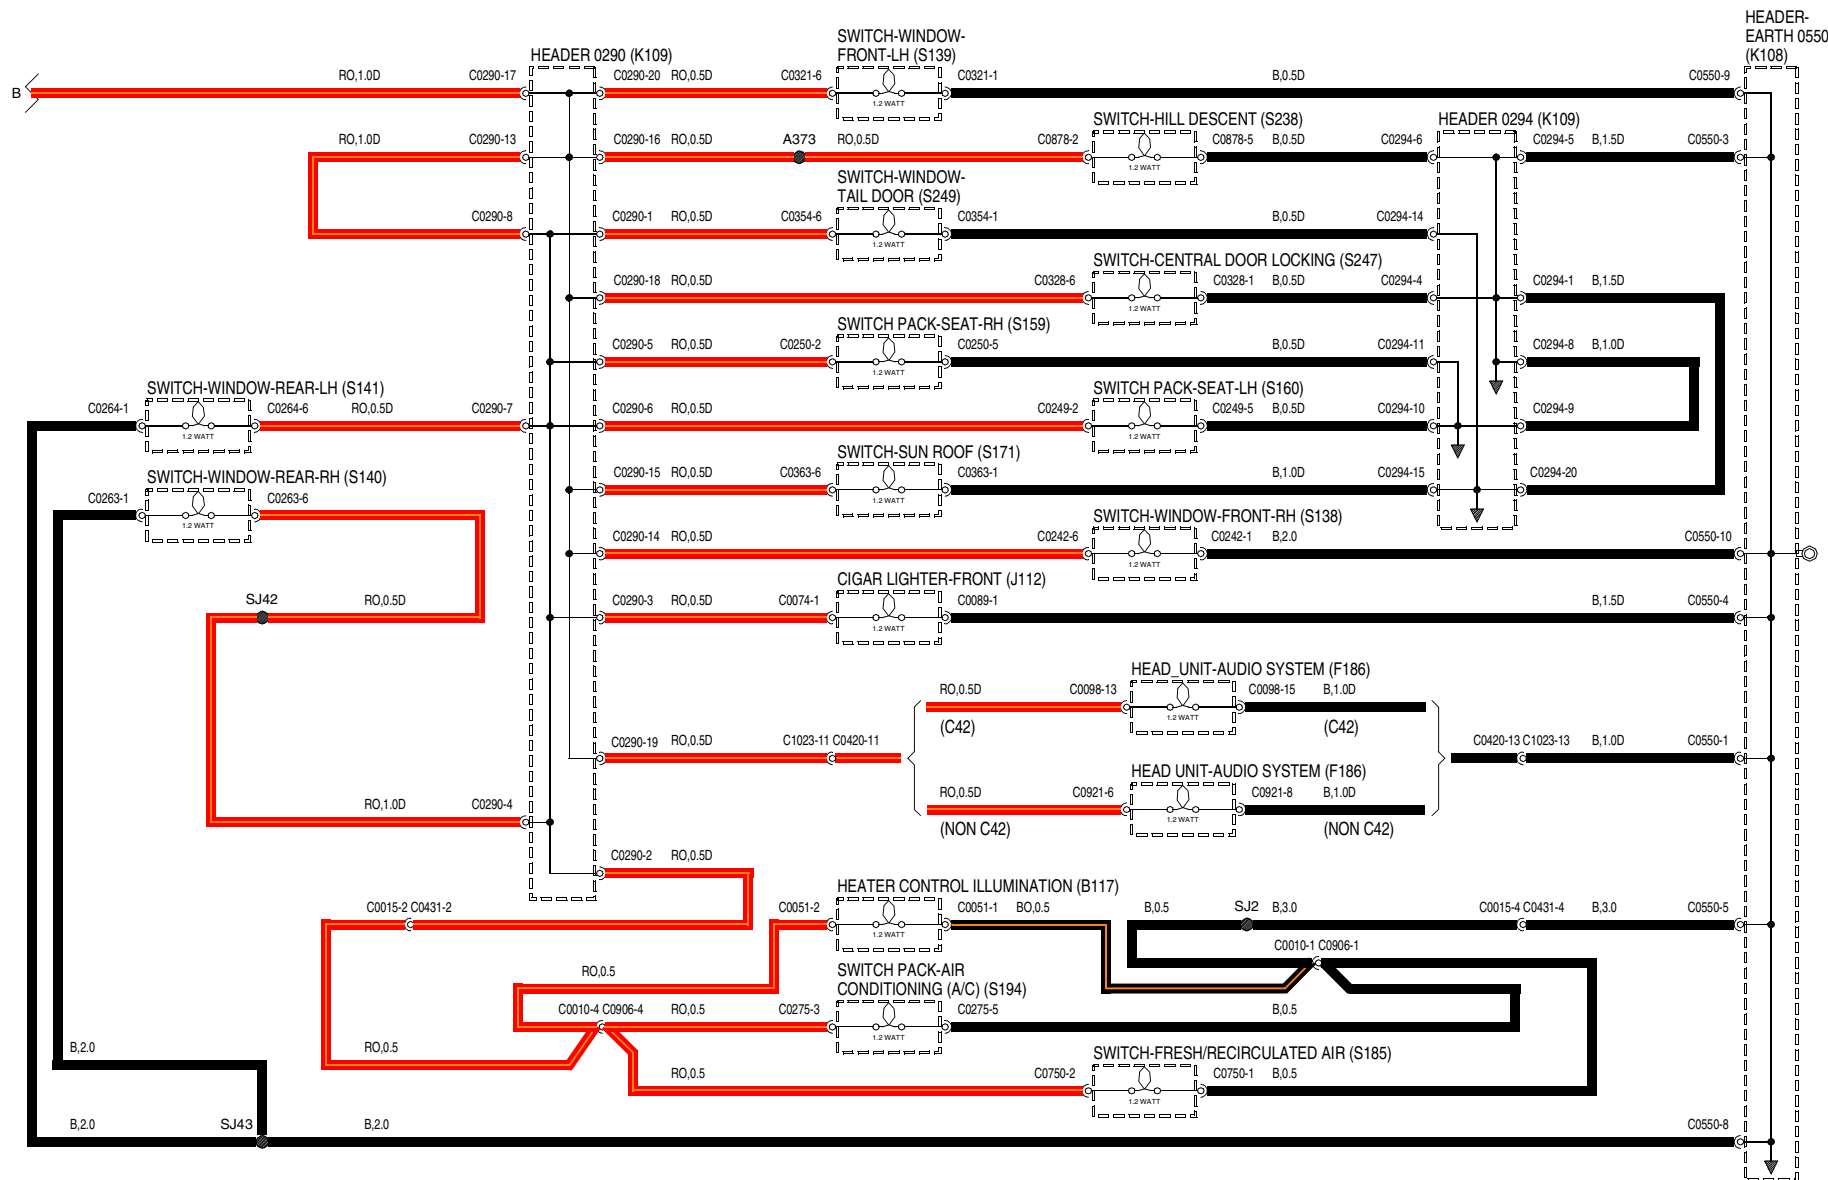


VWR004220-A-02

46 INTERIOR ILLUMINATION

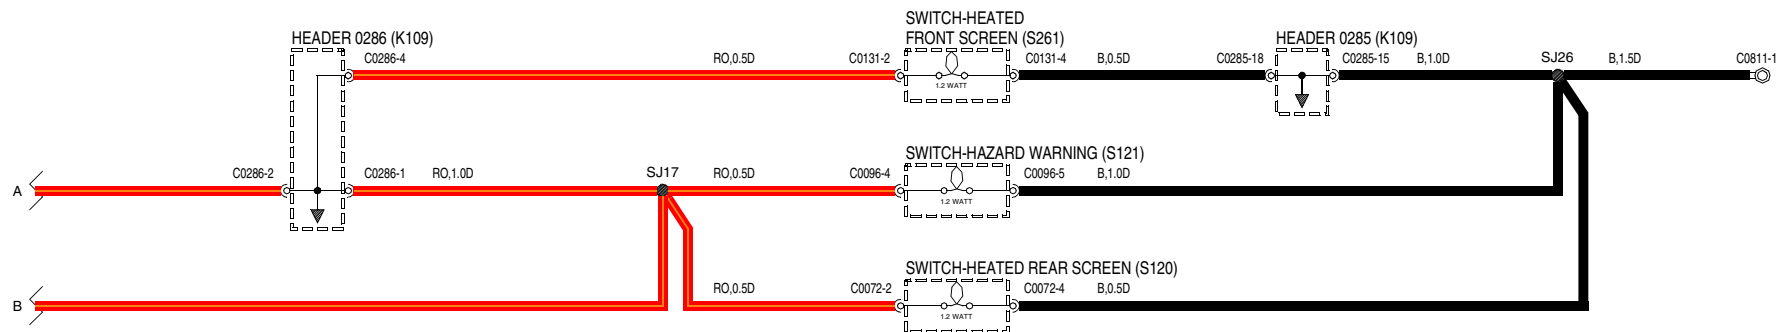


VWR004220-A-03

47 INSTRUMENTS

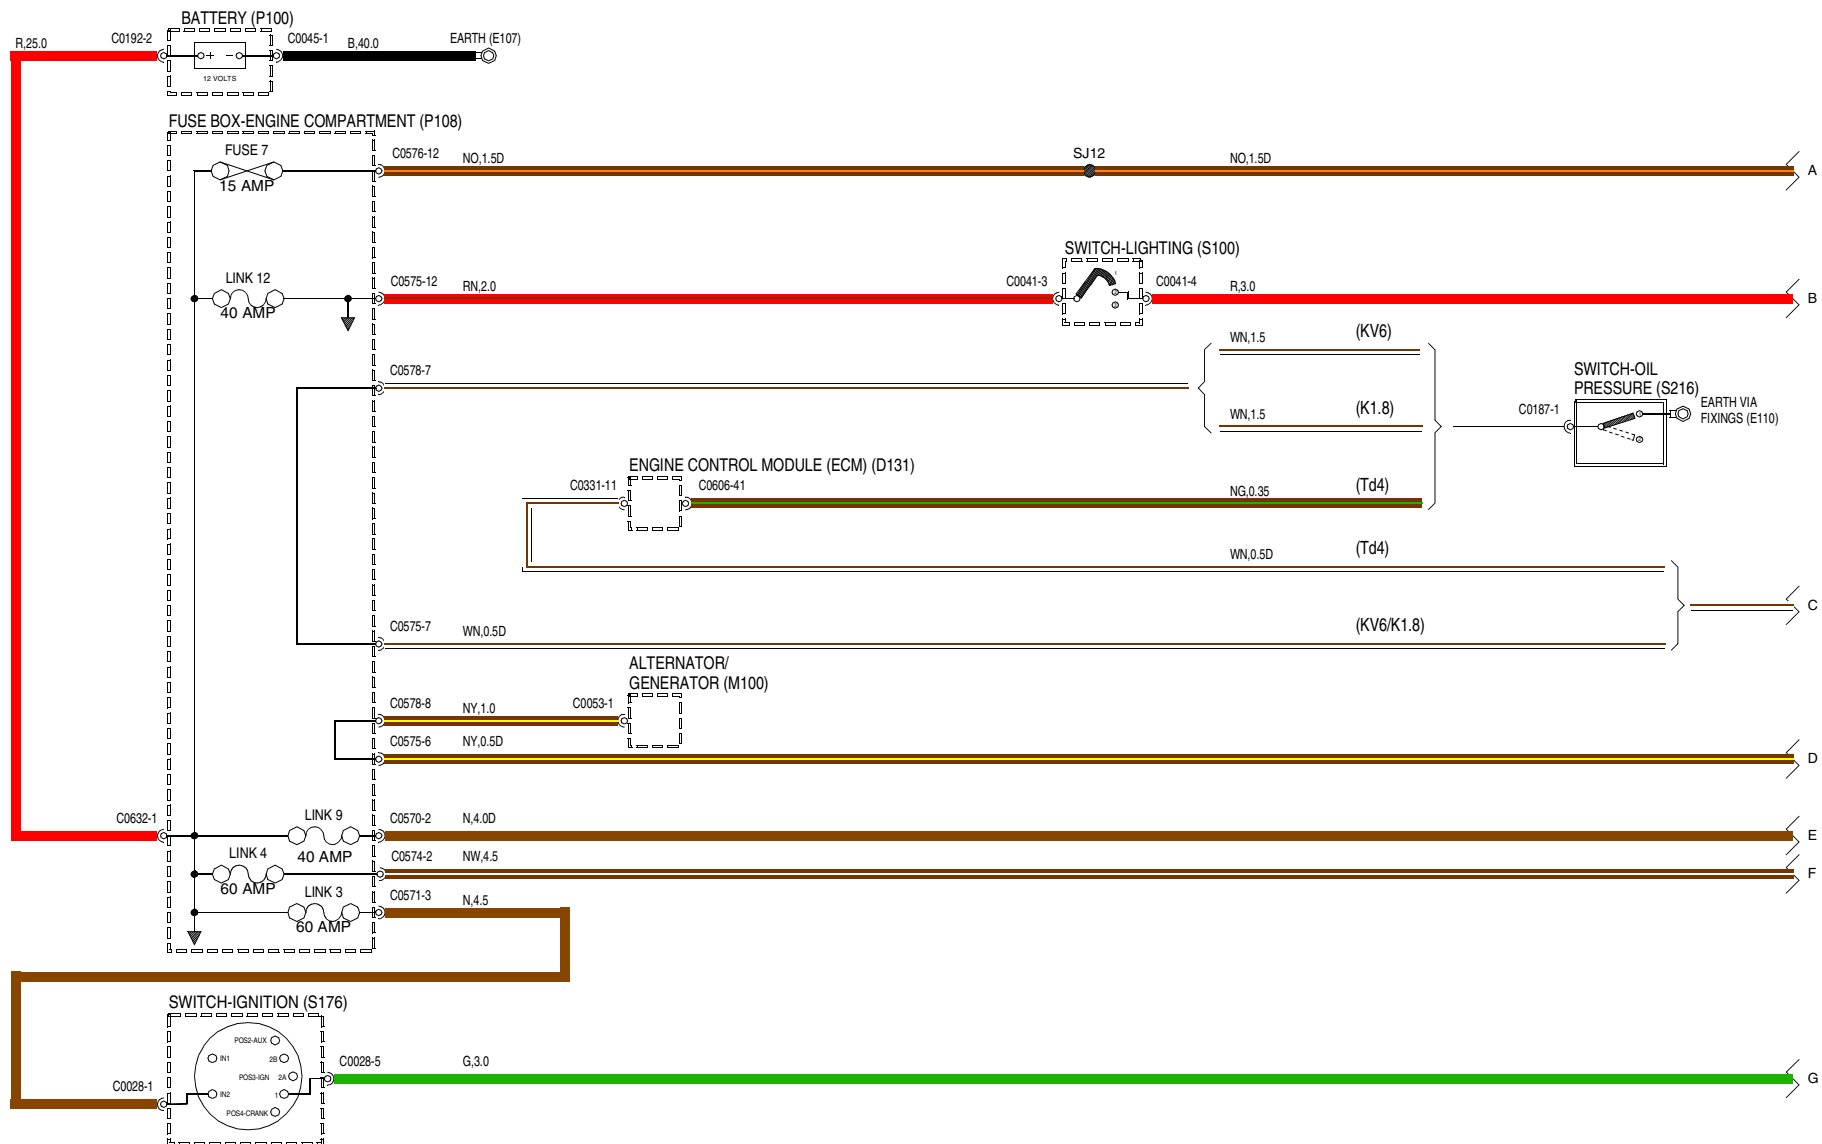


VWR004210-B-01

47 INSTRUMENTS

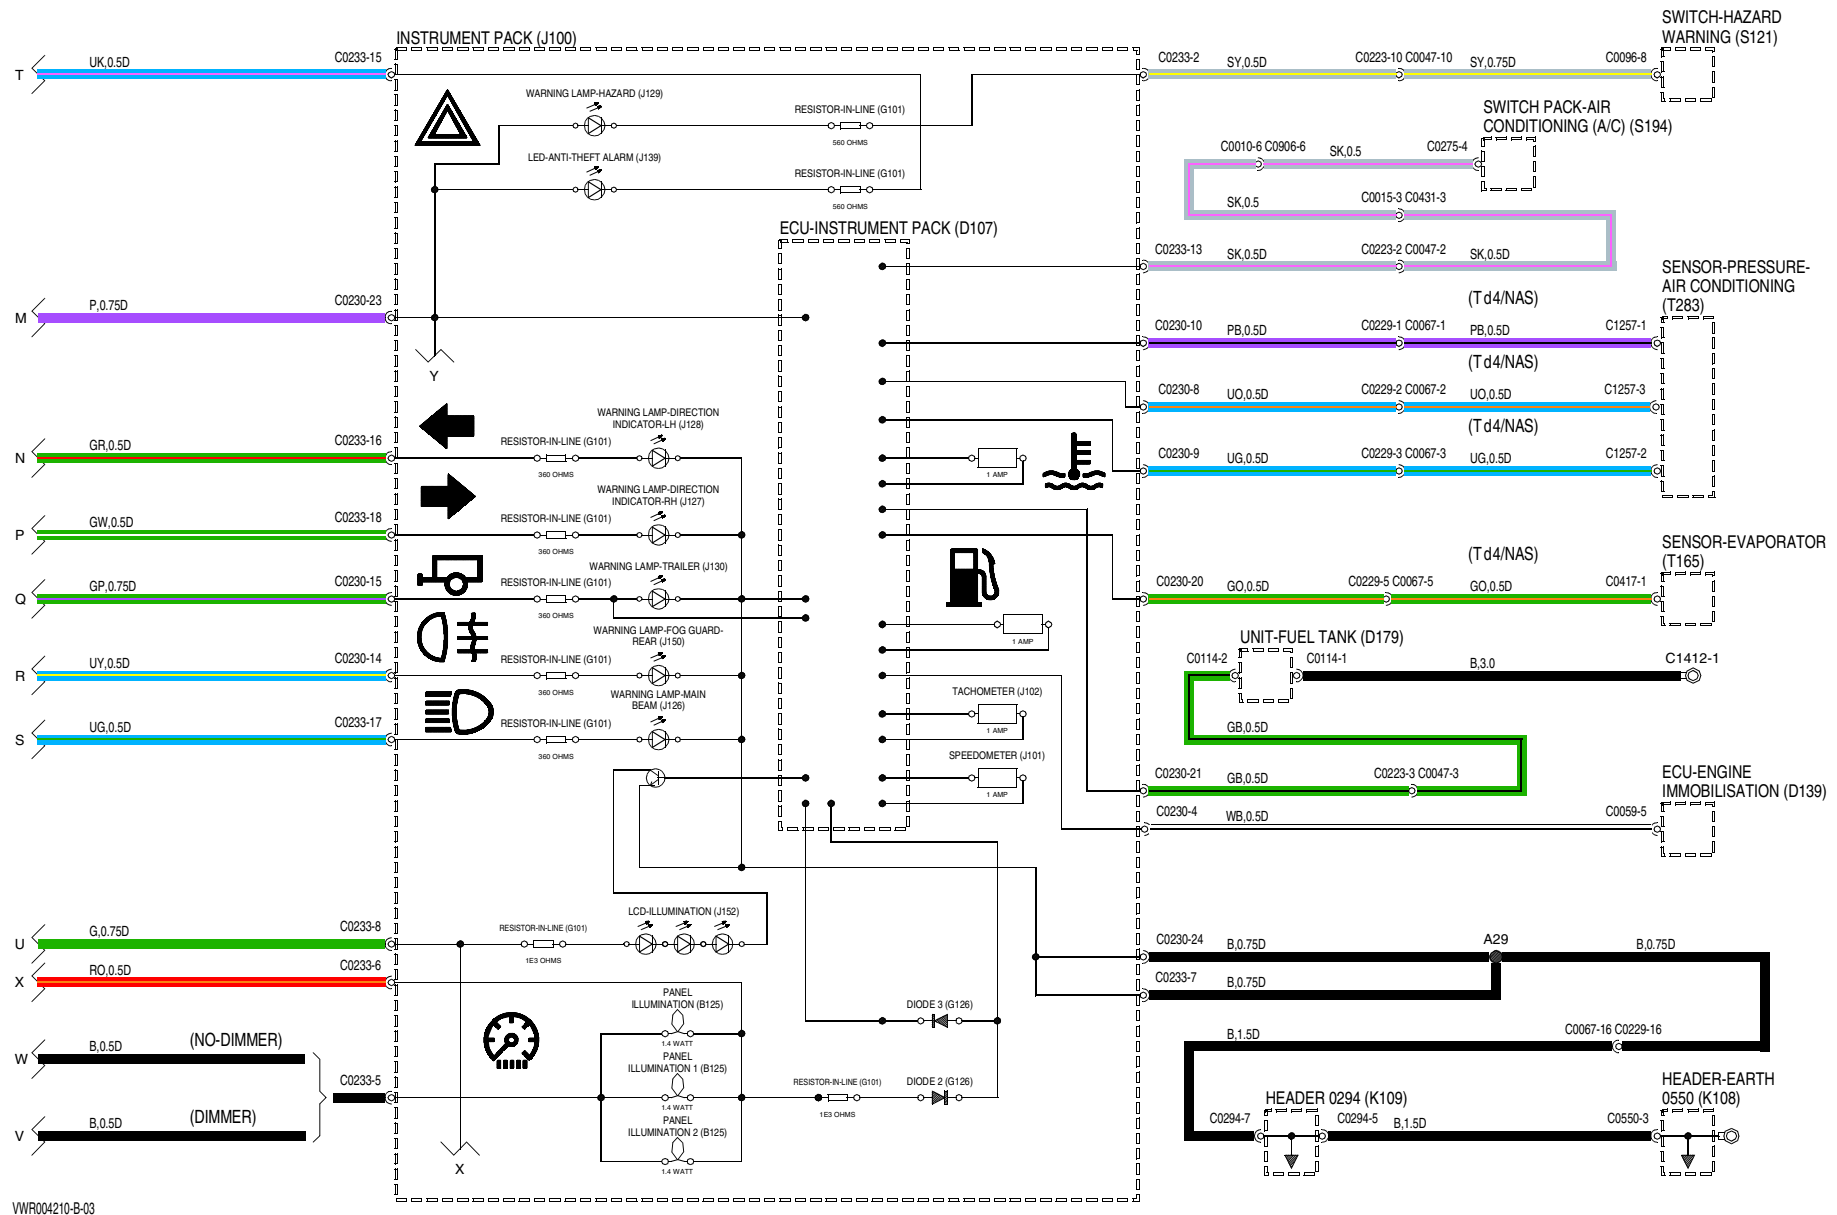


VWR004210-B-03

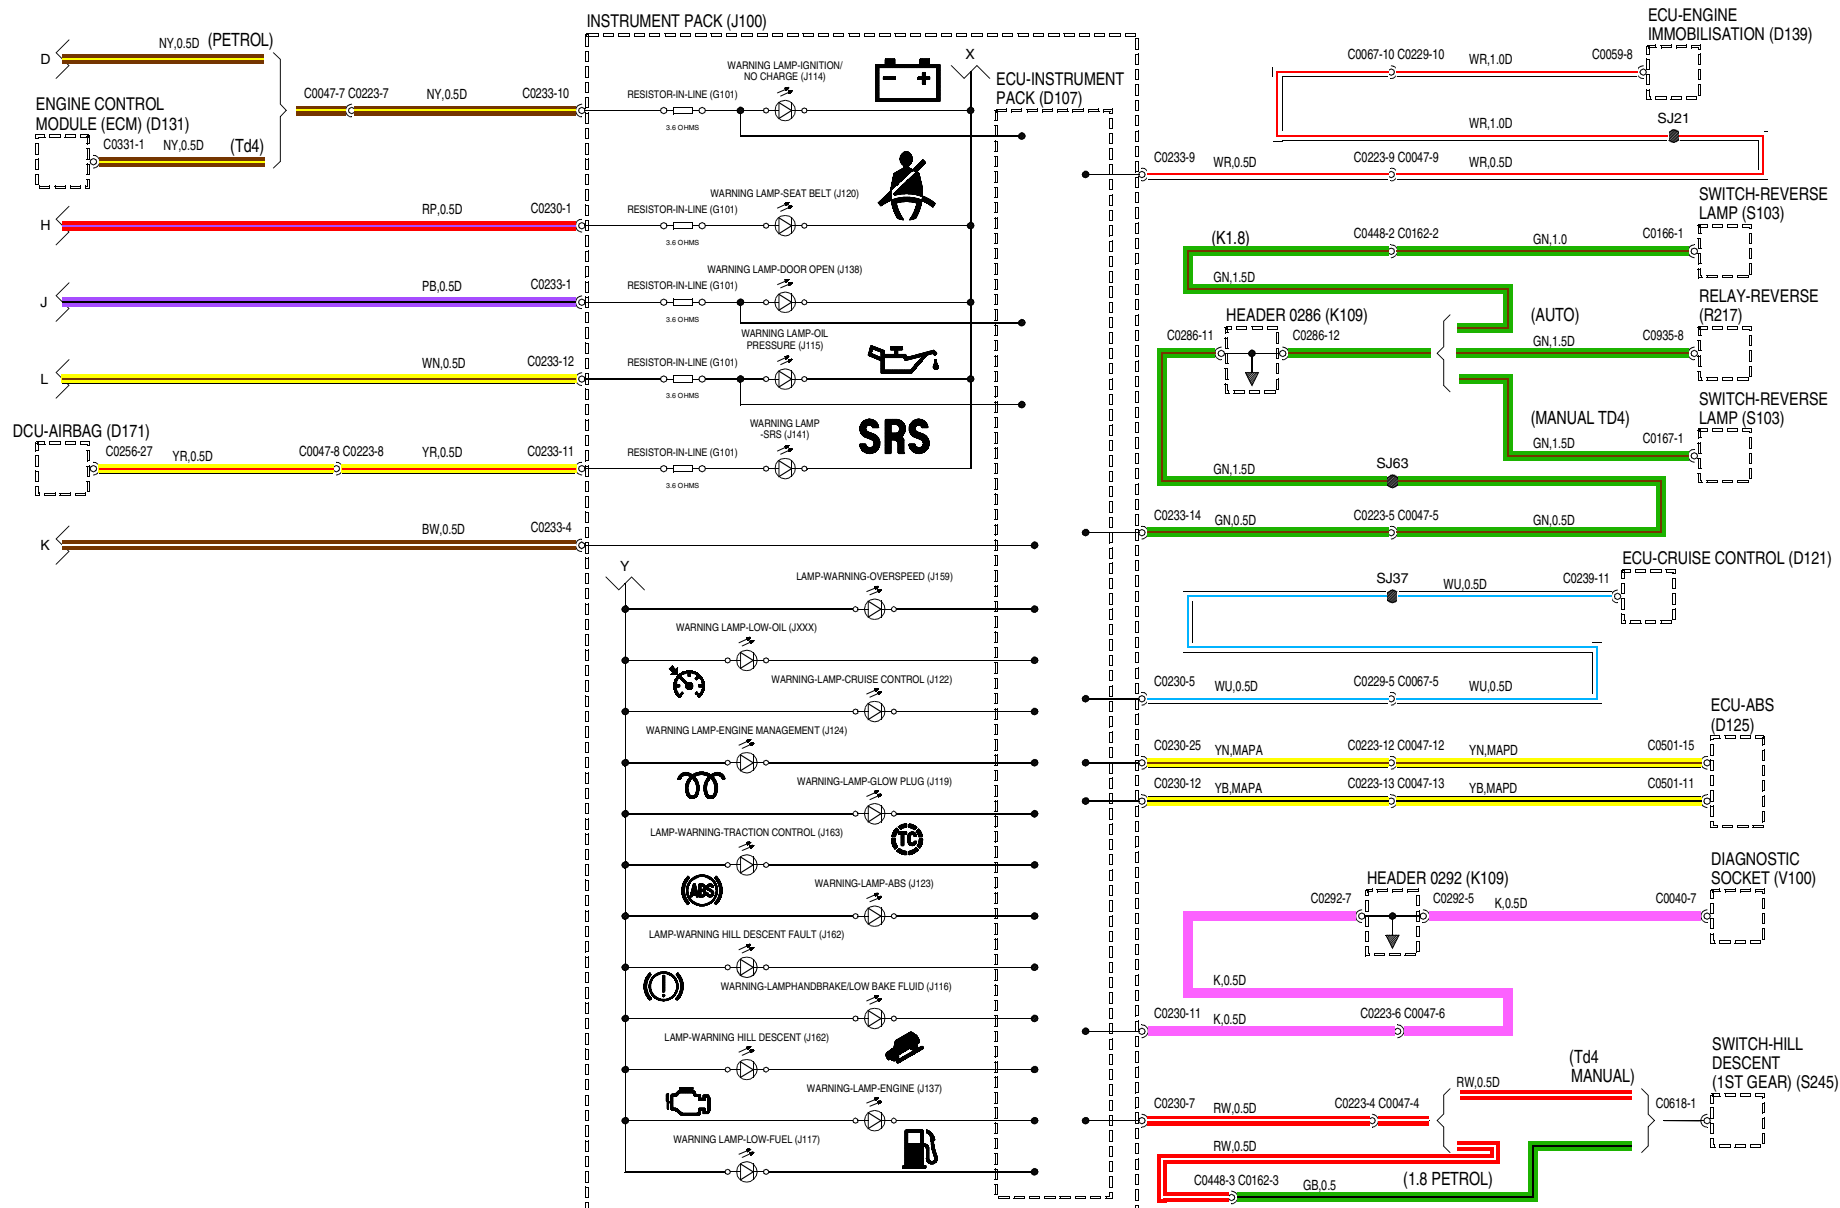


VWR004210-B-04

47 ROTARY COUPLER

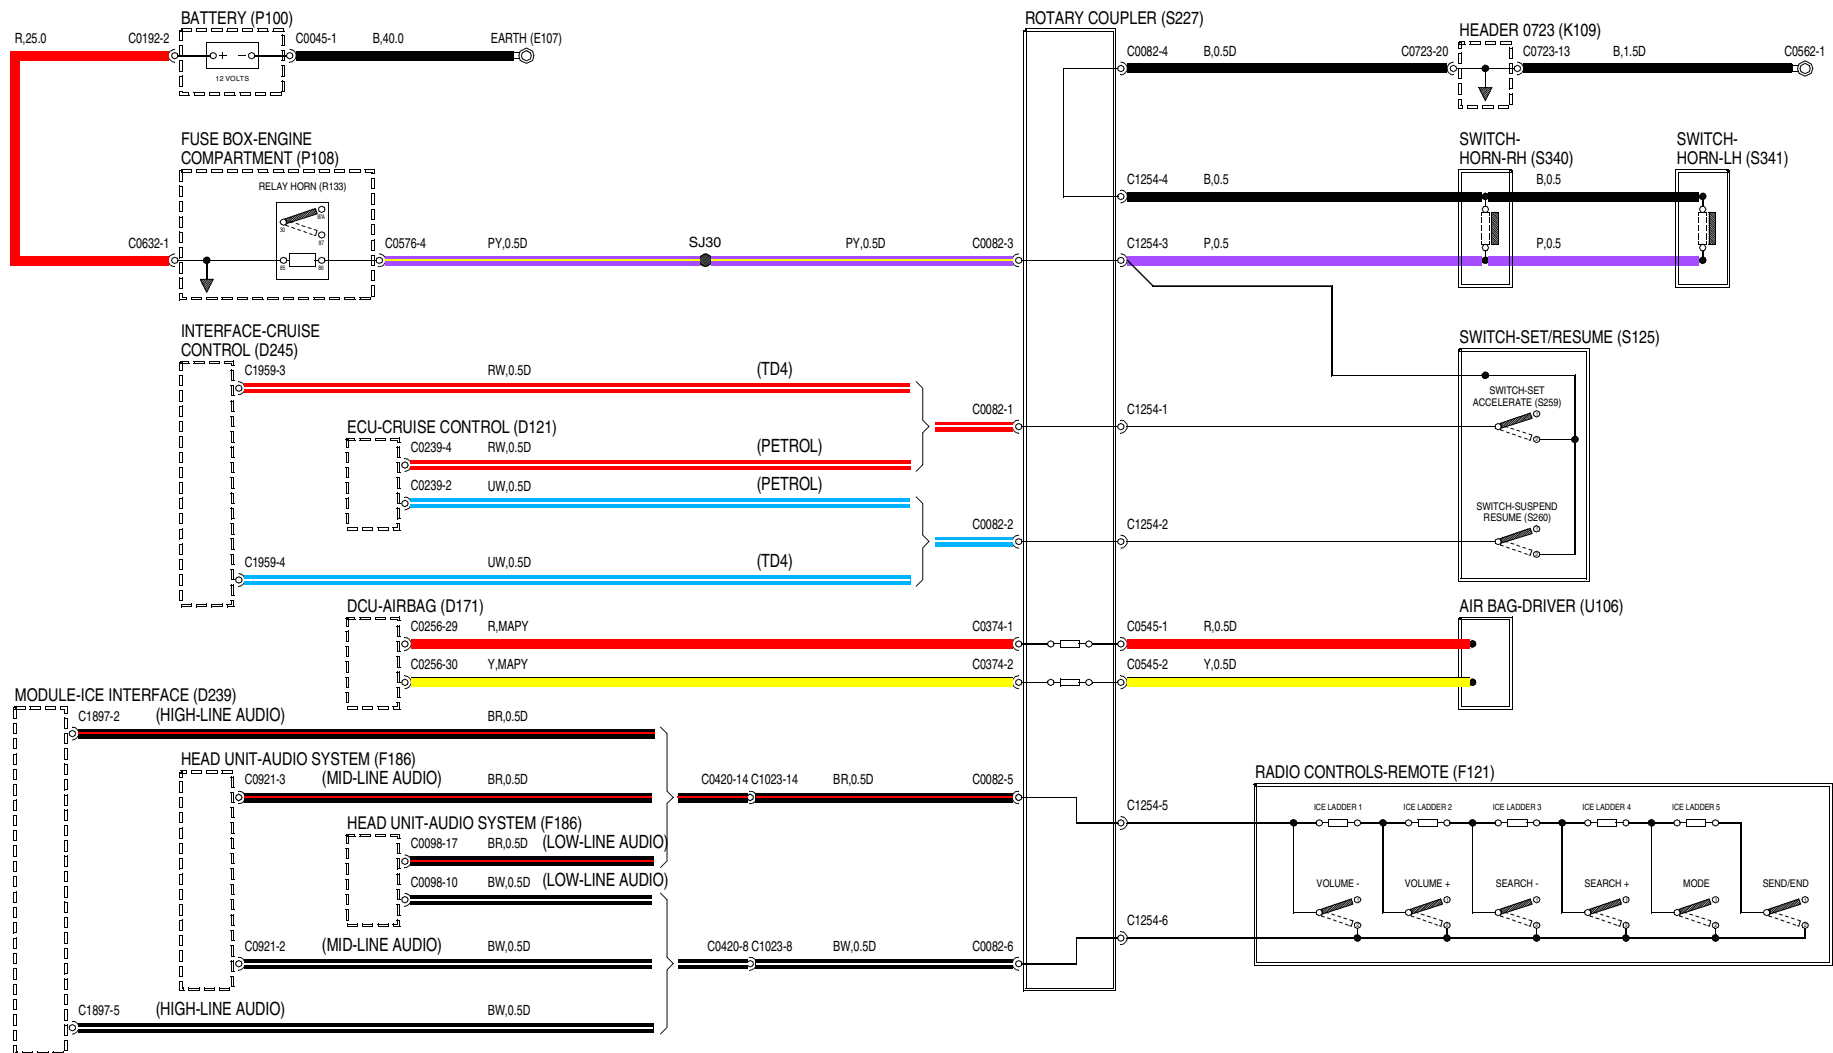


VWR004270-A-01

48 HORN (S)

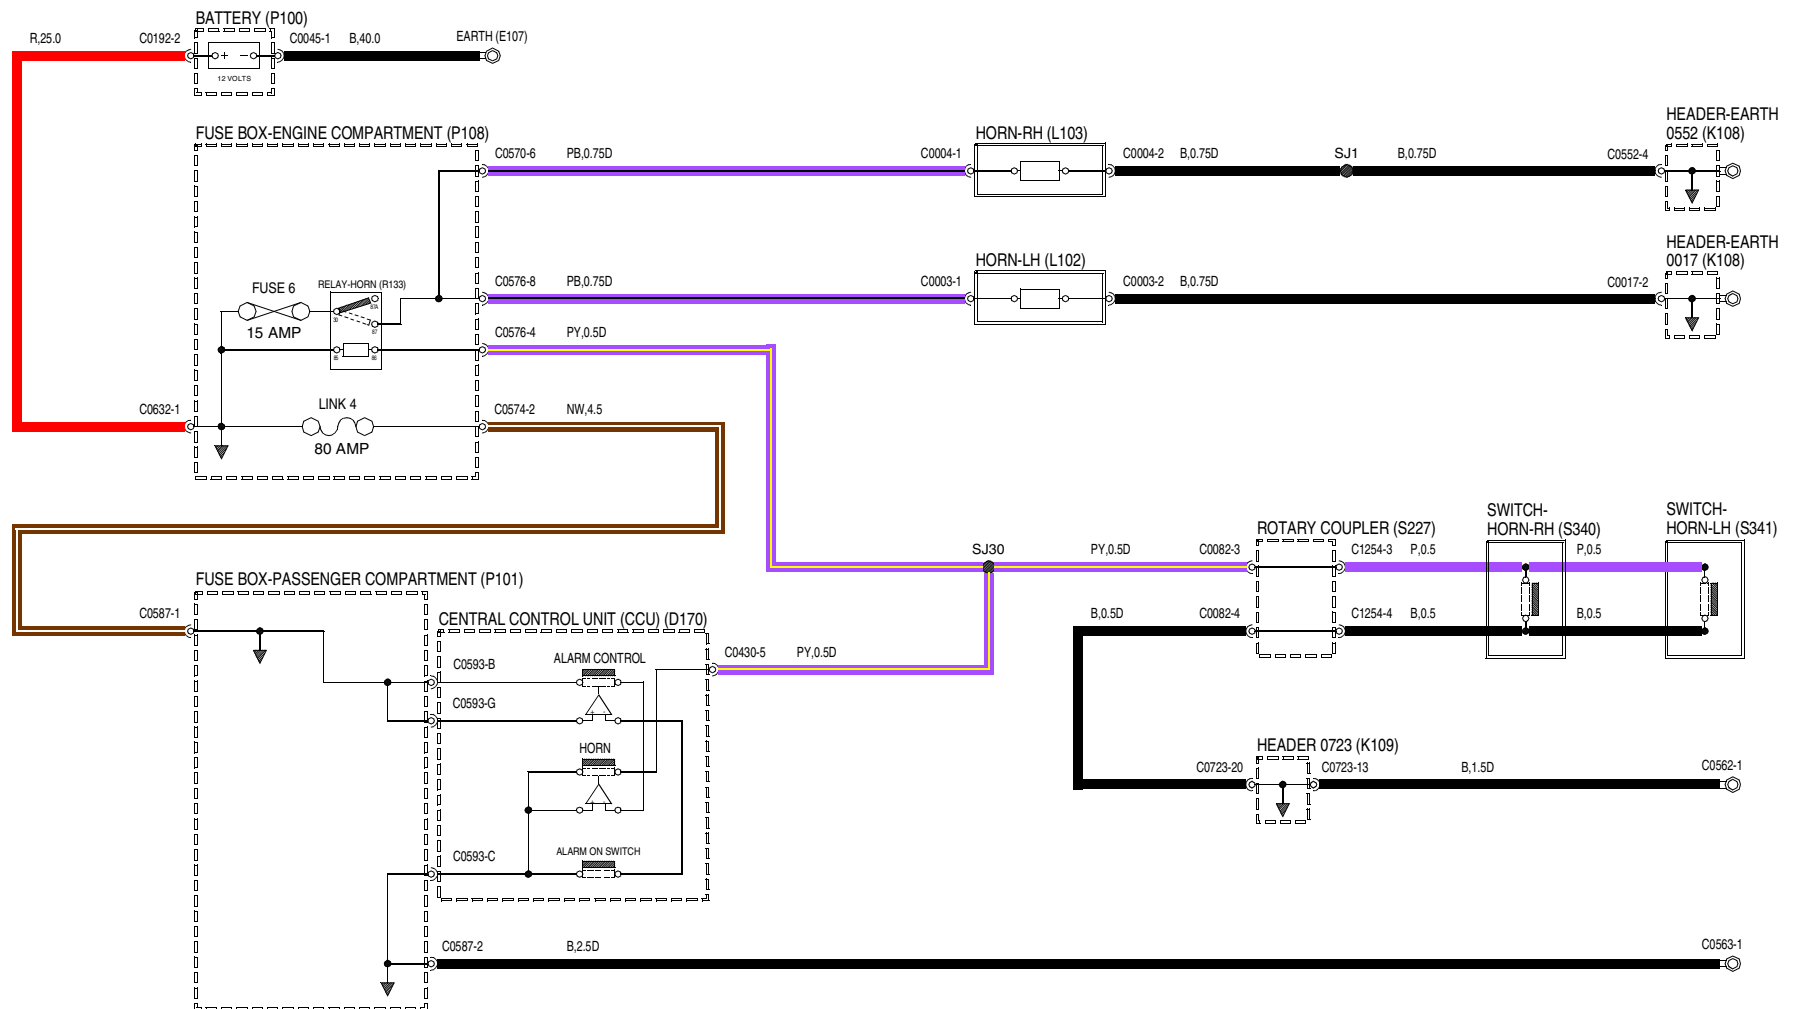


VWR004170-A-01

49 ACCESSORY SOCKET

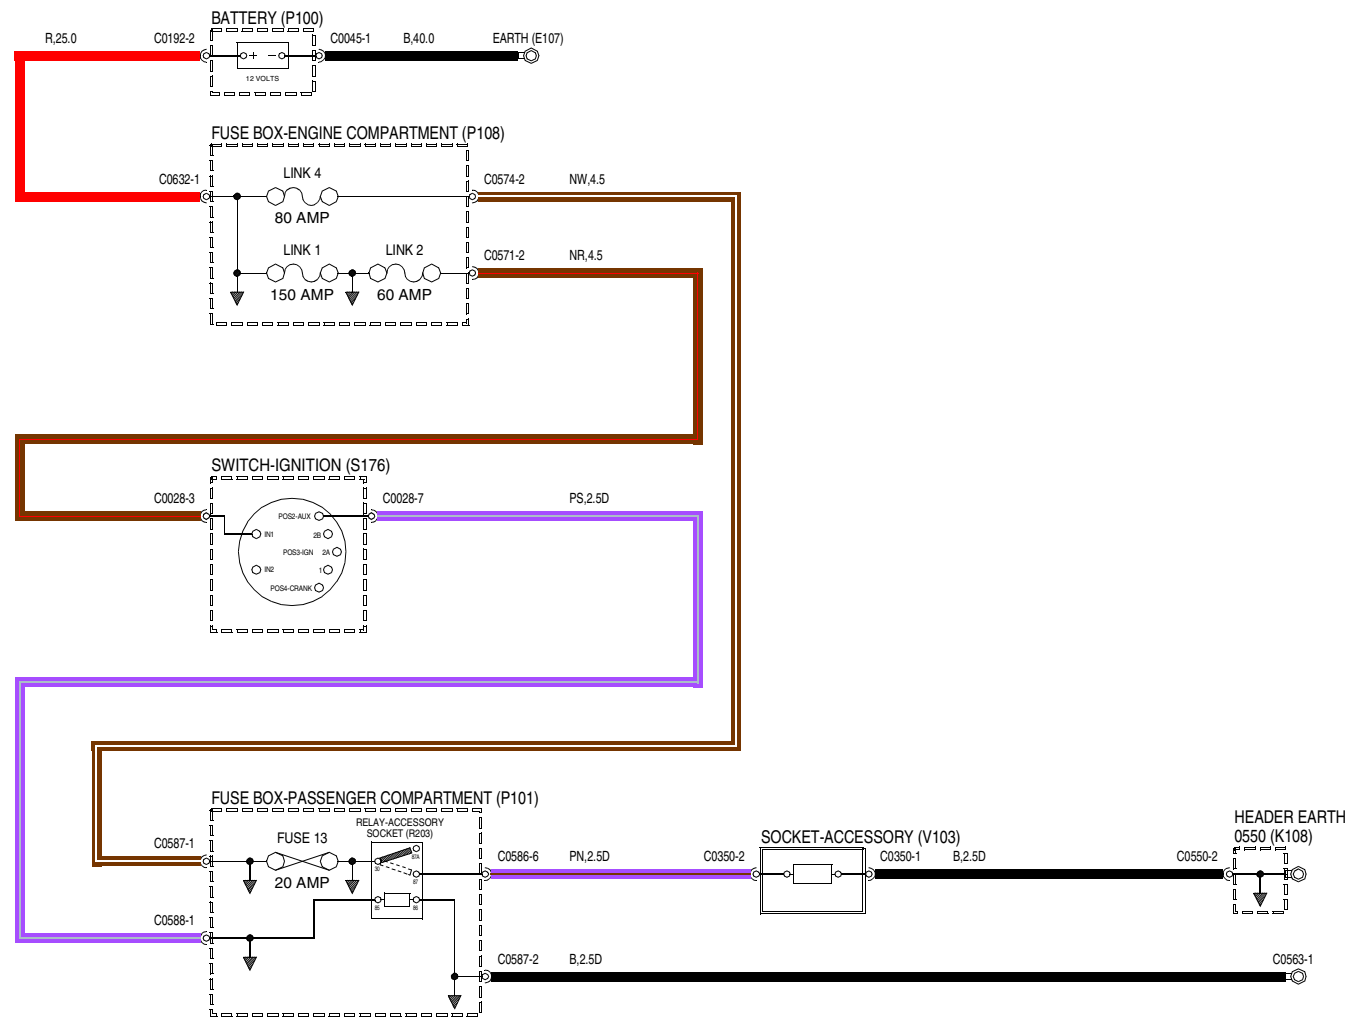


VWR003940-A-01


49 CIGAR LIGHTER

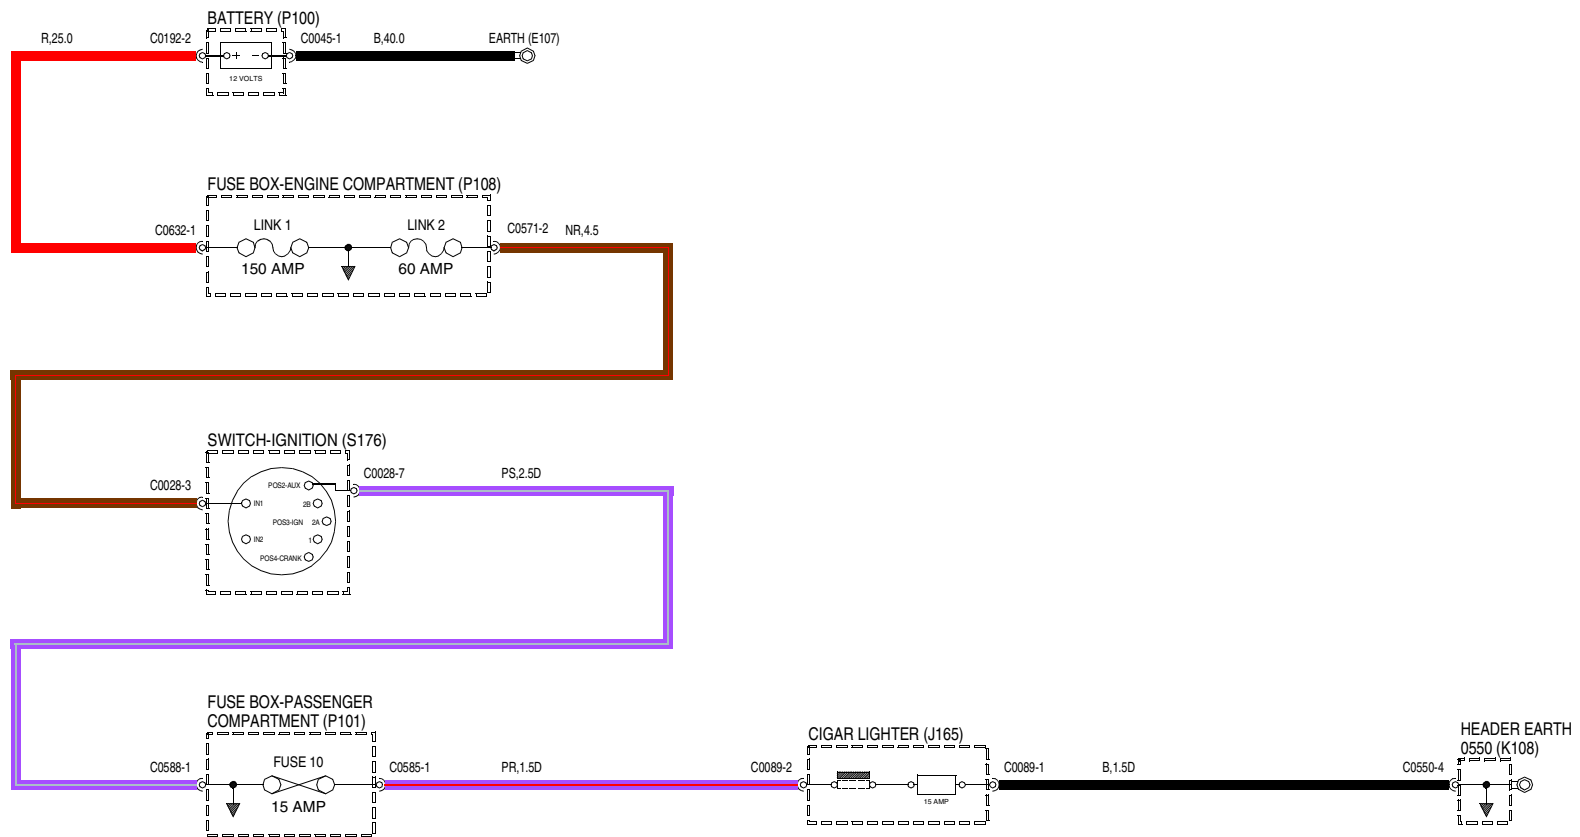


VWR004000-A-01

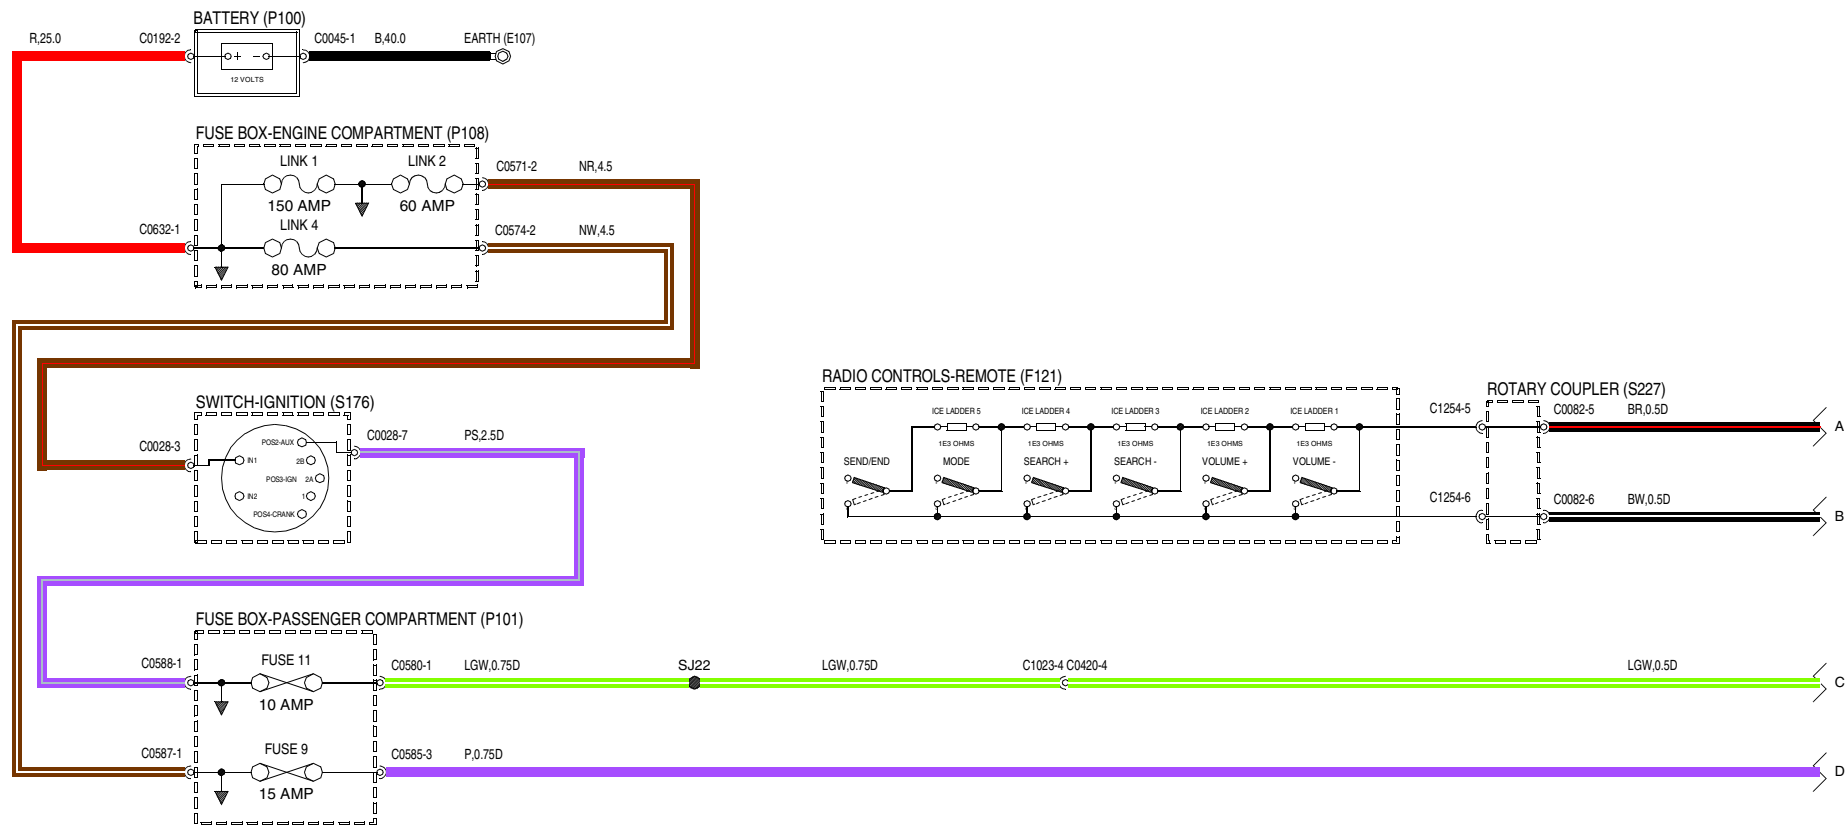


VWR004180-A-01

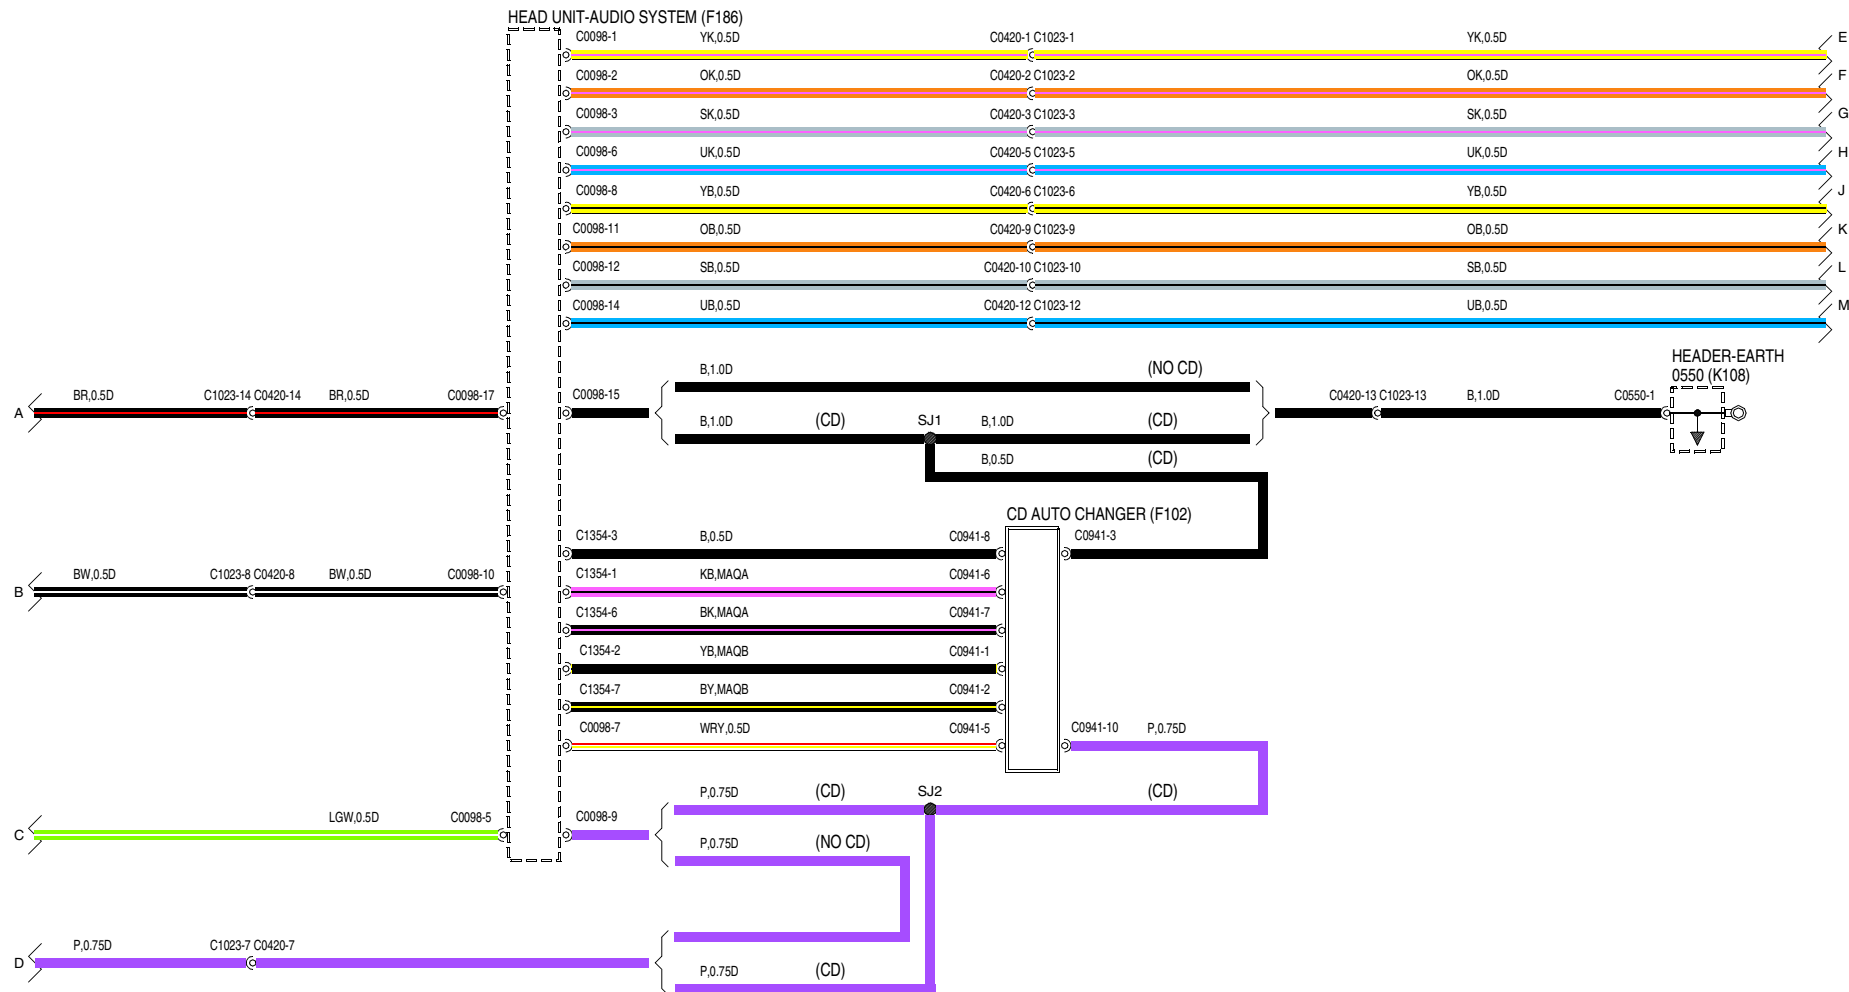


VWR004180-A-02

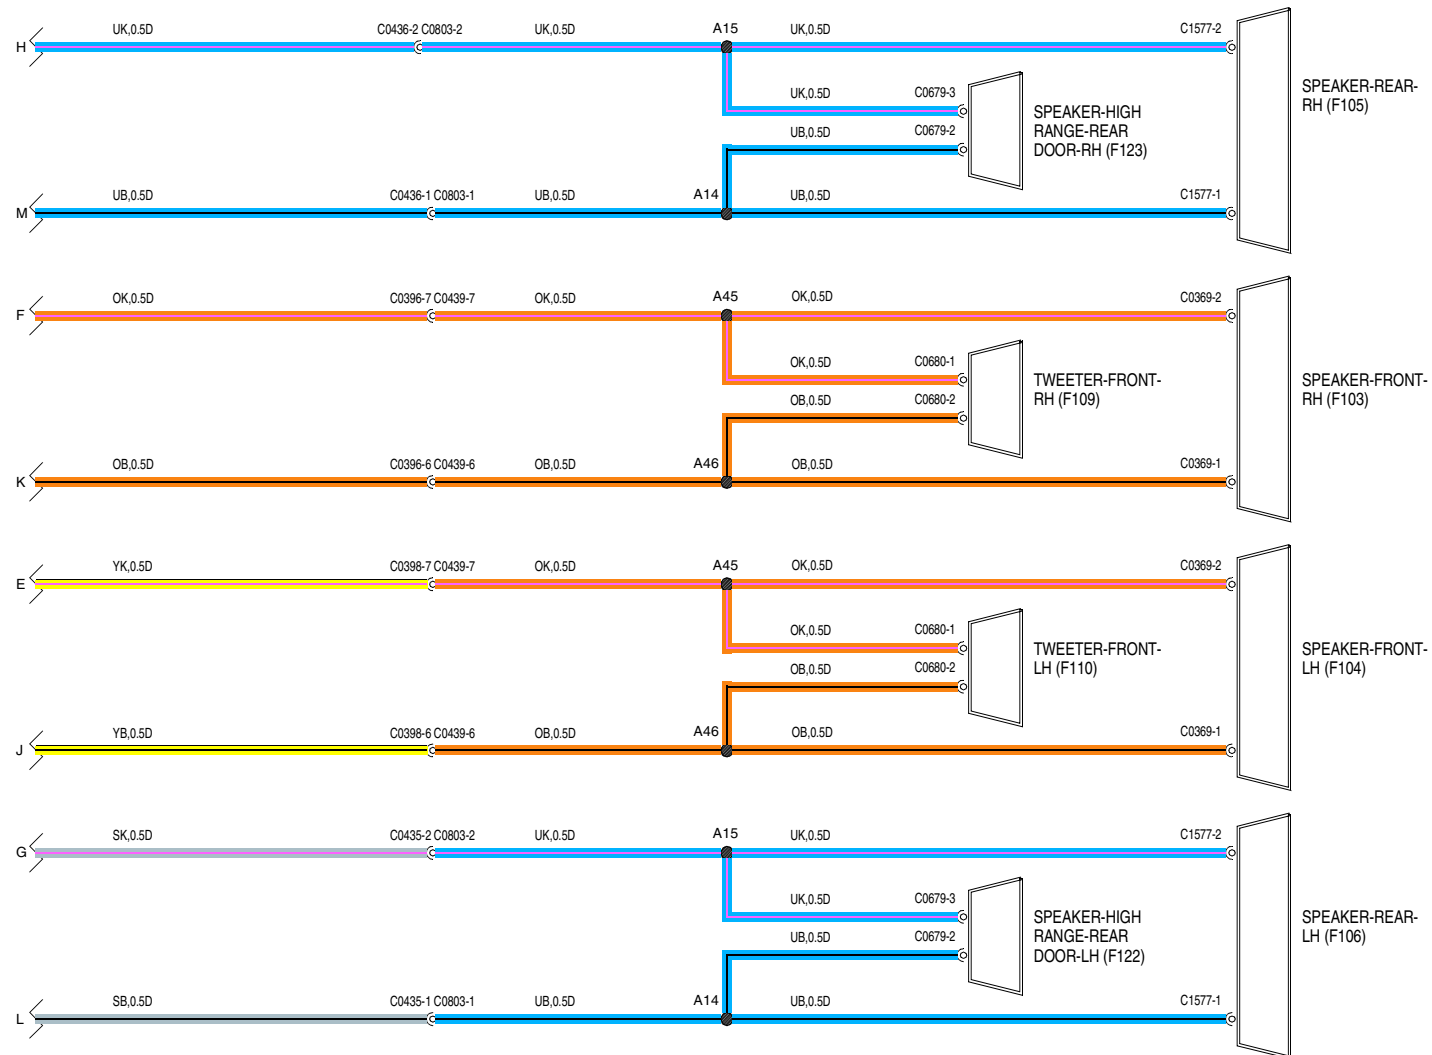


VWR004180-A-03

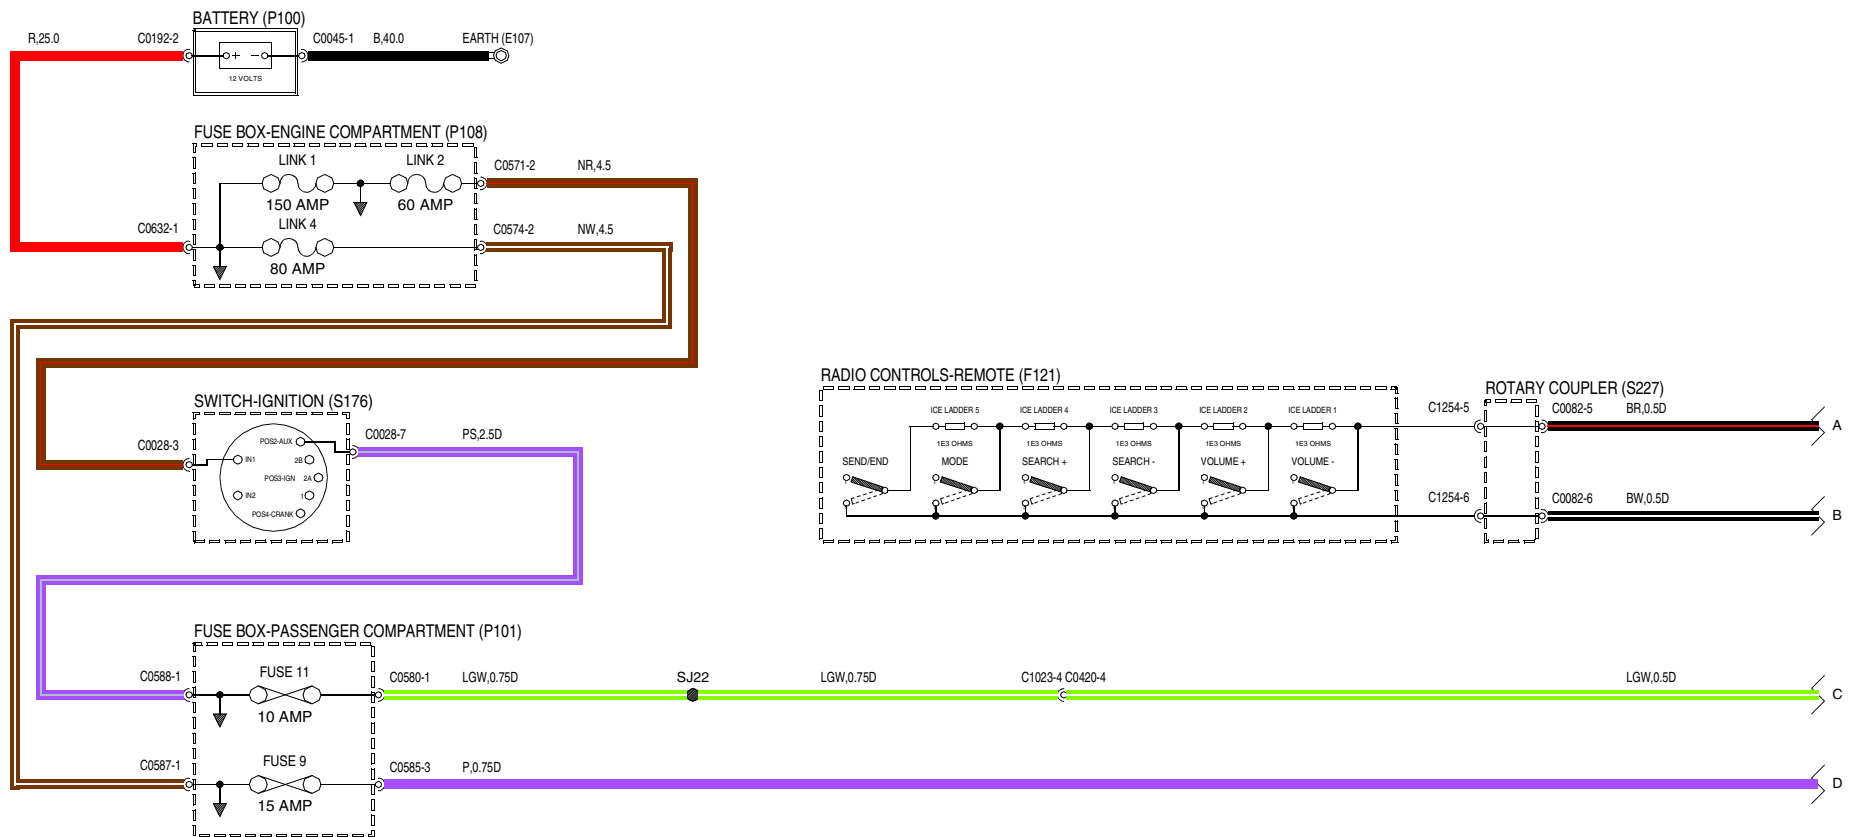


VWR004420-A-01

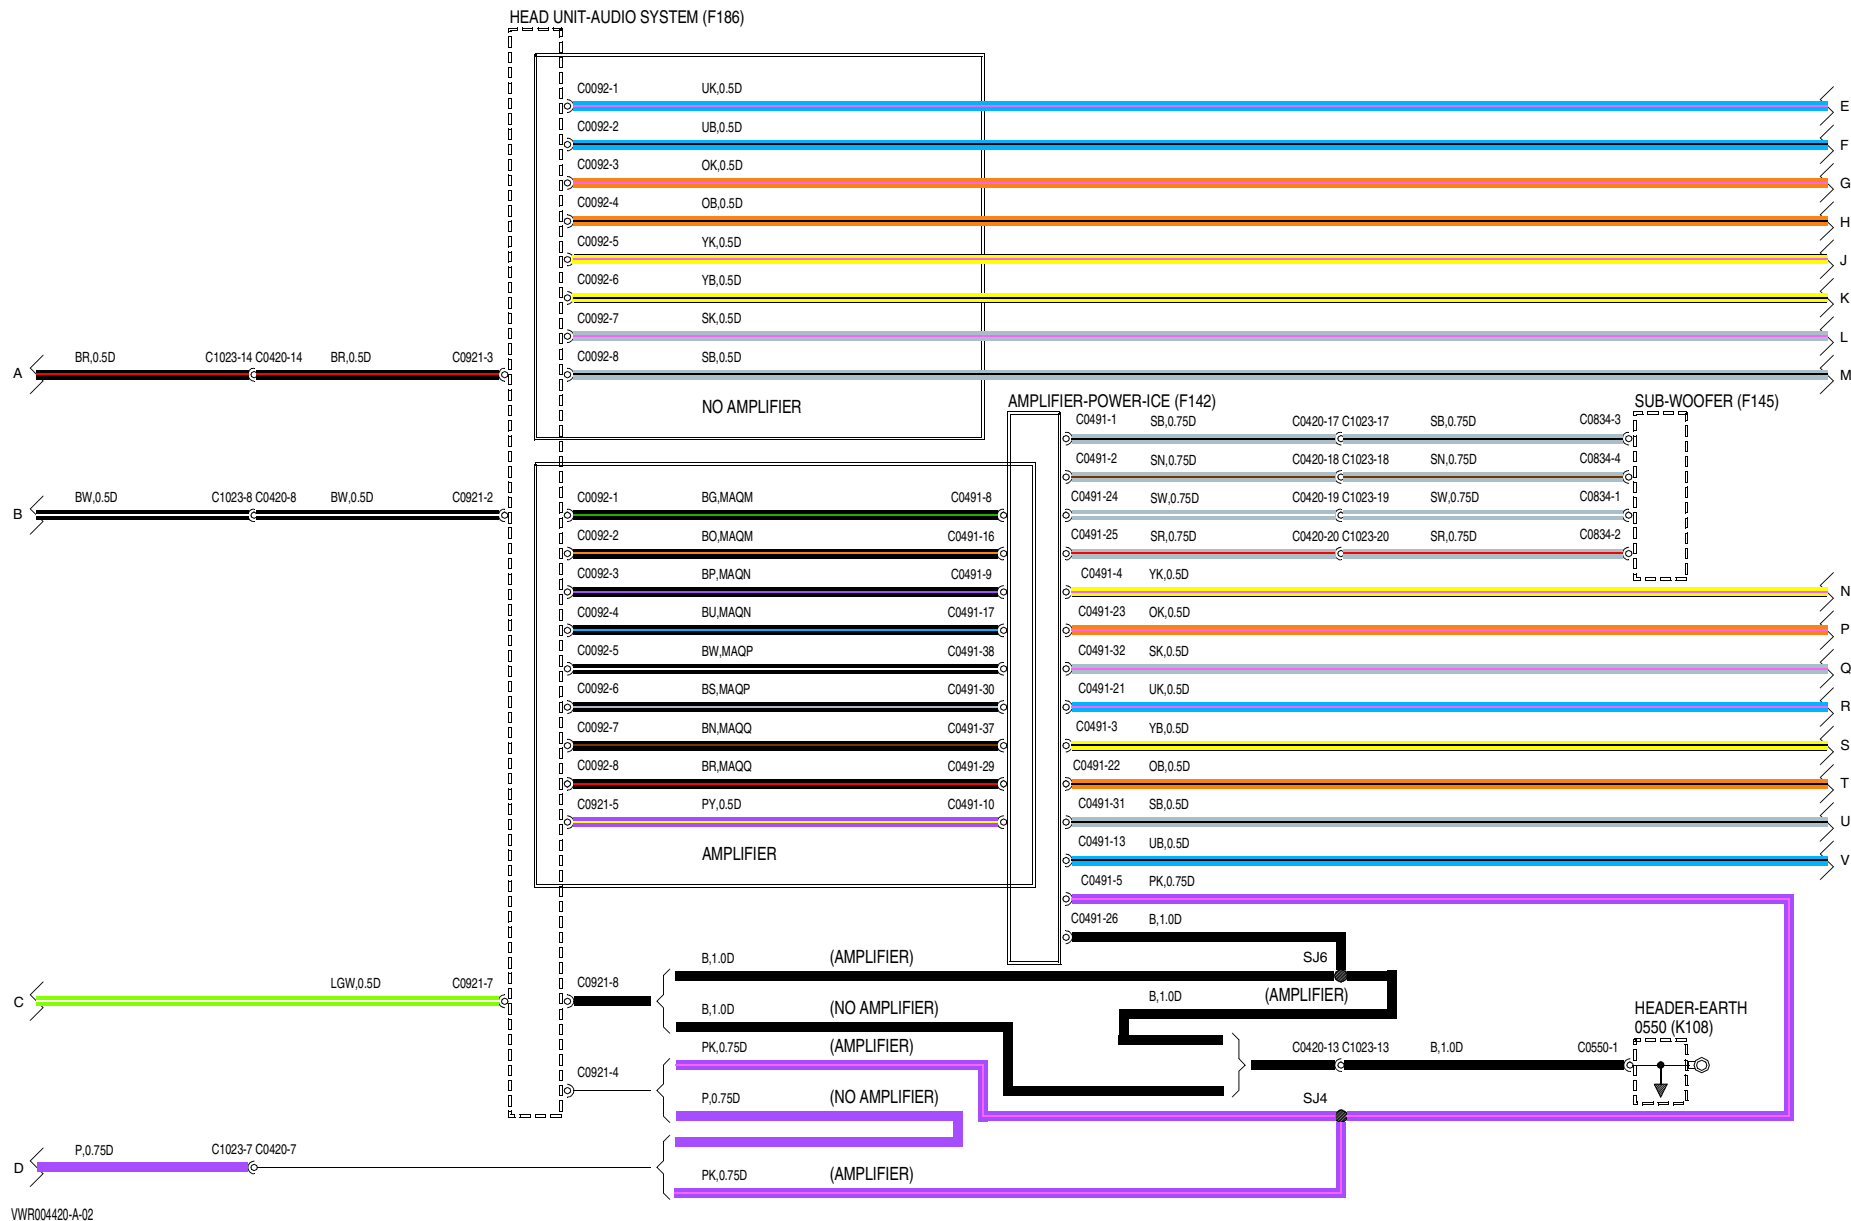


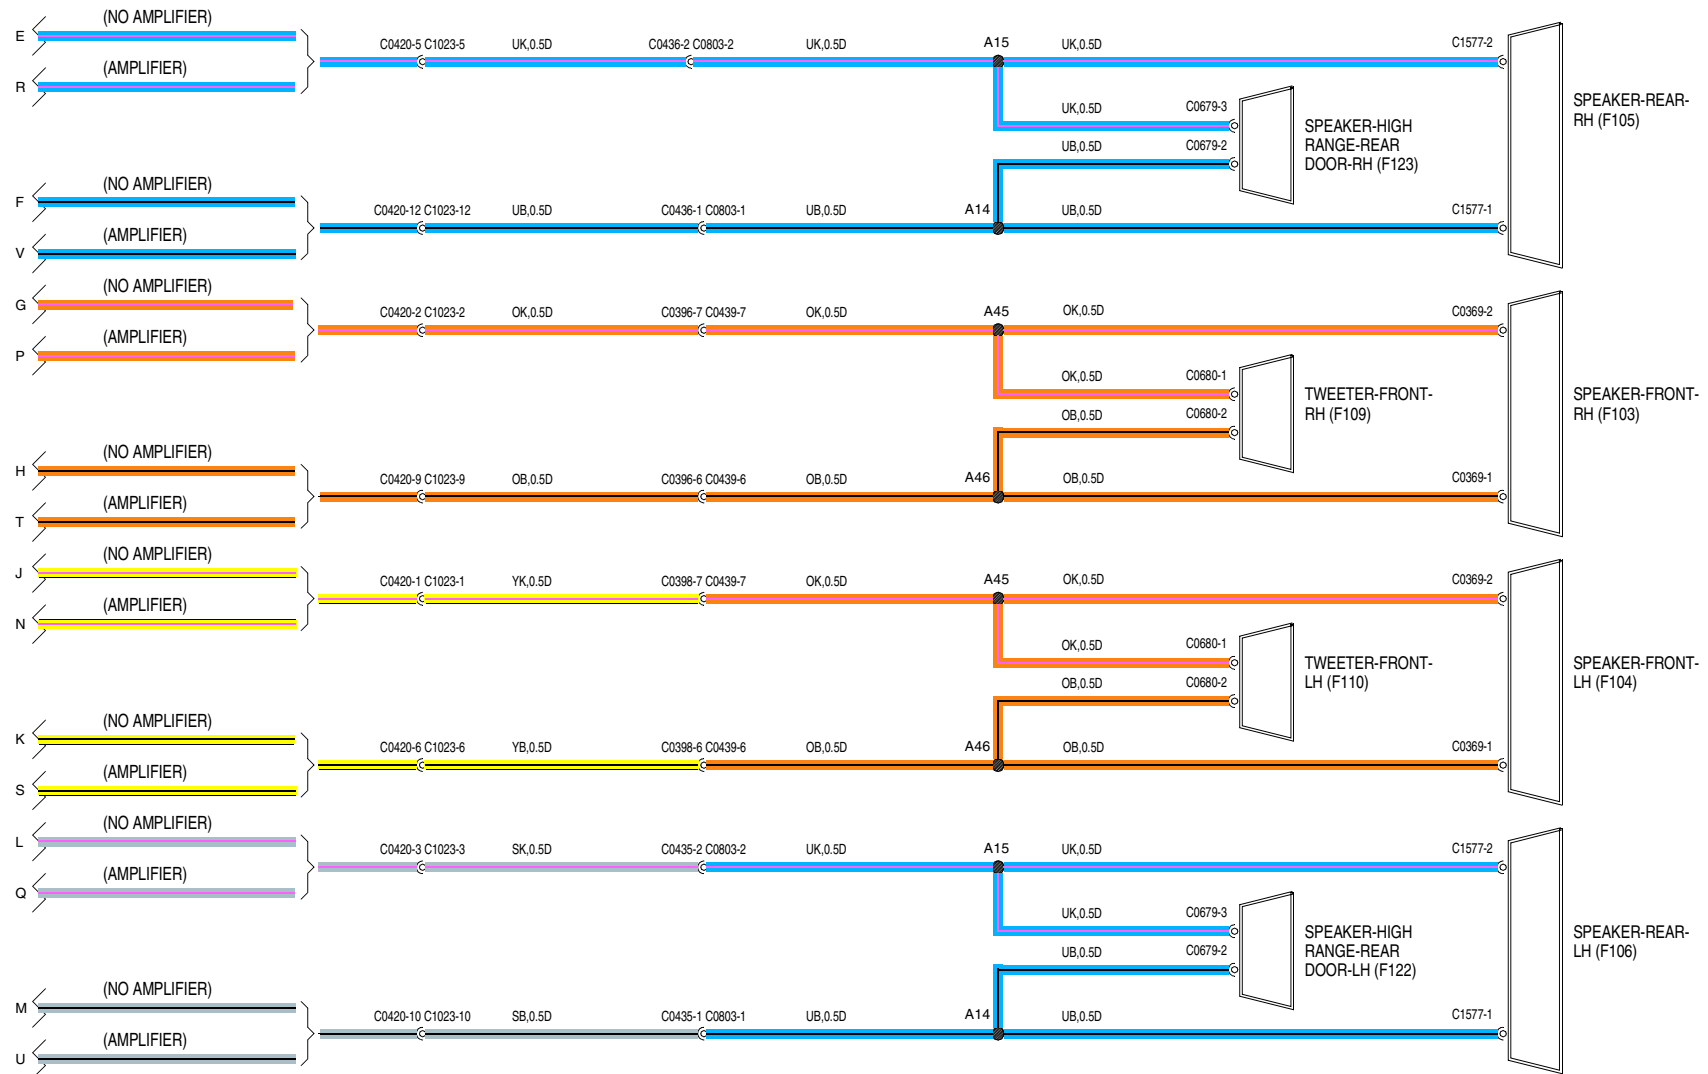

VWR004420-A-03

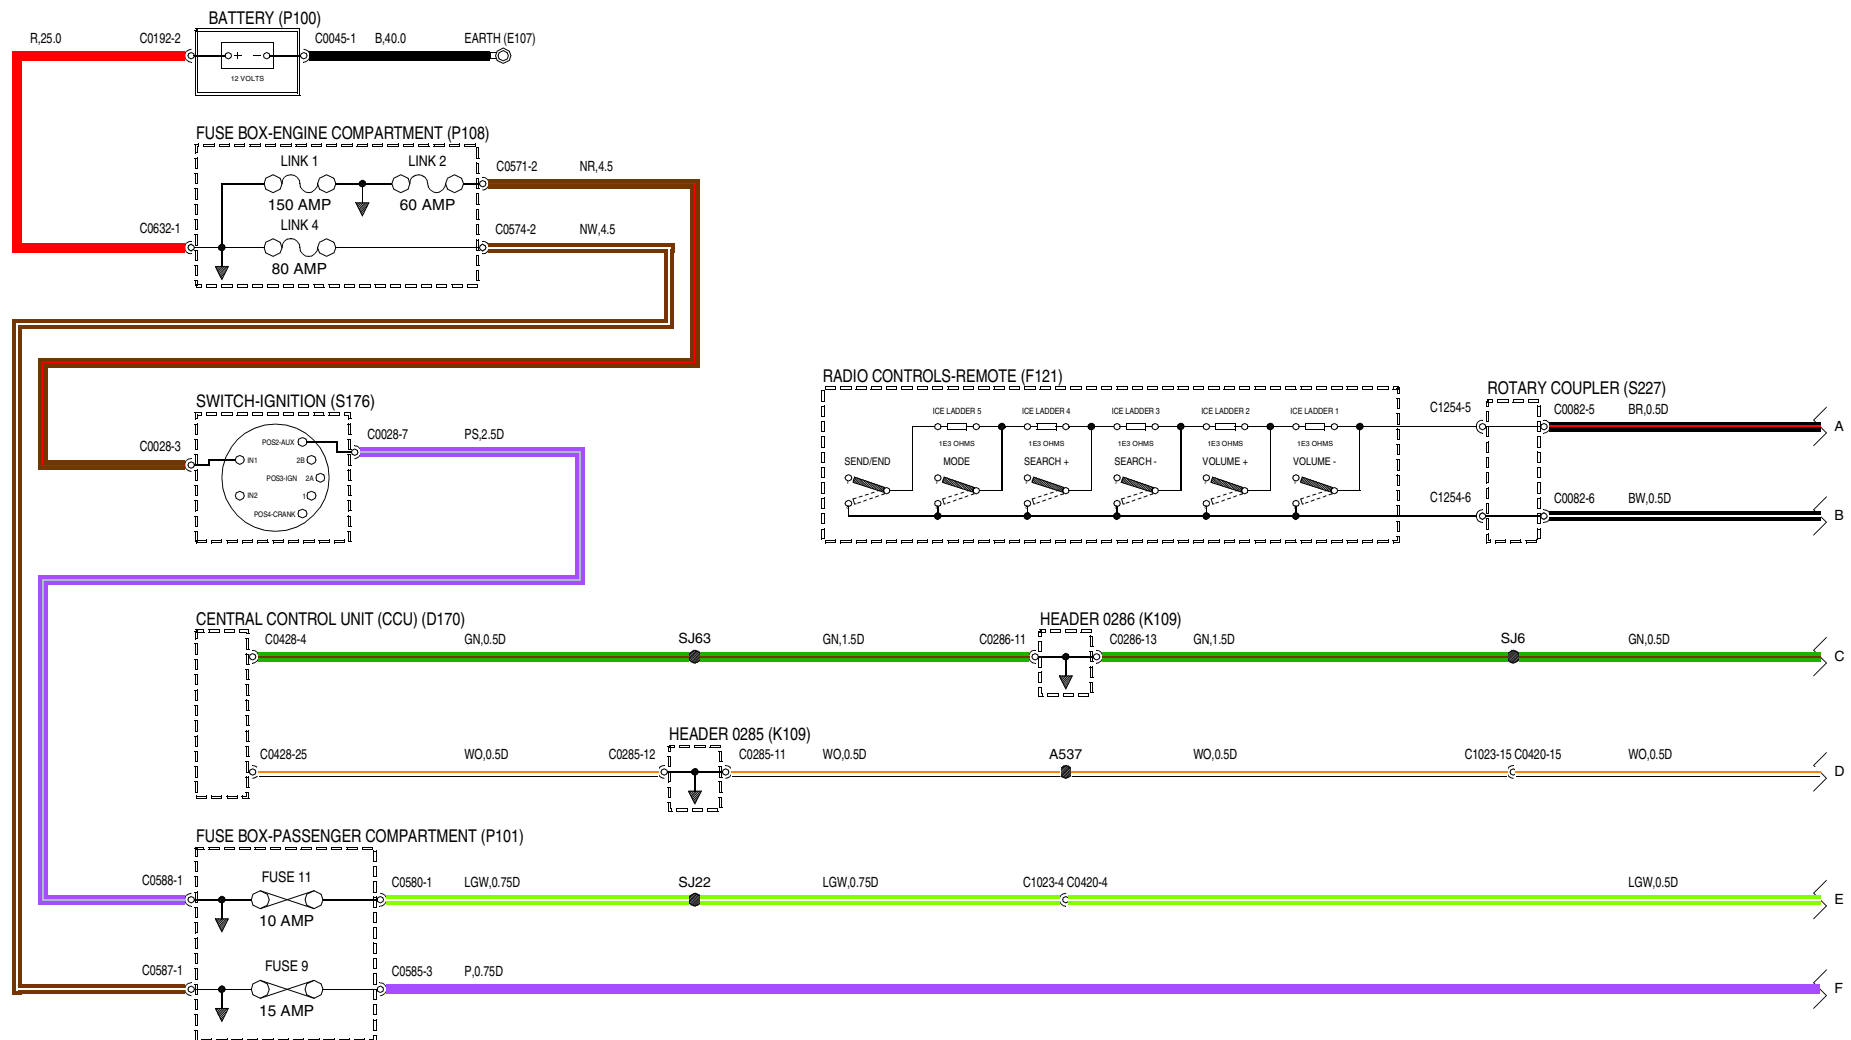


VWR004610-A-01

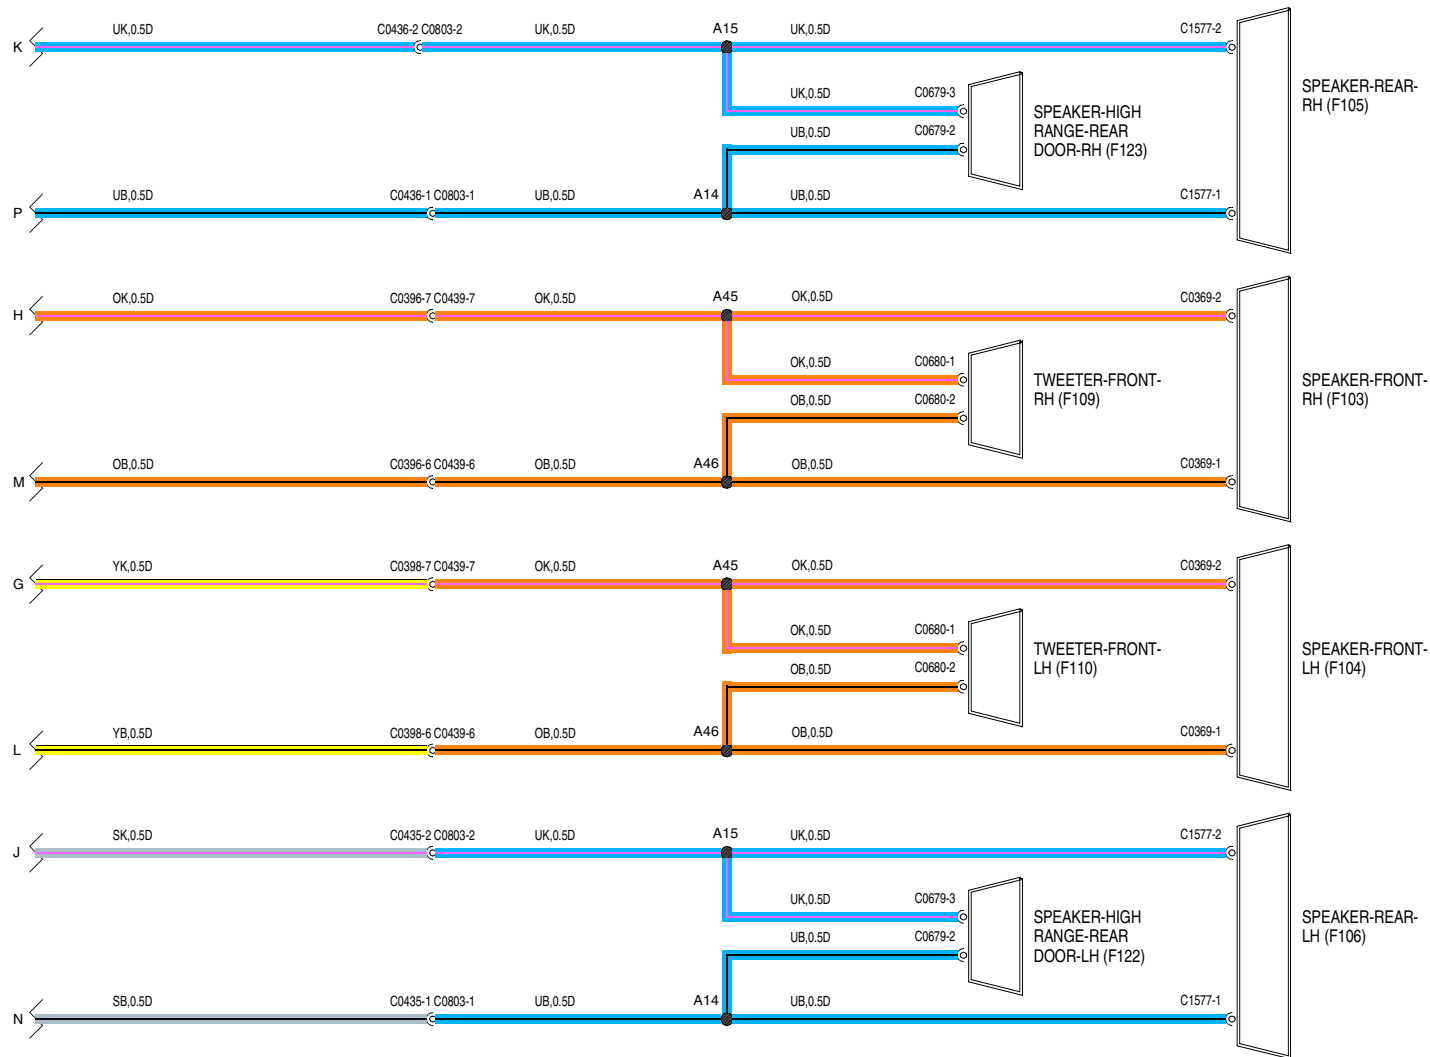


VWR004610-A-03

60 HEADER JOINTS

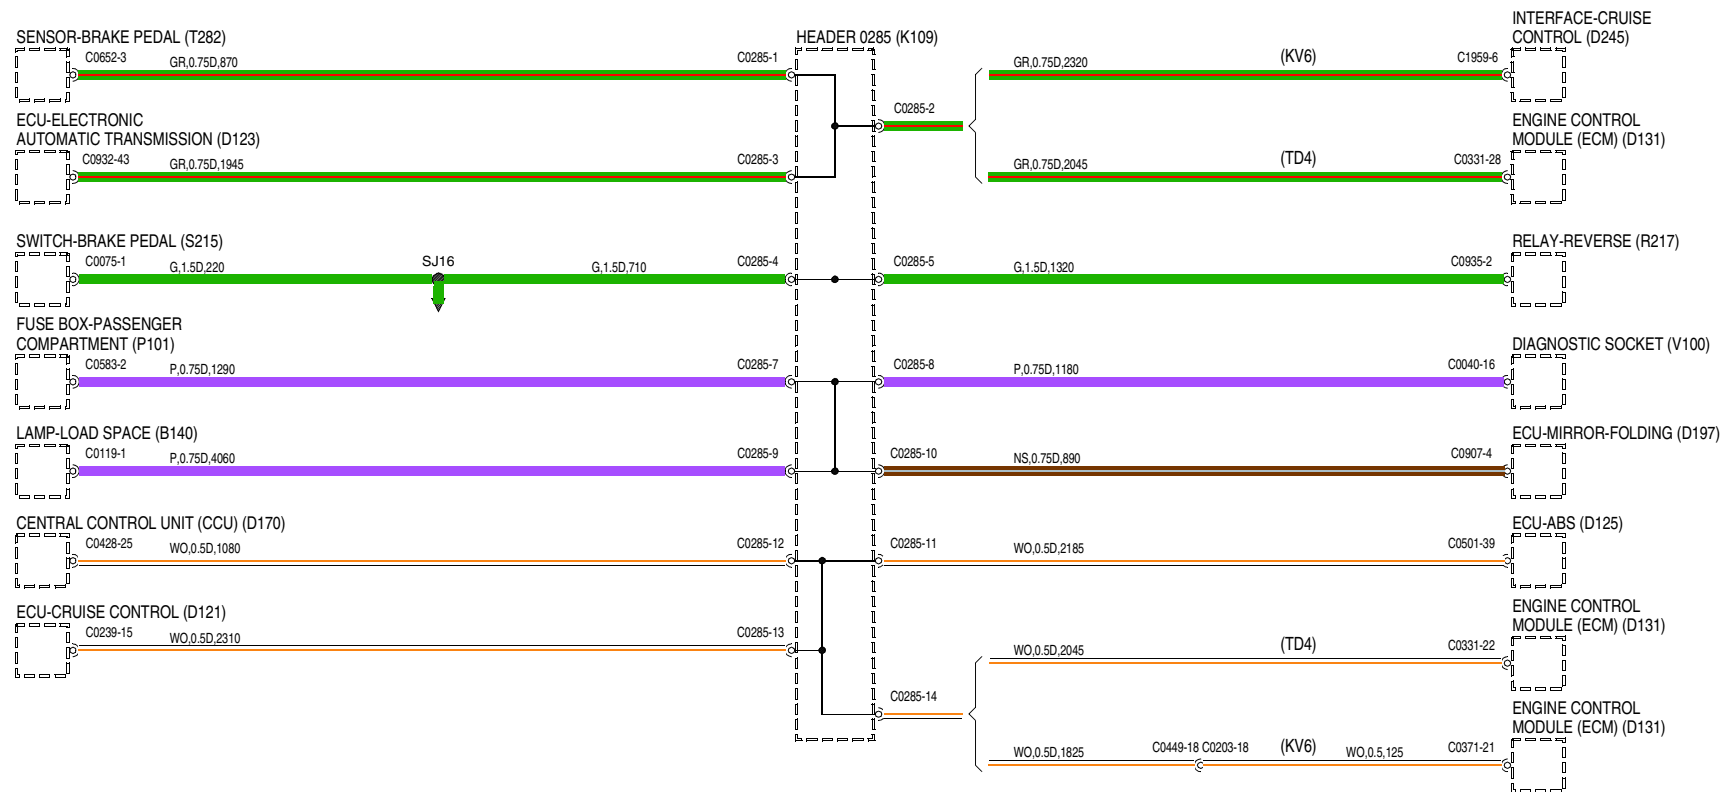


VWR004140-A-01

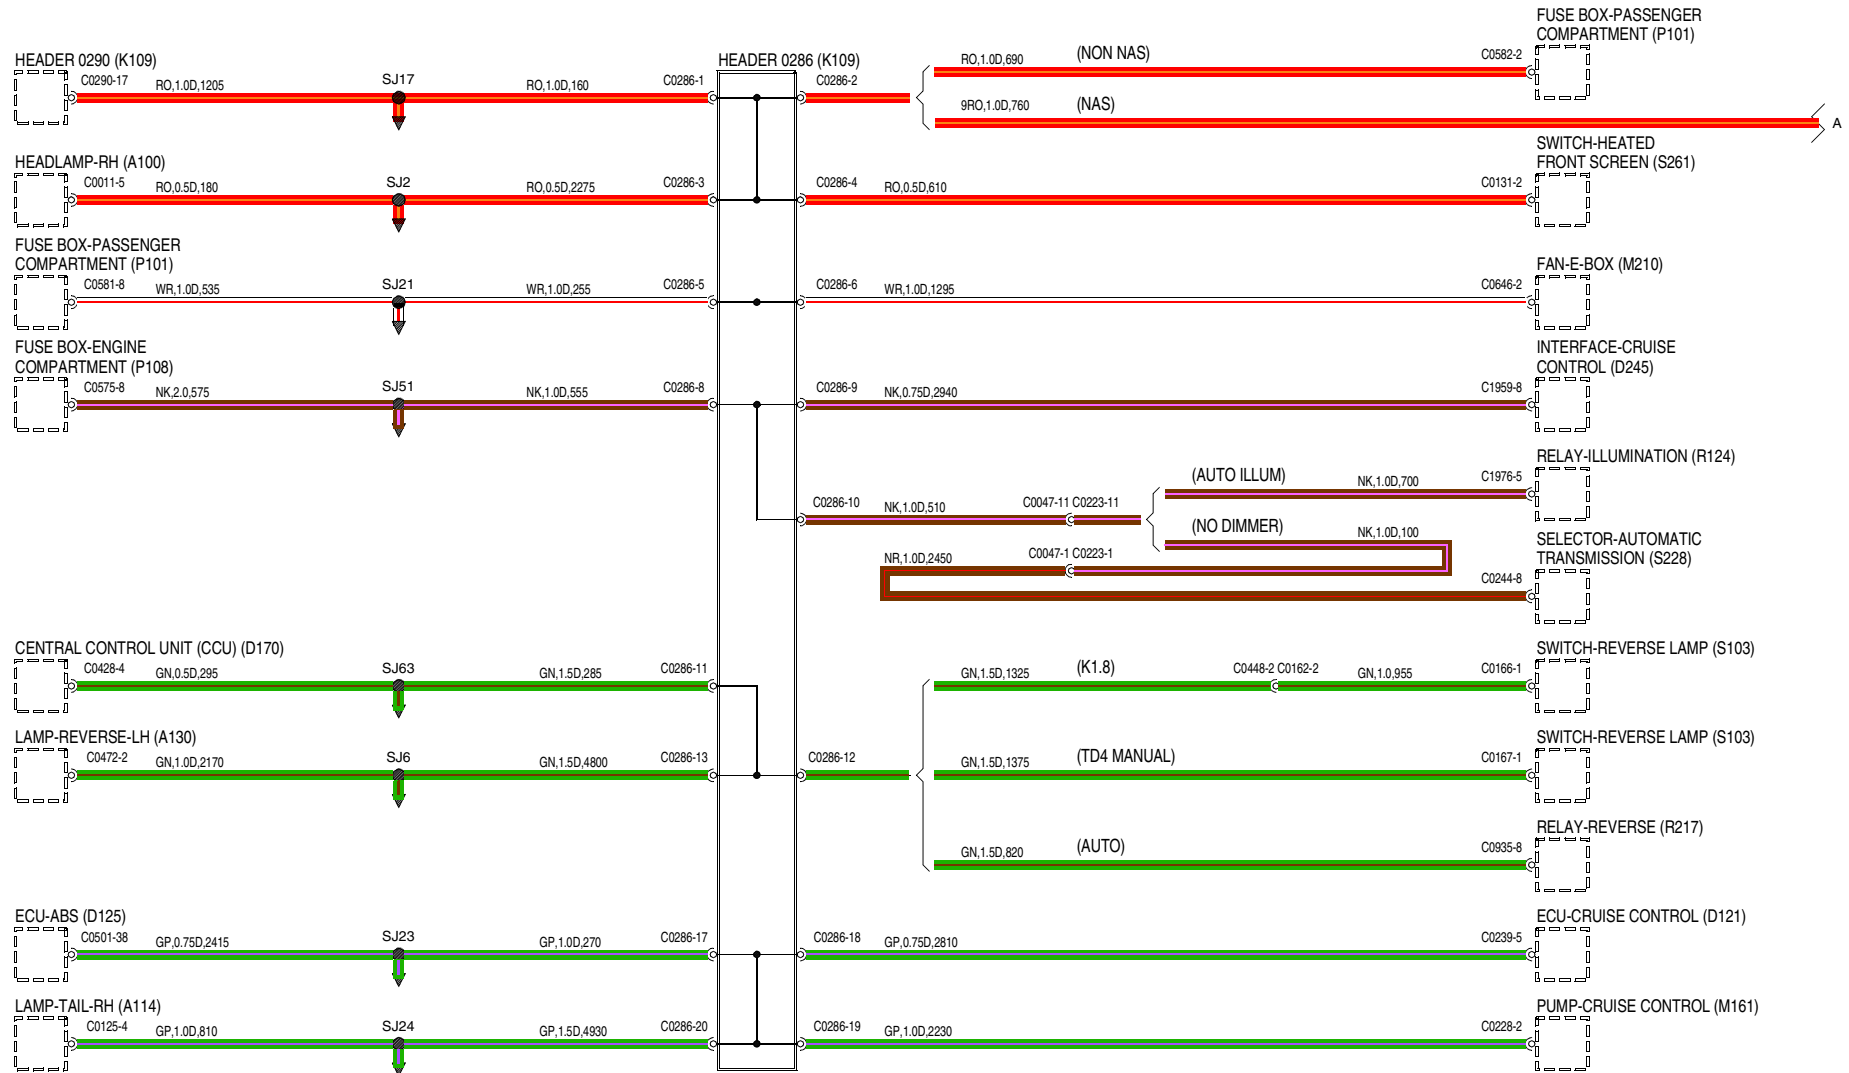


VWR004140-A-02

60 HEADER JOINTS

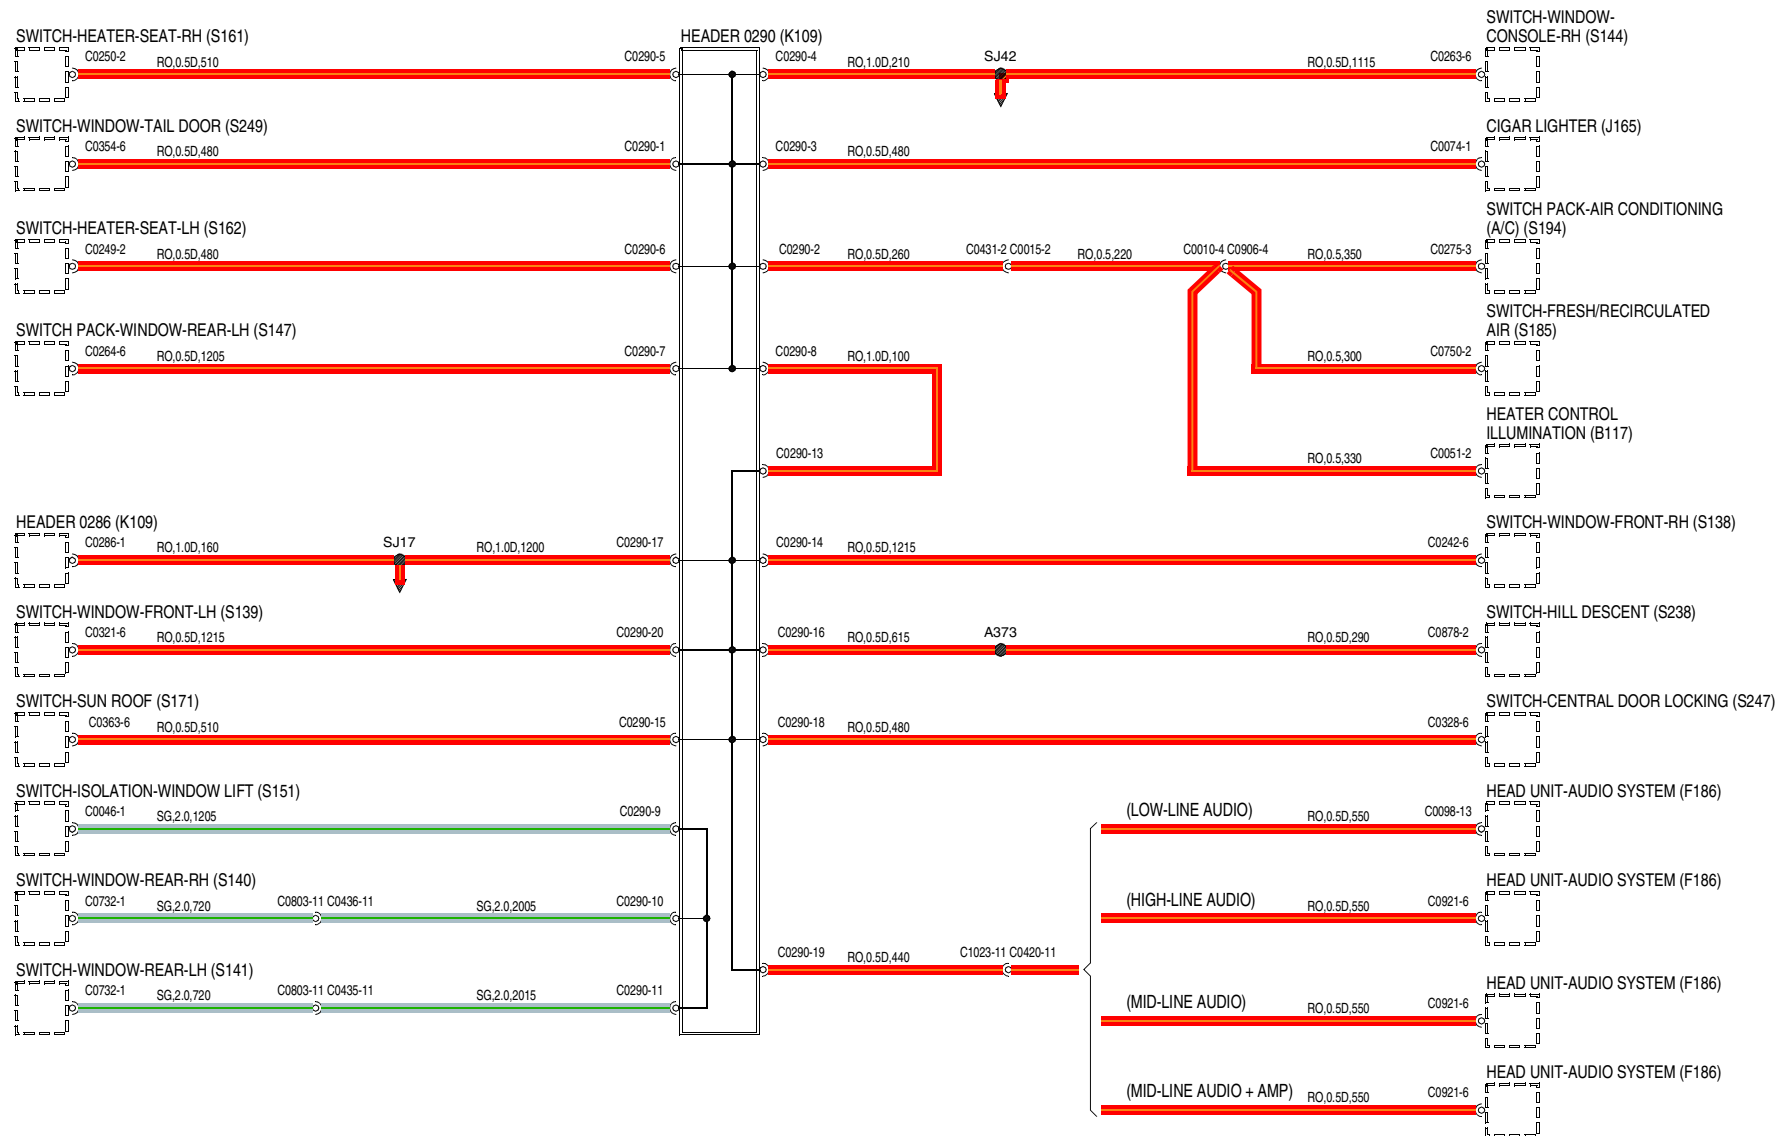


VWR004140-A-03

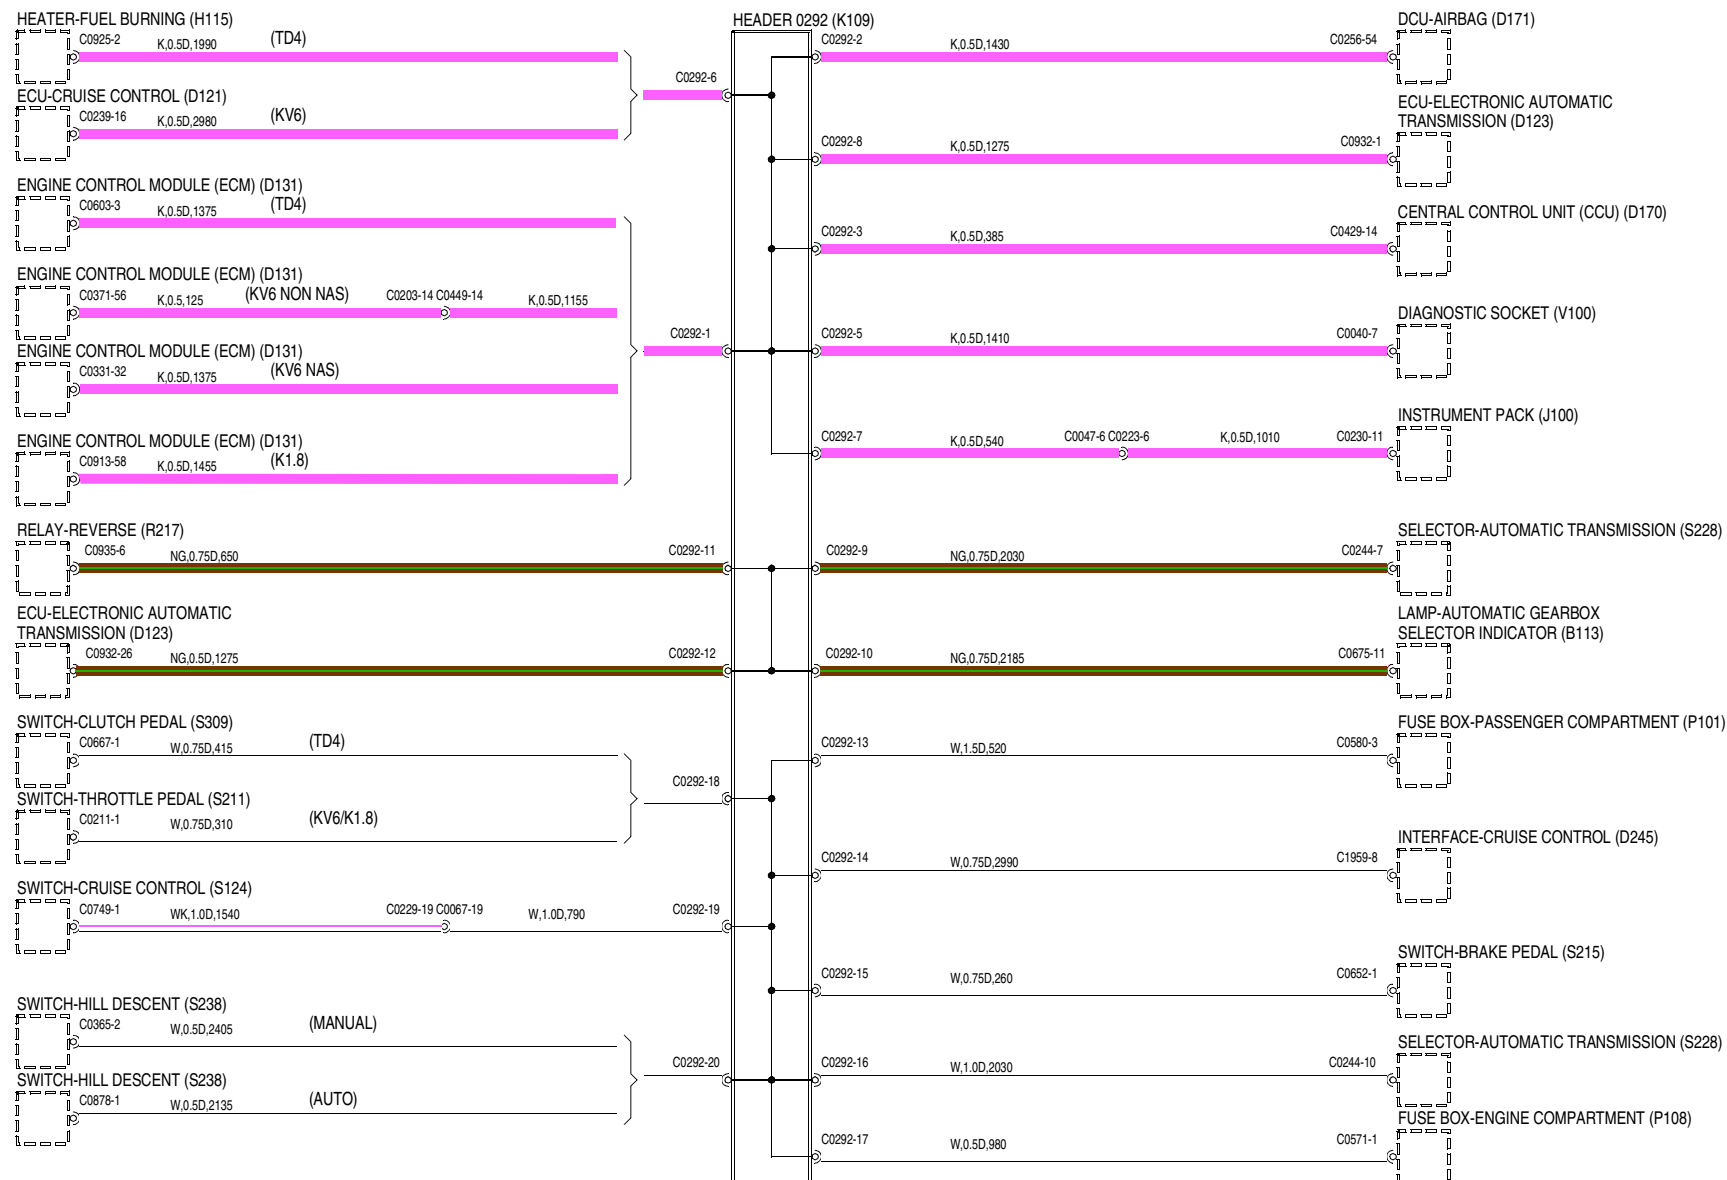


VWR004140-A-04

60 HEADER JOINTS

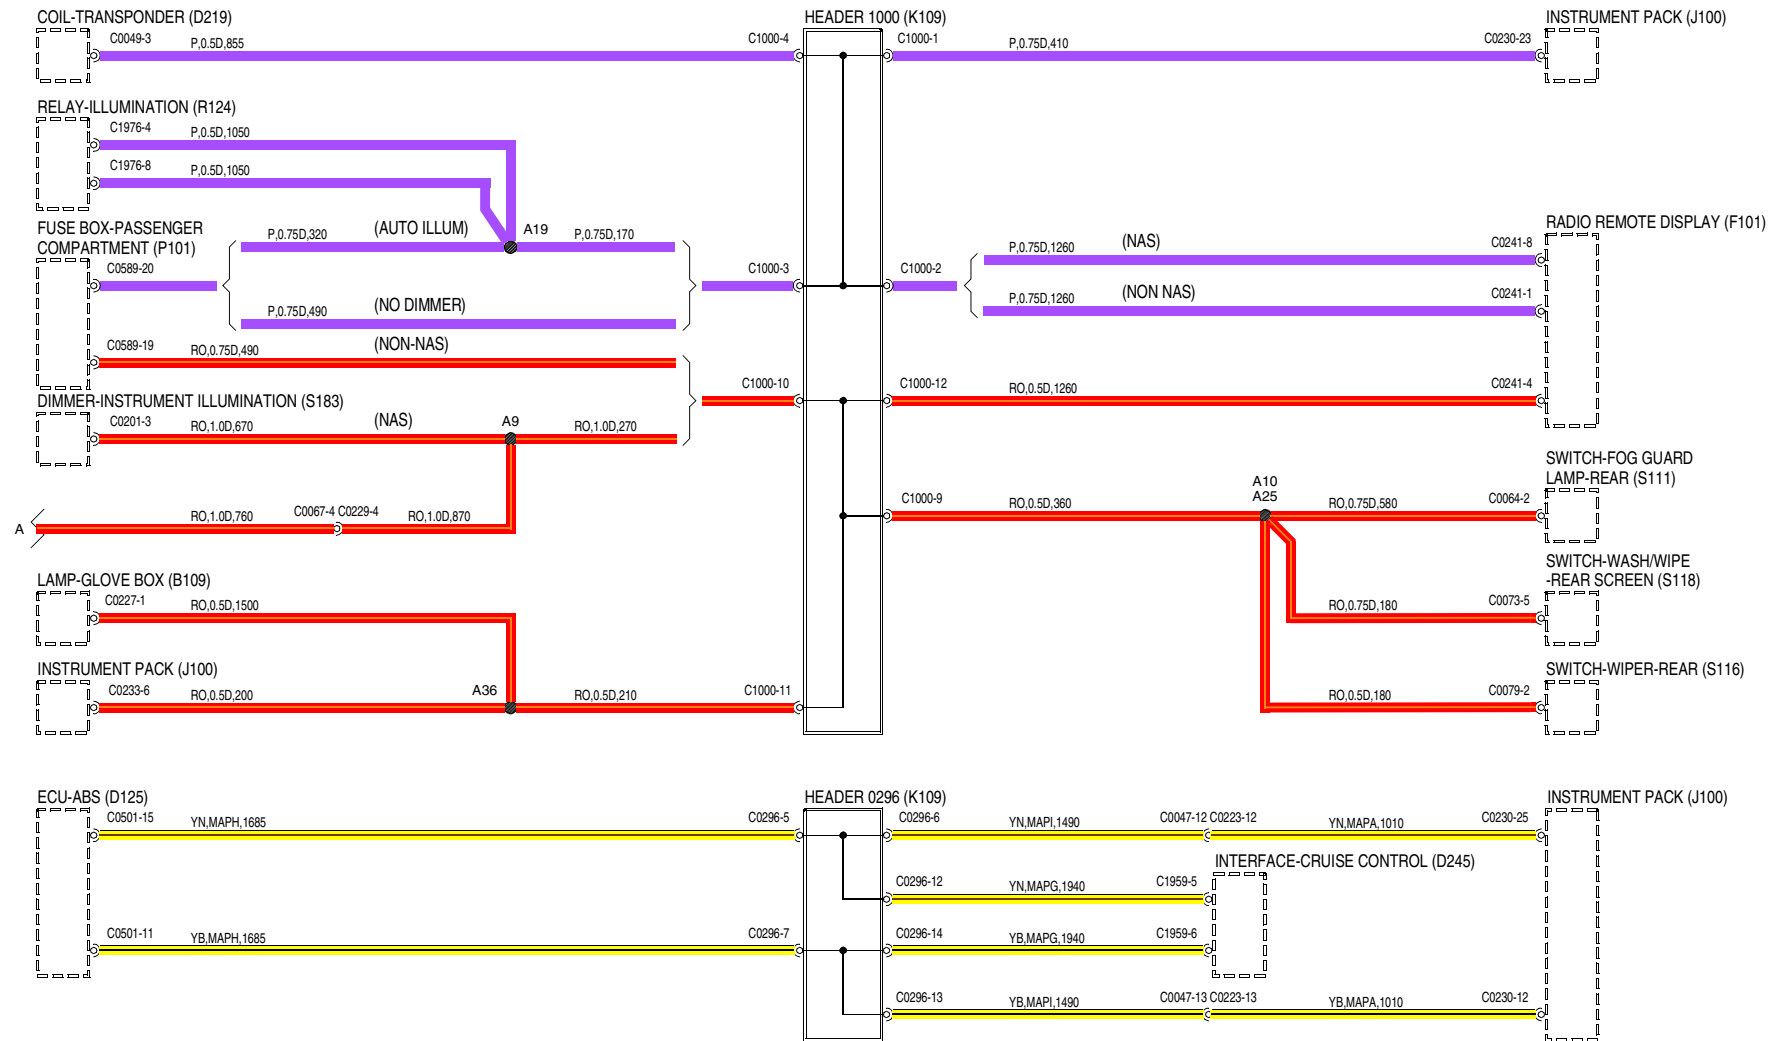


VWR004140-A-05

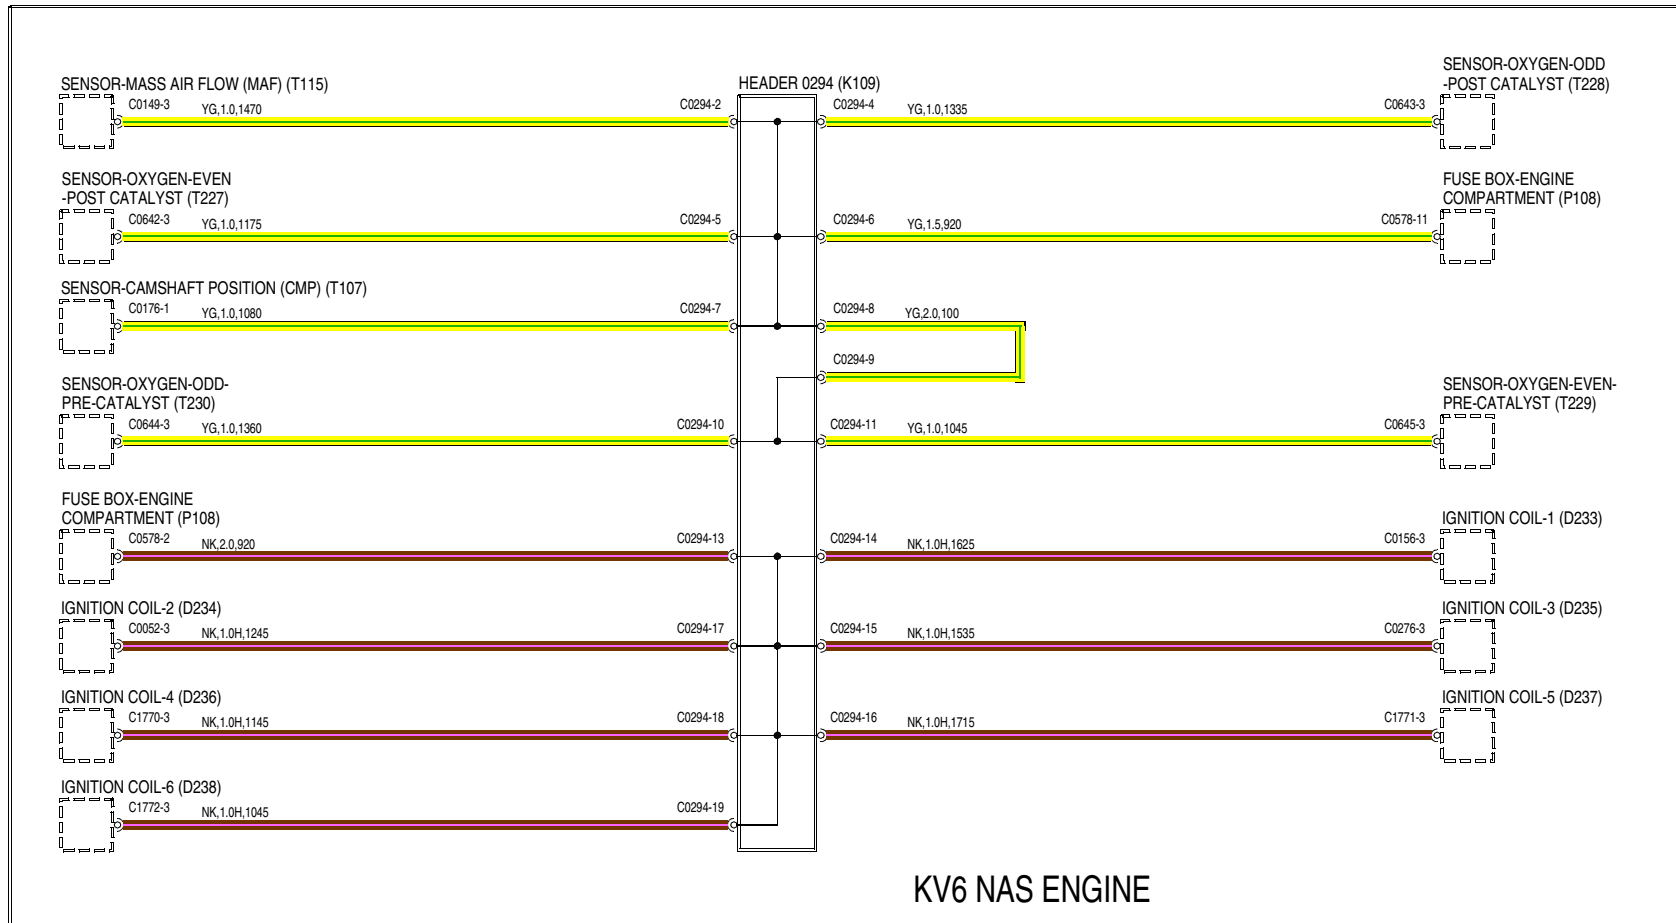


VWR004140-A-06



65 SPLICES AND CENTRE TAPS

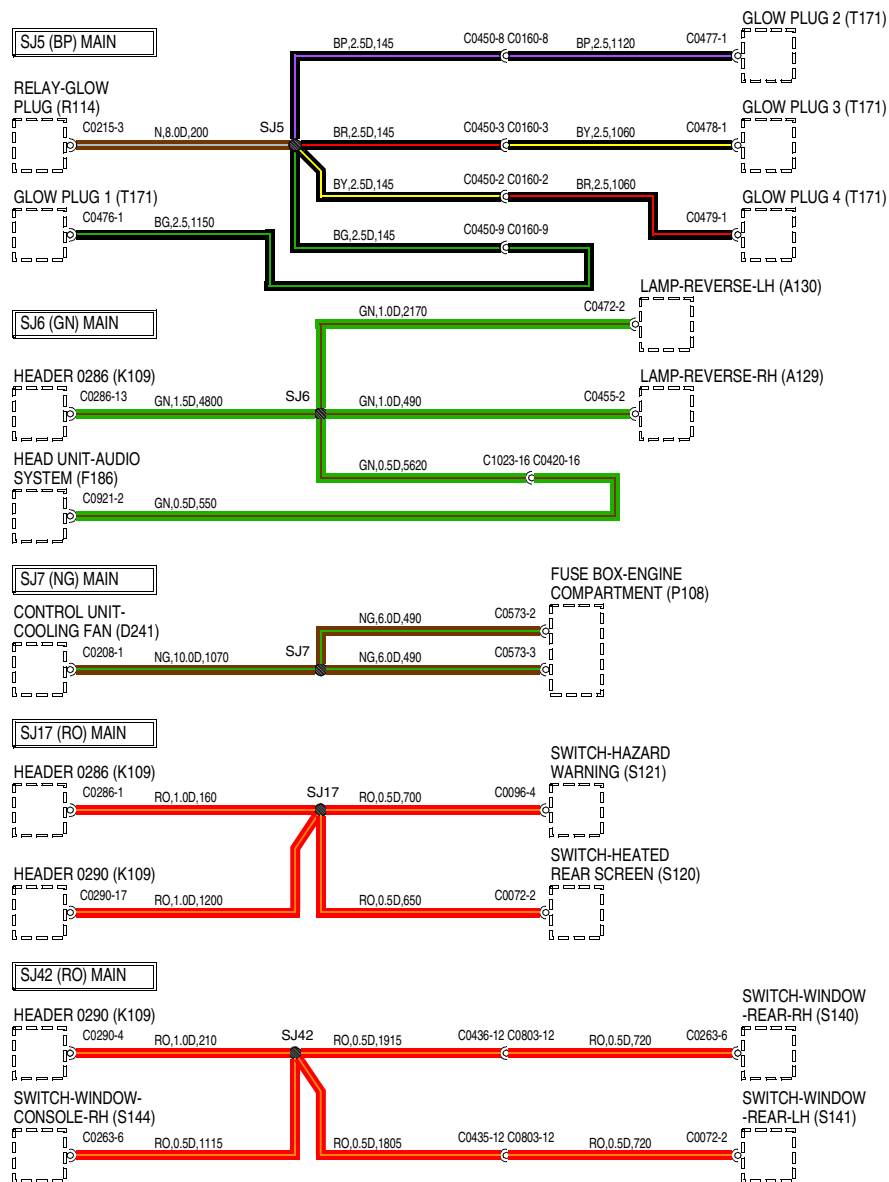

VWR004290-A-01


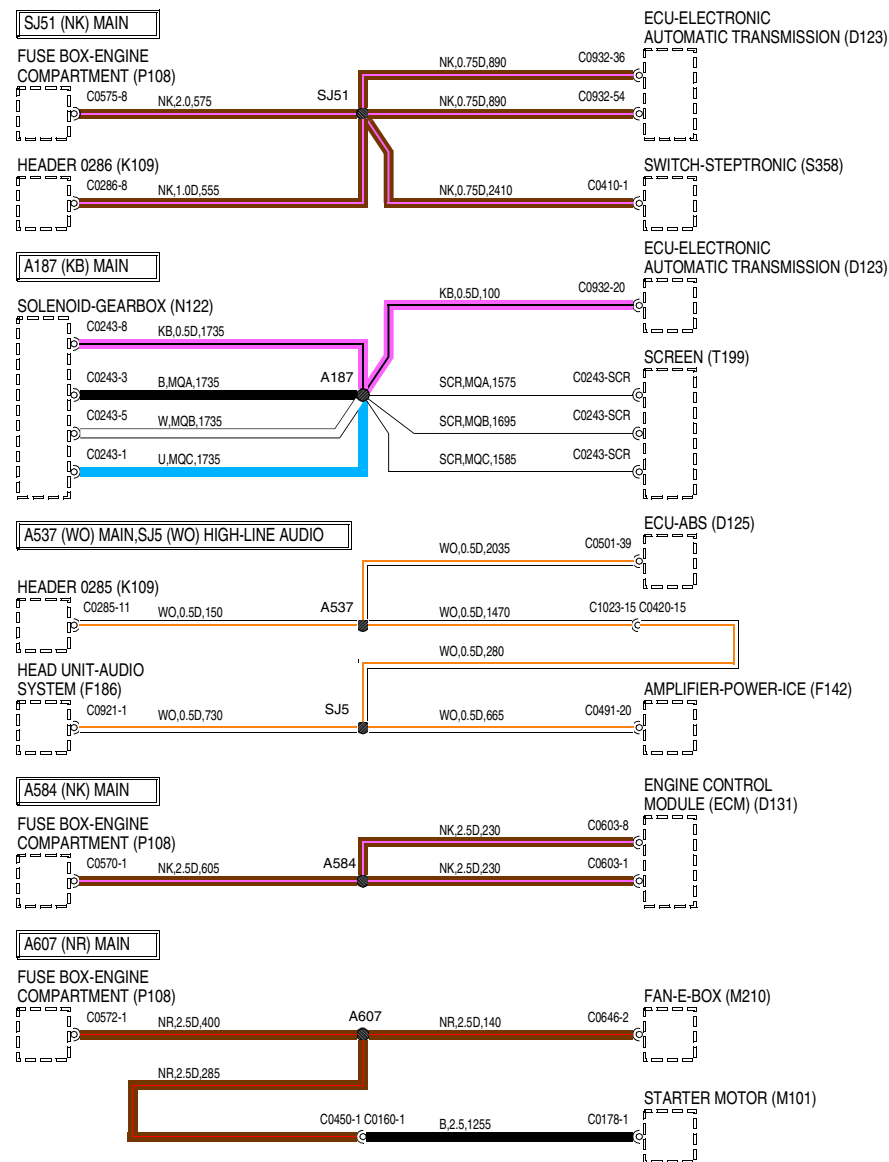


65 SPLICES AND CENTRE TAPS

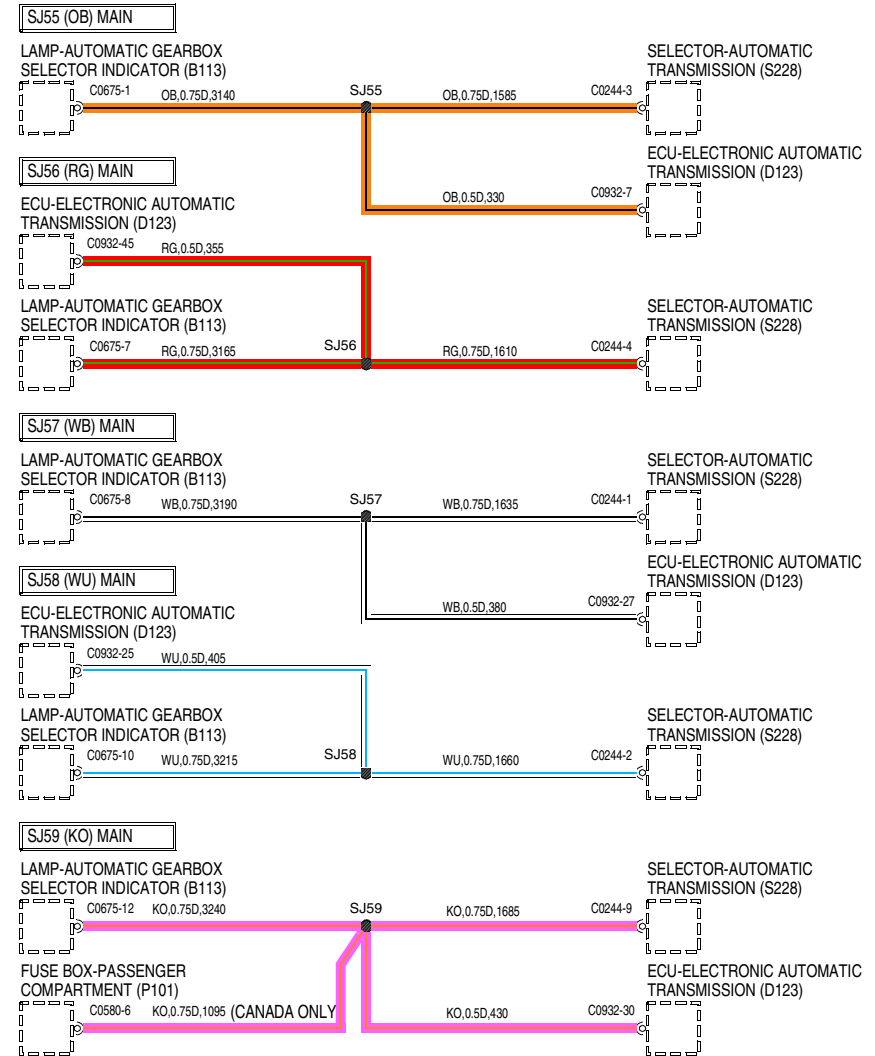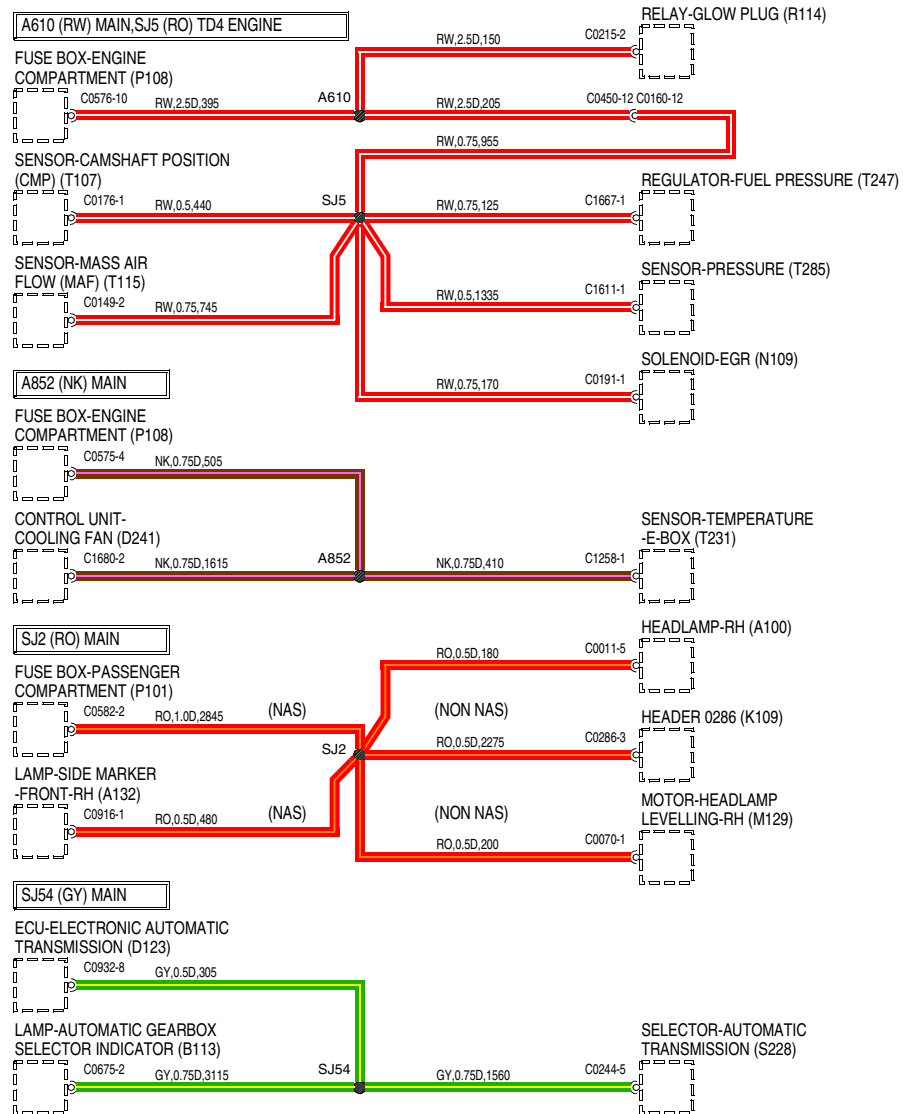



VWR004290-A-02

65 SPLICES AND CENTRE TAPS

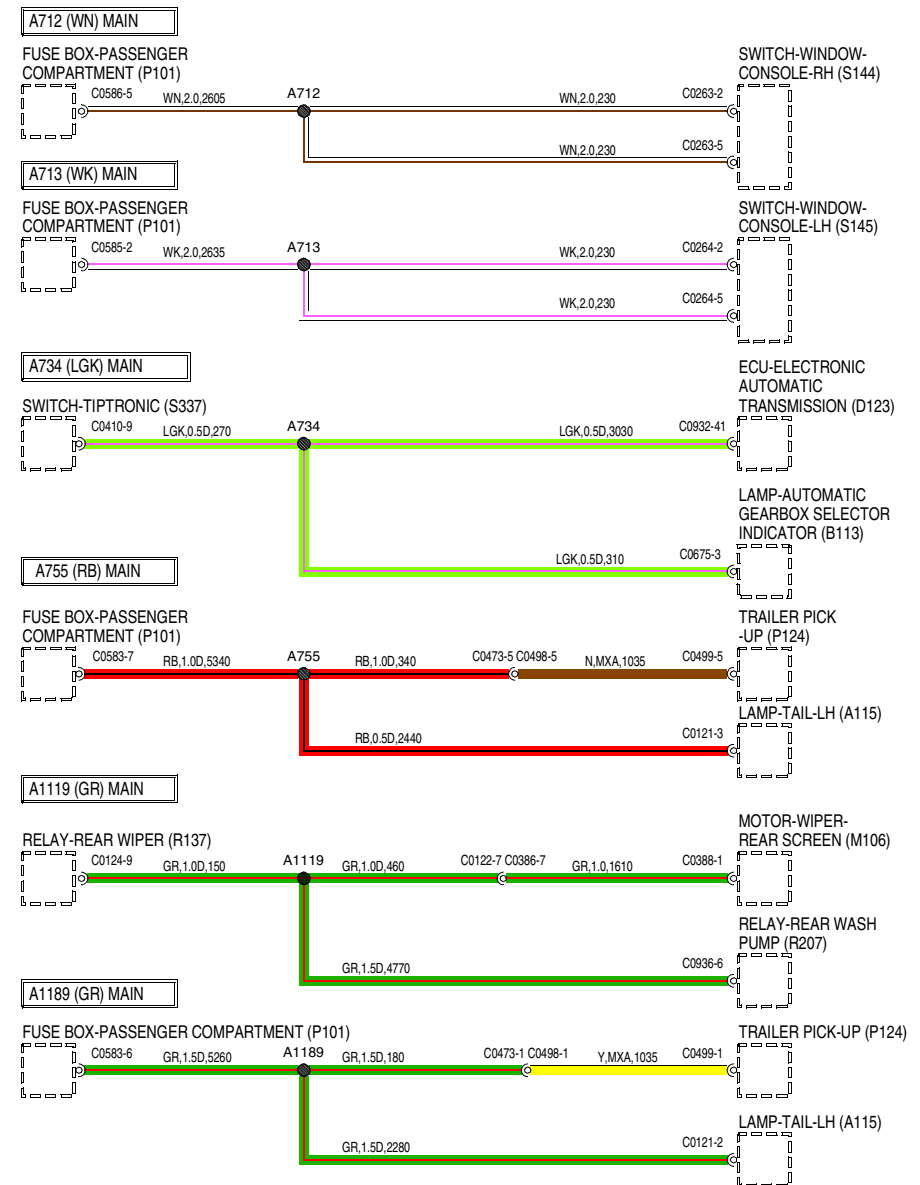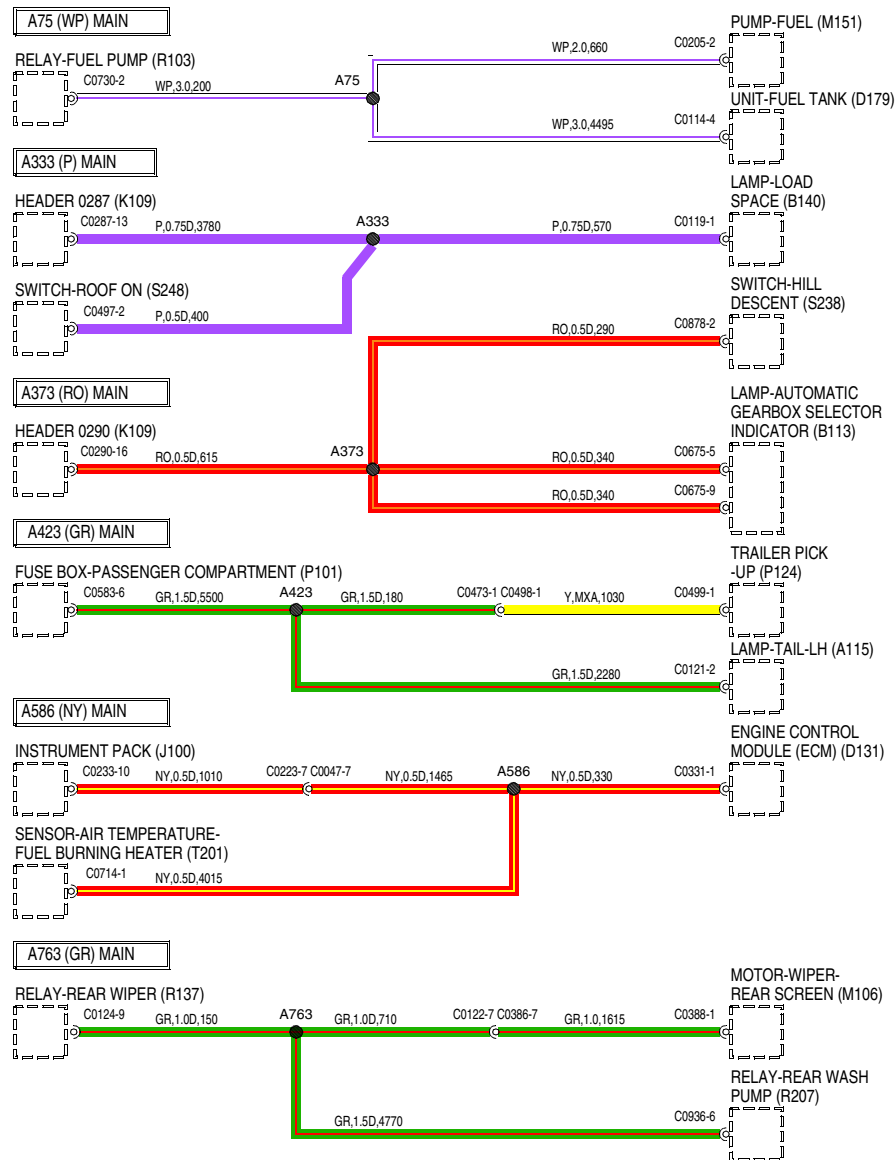


VWR004290-A-03

65 SPLICES AND CENTRE TAPS

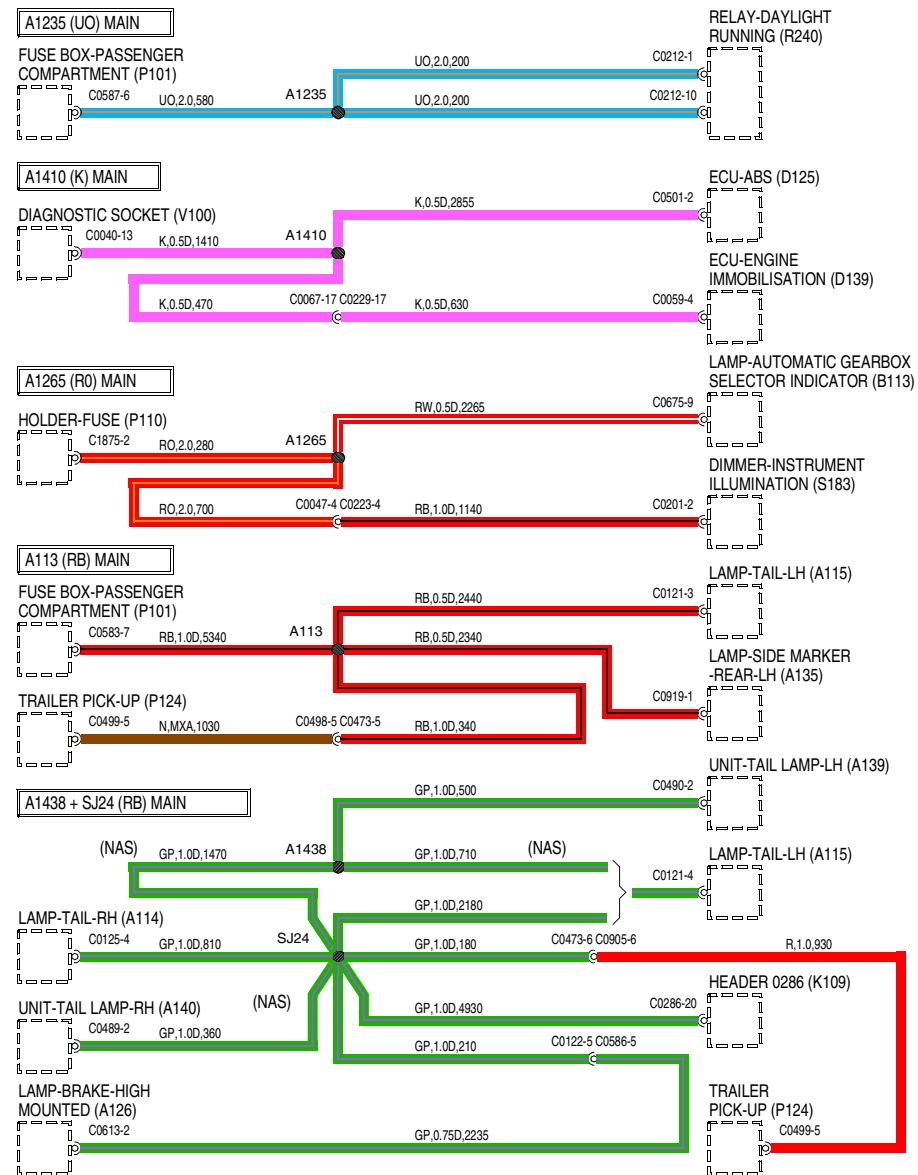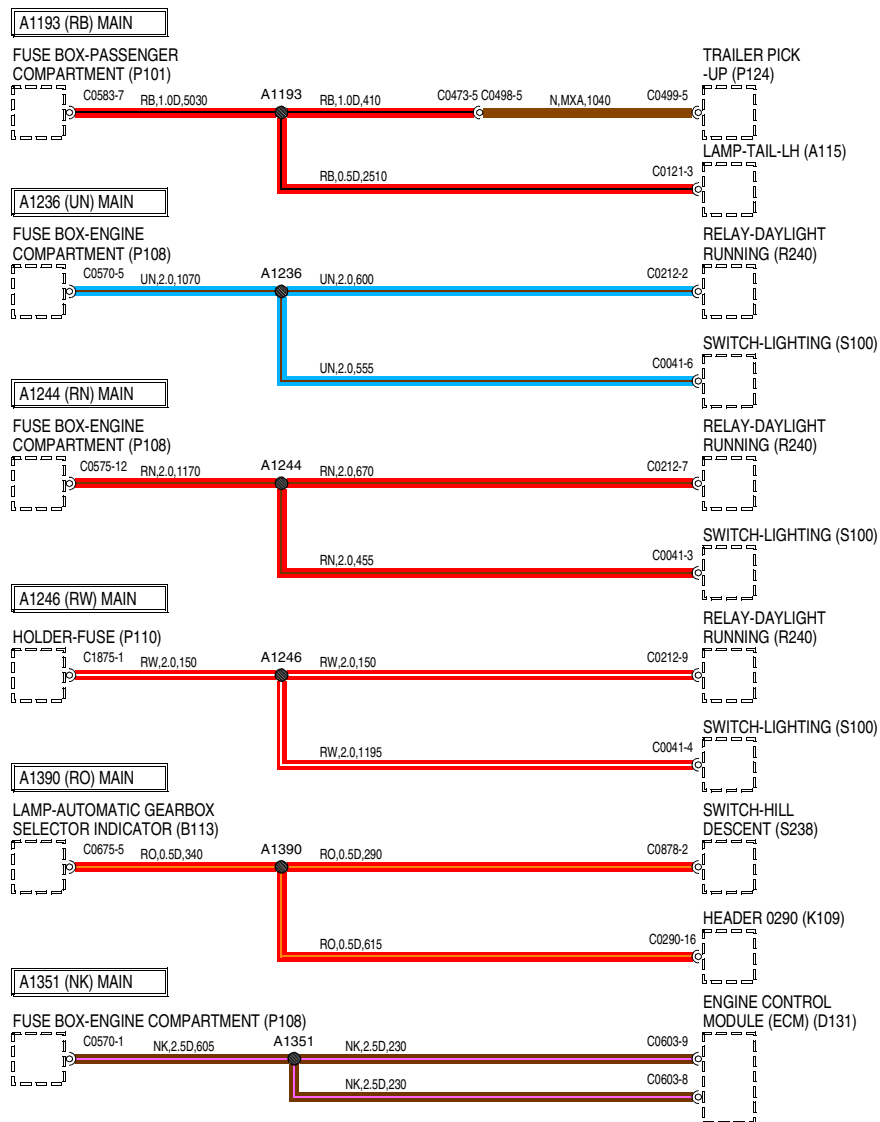




VWR004290-A-04

65 SPLICES AND CENTRE TAPS


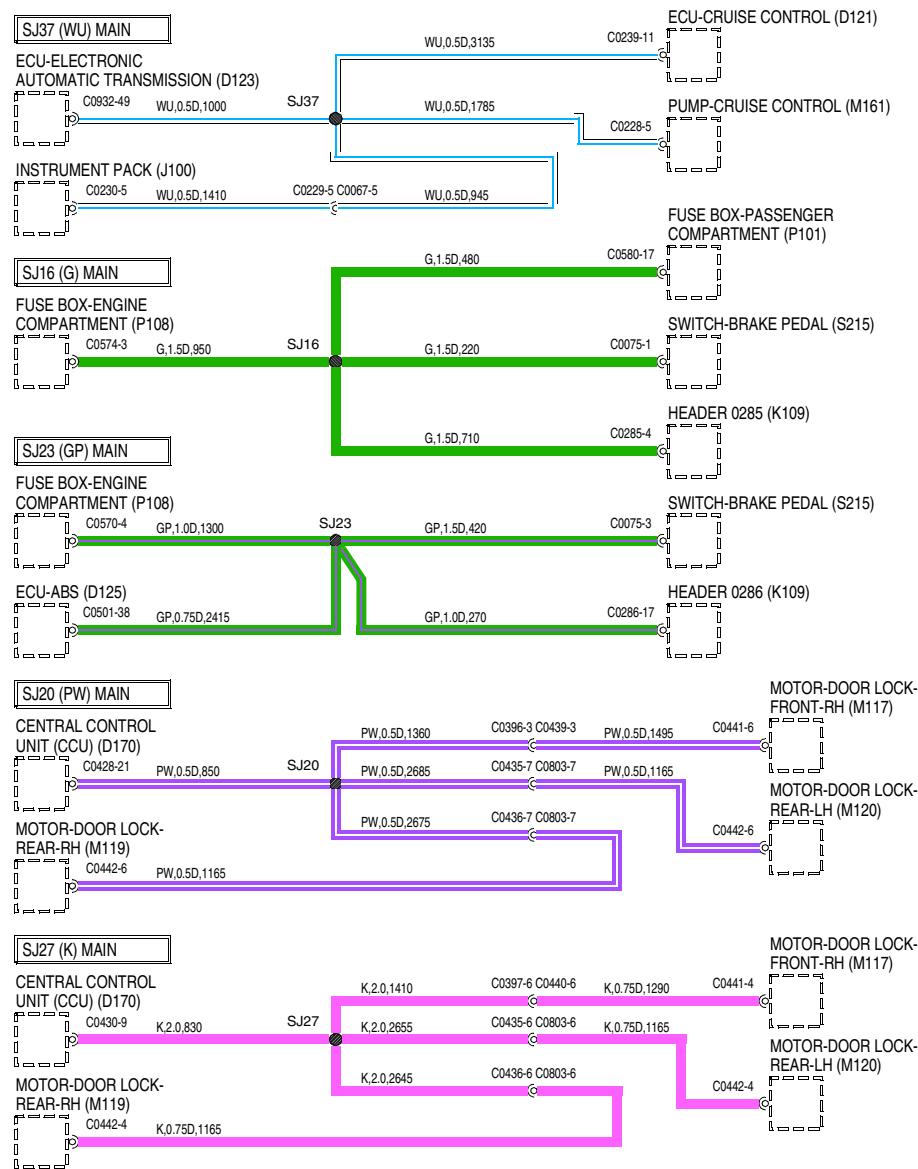


VWR004290-A-05

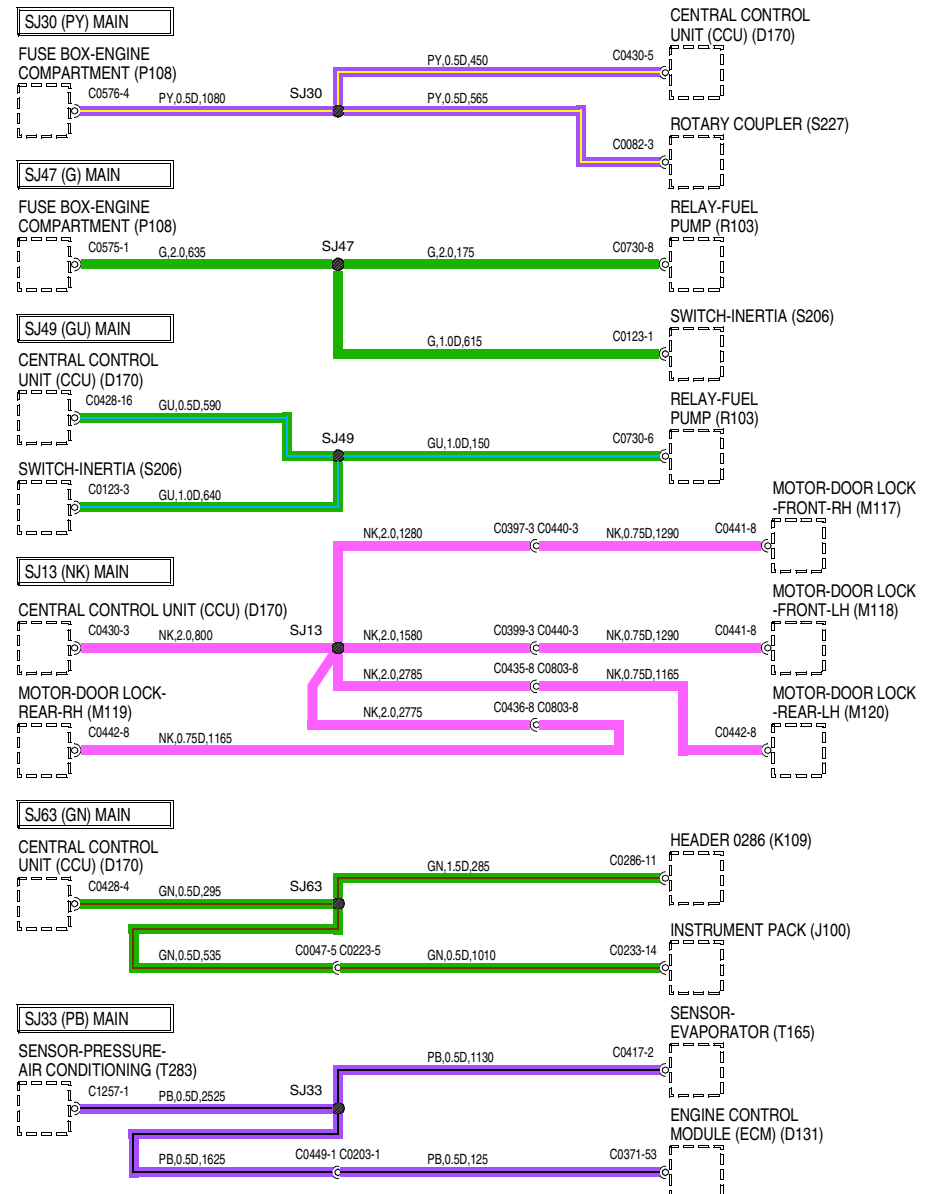


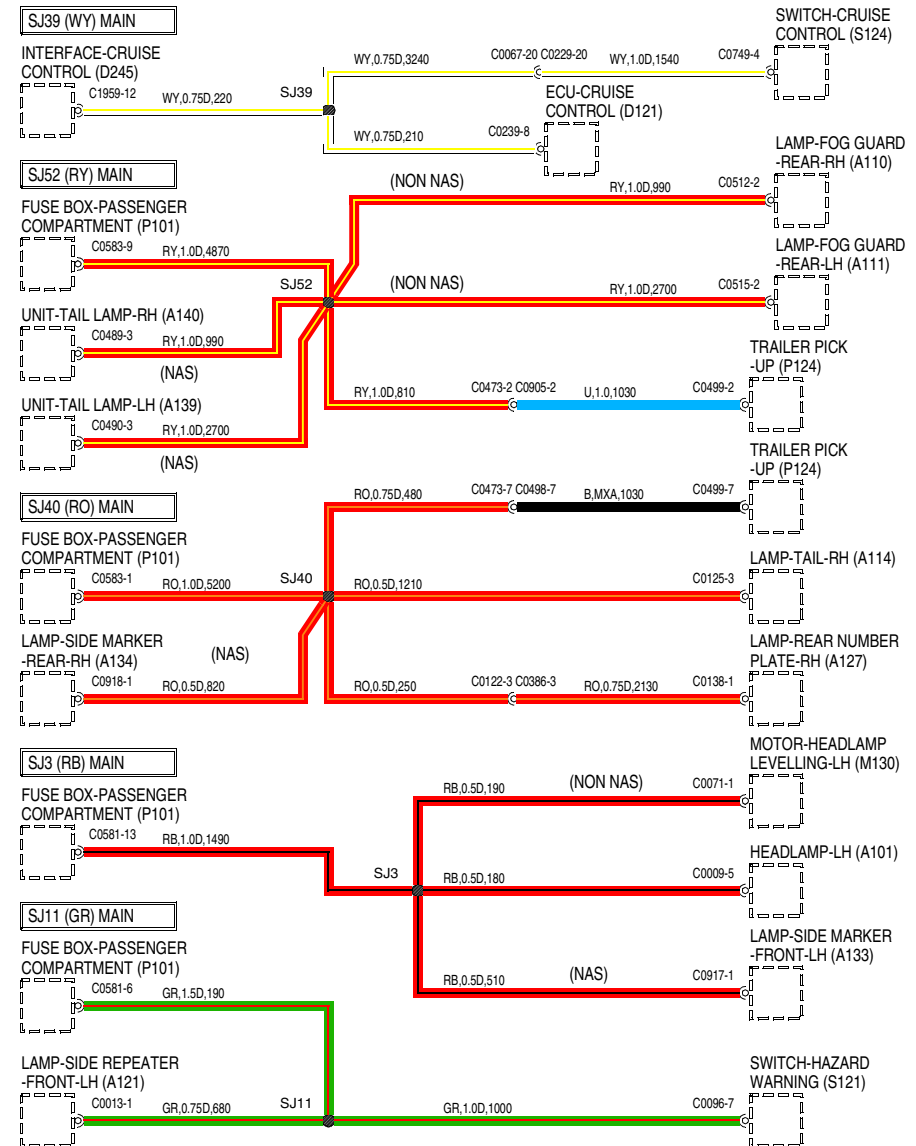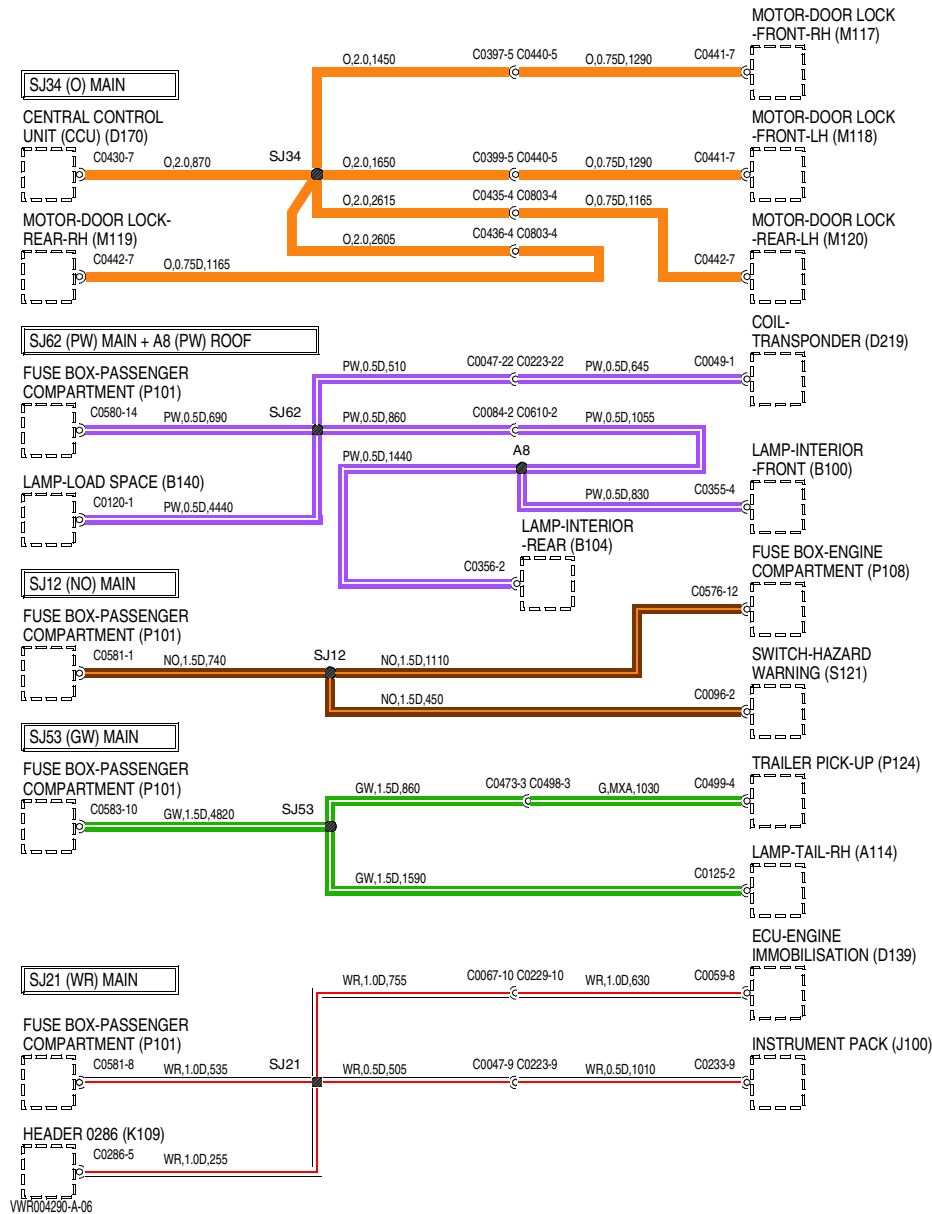


65 SPLICES AND CENTRE TAPS

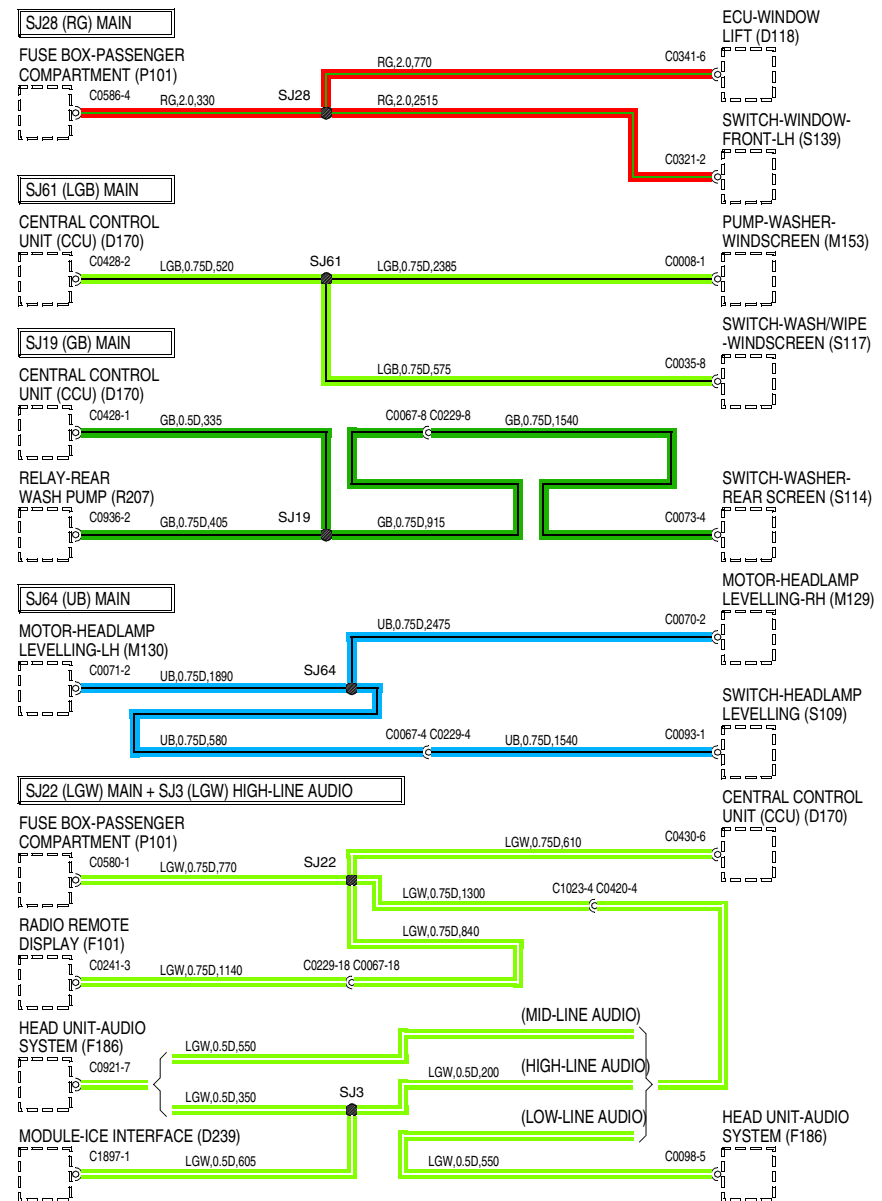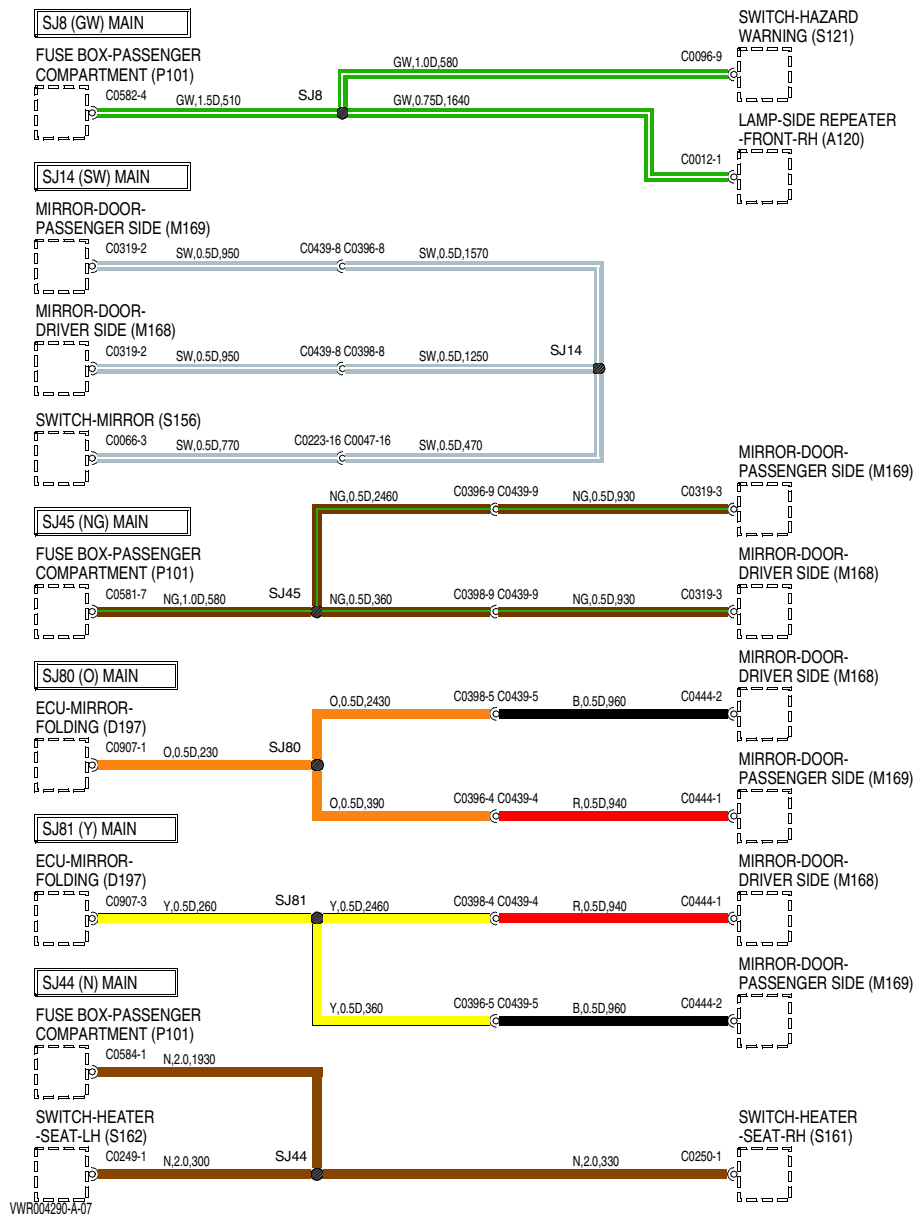





65 SPLICES AND CENTRE TAPS

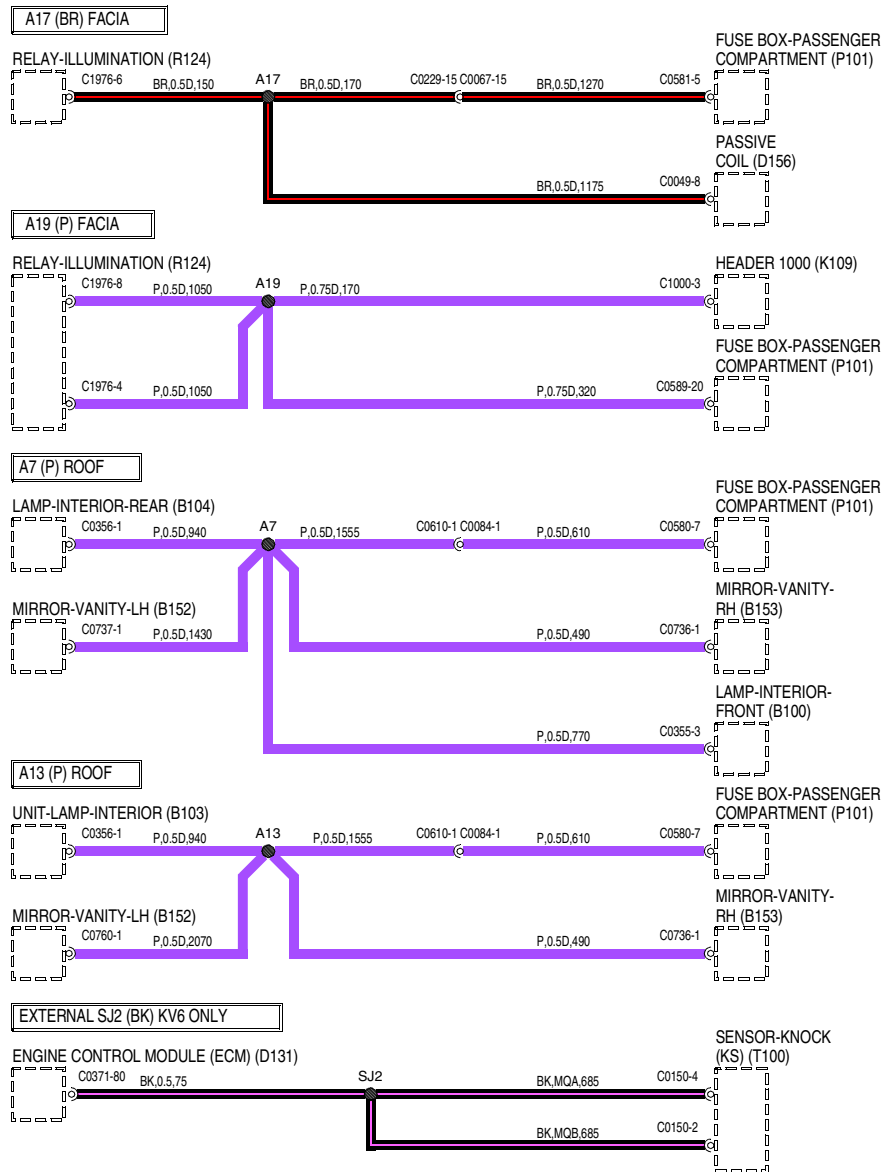




VWR004290-A-08

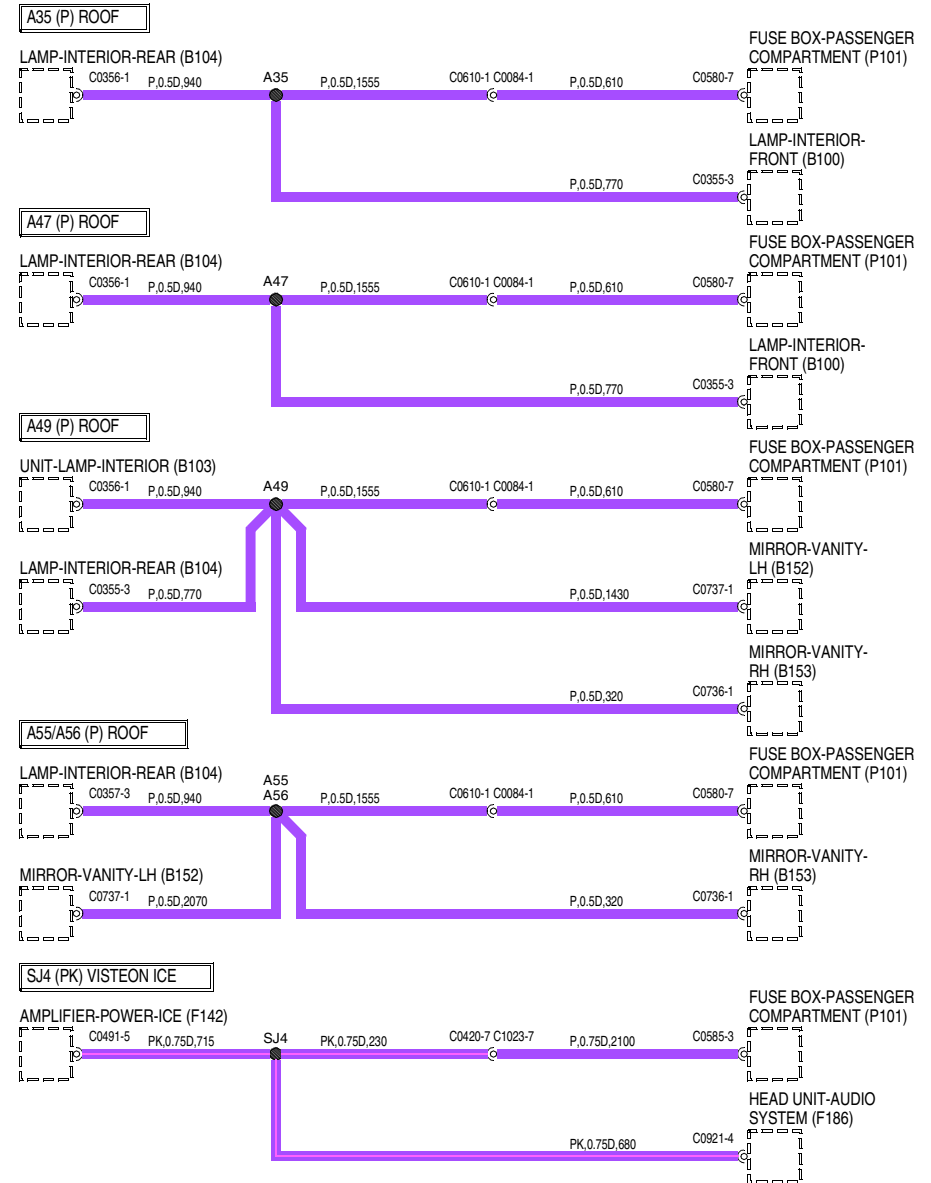


65 SPLICES AND CENTRE TAPS

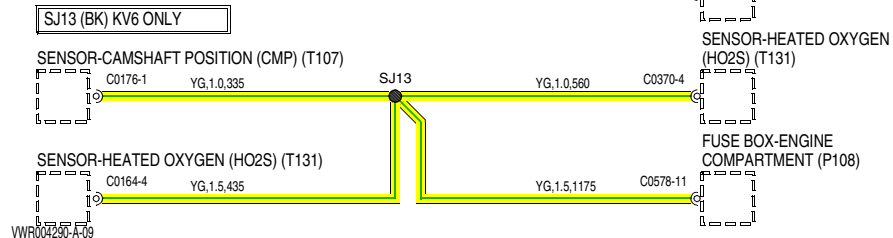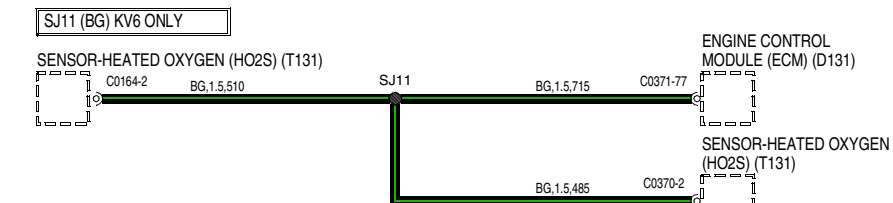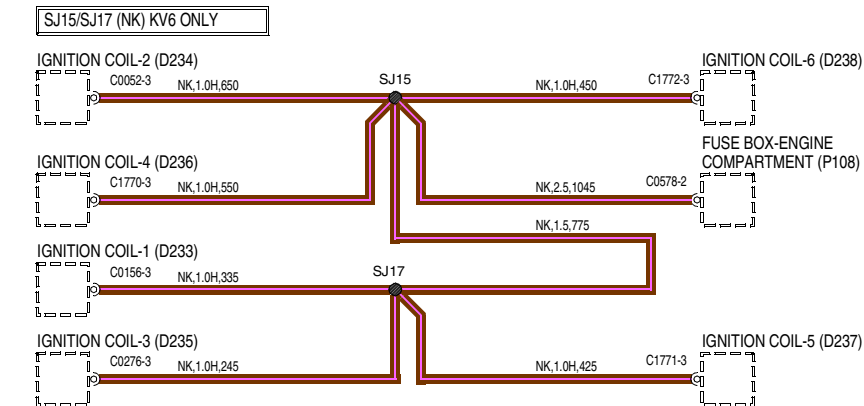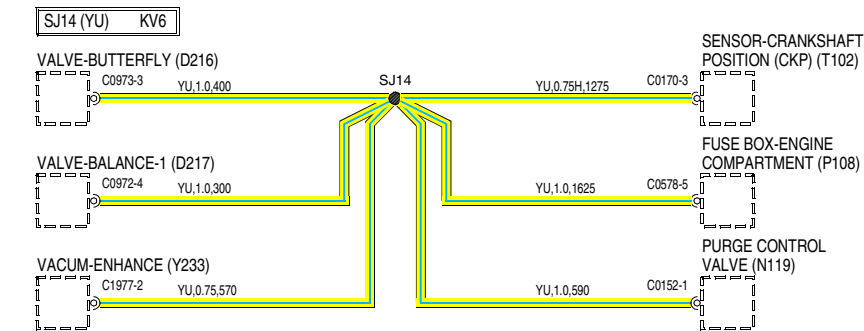


WVR004290-A-09

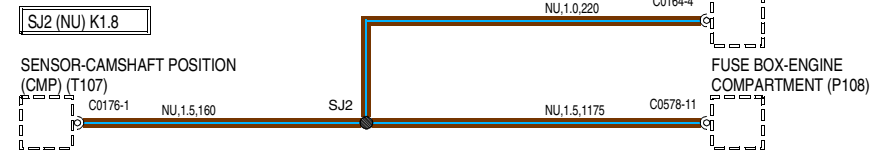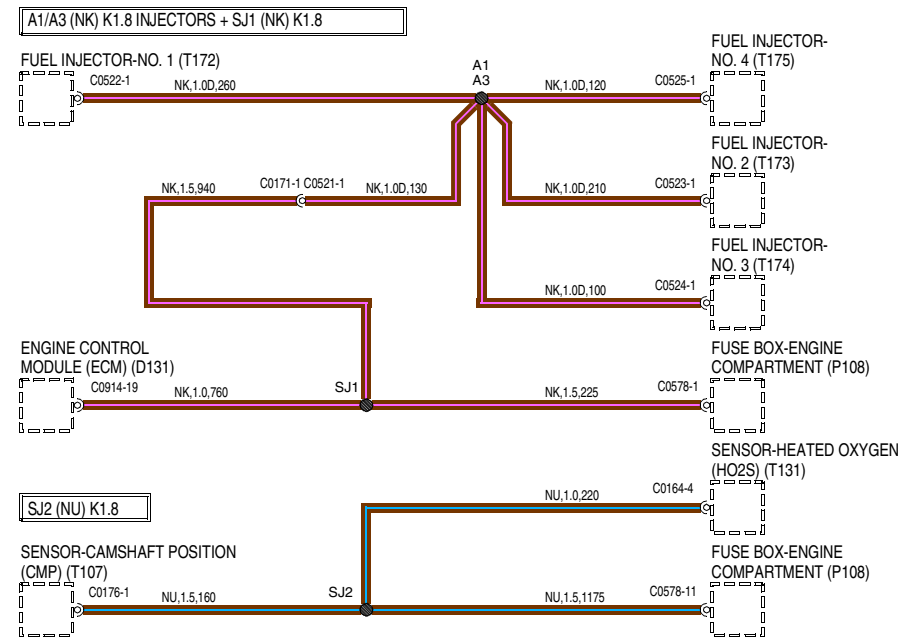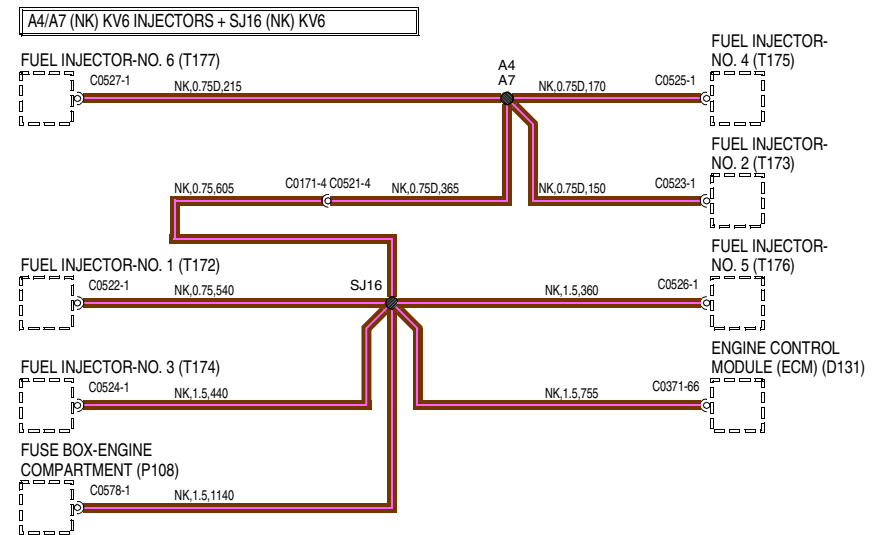



65 SPLICES AND CENTRE TAPS

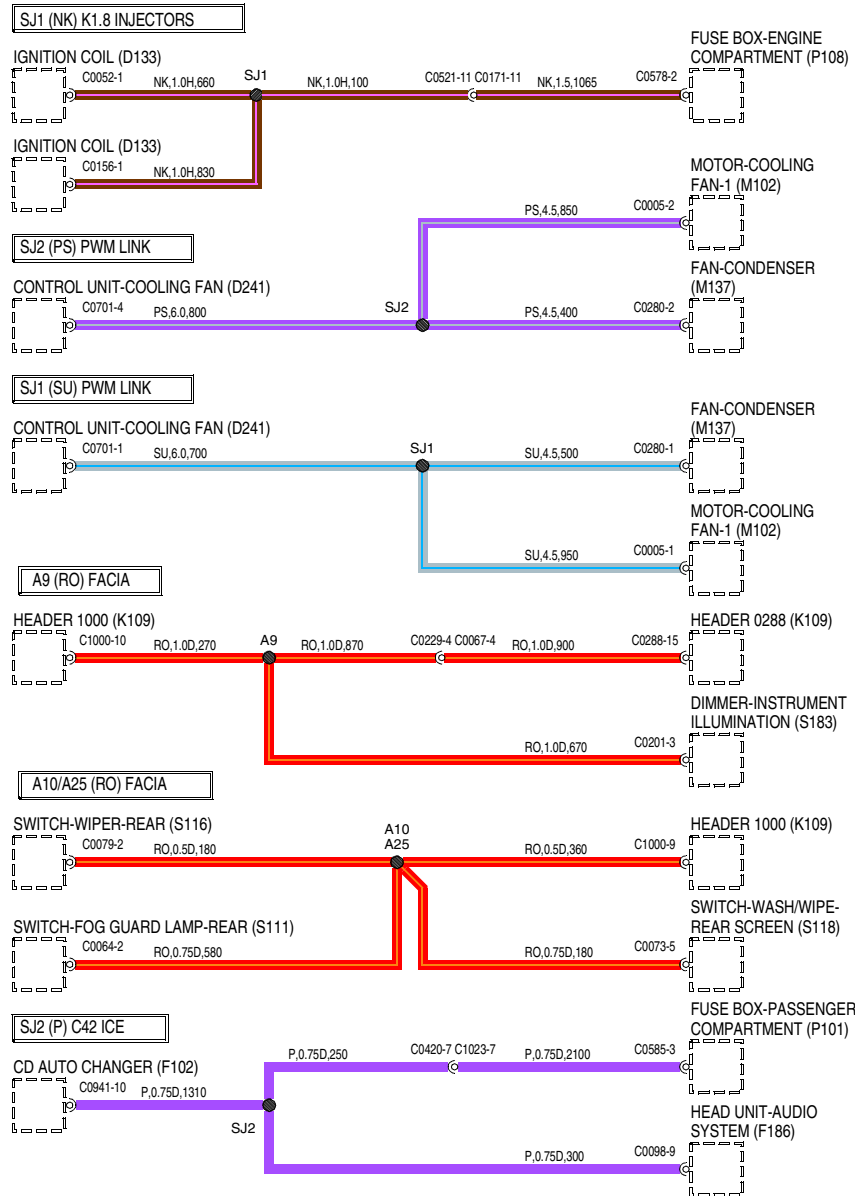

VWR004290-A-10

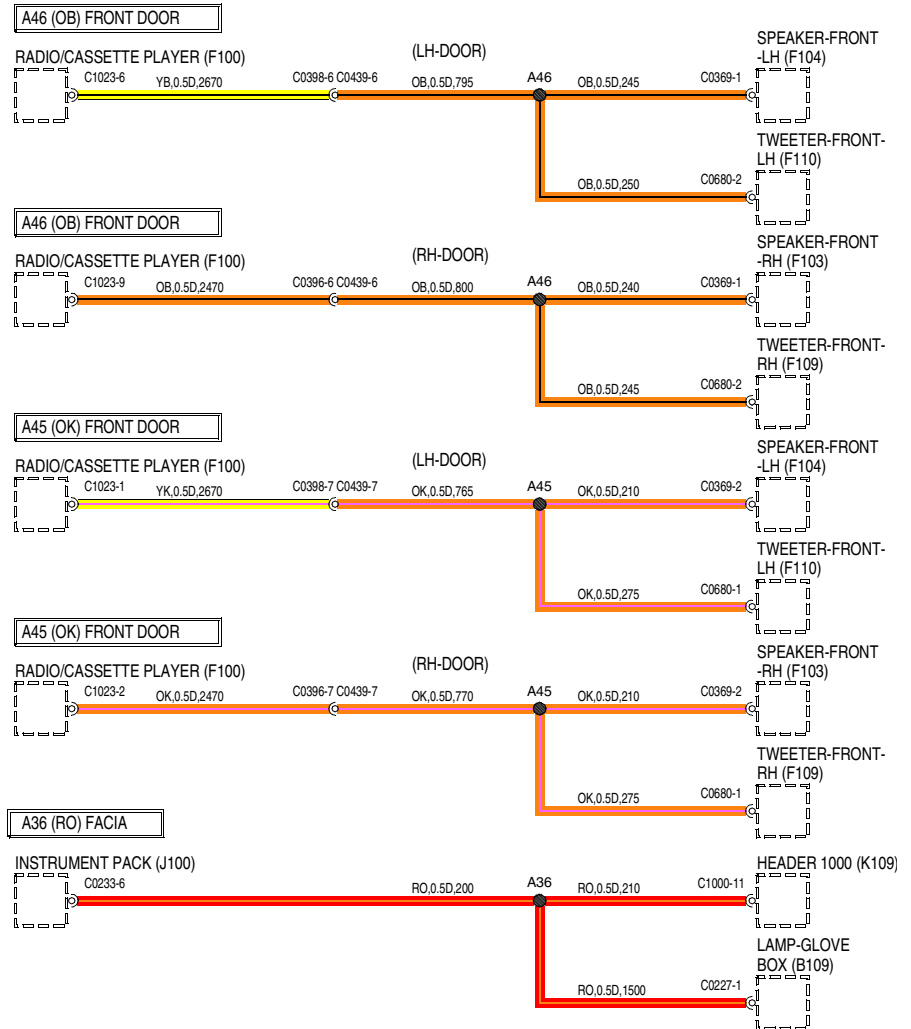


65 SPLICES AND CENTRE TAPS

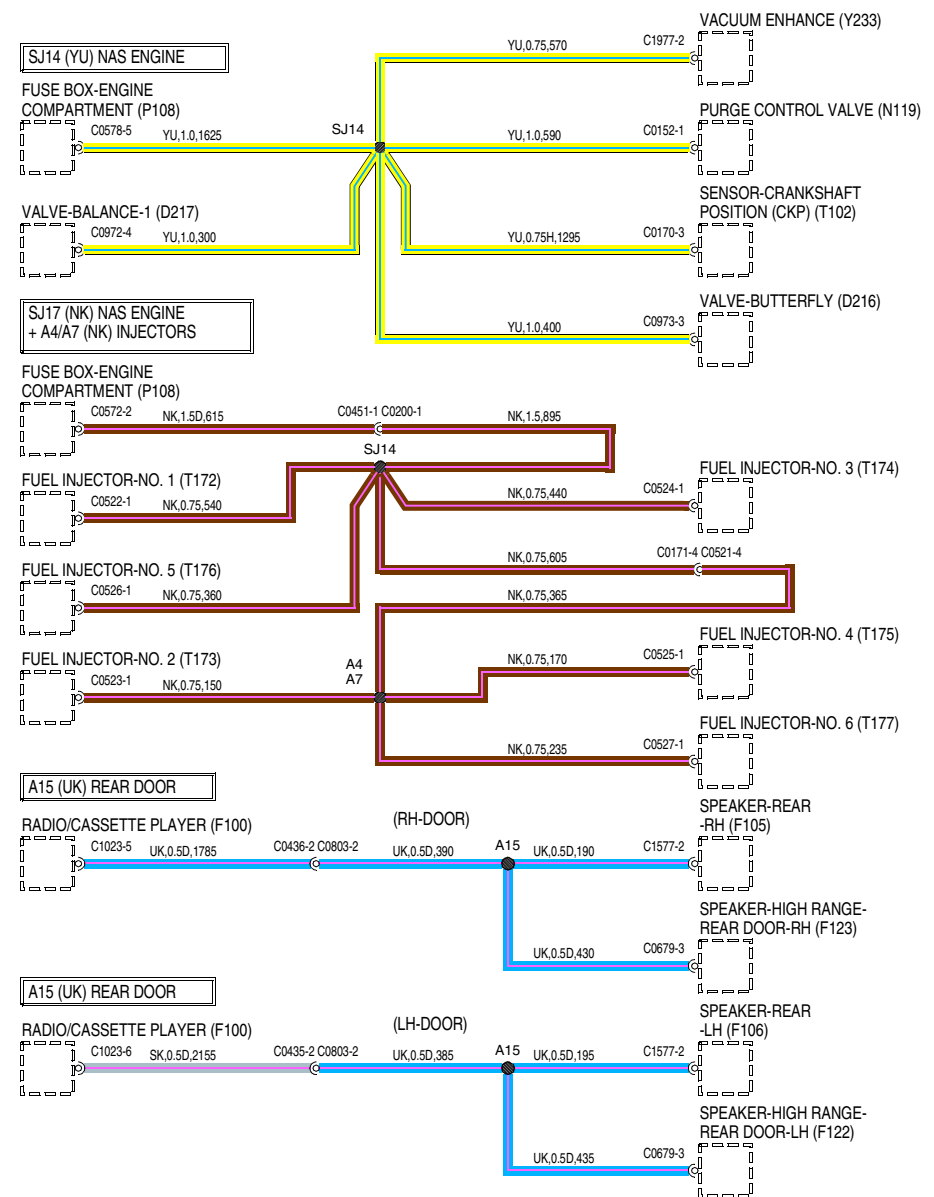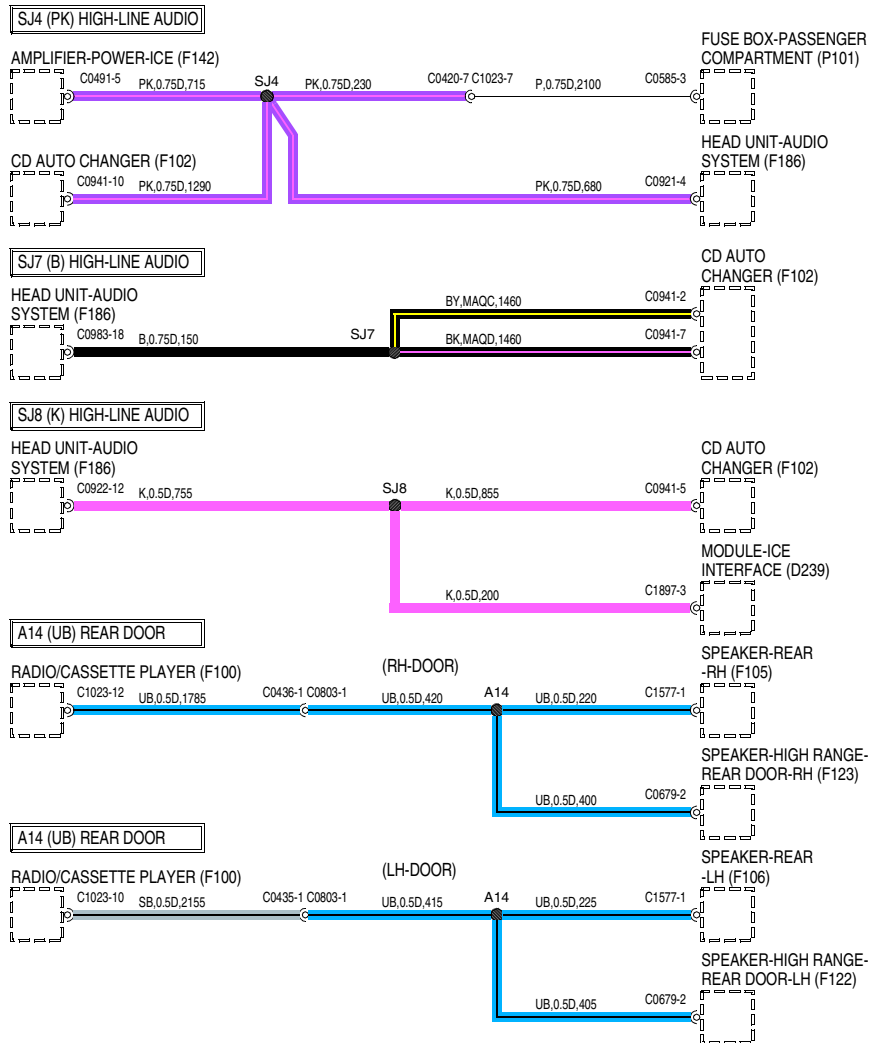

VWR004290-A-11

70 COMMUNICATION DATA BUSES

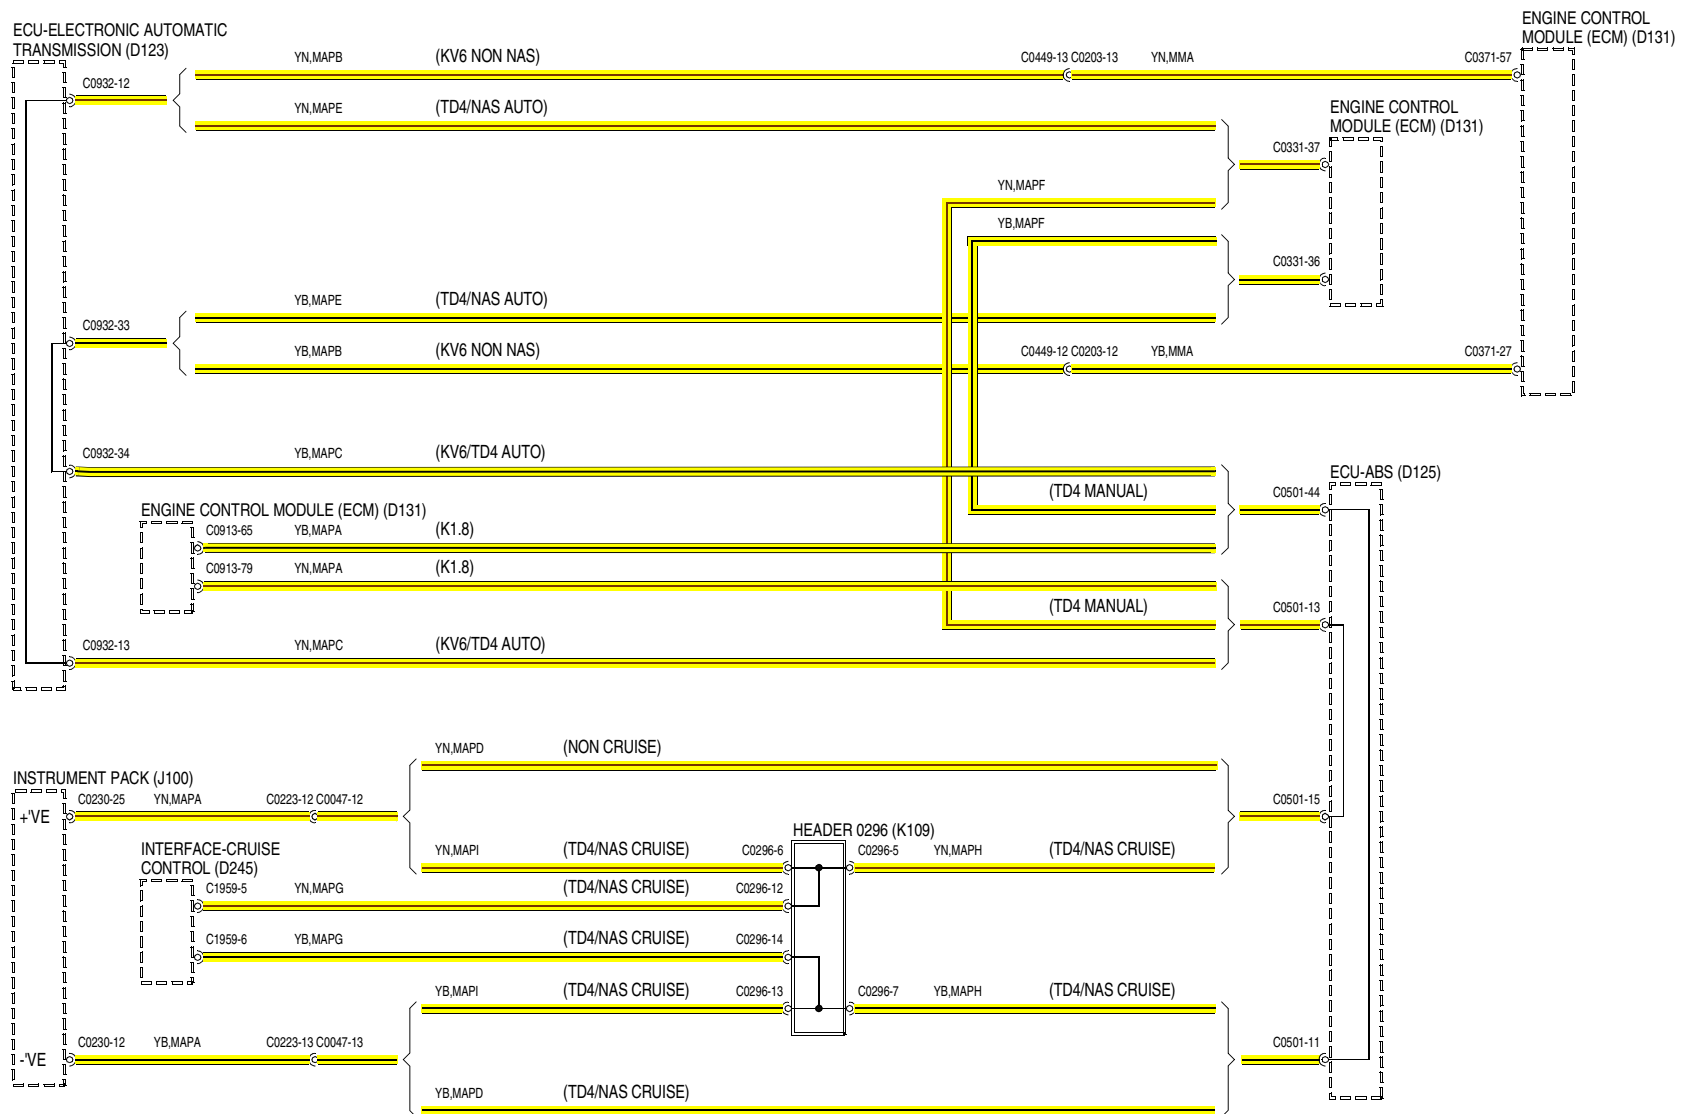

VWR003990-A-01

